SLV-E850B/E850UX/E880EG/F900B/F900NP/F900UX/F900VC/F990B/F990NP/F990UX/F990VC

RMT-V222C/V222D/V222E/V223C/V240/V240A/V240B/V240C/V240D

SERVICE MANUAL

Photo : SLV-F990

Hi-Fi

VHS

French Model
SLV-E850B/F900B/F990B

UK Model
SLV-E850UX/F900UX/F990UX

Greek Model
SLV-E880EG

Spanish Model
SLV-F900NP/F990NP

Germany Model
SLV-F900VC/F990VC

- **Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENTS Ⅵ for MECHANICAL ADJUSTMENTS. (9-921-647-11)**

S MECHANISM

SPECIFICATIONS

System

Channel coverage
PAL (D/K, B/G)
VHF E2 to E12, R1-R12
UHF E21 to E69, R21-R69
CATV S01 to S05, S1 to S41
RF output signal
UHF channels 21 to 69
Aerial out
75-ohm asymmetrical aerial socket

Inputs and outputs

LINE-1 (TV)
21-pin
Video input: pin 20
Audio input: pins 2 and 6
Video output: pin 19
Audio output: pins 1 and 3

LINE-3 IN
21-pin
Video input: pin 20
Audio input: pins 2 and 6

LINE-2 IN
VIDEO IN, phono jack (1)
Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
AUDIO IN, phono jack (2)
Input level: 327 mVrms
Input impedance: more than 47 kilohms

LINE-2 OUT
VIDEO OUT, phono jack (1)
Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
AUDIO OUT, phono jack (2)
Rated output level: 327 mVrms
Load impedance: 47 kilohms
Output impedance: less than 10 kilohms

General

Power requirements
220 – 240 V AC, 50 Hz
Power consumption
23 W
Operating temperature
5°C to 40°C
Storage temperature
–20°C to 60°C
Dimensions
Approx. 430 × 100 × 314 mm (w/h/d) including projecting parts and controls
Mass
Approx. 4.6 kg

Supplied accessories

Remote commander (1)
R6 (size AA) batteries (2)
Aerial cable (1)
Audio cable (1)
EURO-AV cable (1)

Design and specifications are subject to change without notice.

VIDEO CASSETTE RECORDER

MICROFILM

SONY®

FEATURE DIFFERENCE

MODEL NAME	E850UX	E850B	E880EG	F900VC	F900NP	F900B	F900UX	F990VC	F990NP	F990B	F990UX
SAFETY SECAM (REC/PB)		○/○				○/○				○/○	
ME-SECAM (REC/PB)		×/○	○/○			×/○				×/○	
FLAP (W/SW)				○	○	○	○	○	○	○	○
COMMAND SW								○	○	○	○
DNR			○	○	○		○	○	○	×	○
ML KEY				○(4)	○(4)	○(4)	○(4)	○(4)	○(4)	○(4)	○(4)
COUNTER RESET			○					○	○	○	○
AUDIO OUT 2	RCA	RCA		RCA	RCA	RCA	RCA				
EUR IN (2nd)	in	C+/in	C+/in	C+/in	C+/in	C+/in	in	C+/in	C+/in	C+/in	in
ADDITIONAL IN (RCA INPUT)								○	○	○	○
LINE 2 OUT			○					○	○	○	○
SAT CONTROL	○	○	△					○	△	○	○
ACS (△ : ACA)	○	○	△	△	○	○	○	△	○	○	○
TUNER BTF-	WU601	3WC443	3WC425	3WC402	WC411	3WC443	WU601	3WC402	WC411	3WC443	WU601
SYSTEM 1	I	L	DK	BG	BG	L	I	BG	BG	L	I
STEREO	NI	NI	ZWEI	ZWEI	N/Z	NI	NI	ZWEI	N/Z	NI	NI
SYSTEM 2		BG	BG			BG				BG	
STEREO		ZWEI	ZWEI			ZWEI				ZWEI	
CATV		○	○	○	○	○		○	○	○	
RF OUT SYS	I	L/G	K/G	G	G	L/G	I	G	G	L/G	I
REMOTE COMMANDER	V240	V240A	V223C	V222C	V222C	V222E	V222D	V240B	V240B	V240D	V240C
VTR MODE	3	3	3	3	3	3	3	1.2.3	1.2.3	1.2.3	1.2.3
LANGUAGE	ENG	FRE	ENG	ENG	ENG	FRE	ENG	ENG	ENG	FRE	ENG
SLOW				○	○	○	○				
SHOW VIEW/VIDEO PLUS	V PLUS DX	SVDX	SV	SV	SV	SV	V PLUS	SV DX	SV DX	SV DX	V PLUS DX
AUDIO DUB	○	○	○					○	○	○	○
REPLAY	○	○	○					○	○	○	○
X2	○ (RING)	○ (RING)	○	○	○	○	○	○ (RING)	○ (RING)	○ (RING)	○ (RING)
FRAME	○ (RING)	○ (RING)	○ (JOY)	○	○	○	○	○ (RING)	○ (RING)	○ (RING)	○ (RING)
TITLE				○	○	○	○	○	○	○	○
SAT	○	○						○	○	○	○

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replace-ment.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
   - Keep the temperature of the soldering iron around 270˚C during repairing.
   - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
   - Be careful not to apply force on the conductor when soldering or unsoldering.

TABLE OF CONTENTS

SERVICE NOTE

1. ERROR CODE INDICATION ······ 5

1. GENERAL

Getting Started
- Unpacking ······ 1-1
- Setting up the remote commander ······ 1-1
- Connecting the VCR ······ 1-2
- Tuning your TV to the VCR ······ 1-3
- Setting up the VCR with the Auto Set Up function ······ 1-4
- Setting the clock ······ 1-4
- Manual setup — Selecting a language ······ 1-5
- Manual setup — Presetting channels ······ 1-5
- Manual setup — Setting station names ······ 1-6
- Manual setup — Changing/disabling programme positions · 1-7
- Manual setup — Listing the channels as the TV ······ 1-8
- Connecting the Satellite tuner ······ 1-8
- Setting the PAY-TV/Canal Plus decoder ······ 1-9

Basic Operations
- Playing a tape ······ 1-10
- Recording TV programmes ······ 1-11
- Recording TV programmes using ShowView ······ 1-12
- Setting the timer manually ······ 1-13

Additional Operations
- Playing/searching at various speeds ······ 1-13
- Recording TV programmes using the quick timer ······ 1-14
- Checking/changing/cancelling timer settings ······ 1-14
- Recording stereo and bilingual programmes ······ 1-15
- Searching using the index function ······ 1-15
- Adjusting the picture ······ 1-15
- Changing options ······ 1-16

Editing
- Connecting to a VCR or stereo system ······ 1-17
- Basic editing ······ 1-17
- Audio dubbing ······ 1-17

Additional Information
- Index to parts and controls ······ 1-18

2. DISASSEMBLY

2-1. UPPER CASE, FRONT PANEL BLOCK ASSEMBLY · 2-1
2-2. FR-128 BOARD, DM-73 BOARD ······ 2-2
2-3. REAR PANEL ······ 2-3
2-4. POWER BLOCK, MA-316 BOARD (WITH S MECHANISM DECK) ······ 2-3
2-5. RP-231 BOARD, S MECHANISM DECK ······ 2-4
2-6. CIRCUIT BOARDS LOCATION ······ 2-4
2-7. INTERNAL VIEWS ······ 2-5

3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM ······ 3-1
3-2. VIDEO BLOCK DIAGRAM ······ 3-3
3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM ····· 3-5
3-4. AUDIO BLOCK DIAGRAM ······ 3-7
3-5. MODE CONTROL BLOCK DIAGRAM ······ 3-9
3-6. TUNER BLOCK DIAGRAM ······ 3-11
3-7. POWER SUPPLY BLOCK DIAGRAM ······ 3-13

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM ······ 4-1
4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS ······ 4-3
- RP-231 (REC/PB AMP) PRINTED WIRING BOARD ······ 4-3
- RP-231 (REC/PB AMP) SCHEMATIC DIAGRAM ···· 4-5
- MA-316 (VIDEO, SERVO/SYSTEM CONTROL, AUDIO, TUNER) PRINTED WIRING BOARD ······ 4-8
- MA-316 (VIDEO, NORMAL AUDIO) SCHEMATIC DIAGRAM ······ 4-11
- MA-316 (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM ······ 4-14
- MA-316 (ON SCREEN DISPLAY) SCHEMATIC DIAGRAM ······ 4-17
- MA-316 (AFM AUDIO) SCHEMATIC DIAGRAM · 4-19
- MA-316 (TUNER) SCHEMATIC DIAGRAM ······ 4-21
- MA-316 (FOLLOW TV, PDC, VPS) SCHEMATIC DIAGRAM ······ 4-23
- MA-316 (I/O) SCHEMATIC DIAGRAM ······ 4-25
- FR-128 (MODE CONTROL) PRINTED WIRING BOARD ······ 4-29
- FR-128 (MODE CONTROL) SCHEMATIC DIAGRAM ······ 4-31
- SE-69 (SECAM VIDEO SIGNAL PROCESS) SCHEMATIC DIAGRAM ······ 4-33
- SE-69 (SECAM VIDEO SIGNAL PROCESS) PRINTED WIRING BOARD ······ 4-35
- DM-73 (OPERATION SWITCHES) PRINTED WIRING BOARD ······ 4-36
- DM-73 (OPERATION SWITCHES) SCHEMATIC DIAGRAM ······ 4-37
- NR-26 (DNR PROCESSOR) PRINTED WIRING BOARD ······ 4-39
- NR-26 (DNR PROCESSOR) SCHEMATIC DIAGRAM ······ 4-41
- ML-15 (SERIAL TRANSFER) PRINTED WIRING BOARD ······ 4-43
- ML-15 (SERIAL TRANSFER) SCHEMATIC DIAGRAM ······ 4-45
- AT-23/24 (ANTENNA) PRINTED WIRING BOARD ······ 4-48
- AT-23/24 (ANTENNA) SCHEMATIC DIAGRAM ······ 4-49
- SWITCH BLOCK SCHEMATIC DIAGRAM ······ 4-50
- SW-300 (REMOTE CONTROL RECEIVER) PRINTED WIRING BOARD ······ 4-51
- SW-300 (REMOTE CONTROL RECEIVER) SCHEMATIC DIAGRAM ······ 4-52
- POWER BLOCK SR826 (SWITCHING REGULATOR) PRINTED WIRING BOARD ······ 4-53
- POWER BLOCK SR826 (SWITCHING REGULATOR) SCHEMATIC DIAGRAM ······ 4-55

5. INTERFACE, IC PIN FUNCTION DESCRIPTION

5-1. SYSTEM CONTROL — VIDEO BLOCK INTERFACE (MA-316 BOARD IC160) ······ 5-
5-2. SYSTEM CONTROL — SERVO PERIPHERAL CIRCUIT INTERFACE (MA-316 BOARD IC160) ······ 5-
5-3. SYSTEM CONTROL — MECHANISM INTERFACE (MA-316 BOARD IC160) ······ 5-
5-4. SYSTEM CONTROL — SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-316 BOARD IC160) ······ 5-2
5-5. SYSTEM CONTROL — AUDIO BLOCK INTERFACE (MA-316 BOARD IC160) ······ 5-

5-6. SERVO/SYSTEM CONTROL MICROPROCESSOR
PIN FUNCTIONS (MA-316 BOARDS IC160) ············· 5-3
5-7. TUNER/TIMER MODE CONTROL PIN FUNCTIONS
(FR-128 BOARD IC180) ·· 5-4

6. ADJUSTMENTS

6-1. MECHANICAL ADJUSTMENTS ································ 6-1
6-2.. ELECTRICAL ADJUSTMENTS ·································· 6-1
2-1. PREPARATION BEFORE ADJUSTMENT ··················· 6-1
2-1-1. Equipment Required ··· 6-1
2-1-2. Equipment Connection ··· 6-1
2-1-3. Input Signal Check ··· 6-1
2-1-4. Alignment Tape ·· 6-1
2-1-5. Input/Output Levels and Impedance ······························ 6-2
2-1-6. Adjustment Sequence ··· 6-2
2-2. POWER SUPPLY CHECK ·· 6-2
2-2-1. Output Voltage Check (MA-316 Board) ························ 6-2
2-3. SERVO SYSTEM CHECK ·· 6-2
2-3-1. RF Switching Position/
AF Switching Position Adjustments
(MA-316, RP-231 Boards) ·· 6-2
2-4. VIDEO SYSTEM CHECKS ·· 6-3
2-4-1. X'tal OSC Check (MA-316 Board) ································ 6-3
2-4-2. SYNC AGC Check (MA-316 Board) ····························· 6-4
2-4-3. White Clip/Dark Clip Check (MA-316 Board) ··············· 6-4
2-4-4. Recording Y Level Check (MA-316 Board) ··················· 6-4
2-4-5. Recording Chroma Level Check (MA-316 Board) ········· 6-4
2-4-6. Playback Level Check (MA-316 Board) ························ 6-5
2-5. AUDIO SYSTEM ADJUSTMENT ································ 6-5
2-5-1. ACE Head Adjustment ··· 6-5
2-5-2. E-E Output Level Check ··· 6-5
2-5-3. Overall Output Level and Distortion Factor Check ········· 6-5
2-5-4. Overall Noise Level Check ·· 6-5
2-6. ADJUSTMENT PARTS LOCATION DIAGRAM ········· 6-6

7. REPAIR PARTS LIST

7-1. EXPLODED VIEWS ·· 7-1
7-1-1. FRONT PANEL ASSEMBLY AND
UPPER CASE SECTION ··· 7-1
7-1-2. CHASSIS SECTION ··· 7-2
7-1-3. MECHANISM DECK-1 ··· 7-3
7-1-4. MECHANISM DECK-2 ··· 7-4
7-1-5. MECHANISM DECK-3 ··· 7-5
7-2. ELECTRICAL PARTS LIST ··· 7-6

SERVICE NOTE

1. ERROR CODE INDICATION

- Error codes are indicated using the lower 5 digits in the fluorescent display tube.
  "At this time, Colon ":" between character is not indicated."

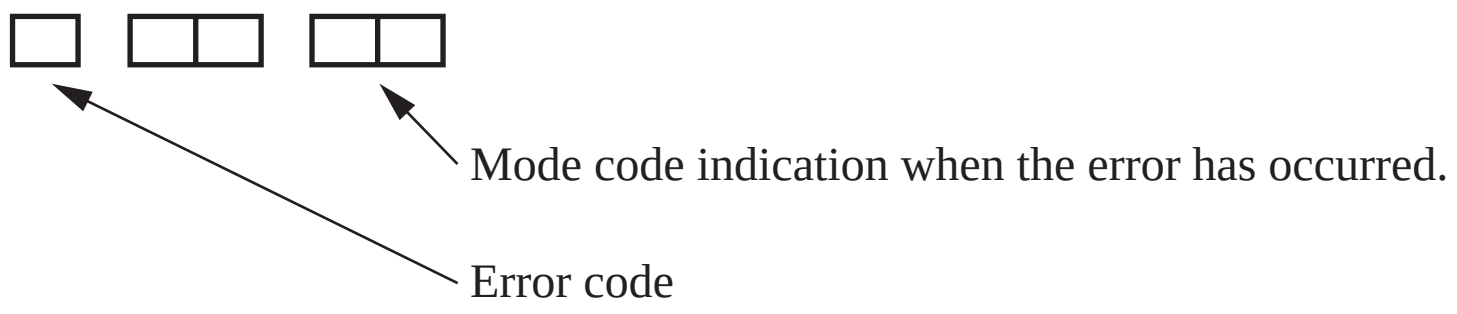

ERROR CODE

0	No error
1	Cam encoder error Loading direction
2	Cam encoder error Unloading direction
3	T reel error
4	S reel error
5	Capstan error
6	Drum error
7	Error on initializing
8	Cassette loading error
9	Reserve

MODE CODE

0	Power-on eject	10	FWD x1	20	REW play
1	Power-on initial	11	FWD x2	21	Cas. loading
2	Power-off eject	12	CUE	22	Tape loading
3	Power-off stop	13	PB-pause	23	Power-off loading
4	FF	14	RVS-pause	24	Mecha. error (Power on)
5	REW	15	RVS x1	25	Power-on eject initial
6	REC	16	RVS x2	26	Power-off eject initial
7	REC- pause	17	REV	27	APC REC
8	Power-on stop	18	Power-off initial	28	Cas. loading (No auto PB check)
9	PB	19	Mecha. error (Power off)		

SECTION 1
GENERAL

This section is extracted from SLV-E880EG instruction manual.

Step 1
Unpacking

Check that you have received the following items with the VCR:

- Remote commander

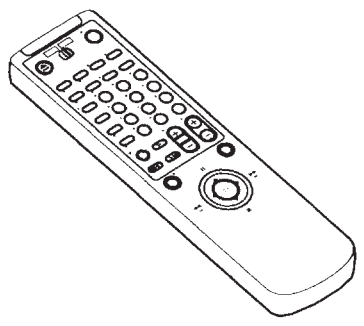

- Audio cable



- R6 (size AA) batteries



- EURO-AV cable



- Aerial cable



Step 2
Setting up the remote commander

Inserting the batteries

Insert two R6 (size AA) batteries by matching the + and – on the batteries to the diagram inside the battery compartment.

Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

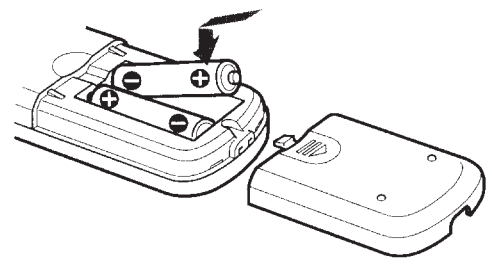

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV. If the TV does not have the symbol near the remote sensor, this remote commander will not operate the TV.

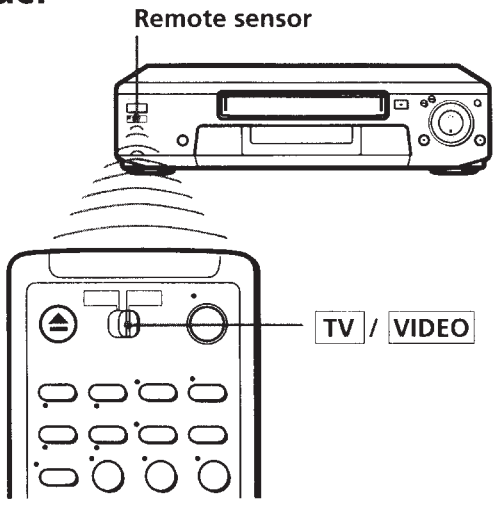

To operate	Set TV / VIDEO to
the VCR	VIDEO and point at the remote sensor on the VCR
a Sony TV	TV and point at the remote sensor on the TV

Using the joystick

Mode	Operation	Action
Normal	Push up/down/left/right ↑/↓/←/→ Press	PAUSE/STOP/FF/REW PLAY
Menu	Push up/down/left/right ↑/↓/←/→ Press	Select in menu OK

continued

Step 2 : Setting up the remote commander (continued)

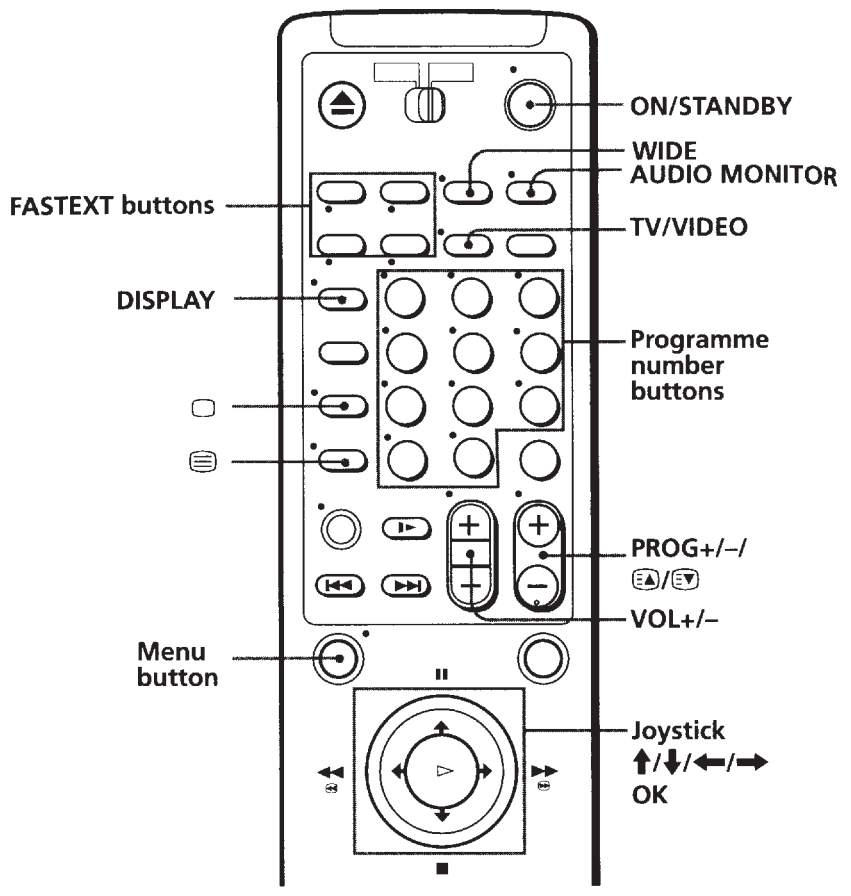

TV control buttons

To	Press
Turn the TV into standby or active mode	ON/STANDBY
Select an input source of the TV either from aerial in or from line in	TV/VIDEO
Select the programme position of the TV	Programme number buttons PROG +/–
Adjust the volume of the TV	VOL +/–
Switch to TV (Teletext off)	▢ (TV)
Switch to Teletext	⊜ (Teletext)

To	Press
Select the sound	AUDIO MONITOR
Use FASTEXT	FASTEXT buttons
Call up on-screen display	DISPLAY
Change the Teletext page	⊕/⊖
Operate TV menu options	MENU Joystick (↑/↓/←/→, OK)
Switch the wide mode of a Sony wide TV (For other manufacture's wide TV, see "Controlling other TVs with the remote commander" below.)	WIDE

Notes

- In normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries together.
- Some buttons may not work with certain Sony TVs.

Controlling other TVs with the remote commander

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the table below, set the appropriate manufacturer's code number.

1 Set TV / VIDEO at the top of the remote commander to TV.

2 Hold down ON/STANDBY, and enter your TV's code number(s) using the programme number buttons. Then release ON/STANDBY.
Now you can use the following TV control buttons to control your TV: ON/STANDBY, TV/VIDEO, programme number buttons, PROG +/–, VOL +/–, ▢ (TV), ⊜ (Teletext), FASTEXT buttons, and WIDE with some TV.

Tip

- If you set your TV's code number correctly while the TV is turned on, the TV turns off automatically.

continued

Step 2 : Setting up the remote commander (continued)

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

To make wide mode settings, see the footnotes below this table for the applicable code numbers.

Manufacturer	Code number	Manufacturer	Code number
Sony	01*1, 02	Philips	06*1, 07*1, 08*1
Akai	68	Saba	12, 13
Ferguson	52	Samsung	22, 23
Grundig	10*1, 11*1	Sanyo	25
Hitachi	24	Sharp	29
Mitsubishi	27*1, 28*1, 50*1, 51*1	TEAC	67
NEC	66	Telefunken	36
Nokia	15, 16, 69*3	Thomson	43*2
Panasonic	17*1, 49	Toshiba	38

*1 Press WIDE to switch the wide picture mode on or off.
*2 Press WIDE, then press VOL +/– to select the wide picture mode you want.
*3 Press WIDE. The menu appears on the TV screen. Then, push joystick to ↑/↓/←/→ to select the wide picture you want and press joystick (OK).

Notes

- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote commander, the code number automatically resets to 01 (Sony). Reset the appropriate code number.

Step 3

Connecting the VCR

If your TV does not have a EURO-AV connector, see page 12.

If your TV has a EURO-AV (Scart) connector

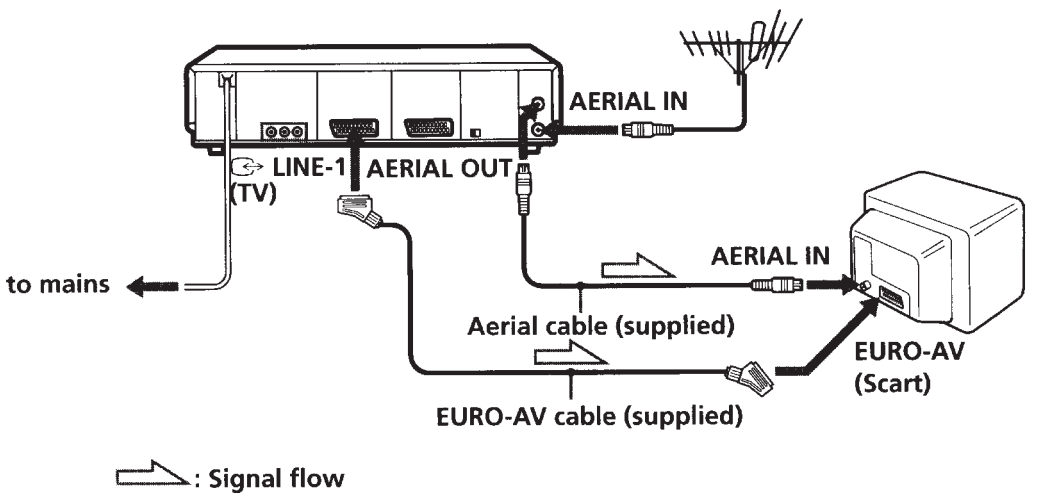

1 Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the VCR.



2 Connect AERIAL OUT of the VCR and the aerial input of your TV using the supplied aerial cable.



continued

Step 3 : Connecting the VCR (continued)

3 Connect LINE-1 (TV) on the VCR and the EURO-AV (Scart) connector on the TV with the supplied EURO-AV cable.

This connection improves picture and sound quality. If your TV doesn't have a EURO-AV (Scart) connector, see page 12.



4 Connect the mains lead to the mains.

Note

- If the TV is connected to the LINE-1 (TV) connector, setting the RF MODULATOR in the OTHER OPTIONS menu to OFF is recommended (initial setting). In the OFF position, only the signal from the aerial is output through the AERIAL OUT connector (see page 68). You do not have to tune your TV to the VCR . Skip "Tuning your TV to the VCR" on page 14.

About the SMARTLINK features



If the connected TV complies with SMARTLINK, NexTView Link, MEGALOGIC*1 or EASYLINK*2 , you can use the SMARTLINK function after you complete the steps on the previous page (the SMARTLINK indicator appears in the VCR's display window when you turn on the TV). You can enjoy the following SMARTLINK features.

- Preset Download
  You can download your TV tuner preset data to this VCR and tune the VCR according to that data in Auto Set Up. This greatly simplifies the Auto Set Up procedure. Be careful not to disconnect the cables nor to exit the function during procedure.
  See "Setting up the VCR with Auto Set Up" on page 16.
- TV Direct Rec
  You can easily record what you are watching on the TV (other than tapes being played on this VCR). For details, see "Recording what you are watching on the TV (TV Direct Rec)" on page 47.
- One Touch Play
  With One Touch Play, you can start playback automatically without turning on the TV. For details, see "Starting playback automatically with one button (One Touch Play)" on page 43.
- One Touch Menu
  You can turn on the VCR and TV, set the TV to the video channel, and display the VCR's on-screen display automatically by pressing MENU on the remote commander.
- One Touch ShowView
  You can turn on the VCR and TV, set the TV to the video channel, and display the ShowView menu automatically by pressing ShowView on the remote commander.
- Automatic Power Off
  You can have the VCR turn off automatically, if the VCR is not used for about 1 minute, after you turn off the TV.
- NexTView Download
  You can easily set the timer recording by using the NexTView Download function of your TV. Please, refer to your TV's instruction manual.

*1 "MEGALOGIC" is a registered trademark of Grundig Corporation.
*2 "EASYLINK" is a trademark of Philips Corporation.

Note

- Not all the TVs respond to the functions above.

continued

Step 3 : Connecting the VCR (continued)

If your TV doesn't have a EURO-AV (Scart) connector

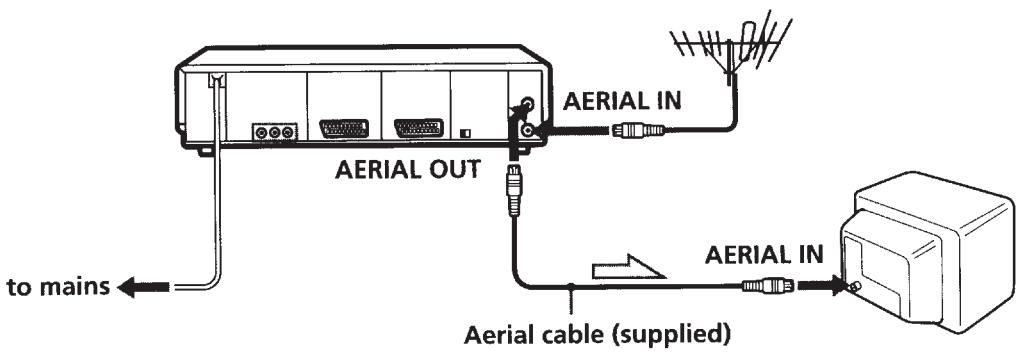

: Signal flow

1 Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the VCR.



2 Connect AERIAL OUT of the VCR and the aerial input of your TV using the supplied aerial cable.



3 Connect the mains lead to the mains.

You now have to tune your TV to your VCR (see page 14).

Additional connection

To a stereo system

You can improve sound quality by connecting a stereo system to the LINE-2 OUT AUDIO R/L/VIDEO jacks as shown on the right.

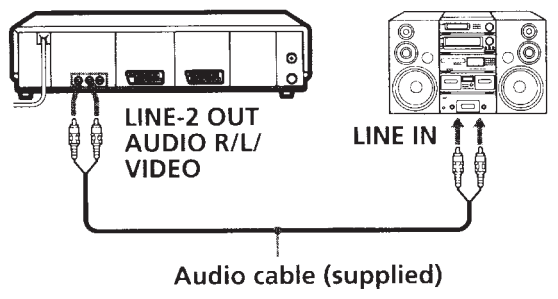

Step 4

Tuning your TV to the VCR

If you have connected the VCR to your TV using the EURO-AV cable, skip this step.

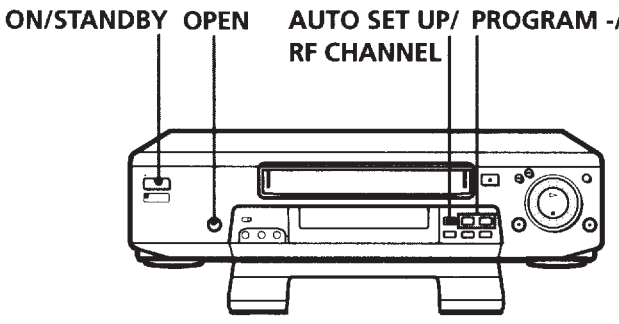

1 • ON/STANDBY — Press ON/STANDBY to turn on the VCR.

OPEN — Press OPEN to open the drop down panel.

2 AUTO SET UP / RF CHANNEL — Press briefly AUTO SET UP/RF CHANNEL on the VCR.

The factory-preset RF channel appears in the display window.

The VCR signal is output through this channel to the TV.

RF 32

3 Turn on your TV and select a programme position for the VCR picture.

This channel will now be referred to as the video channel.

4 AUTO SET UP / RF CHANNEL — Press AUTO SET UP/RF CHANNEL

The TV system appears in the display window.

RF 32 K

5 - PROGRAM + — Press PROGRAM -/+ (repeatedly) to select the correct TV system. If you watch the system B/G , select "G". If you watch the system D/K, select "K".

RF 32 G

6 Tune the TV to the same channel as the one shown in the display window so that the picture on the right appears clearly on the TV screen.

Refer to your TV manual for tuning instructions.

If the picture does not appear clearly, see "To obtain a clear picture from the VCR" below.



7 AUTO SET UP / RF CHANNEL — Press AUTO SET UP/RF CHANNEL.

You have now tuned your TV to the VCR. From now on, whenever you want to play a tape, set the TV to the video channel.

To check if the TV tuning is correct

Set the TV to the video channel and press PROGRAM -/+ on the VCR. If the TV screen changes to a different programme each time you press PROGRAM -/+, the TV tuning is correct.

To obtain a clear picture from the VCR

If the picture does not appear clearly in step 6 above, go to step 7 to finish this procedure once. Then start from step 2. After pressing AUTO SET UP/ RF CHANNEL in step 2 to display the RF channel, press PROGRAM -/+ so that another RF channel appears. Then tune the TV to the new RF channel until a clear picture appears.

Notes

- When you connect the VCR and your TV only with an aerial cable, you have to set RF MODULATOR in the OTHER OPTIONS menu to ON (see page 68).
- If you set the wrong TV system, you may have no sound or may be distorted.

Step 5

Setting up the VCR with the Auto Set Up function

Before using the VCR for the first time, set up the VCR using the Auto Set Up function. With this function, you can set the language for the on-screen display, TV channels, and the VCR clock.

PROGRAM -/+

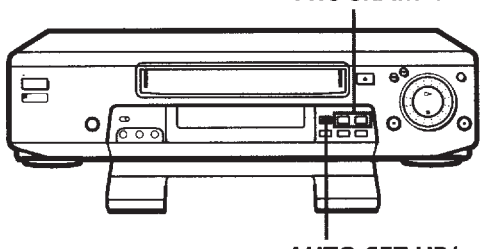

AUTO SET UP/ RF CHANNEL

1 AUTO SET UP RF CHANNEL

Press AUTO SET UP/RF CHANNEL on the VCR for more than 3 seconds.

The VCR automatically turns on, and the country abbreviation appears in the display window.



2 PROGRAM - +

Press PROGRAM -/+ to highlight the abbreviation of your country.
For some countries, there is a selection of languages to choose from.
The abbreviations of the countries are as follows:

Abbreviation	Country	Language
CZ	Czech	Czech
GR	Greece	Greek
HUN	Hungary	Hungarian
PL	Poland	Polish
RUS	Russia	Russian
ELSE	Other countries	English

If your country does not appear, select ELSE.

3 AUTO SET UP RF CHANNEL

Press AUTO SET UP/RF CHANNEL.

The auto preset function starts searching for all of the receivable channels and presets them in numerical order.



When no more receivable channels can be found, presetting stops and SET UP disappears from the display window.

To cancel the Auto Set Up function
Press AUTO SET UP/RF CHANNEL.

Notes
- If you use the SMARTLINK connection, the SMARTLINK indicator flashes in the display window during Preset Download operation. Do not exit Auto Set Up during the step 3. If you do, repeat Auto Set Up from the beginning.
- Whenever you operate the Auto Set Up function, some of the settings (ShowView, timer etc..) will be reset. In this case, you have to set them again.

Getting Started

Step 6

Setting the clock

You must set the time and date on the VCR to be able to use the timer recording features properly.

The Auto Clock Set function works only if a station in your area is broadcasting a time signal. If the Auto Set up function did not set the clock correctly for your local area, try another station for the Auto Clock Set function.

Before you start...
- turn on the VCR and the TV
- set the TV to the video channel..

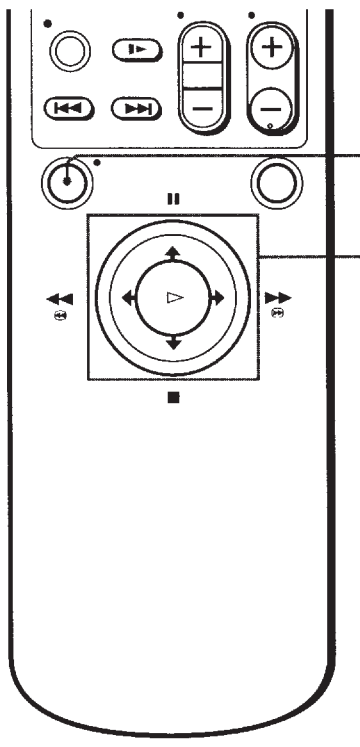

Setting the clock manually

1 MENU

Press MENU, then push the joystick to ↑/↓ to highlight SETTINGS and press the joystick (OK). Push the joystick to ↑/↓ to highlight CLOCK and press the joystick (OK).





2

Push the joystick to ↑/↓ to highlight MANUAL ADJUST then press the joystick (OK).



3

Push the joystick to ↑/↓ to set the date.
The day of the week is set automatically.



4



Push the joystick to → to highlight the month and set the month using the joystick ↑/↓.



5

Set the year, hour, and minutes in sequence, using the joystick → to highlight the item to be set, and the joystick ↑/↓ to select the digits.



6

Press the joystick (OK) to confirm the setting and start the clock.



7 MENU

Press MENU to exit the menu.

Getting Started

continued

Step 6 : Setting the clock (continued)

Changing the station for Auto Clock Set

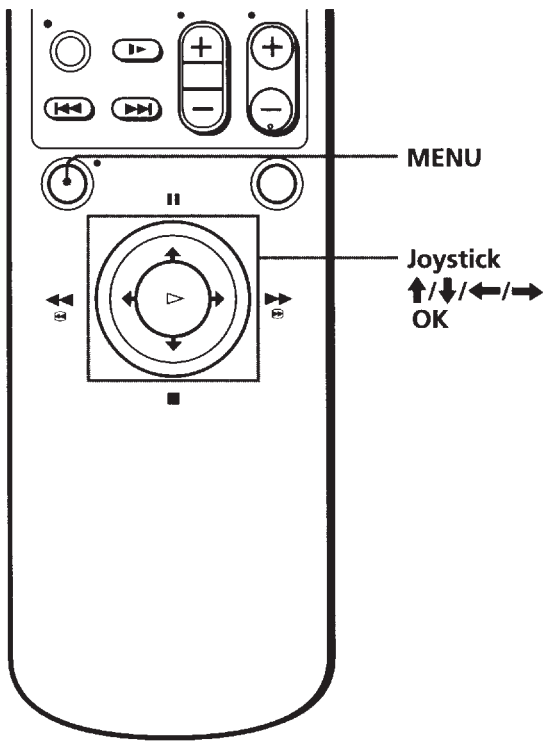

1



Press MENU, then push the joystick to ↑/↓ to highlight SETTINGS and press the joystick (OK). Push the joystick to ↑/↓ to highlight CLOCK and press the joystick (OK).

When using the Auto Set Up procedure, skip this step.





2

Press OK to enter pop up menu and push the joystick to ↑/↓ to set AUTO ADJUST to ON.

Press the joystick (OK).



3

Push the joystick to ↓ to highlight CLOCK PROG, then press the joystick (OK).
Push the joystick to ↑/↓ repeatedly until the programme position of the station that carries the time signal appears.

If the VCR does not receive the time signal from any station, AUTO ADJUST returns to OFF automatically.



4

Press MENU to exit the menu.

Getting Started

Tips

- To change the digits during setting, push the joystick to ← to return to the item to be changed, and select the digits using the joystick ↑/↓.
- If you set AUTO ADJUST to ON, the Auto Clock Set is activated whenever the VCR is turned off. The date and time is adjusted automatically by making reference to the time signal from the station whose programme position is displayed in the "CLOCK PROG" row.
  If you do not need the Auto Clock Set, set AUTO ADJUST to OFF.

Note

- The menu disappears automatically if you don't proceed for more than a few minutes.

Manual setup — Selecting a language

You can change the on-screen display language from the one you selected with the Auto Set Up function.

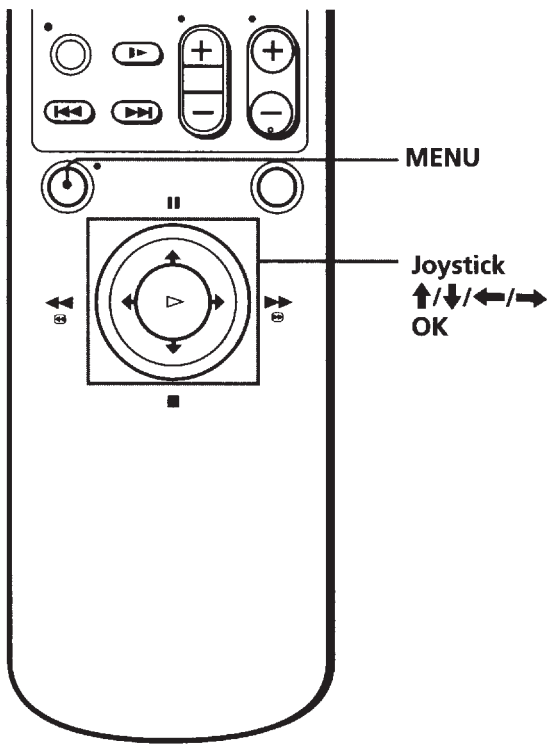

Before you start...

- turn on the VCR and the TV
- set the TV to the video channel.

1



Press MENU, then push the joystick to ↑/↓ to highlight SETTINGS and press the joystick (OK).



2

Push the joystick to ↑/↓ to highlight LANGUAGE, then press the joystick (OK).



3

Push the joystick to ↑/↓/←/→ to highlight the desired language, then press the joystick (OK).



4

Press MENU to exit the menu.

Manual setup — Presetting channels

If some channels could not be preset using the Auto Set Up function, you can preset them manually.

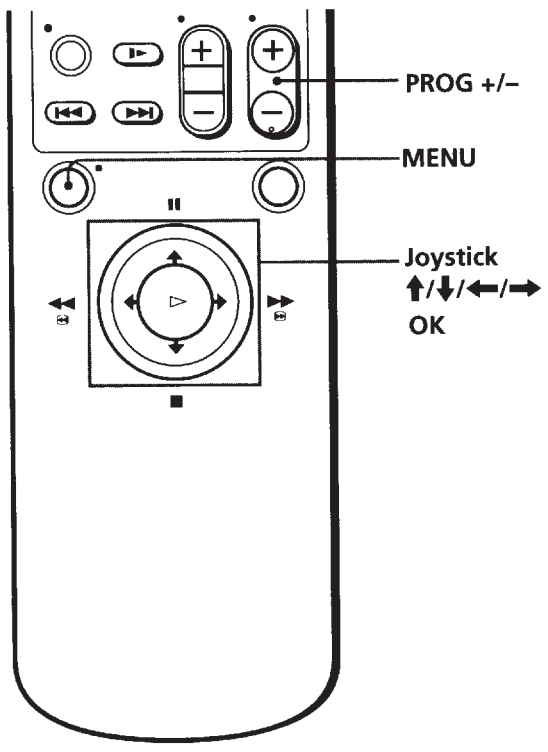

Getting Started

Before you start...

- turn on the VCR and the TV
- set the TV to the video channel.

1



Press MENU, then push the joystick to ↑/↓ to highlight SETTINGS and press the joystick (OK).



2

Push the joystick to ↑/↓ to highlight TUNER and press the joystick (OK).



3

Push the joystick to ↑/↓ to highlight MANUAL PRESET and press the joystick (OK).



continued

4 Push the joystick to ↑/↓ to highlight NORMAL/CATV. Press the joystick (OK). Push the joystick to ↑/↓ to select NORMAL then press the joystick (OK).

To preset CATV channels, select CATV.



5 Push the joystick to ↑/↓ to highlight CHANNEL SET.



6 •PROG Press PROG +/– to select the programme position.

Selected programme position

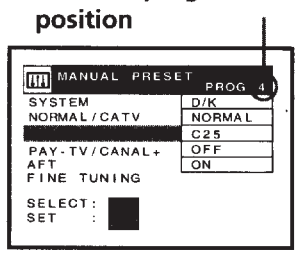

7 Press the joystick (OK) to highlight the channel number row , then push the joystick to ↑/↓ to start tuning.

The VCR starts searching for a channel and displays the first one it finds on the TV screen. Push the joystick to ↑/↓ repeatedly until the channel you want is displayed. The channels are scanned in the following order.



B/G TV system		D/K TV system	
Channel number in the CHANNEL SET field	Channel	Channel number in the CHANNEL SET field	Channel
2	E2	2	R1
3	E3	5	R6
4	E4	6	R7
5	E5	12	R12
6	E6	13	R2
7	E7	14	R3
8	E8	15	R4
9	E9	16	R5
10	E10	17	R8
11	E11	18	R9
12	E12	19	R10
21–69	E21–E69	20	R11
CATV 1–41	S1–S41	21–69	R21–R69
CATV 42–46	S01–S05		

If you know the number of the channel you want, press the programme number buttons. For example, for channel 05, first press "0" and then press "5".

8 If the TV sound is distorted or noisy, push the joystick to ↑/↓ /←/→ to highlight SYSTEM, then select B/G or D/K so that you get the better sound



9 Press the joystick (OK).

continued

10 To allocate another channel to another programme position, repeat steps 4 to 8.

11 •MENU Press MENU to exit the menu.

Disabling unwanted programme positions

After tuning the TV channels, you can disable unused programme positions. The disabled positions will be skipped later when you press the PROG +/– buttons. You can also disable unwanted programme positions using the CHANNEL LIST menu (page 31).

1. In step 7 above, press programme number button "0" twice to display the number "00" beside CHANNEL SET.
2. Press the joystick (OK) to confirm the setting, then press MENU to exit the menu.

If the picture is not clear

Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture is not clear, you may also use the manual tuning function.

1. Press PROG +/– to select the programme number for which you cannot obtain a clear picture.
2. Press MENU, then select SETTINGS and press the joystick (OK).
3. Select TUNER and press the joystick (OK).
4. Select MANUAL PRESET and press the joystick (OK).
5. Select FINE TUNING.

   The fine tuning meter appears.



Selected programme position

6. Push the joystick to ←/→ to get a clearer picture. Press MENU to exit the menu.

   Note that the AFT (Auto Fine Tuning) setting switches to OFF.

Note
- The menu disappears automatically if you don't proceed for more than a few minutes.

Manual setup — Setting station names

You can also set station names as you like. The set station names are displayed on the TV screen when you change the programme position on the VCR.

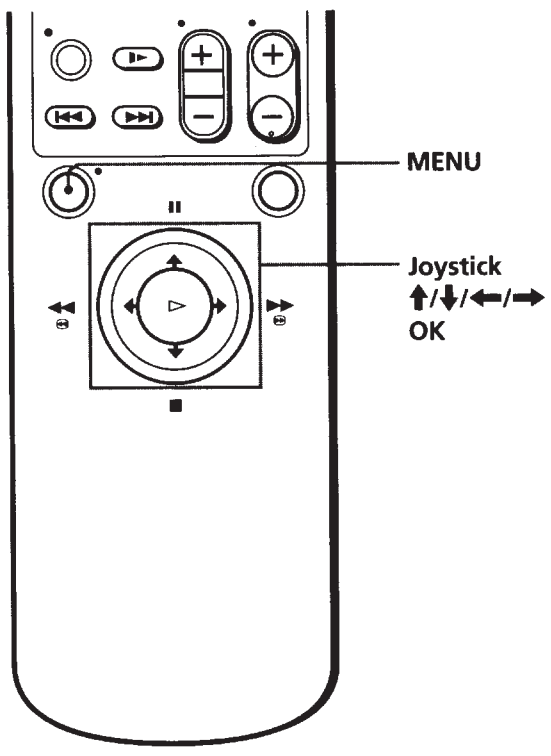

Before you start…
- turn on the VCR and the TV
- set the TV to the video channel.

1 •MENU Press MENU, then push the joystick to ↑/↓ to highlight LISTS then press the joystick (OK). Push the joystick to ↑/↓ to highlight CHANNEL LIST and press the joystick (OK).

The preset channels are displayed on the screen. The station names also appear if the VCR detected them in Auto Set Up.





continued

Manual setup — Setting station names (continued)

2

Push the joystick to ↑/↓ to highlight the row on which you want to set the station name.

To display other pages for programme positions 6 to 60, push the joystick to ↑/↓ repeatedly.



3 

- If you want to set the station name, push the joystick to → twice to highlight the station name column only.
- If you don't want to set the station name, go to step 6.



4

Push the joystick to ↑/↓ to select a character.

To set the next character, push the joystick to → to highlight the next space.
If you make a mistake, push the joystick to ← to highlight the character you want to correct, then reset it.
You can set up to five characters for the station name.



5 To set the station name of another station, repeat steps 2 to 4.

If you want to change the programme positions of the stations, proceed to step 2 of "Manual setup — Changing/disabling programme positions" on page 29.

6

Press the joystick (OK) to confirm the setting.



7

Press MENU to exit the menu.

Note
- The menu disappears automatically if you don't proceed for more than a few minutes.

Manual setup — Changing/ disabling programme positions

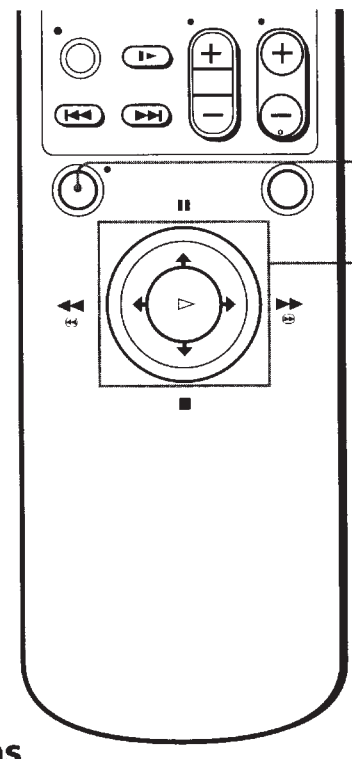

After setting the channels, you can change the programme positions as you like. If any programme positions are unused or contain unwanted channels, you can disable them.

Before you start…
- turn on the VCR and the TV
- set the TV to the video channel.

Changing programme positions

e.g. Moving the programme position from 3 to 1.

1 

Press MENU, then push the joystick to ↑/↓ to highlight LISTS and press the joystick (OK). Push the joystick to ↑/↓ to highlight CHANNEL LIST and press the joystick (OK).





2

Push the joystick to ↑/↓ to highlight the row on which you want to change the programme position, then push the joystick to →.

To display other pages for programme positions 6 to 60, push the joystick to ↑/↓ repeatedly.



continued

Manual setup — Changing/disabling programme positions (continued)

3

Push the joystick to ↑/↓ until the selected channel row moves to the desired programme position.

The selected channel is inserted at the new programme position and the intermediate channels are displaced to fill the gap.



4

Press the joystick (OK) to confirm the setting.

5 To change the programme position of another station, repeat steps 2 to 4.

6

Press MENU to exit the menu.

Disabling unwanted programme positions

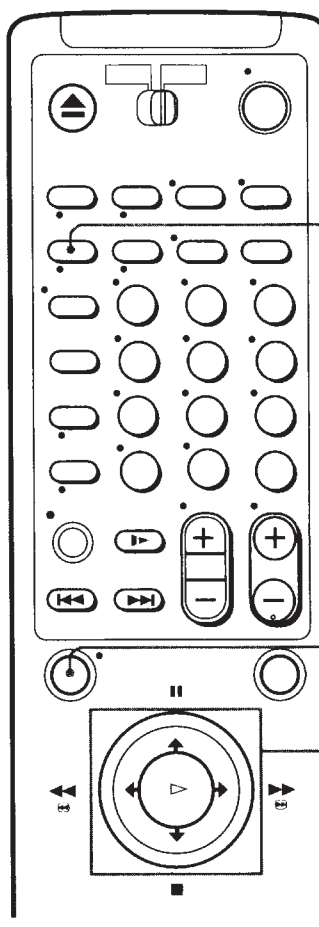

Note
- Be sure to select the programme position you want to disable correctly. If you disable a programme position by mistake, you need to reset that channel manually.

1 

Press MENU, then push the joystick to ↑/↓ to highlight LISTS and press joystick (OK). Push the joystick to ↑/↓ to highlight CHANNEL LIST and press the joystick (OK).





2

Push the joystick to ↑/↓ to highlight the row which you want to disable.



continued

Manual setup — Changing/disabling programme positions (continued)

3 CLEAR

Press CLEAR.

The selected row will be cleared as shown on the right.



4 Repeat steps 2 and 3 for any other programme positions you want to disable.

5 •MENU Press MENU to exit the menu.

Manual setup — Listing the channels as the TV

You can match the channels for the programme positions preset in the VCR with the ones preset in the connected TV if you have connected the VCR to your TV using the EURO-AV cable.

Before you start...

- turn on the VCR and the TV

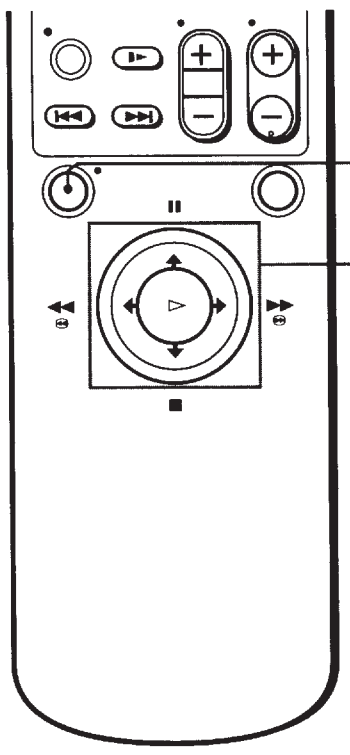

Getting Started

1 •MENU

Press MENU, then push the joystick to ↑/↓ to highlight SETTINGS and press the joystick (OK). Push the joystick to ↑/↓ to highlight TUNER and press the joystick (OK).



2



Push the joystick to ↑/↓ to highlight COPY TV CHANNEL ORDER then press OK.

If you use SMARTLINK connection, you don't need to do the following steps. Listing the channels as the TV will be automatically finished when the normal picture appears.

If you don't use SMARTLINK connection, go to step 3.



3 Select the same programme position on your TV as the one shown on the screen.

continued

Manual setup — Listing the channels as the TV (continued)

4

Press OK. SYNCHRO-TP (Synchro Tuner Preset) automatically starts searching for the same channel and presets it in the selected programme position.

5 To match other programme positions, repeat steps 3 to 4.

6

Push the joystick to ➡ to complete SYNCHRO-TP

Notes

- Depending on the TV, some VCR channels may not match the channels preset in the TV. In this case, set the channels manually (see page 23).
- If you can't list the channels as the TV, try the Auto Set Up function (see page 16) first. Then follow the steps above.
- Whenever you operate the Auto Set Up function, some of the settings (ShowView, timer etc.) will be reset. In this case, you have to set them again.
- If your TV as two or more EURO-AV (Scart) connectors, connect the VCR to the EURO-AV 1 (Scart 1) connector to use the Synchro TP function.

Manual setup — Using the satellite tuner

Connecting the satellite tuner

You can connect a satellite tuner into LINE-3 IN connector .

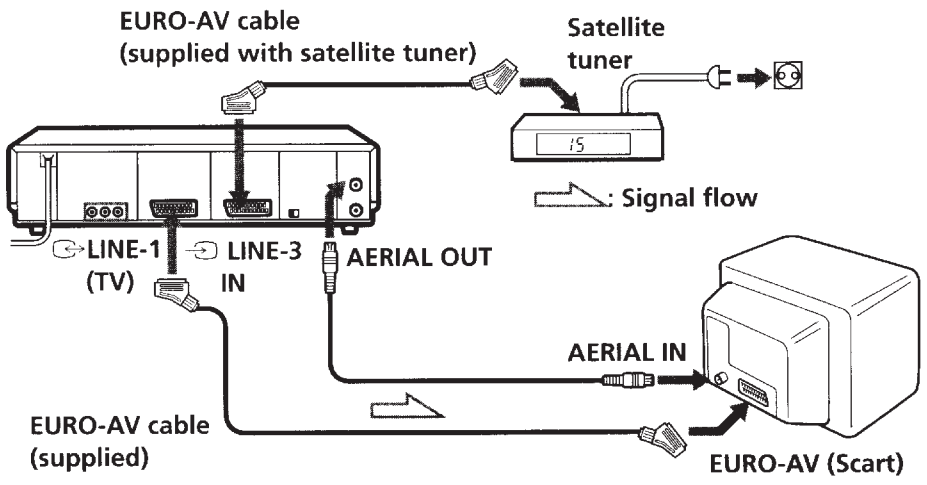

Getting Started

Setting the satellite tuner

To watch or record from the satellite tuner, set your VCR to receive the channels using the on-screen display.

Before you start...

- turn on the VCR and the TV
- set the TV to the video channel.

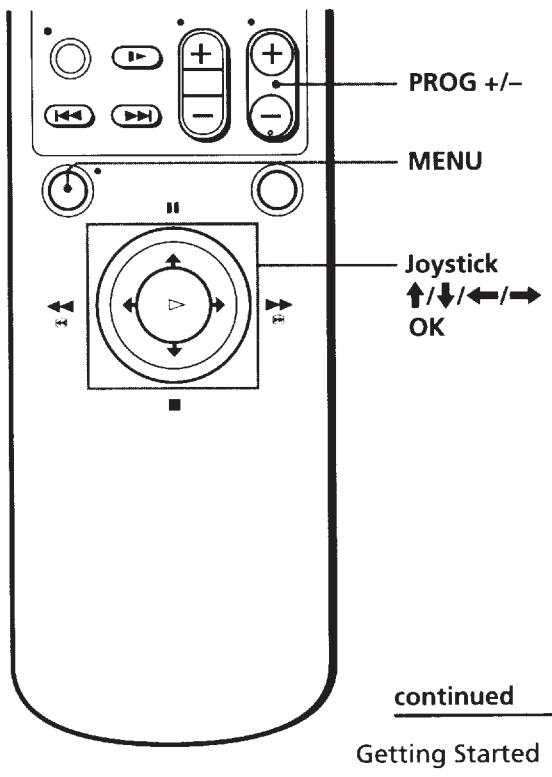

continued

Manual setup — Using the Satellite tuner (continued)

1. Press MENU, then push the joystick to ↑/↓ to highlight OPTIONS and press the joystick (OK).
2. Push the joystick to ↑/↓ to highlight OTHER OPTIONS and press the joystick (OK).
3. Push the joystick to ↑/↓ to highlight DECODER/LINE 3 and press the joystick (OK) to enter the pop up menu.
4. Push the joystick to ↑/↓ then select LINE3. Press the joystick (OK).
5. Press MENU to exit the menu.

Setting the PAY-TV/Canal Plus decoder

You can watch or record PAY-TV/Canal Plus programmes if you connect a decoder (not supplied) to the VCR.

Connecting a decoder

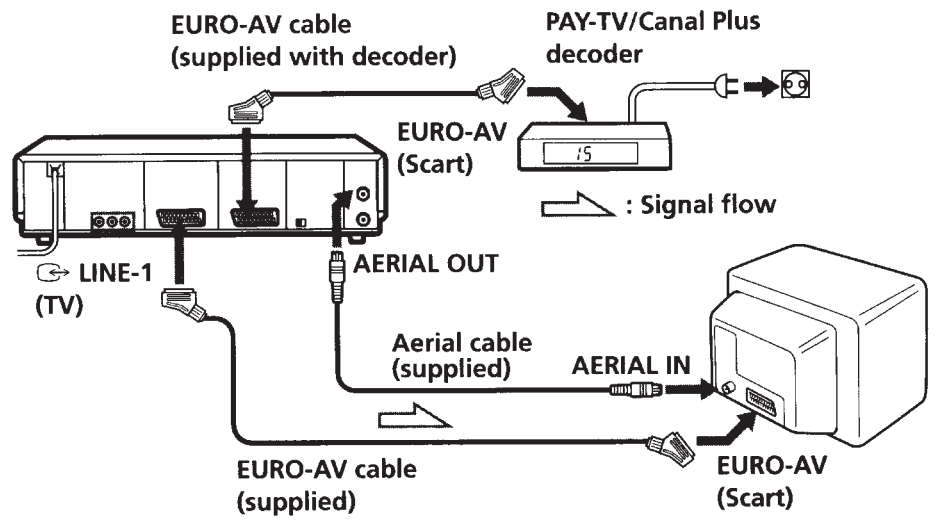

Setting PAY-TV/Canal Plus channels

To watch or record PAY-TV/Canal Plus programmes, set your VCR to receive the channels using the on-screen display.

Before you start…

- turn on the VCR and the TV
- set the TV to the video channel.

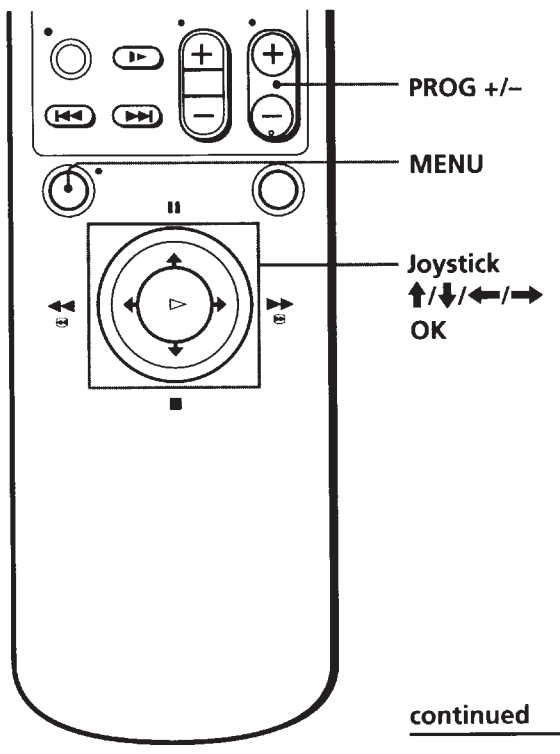

continued

Setting the PAY-TV/Canal Plus decoder (continued)

1. Turn on your decoder.
2. Press MENU, then push the joystick to ↑/↓ to highlight OPTIONS and press the joystick (OK).
3. Push the joystick to ↑/↓ to highlight OTHER OPTIONS and press the joystick (OK).
4. Push the joystick to ↑/↓ to highlight DECODER/LINE 3. Press the joystick (OK) to enter the pop up menu, push the joystick to ↑/↓ then select DECODER. Press the joystick (OK).
5. Press MENU to exit the menu.
6. Press MENU, then push the joystick to ↑/↓ to highlight SETTINGS and press the joystick (OK).
7. Push the joystick to ↑/↓ to highlight TUNER and press the joystick (OK).

8. Push the joystick to ↑/↓ to highlight MANUAL PRESET and press the joystick (OK).
9. Push the joystick to ↑/↓ to highlight NORMAL/CATV. Press the joystick (OK). Push the joystick to ↑/↓ to select NORMAL then press the joystick (OK).

   To preset CATV channels, select CATV.
10. Press PROG +/– to select the desired programme position.

    Selected programme position
11. Press the joystick (OK) to enter the channel set box, then push the joystick to ↑/↓ to tune PAY-TV/Canal Plus channels.
    When the desired channel is tuned, press the joystick (OK).
12. Push the joystick to ↑/↓ to highlight PAY-TV/CANAL+and press the joystick (OK) to enter the pop up menu, then push the joystick to ↑/↓ to select ON. Press the joystick (OK).

continued

Setting the PAY-TV/Canal Plus decoder (continued)

13 

If the TV sound is distorted or noisy, push the joystick to ↑/↓ /←/→ to highlight SYSTEM, then select B/G or D/K so that you get the better sound



14 MENU Press MENU to exit the menu.

Notes

- The menu disappears automatically if you don't proceed more than a few minutes.
- To superimpose subtitles while watching PAY-TV/Canal Plus programmes, make both decoder-VCR and VCR-TV connections using 21-pin EURO-AV cables that are compatible with the RGB signals. You cannot record subtitles on the VCR.
- When you watch PAY-TV/Canal Plus programmes using the aerial input of the TV, press TV/VIDEO so that the VIDEO indicator appears in the display window.

Playing a tape

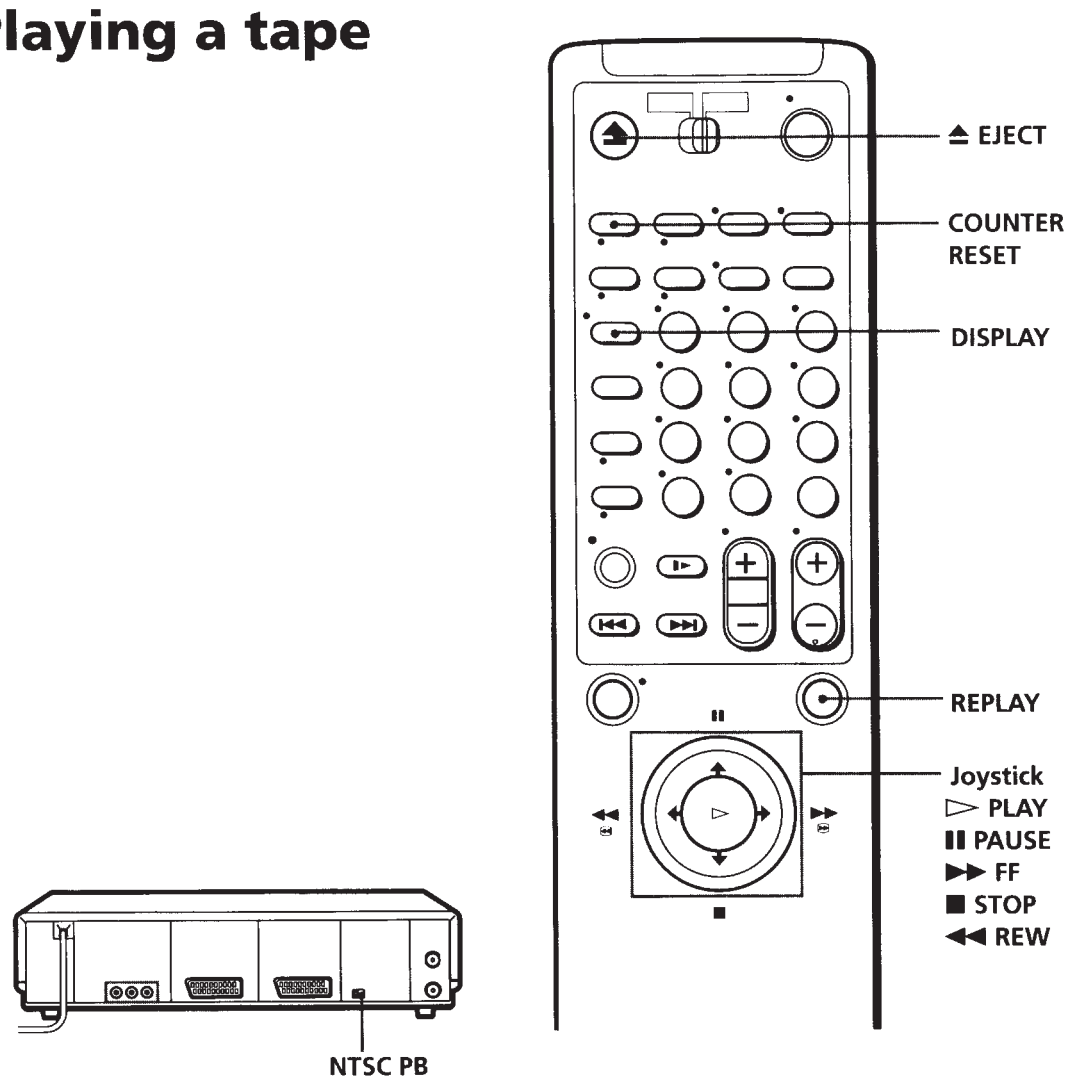

1 Turn on your TV and set it to the video channel.

2 Insert a tape.

The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.



3

Press the joystick (▷ PLAY).

When the tape reaches the end, it will rewind automatically.

continued

Playing a tape (continued)

Additional tasks

To	Push Joystick to
Stop play	■ STOP
Pause play	II PAUSE
Resume play after pause	II PAUSE or press the joystick (▷ PLAY)
Search forward	▶▶ FF during playback
Search backward	◀◀ REW during playback
Fast-forward the tape	▶▶ ⊕ FF during stop
Rewind the tape	◀◀ ⊖ REW during stop
Eject the tape	Press ≜ EJECT

To replay a recently watched scene

You can immediately rewind and playback the scene you want to watch again.

During playback, press REPLAY up to four times. The VCR rewinds the tape 10 seconds for each press of the button, and restarts playback.

To set the colour system

If the playback picture has no colour or streaks appear during playback, set the COLOUR SYSTEM option in the VIDEO OPTIONS menu to conform to the system that the tape was recorded in (see page 66). (Normally set the option to AUTO)

To play an NTSC-recorded tape

Set NTSC PB at the rear of the VCR according to the colour system of your TV.

When your TV is	Set NTSC PB to
PAL only	ON PAL TV
PAL and NTSC	NTSC 4.43

To use the time counter

At the point of the tape that you want to find later, press COUNTER RESET. The counter in the display window resets to "0H00M00S." Search for the point afterwards by referring to the counter.

0H00M00S

To display the counter on the TV screen, press DISPLAY.

Notes

- Depending on your TV, the following may occur while playing an NTSC-recorded tape:
  - The picture becomes black and white.
  - The picture shakes.
  - No picture appears on the TV screen.
  - Black streaks appear horizontally on the TV screen.
  - The colour density increases or decreases.
- If you play back a tape in LP or EP mode with NTSC system, the sound is heard in monaural.
- The counter resets to "0H00M00S" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- While setting the menu on the TV screen, you cannot use the joystick for tape operation.

Starting playback automatically with one button (One Touch Play)

If you use the SMARTLINK connection, you can turn on the VCR and the TV, set the TV to the video channel, and start playback automatically with one button.

1 Insert a tape.

The VCR automatically turns on.

If you insert a tape with its safety tab removed, the TV turns on and switches to the video channel. Playback starts automatically.

2 Press the joystick (▷ PLAY).

The TV turns on and switches to the video channel automatically. Playback starts.

Tip

- When there already is a tape in the VCR, the VCR and the TV turn on, the TV is set to the video channel, and playback starts automatically in one sequence when you press the joystick (▷ PLAY).

Recording TV programmes

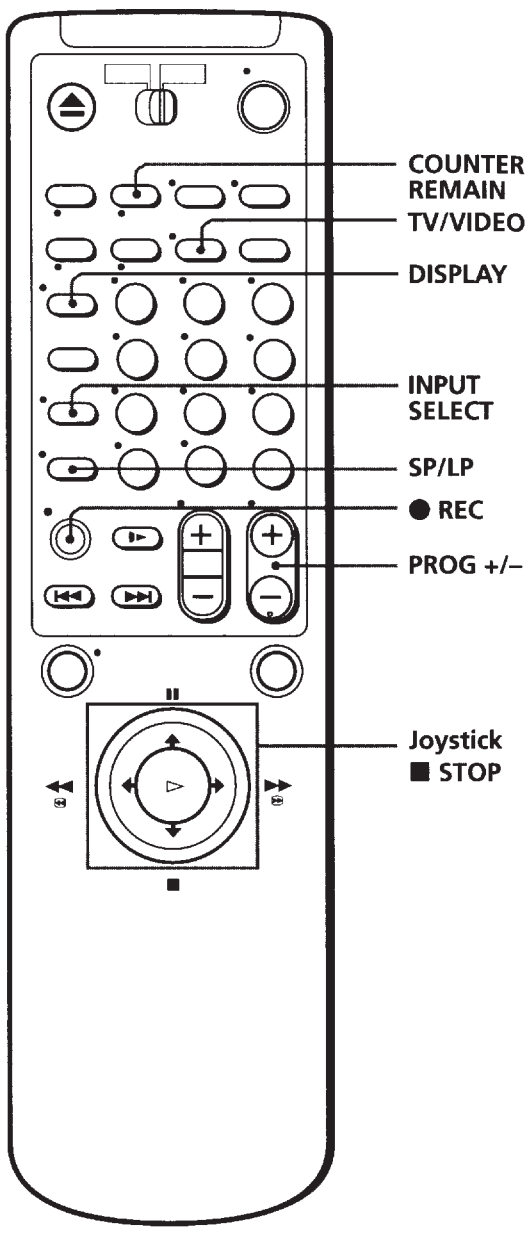

1 Turn on your TV and set it to the video channel.

2 Insert a tape with its safety tab in place.

3 INPUT SELECT Press INPUT SELECT until a programme position number appears in the display window.



4 • PROG Press PROG +/– to select the programme position you want to record.

5 • SP/LP Press SP/LP to select the tape speed, SP or LP.

LP (Long Play) provides recording time twice as long as SP (Standard Play), however, SP produces better picture and audio quality.



6 ● REC Press ● REC to start recording.

The recording indicator lights up red in the display window.



To stop recording

Push joystick ↓ (■ STOP).

To check the remaining tape length

Press DISPLAY. The white bar indicates the approximate length of tape remaining. With the display on, press COUNTER/REMAIN to check the remaining time. Each time you press COUNTER/REMAIN, the time counter and the remaining time appear alternately. The remaining time with the ⊘ indicator also appears in the display window.

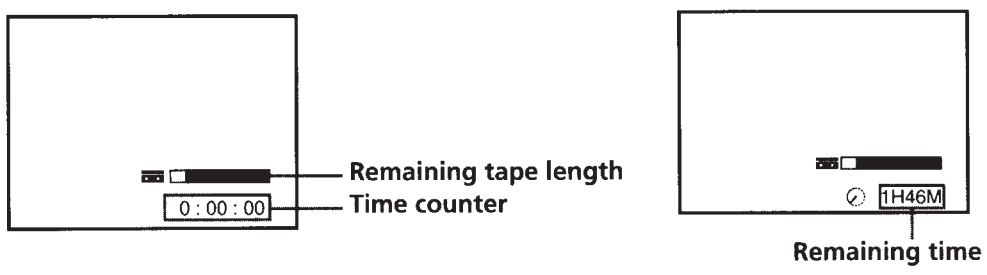

continued

Recording TV programmes (continued)

In order to get an accurate remaining time indication, be sure the TAPE SELECT item in TAPE OPTIONS menu is set according to the tape type you use (see page 67).

To watch another TV programme while recording

1 Press TV/VIDEO on the remote commander to turn off the VIDEO indicator in the display window.

2 Select another programme position on the TV.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.



Safety tab

Tips

- To select a programme position, you can use the programme number buttons on the remote commander. For two-digit numbers, press the -/-- (ten's digit) button followed by the programme number buttons.
- You can select a video source from the LINE-1 (TV) or LINE-3 IN (Scart) connector, or the LINE-2 IN jacks using INPUT SELECT.
- The display appears on the TV screen indicating information about the tape, but the information won't be recorded on the tape.
- If you don't want to watch TV while recording, you can turn off the TV.

Notes

- The display does not appear during still (pause) mode or slow-motion playback.
- The display will not appear while playing an NTSC-recorded tape.
- If a tape has portions recorded in both PAL and NTSC systems, the time counter reading will not be correct. This discrepancy is due to the difference between the counting cycles of the two video systems.
- You cannot watch PAY-TV/Canal Plus programme while recording another PAY-TV/Canal Plus programme.
- When you insert a tape with a short tape length such as E-30 or a non-standard commercially available tape, the remaining tape counter may not be correct.
- The remaining tape counter doesn't work for an NTSC-recorded tape. "-:- -" appears in the display window.
- The remaining tape counter is intended for rough measurement only.
- The remaining time will be displayed only about 30 seconds after the tape is inserted and operated for a few moments.

Recording what you are watching on the TV (TV DIRECT REC)

If you use the SMARTLINK connection, you can easily record what you are watching on the TV (other than tapes being played on this VCR).

1 Insert a tape with its safety tab in place.

2 Press ● REC while you are watching a TV programme or external source.

The VCR automatically turns on and starts recording what you are watching on the TV.

Tips

- The TV indicator appears in the display window after you press ● REC in some situations such as:
  - when you are watching a source connected to the TV's line input, or
  - when the TV tuner preset data for the programme position is different from the data in the VCR tuner preset.
- If there is a tape with its safety tab in place in the VCR, the VCR automatically turns on and starts recording what you are watching on the TV when you press ● REC.
- You can turn the TV DIRECT REC function on and off in the OTHER OPTIONS menu of the OPTIONS menu (see page 68).

Notes

- You cannot record what you are watching using this method when the VCR is in the following modes: pause, timer standby, tuner preset, Auto Set Up, and recording.
- When the TV indicator is lit in the display window, do not turn off the TV nor change the TV programme position. When the TV indicator is not lit, the VCR continues recording the programme even if you change the TV programme position on the TV.

Recording TV programmes using ShowView

Just enter the programme's ShowView number listed in the TV programme guide. The date, times, and programme position of that programme are set automatically. You can preset up to eight programmes at a time.

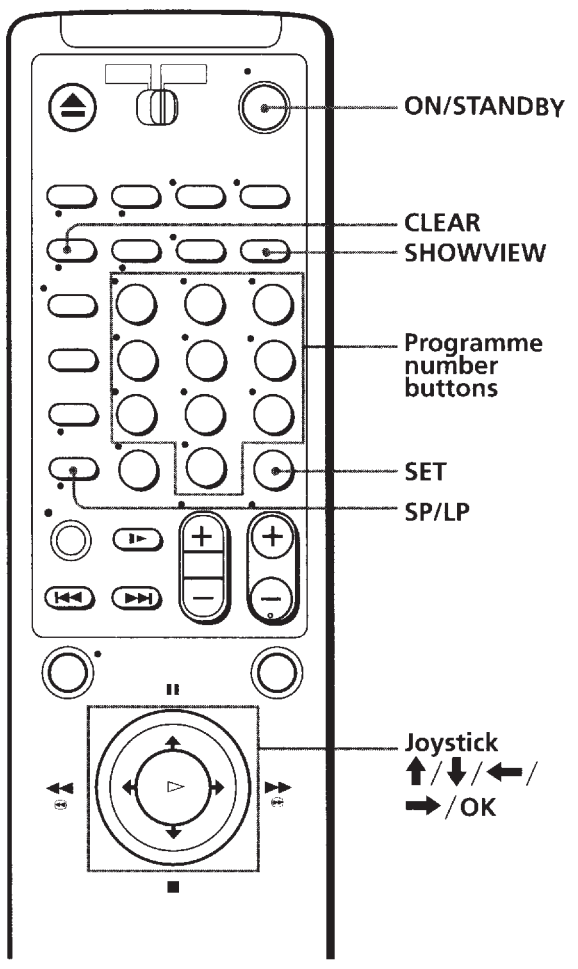

Before you start...

- Check that the VCR clock is set to the correct time and date (see page 19).
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If you don't use the SMARTLINK connection, turn on your TV and set it to the video channel.
- If you use the SMARTLINK connection, go to step 1.

1 SHOWVIEW

Press SHOWVIEW.



2 CLEAR

Press the programme number buttons to enter the programme's ShowView code.

If you make a mistake press CLEAR and re-enter the correct number.



3 SET

Press SET.
The date, start and stop times, programme position, and tape speed appear on the TV screen.

If "- -" appears in the programme column (this may happen for local broadcasts), you have to set the appropriate programme position manually. Push joystick ↑/↓ to select the desired programme position. You will only have to do this operation once for the referred channel. The VCR will then store your setting. If you want to record a satellite broadcast, select the LINE on which your satellite tuner is connected (see page 35).



If you want to change the date, time, tape speed, and the VPS/PDC function setting:

1 Push joystick ←/→ to highlight the item you want to change.

2 Push joystick ↑/↓ to reset it.
- to record the same programme every day or the same day every week, see "Daily/weekly recording" on page 50.
- to use the VPS/PDC function, set VPS/PDC to ON. For details of the VPS/PDC function, see "Timer recording with VPS/PDC signals" on page 50.

4

Press joystick (OK) to confirm the setting.

5 ON/STANDBY

Press ON/STANDBY to turn off the VCR.

The ⌚ indicator appears in the display window and the VCR stands by for recording.

To stop recording

To stop the VCR while recording, push joystick ↓ (■ STOP).

continued

Daily/weekly recording

In step 2 above, push the joystick to ↓ to select the recording pattern. Each time you push the joystick to ↓, the indication changes as shown below. Push the joystick to ↑ to change the indication in reverse order.

TODAY → SUN-SAT (Sunday to Saturday) → MON-SAT (Monday to Saturday) → MON-FRI (Monday to Friday) → SAT (every Saturday) ..... → MON (every Monday) → SUN (every Sunday) → 1 month later →(dates count down) → TOMORROW →TODAY

Timer recording with VPS/PDC signals

Some broadcast systems transmit VPS (Video Programme System)/PDC (Programme Delivery Control) signals with their TV programmes. These signals ensure that your timer recordings are made regardless of broadcast delay, early starts or broadcast interruptions.

In step 3 above, push the joystick to ↑/↓ to turn on/off the VPS/PDC indication after you set the recording date. If you do not want to set the VPS/PDC function, turn off the VPS/PDC indication.

You can also use the VPS/PDC function for a source connected to the LINE-1 (TV) and LINE-3 IN connectors, and LINE-2 IN jacks.

Tips

- For two digit numbers, press the -/-- (ten digit) button followed by the programme number button.
- To set the programme position, you can also use the PROG +/– or programme number buttons.
- To set the tape speed, you can also use SP/LP.
- To set the start and stop times, you can also use programme number buttons.

Notes

- When setting the timer with VPS/PDC signals, enter the start and stop times exactly as indicated in the TV programme guide, otherwise the VPS/PDC function won't work.
- If the VPS/PDC signal is too weak or the broadcasting station failed to transmit VPS/PDC signals, the VCR will start recording at the set time without using the VPS/PDC function.
- The ⌚ indicator flashes in the display window when you press ON/STANDBY with no tape inserted.

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press ON/STANDBY. The ⌚ indicator turns off and the VCR switches on. Remember to press ON/STANDBY to reset the VCR after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV programme.

Tips

- To cancel the "Recording TV programmes using ShowView" procedure, press SHOWVIEW before pressing SET.
- In step 4 above, you can check the TIMER LIST by selecting LIST and pressing OK. Press OK again to return to the former screen.
- When you are recording a programme in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the LP mode. Note that some interference will appear on the picture at the point the tape speed is changed. If you want to keep the same tape speed, set AUTO LONG PLAY to OFF in the TAPE OPTIONS menu (see page 67).

Note

- If the VCR beeps repeatedly, this means that the programme's ShowView number is incorrect.

Setting the timer manually

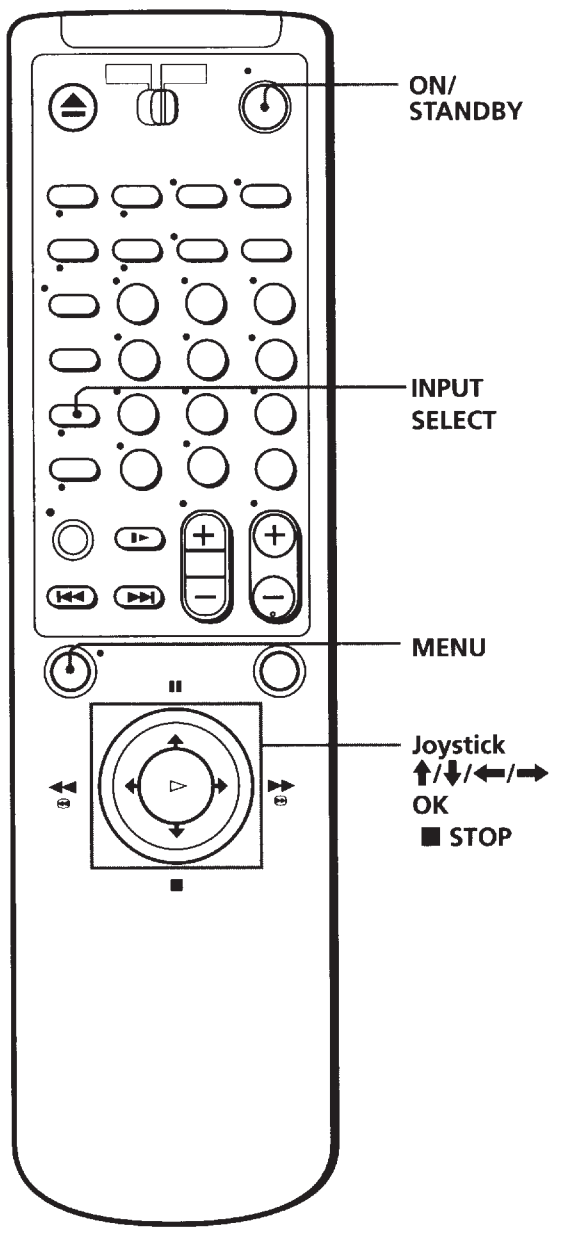

If ShowView is not available in your area, follow the instructions below to set the timer to record programmes.

Before you start...

- Check that the VCR clock is set to the correct time.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- If you don't use the SMARTLINK connection, turn on your TV and set it to the video channel.

1 

Press MENU.

Push the joystick to ↑/↓ to highlight TIMER, then press the joystick (OK).



2

Set the date, start and stop times, programme position, tape speed and the VPS/PDC function:

1 Push the joystick to → to highlight each item in turn.

2 Push the joystick to ↑/↓ to set each item.

To correct a setting, push the joystick to ← to reset.

- To record the same programme every day or the same day every week, see "Daily/weekly recording" on page 54.
- If you don't want to use the VPS/PDC function, see "Timer recording with VPS/PDC signals" on page 50.
- To record from other sources connected to the LINE-1 (TV) or LINE-3 IN (Scart) connector, or LINE-2 IN jacks, press INPUT SELECT to display "L1," "L2," or "L3" in the "PROG" position.

3

Press OK to confirm the setting.

4

Press ON/STANDBY to turn off the VCR.

The ⏻ indicator appears in the display window and the VCR stands by for recording.

To record from other sources, leave the connected equipment switched on.

To stop recording

To stop the VCR while recording, push the joystick to ↓ (■ STOP).

continued

Setting the timer manually (continued)

Daily/weekly recording

In step 2 above, push the joystick to ↓ to select the recording pattern. Each time you push the joystick to ↓, the indication changes as shown below. Push the joystick to ↑ to change the indication in reverse order.

TODAY → SUN-SAT (Sunday to Saturday) → MON-SAT (Monday to Saturday) → MON-FRI (Monday to Friday) → SAT (every Saturday) ..... → MON (every Monday) → SUN (every Sunday) → 1 month later →(dates count down) → TOMORROW →TODAY

Tips

- To set the programme position, you can also use the PROG +/– or programme number buttons.
- To set the tape speed, you can also use SP/LP.
- In step 2 above, you can check the TIMER LIST by selecting LIST and pressing the joystick (OK). Press the joystick (OK) again to return to the former screen.
- When you are recording a programme in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the LP mode. Note that some interference will appear on the picture at the point the tape speed is changed. If you want to keep the same tape speed, set AUTO LONG PLAY to OFF in the TAPE OPTIONS menu (see page 67).

Note

- The ⏻ indicator flashes in the display window when you press ON/STANDBY with no tape inserted.

Playing/searching at various speeds

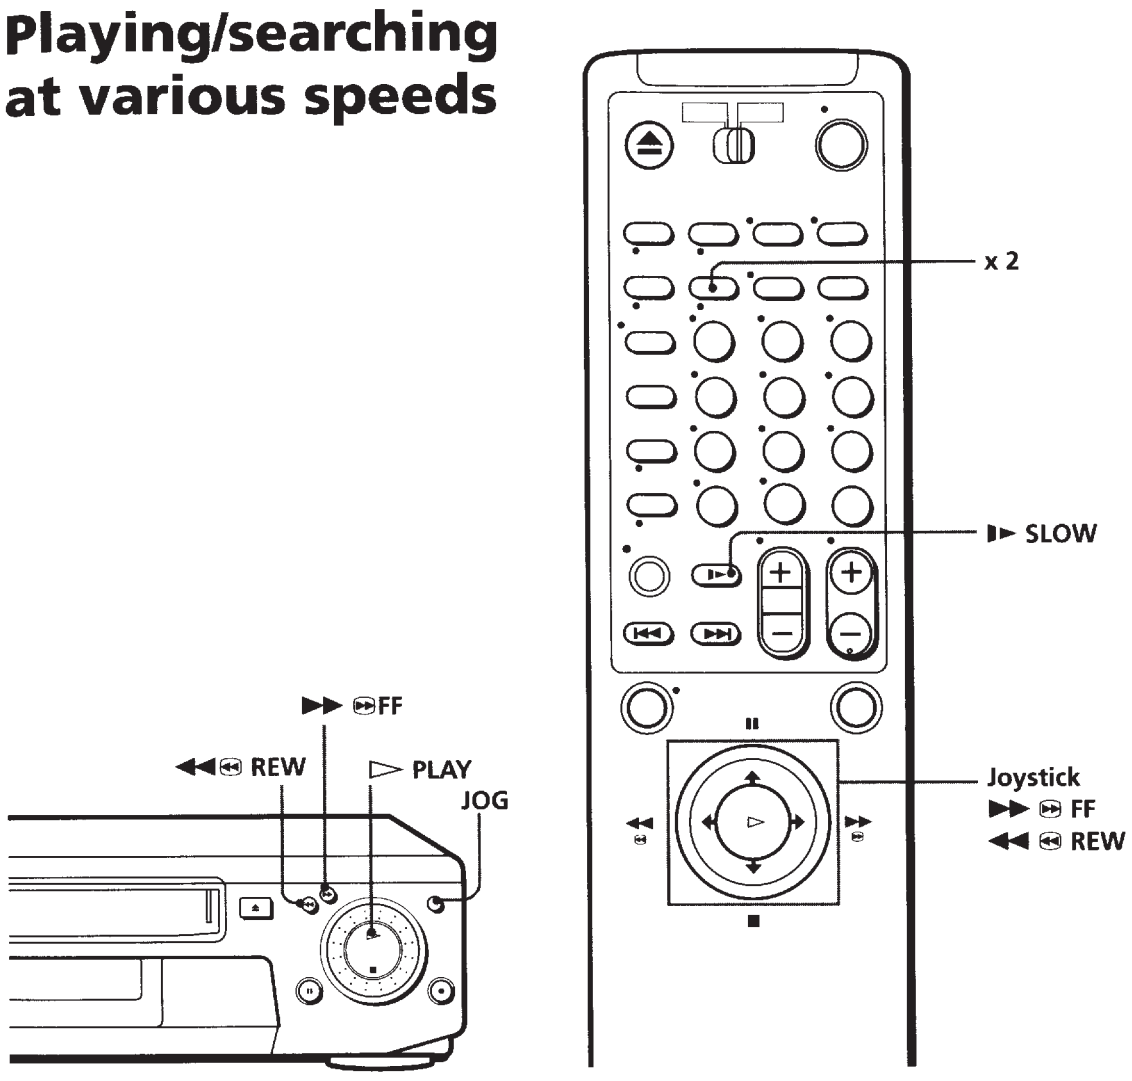

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, keep pushing the joystick to ▶▶ FF. During rewind, keep pushing the joystick to ◀◀ REW.
Play at high speed	• During playback, push the joystick to ▶▶ FF or ◀◀ REW. • During playback, keep pushing the joystick to ▶▶ FF or ◀◀ REW. When you release the joystick, resume normal playback.
Play at twice the normal speed	During playback, press × 2.
Play in slow motion	During playback, press I▶ SLOW.
Play frame by frame	During pause, push the joystick to ▶▶ FF or ◀◀ REW. Keep pushing the joystick to ▶▶ FF or ◀◀ REW to play one frame each second.
Rewind and start play	During stop, press ▷ PLAY on the VCR while holding ◀◀ REW down on the VCR.

continued

Using the CLICK JOG SHUTTLE ring

With the CLICK JOG SHUTTLE ring, you can operate a variety of playback options.
There are two ways for using the CLICK JOG SHUTTLE ring, normal mode (CLICK JOG SHUTTLE ring) and jog mode (CLICK JOG ring) .

To use the CLICK JOG SHUTTLE ring in normal mode

During playback or pause, turn the CLICK JOG SHUTTLE ring clockwise or anticlockwise. Each change in the CLICK JOG SHUTTLE ring position changes the playback mode, and the corresponding mark appears on the TV screen for a few seconds in the following way if the on-screen display function is on:

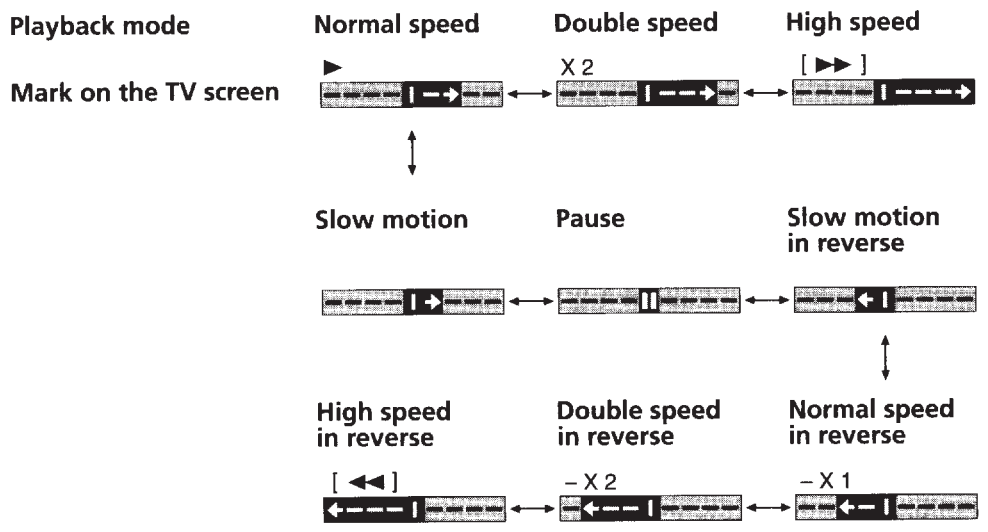

To use the CLICK JOG SHUTTLE ring in jog mode

Use this mode for frame-by-frame playback.
Press JOG to enter the jog mode. The JOG indicator lights up. If you change to the jog mode during any playback mode, the playback pauses so you can see a still picture. Each change in the CLICK JOG ring position shifts the picture one frame. To shift frames in reverse, turn the CLICK JOG ring anticlockwise.
The frame shift speed depends on the speed you turn the CLICK JOG ring.
To resume normal mode, press JOG again. The JOG indicator goes off.

To resume normal playback

Press the joystick (▷ PLAY).

Tip

- Adjust the picture using TRACKING +/– if:
  – Streaks appear while playing in slow motion.
  – Bands appear at the top or bottom while pausing.
  – The picture shakes while pausing.

Notes

- The playback sound is muted during the operations in the above table.
- In the LP mode, noise may appear or there may be no colour.
- If the playback mode mark doesn't appear on the TV screen, press DISPLAY.

Recording TV programmes using the quick timer

After starting recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

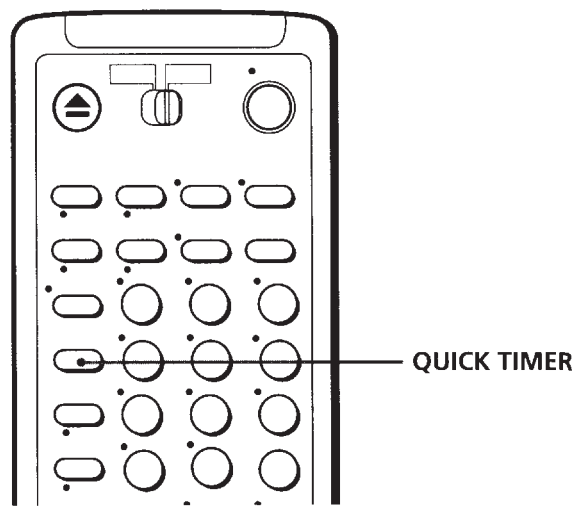

1 While recording, press QUICK TIMER once.
The ⏲ indicator appears in the display window.



2 Press QUICK TIMER repeatedly to set the duration.
Each press advances the time in increments of 30 minutes.



The duration decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To extend the duration

Press QUICK TIMER repeatedly to set to the new duration.

To stop recording

To stop the VCR while recording, push joystick ⬇ (■ STOP).

Using the quick timer during stop mode

1 Press QUICK TIMER.
2 Press PROG +/– or INPUT SELECT to select the programme position you want to record.
3 Press QUICK TIMER repeatedly to set the recording duration.
The recording starts.

Checking/ changing/ cancelling timer settings

Before you start…

- Turn on your TV and set it to the video channel.

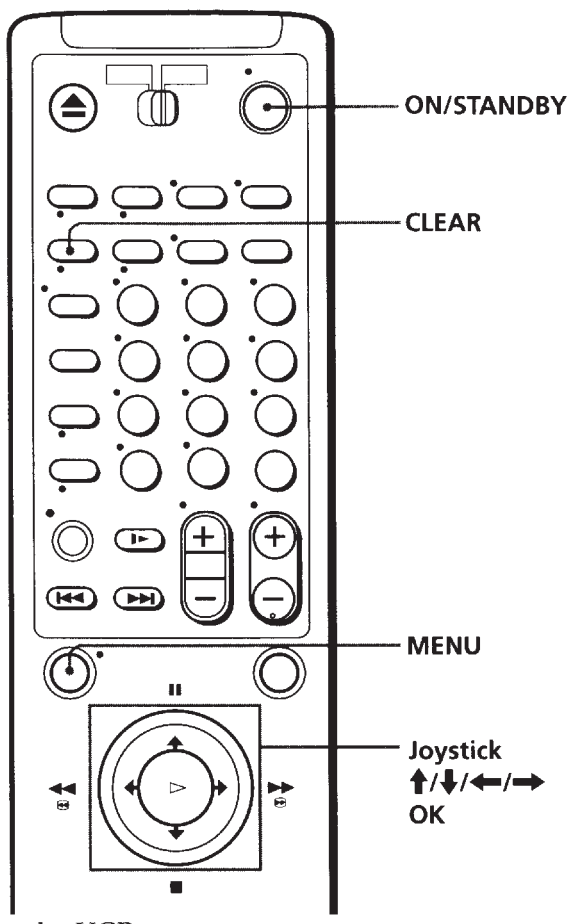

1 Press ON/STANDBY to turn on the VCR.
2 Press MENU, and highlight LIST, then select TIMER LIST and press the joystick (OK):
- If you want to change or cancel a setting, go on to the next step.
- If you do not need to change or cancel the settings, press MENU, then turn off the VCR to return to recording standby.



3 Push the joystick to ⬆/⬇ to select the setting you want to change or cancel,
- If you want to cancel the setting, press CLEAR and skip the next step. Press MENU to exit menu.
- If you want to change the setting, press OK.

continued

Checking/changing/cancelling timer settings (continued)

4 The selected item appears in the TIMER menu.
- To change the setting, push the joystick to ⇐/⇒ to highlight the item you want to change, and push the joystick to ⇑/⇓ to reset it. To cancel the VPS/PDC function, set VPS/PDC to OFF.

5 Press the joystick (OK) to set the timer.
If any settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The programme that starts first has priority and the second programme starts recording only after the first programme has finished. If the programmes start at the same time, the programme listed first in the menu has priority.





Tip
- In step 5 above, you can check the TIMER LIST by selecting LISTS and pressing OK. Press MENU to exit the TIMER LIST.

Recording stereo and bilingual programmes

In ZWEITON (German stereo) system

This VCR automatically receives and records stereo and bilingual programmes based on the ZWEITON system. When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To select bilingual sound while recording
Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO

Selecting the sound during playback

Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Stereo/main and sub (left and right channels)	STEREO	STEREO
Left channel/main	LCH	STEREO
Right channel/sub	RCH	STEREO
Standard sound	No indicator	No indicator

continued

Recording stereo and bilingual programmes (continued)

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

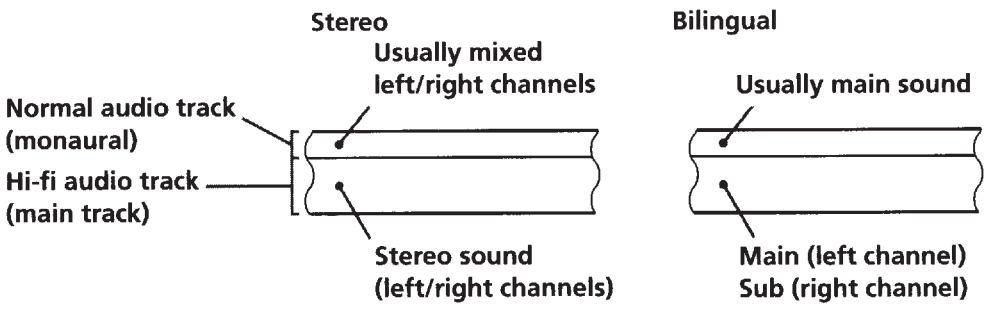

Notes
- To listen to playback sounds in stereo, you must use the EURO-AV or AUDIO OUT connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.
- If the AUDIO MONITOR button does not function, check that AUDIO MIX in the AUDIO OPTIONS is set to OFF.

Searching using the index function

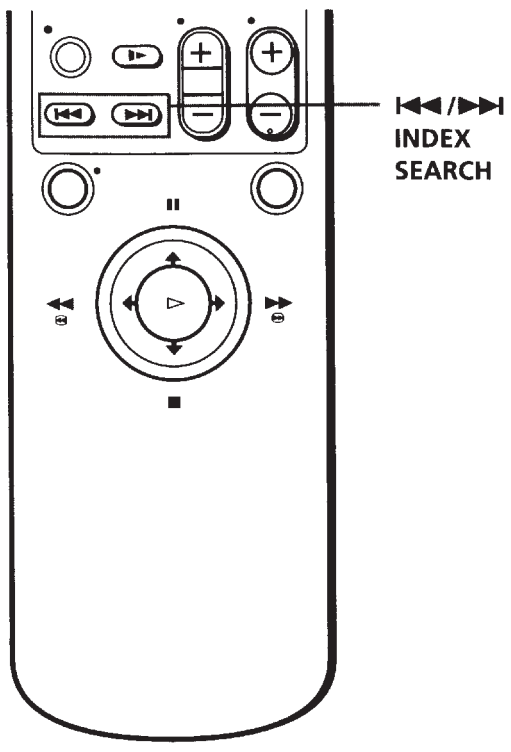

The VCR marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording. The VCR can search up to 99 index signals ahead of or behind the current position.

1 Insert an indexed tape into the VCR.

2 Press ⏮/⏭ INDEX SEARCH repeatedly to specify how many index signals ahead or behind you want to search:
- To search ahead, press ⏭ INDEX SEARCH.
- To search backwards, press ⏮ INDEX SEARCH.



The VCR starts searching and the index number on the TV screen counts down to zero. Playback starts automatically from that point.

To stop searching
Push the joystick to ⇓ (■ STOP).

Note
- No index signal will be added when recording starts from recording pause. However, an index signal will be marked if you change the programme position during recording pause.

Adjusting the picture

Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the tracking indicator ▧ flashes in the display window, then goes off), distortion may occur if the tape was recorded in poor condition. If so, manually adjust the tracking.

Press TRACKING +/– to display the tracking meter. The distortion should disappear as you press one of the two buttons (the ▧ indicator lights up). To resume automatic tracking adjustments, eject the tape and reinsert it or press TRACKING + and TRACKING – at the same time, so that the tracking meter comes back to the center.

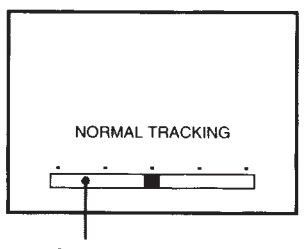

Tracking meter

About Optimum Picture Control (OPC)

Optimum Picture Control (OPC) automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set OPC to ON in the VIDEO OPTIONS menu (with the OPC indicator in the display window lit). For details, see page 66.



OPC playback

The OPC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with OPC.

OPC recording

Whenever you insert a tape and start recording for the first time, the VCR adjusts to the tape using the OPC function (the OPC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

To deactivate the OPC

Press MENU and highlight OPTIONS, then VIDEO OPTIONS and set OPC to OFF. The OPC indicator in the display window goes off.

Digital Noise Reduction (DNR)

Digital Noise Reduction (DNR) automatically improves playback picture quality by the digital signal process. To obtain better picture quality, we recommend you to activate the DNR function by pressing the DNR button on the VCR (with the DNR indicator in the display window lit).



DNR

Notes

- You can adjust the tracking for the NTSC-recorded tape but the tracking meter won't be displayed.
- There is a delay of a few seconds before the VCR actually starts recording while the VCR analyses the tape. To avoid the delay, first set the VCR to recording pause (the OPC indicator flashes slowly) and press ● REC to have the VCR analyse the tape (the OPC indicator flashes rapidly). After the OPC indicator stops flashing, push ⬆ (❚❚ PAUSE) to start recording immediately. If you want to start recording quickly without using the OPC function, first set the VCR to recording pause (the OPC indicator flashes slowly) and push ⬆ (❚❚ PAUSE) to start recording.
- The DNR function does not work with MESECAM-recorded tapes.

Changing options

1 Press MENU, then select OPTIONS.



2 Push the joystick to ⬆/⬇ to highlight the kind of option to change, VIDEO OPTIONS, AUDIO OPTIONS, TAPE OPTIONS or OTHER OPTIONS then press the joystick (OK).

3 Push the joystick to ⬆/⬇ to select the option to change, then press the joystick (OK) to enter the pop up menu.

4 Push the joystick to ⬆/⬇ to select the desired setting, then press the joystick (OK) to confirm it.

5 Press MENU to exit the menu.

Menu choices

Initial settings are indicated in bold print.

VIDEO OPTIONS menu



Menu option	Set this option to
OPC	• **ON** to switch on the OPC (Optimum Picture Control) function and improve picture quality. • OFF to switch off OPC. For details, see page 64.
EDIT	• ON to minimize picture deterioration when editing. • **OFF** to turn off EDIT. For details, see page 70.
SHARPNESS	• LOW to playback a poorly quality tape. • **NORMAL** to playback an average quality tape. • HIGH to playback a good quality tape.
COLOUR SYSTEM	• **AUTO** to detect automatically the colour system of a tape. • PAL to playback a tape recorded in the PAL system. • MESECAM to playback a tape recorded in the MESECAM system.

Note

- When you playback with the EDIT function ON, the OPC and SHARPNESS functions don't work.

AUDIO OPTIONS menu



Menu option	Set this option to
AUDIO MIX	• ON to listen to the hi-fi and normal audio tracks at the same time. The AUDIO MONITOR button will not function. • **OFF** to listen to the hi-fi and normal audio tracks separately. Select the sound using the AUDIO MONITOR button. For details, see page 61.

TAPE OPTIONS menu



Menu option	Set this option to
AUTO LONG PLAY	• ON to automatically record from SP (Standard Play) to LP (Long Play)when the tape lenght is not long enough. • **OFF** to normally record in SP (Standard Play). For details, see page 54.
TAPE SELECT	• **E180** to use an E-180 or shorter tape type. • E195 to use an E-195. • E240 to use an E-240. • E300 to use an E-300. For details, see page 46.

continued

Changing options (continued)

OTHER OPTIONS menu



Menu option	Set this option to
BUZZER	• **ON** to output a beep sound when any illogical operation is made. • OFF to deactivate it.
DIMMER	• ON to make the display window dim. • **OFF** to make it brighter.
DECODER/LINE 3	• **DECODER** to use the LINE-3 IN connector as the Canal Plus decoder connector. • LINE3 to use the LINE-3 IN connector as the line input connector.
RF MODULATOR	• ON if you connect the VCR to your TV using only the aerial cable. • **OFF** if you connect the VCR to your TV using only the EURO-AV cable.
TV DIRECT REC	• **ON** to activate the TV DIRECT REC function. • OFF to deactivate it.

Saving the power consumption



The POWER SAVE switch has the function of activating (OFF) and/or deactivating (ON) the indicators in the display window while the VCR is standing by, to conserve the VCR power.

You can decrease the power consumption in standby mode to less than 4 W if you have set DECODER /LINE 3 to LINE 3 in OTHER OPTIONS menu (see page 38). If so, you will not be able to watch PAY-TV/C+ on your TV when VCR is in standby mode.

Note

• When you set a timer recording, the indicators in the display window are on even though POWER SAVE is set to ON.

Connecting to a VCR or stereo system

How to connect to record on this VCR

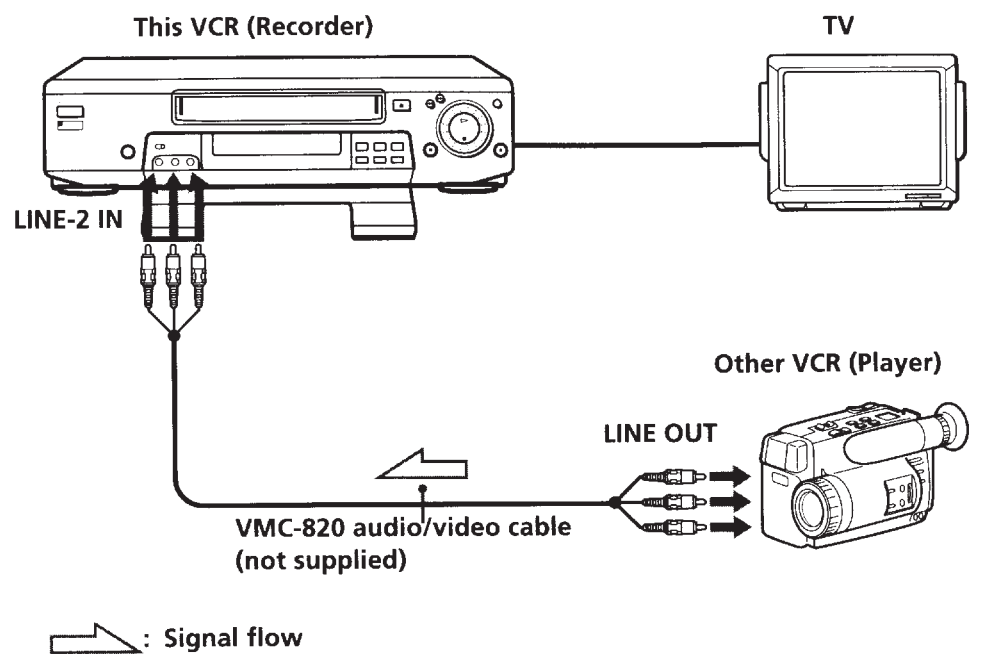

Tip

• You can also use the LINE-1 (TV) or LINE-3 IN connector instead.

Notes

• Make sure you connect the plugs to jacks of the same colour.
• If the other VCR is a monaural type, leave the red plugs unconnected.
• If you connect this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.

How to connect to a stereo system

Connect the LINE-2 IN AUDIO L/R jacks on this VCR to the audio output jacks on the stereo system, using the RK-C510KS audio cable (not supplied).

Basic editing

(when recording on this VCR)

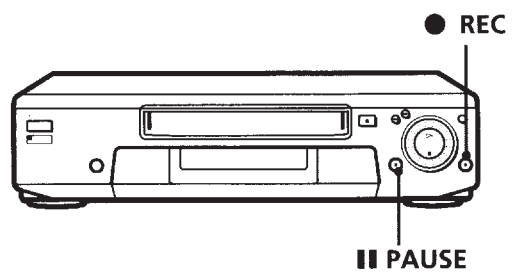

Before you start editing

• Turn on your TV and set it to the video channel.
• Press INPUT SELECT to display "L2" (or "L3") in the display window.
• Press SP/LP to select the tape speed, SP or LP.
• On this VCR, set EDIT to ON in VIDEO OPTIONS menu to display "EDIT" in the display window. If the other VCR has a similar feature, activate this one as well.



1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
2 Insert a tape with its safety tab in place into this (recording) VCR. Search for the point to start recording and press ❚❚ PAUSE.
3 Press ● REC on this VCR to set it to recording pause.
4 To start editing, press the ❚❚ PAUSE buttons on both VCRs at the same time.

To stop editing

Press the ■ STOP buttons on both VCRs.

Tip

• To cut out unwanted scenes while editing, press ❚❚ PAUSE on this VCR when an unwanted scene begins. When it ends, press ❚❚ PAUSE again to resume recording (Assemble Editing).

Note

• If you start editing following the procedure above, the VCR won't start recording with the OPC function. To record a tape with the OPC function, press ● REC again during recording pause in step 3 so the VCR analyses the tape. Then, when you start editing in step 4, press ❚❚ PAUSE after the OPC indicator stops flashing. If you press ❚❚ PAUSE before the OPC indicator stops flashing, the OPC function is cancelled.

Audio dubbing

This feature lets you record over the normal audio track. The monaural sound previously recorded is replaced while the original hi-fi sound remains unchanged. Use this feature to add commentary to a tape that you have recorded with a camcorder.

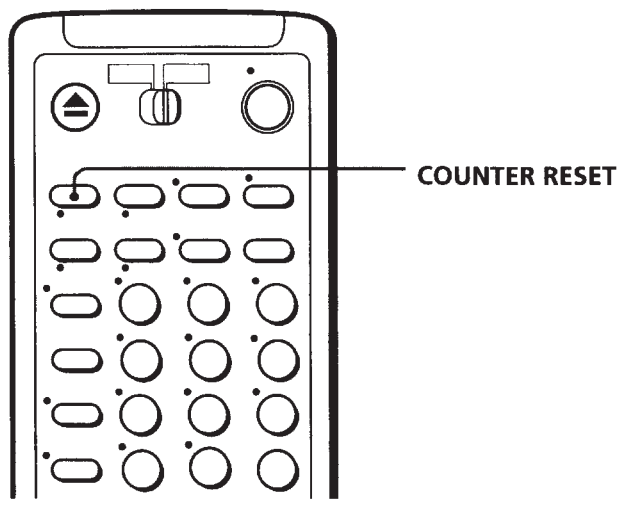

Before you start dubbing

• Turn on your TV and set it to the video channel.
• Press INPUT SELECT to display "L2" or "L3" in the display window.

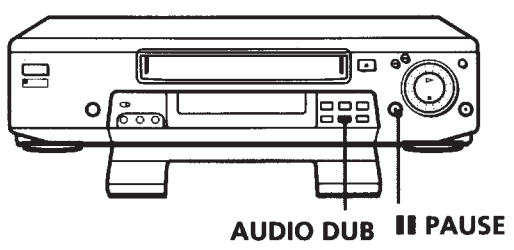

1 Insert a source tape into the stereo system (or the playback VCR). Search for the point to start playback and set it to playback pause.
2 Insert a prerecorded tape with its safety tab in place into this (recording) VCR. Search for the end of the section to be replaced and press ❚❚ PAUSE.
3 Press COUNTER RESET on this VCR to reset the counter to "0H00M00S."
4 Rewind the prerecorded tape to the beginning of the section to be replaced.
The VCR enters pause mode.
5 Press AUDIO DUB.
The audio dubbing indicator appears in the display window.
6 To start editing, press the ❚❚ PAUSE buttons on this VCR and the stereo system (or other VCR) at the same time.
When the counter reaches "0H00M00S," audio dubbing stops automatically.

To stop while editing

Press the ■ STOP buttons on this VCR and the stereo system (or other VCR).

continued

Audio dubbing (continued)

Note
- After you use this feature, the audio in playback mode is automatically set to monaural.

To listen to both the hi-fi and normal audio

Set AUDIO MIX to ON in the AUDIO OPTIONS menu (page 67). Use this feature to listen to dubbed audio over the original hi-fi audio. When AUDIO MIX is set to ON, the AUDIO MONITOR button does not function. Remember to reset AUDIO MIX to OFF after playing the tape.

Index to parts and controls

Refer to the pages indicated in parentheses ( ) for details.

Front panel

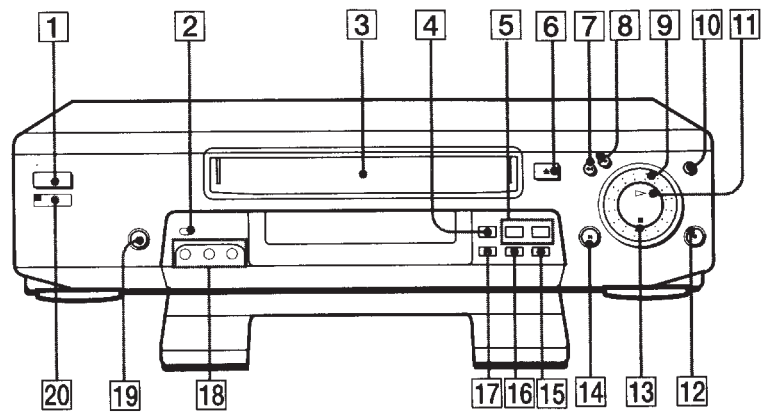

1 ON/STANDBY switch/indicator (14)
2 POWER SAVE switch (68)
3 Tape compartment
4 AUTO SET UP/RF CHANNEL button (16)
5 PROGRAM -/+ buttons TRACKING (17, 64)
6 ⏏ EJECT button (42)
7 ◀◀ REW button (42, 55)
8 ▶▶ FF button (42, 55)
9 CLICK JOG SHUTTLE ring (56)
10 JOG indicator (55)
11 ▷ PLAY button (42, 55)
12 ● REC button (45,70)
13 ■ STOP button (44, 70)
14 ❚❚ PAUSE button (70)
15 DNR button (65)
16 AUDIO DUB button (71)
17 QUICK TIMER button (58)
18 LINE-2 IN VIDEO/AUDIO L/R jacks (69)
19 OPEN button (14)
20 Remote sensor (5)

continued

Index to parts and controls (continued)

Display window

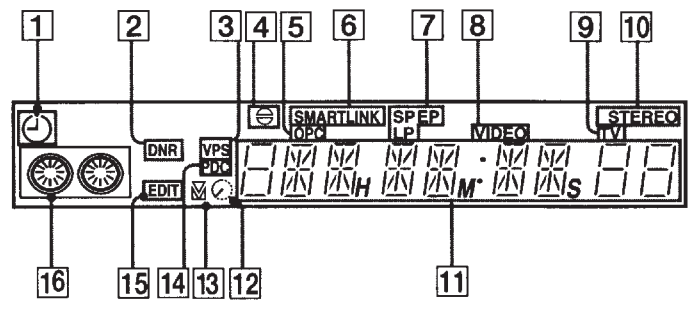

1 TIMER indicator (49)
2 DNR indicator (65)
3 VPS indicator (50)
4 ⊜ (audio dubbing) indicator (71)
5 OPC indicator (64)
6 SMARTLINK indicator (11)
7 Tape speed indicators (45)
8 VIDEO indicator (45)
9 TV indicator (47)
10 STEREO indicator (61)
11 Line/programme position indicator/time counter/clock (14, 42, 45)
12 ◴ (remaining time) indicator (45)
13 ⊠ (tracking) indicator (64)
14 PDC indicator (50)
15 EDIT indicator (70)
16 Tape/Recording indicator (45)

Rear panel

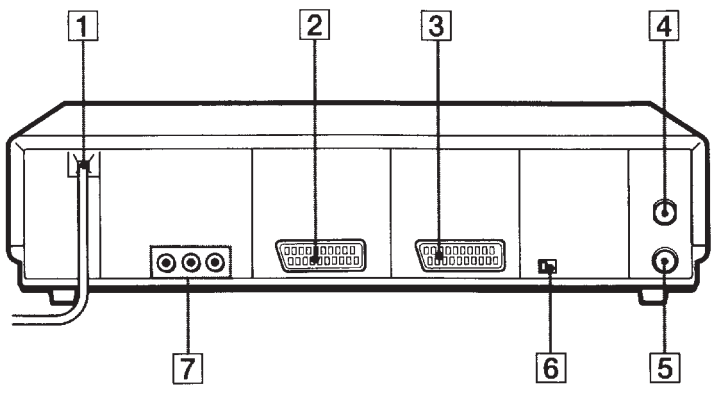

1 Mains lead (9, 12)
2 ⇾ LINE-1 (TV)
⇾ LIGNE-1 connector (9, 35, 37)
3 ⇽ LINE-3 IN
⇽ ENTREE LIGNE-3 connector (35)
4 AERIAL OUT
ANTENNE SORTIE connector (9, 12)
5 AERIAL IN
ANTENNE ENTREE connector (9, 12)
6 NTSC PB switch (41)
7 LINE-2 OUT AUDIO R/L/VIDEO jacks (13)

continued

Remote commander

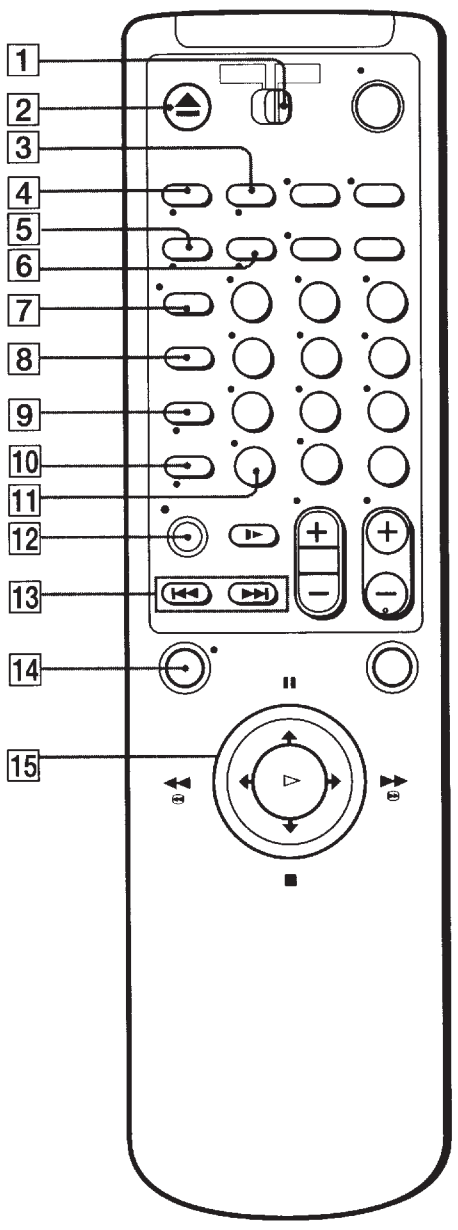

1 TV / VIDEO remote control switch (5)

2 ≜ EJECT button (41)

3 COUNTER/REMAIN button* (44)

4 COUNTER RESET button* (41, 71)

5 CLEAR button* (31, 49, 59)

6 x 2 button* (55)

7 DISPLAY button (6, 44)

8 QUICK TIMER button* (58)

9 INPUT SELECT button (44, 52)

▢ TV power on/TV mode select button *(for TV)* (6)

10 SP/LP button (45)

⊜ (Teletext) button *(for TV)* (6)

11 -/-- (ten's digit) button (46)

12 ● REC button (44)

13 ⏮ / ⏭ INDEX SEARCH buttons (63)

14 MENU button

15 Joystick
⬆/⬇/⬅/➡
❚❚ PAUSE /■ STOP
◀◀ REW (rewind)
▶▶ FF (fast-forward)
▷ PLAY / OK

* FASTEXT buttons *(for TV)*

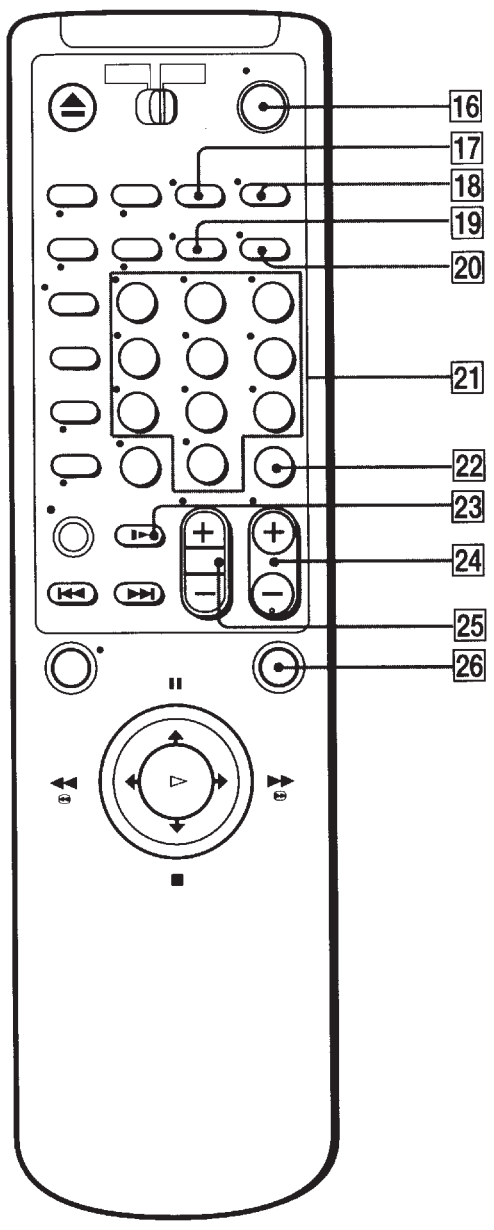

16 ON/STANDBY button (6)

17 WIDE button *(for TV)* (6)

18 AUDIO MONITOR button (6, 61)

19 TV/VIDEO button (46)

20 SHOWVIEW button (48)

21 Programme number buttons (6)

22 SET button (48)

23 ❙▶ SLOW button (55)

24 PROG (programme) +/– buttons (6, 24, 45)

▲/▼ Teletext page access buttons *(for TV)* (6)

25 VOL (volume) +/– buttons *(for TV)* (6)

26 REPLAY button (41)

SECTION 2
DISASSEMBLY

NOTE : Follow the disassembly procedure in the numerical order given.

2-1. UPPER CASE, FRONT PANEL BLOCK ASSEMBLY

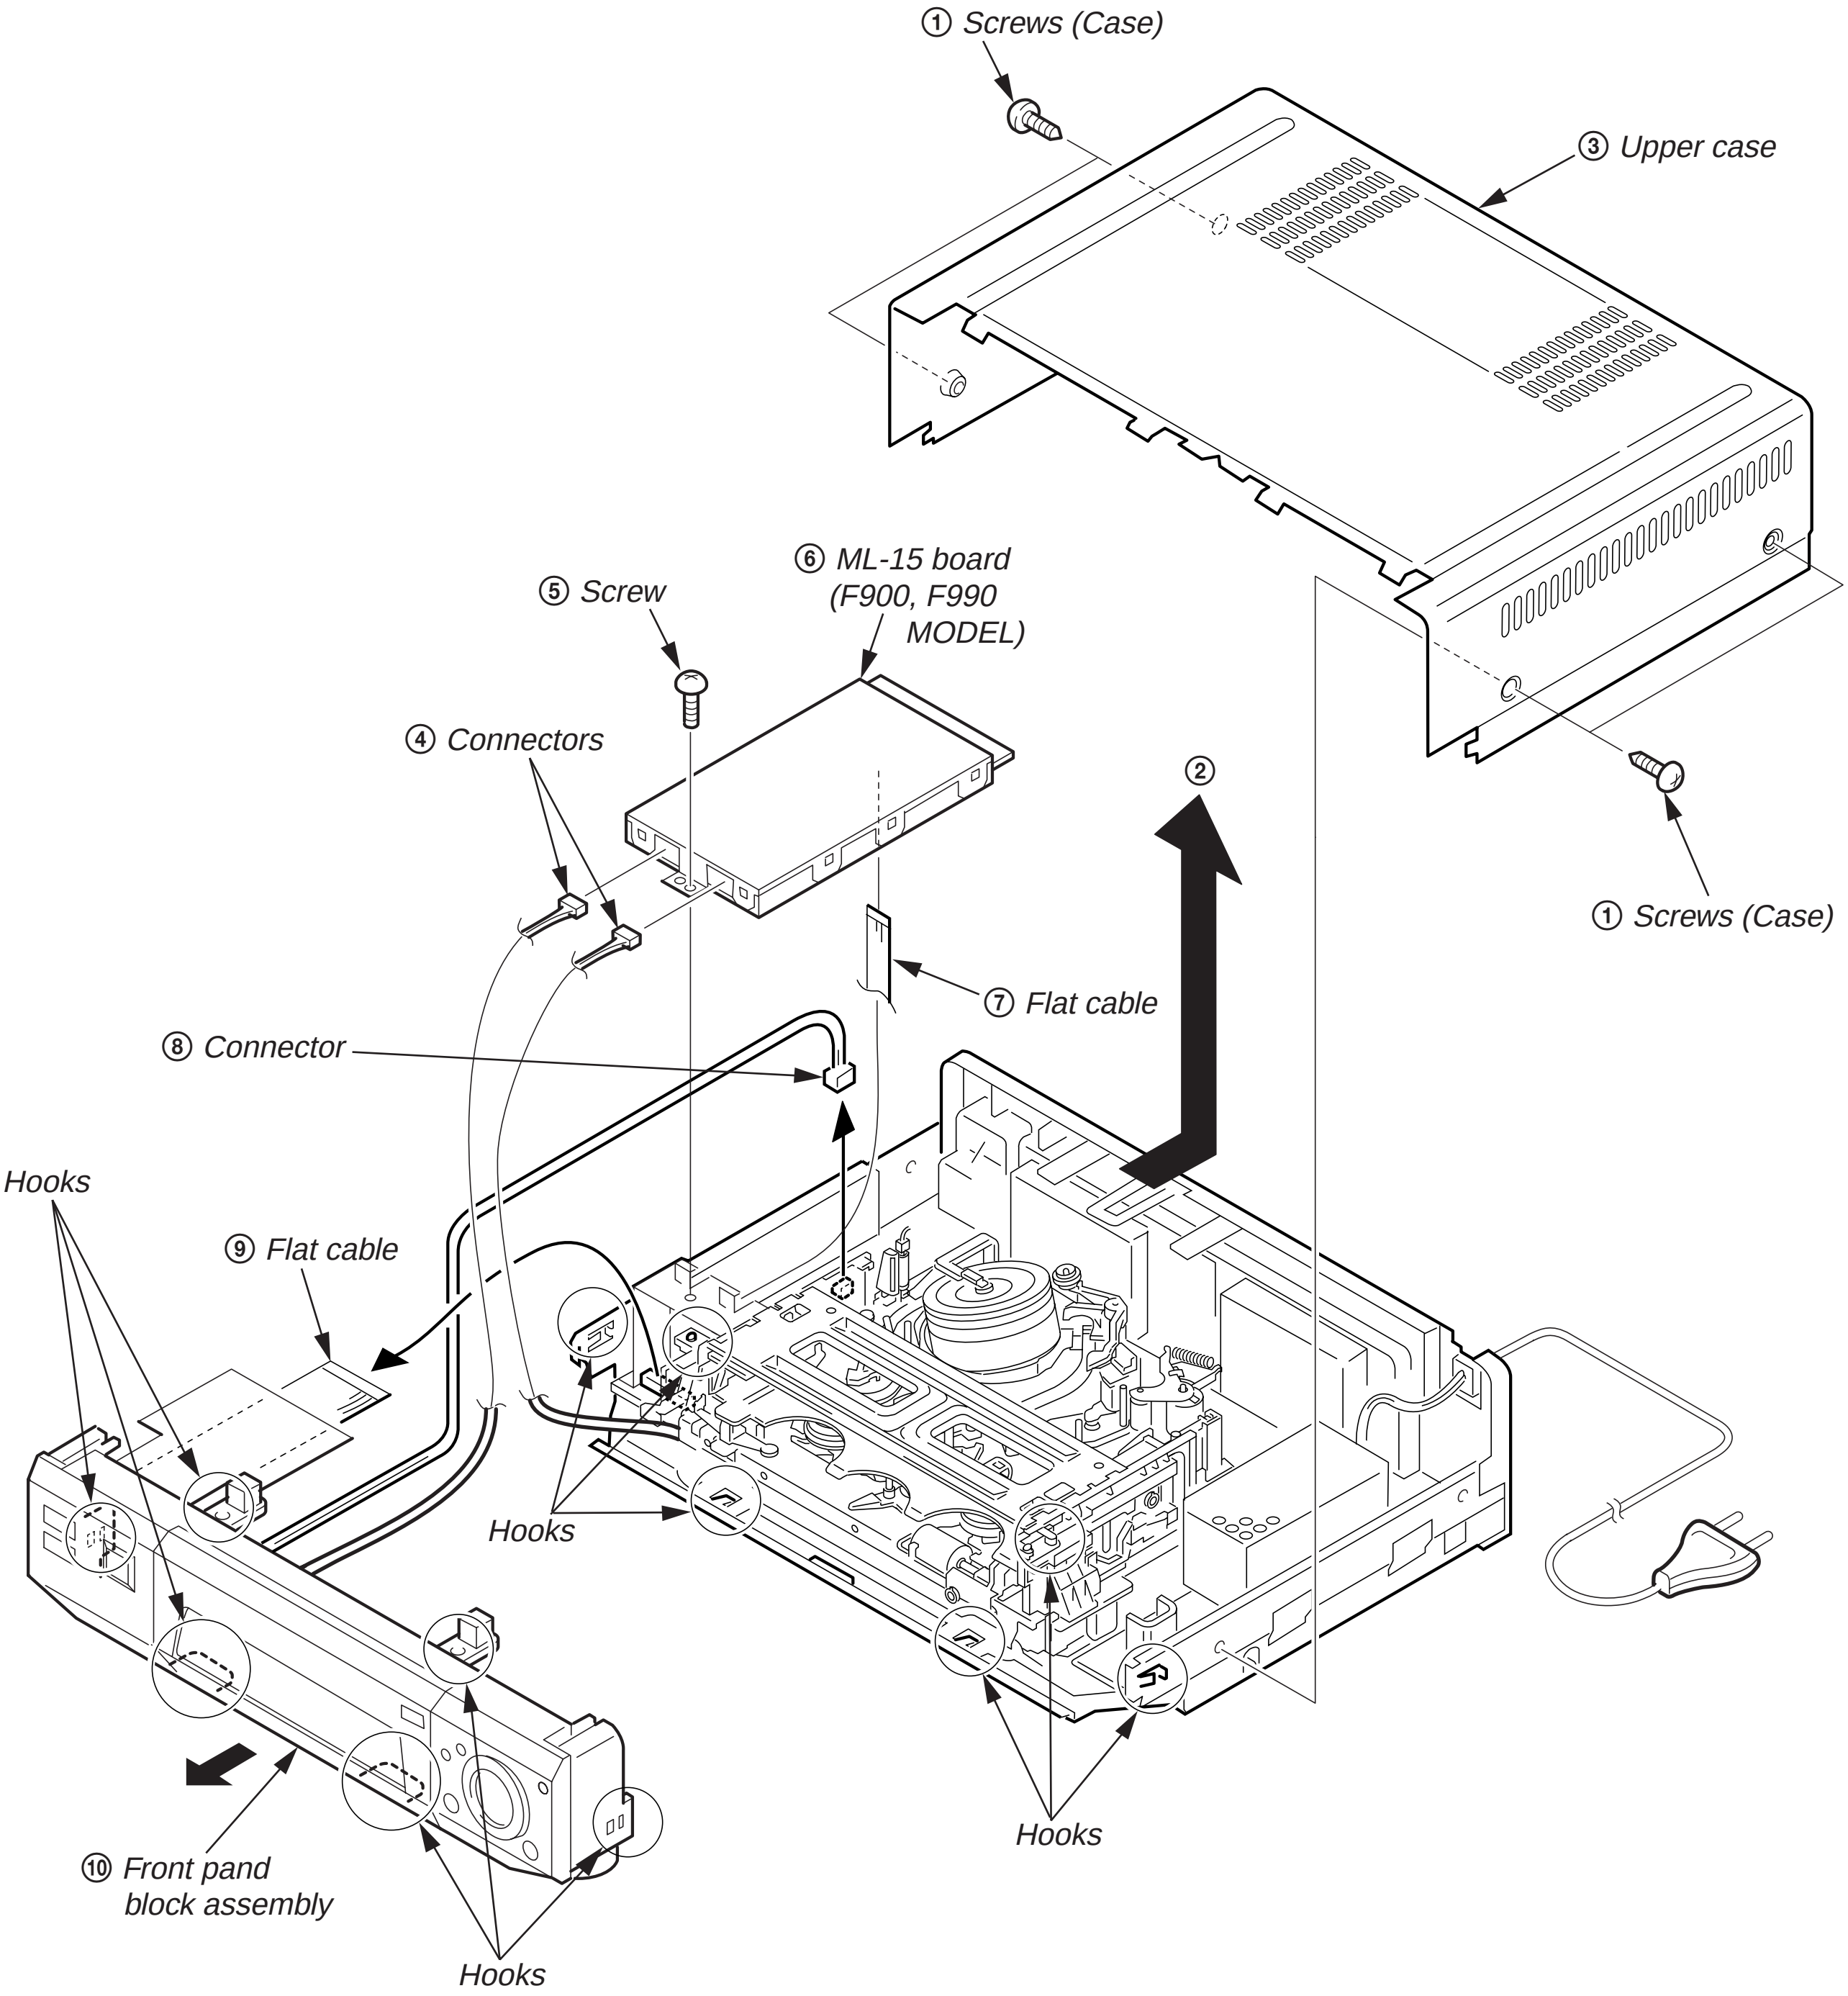

2-2. FR-128 BOARD, DM-73 BOARD

<E850, E880 MODEL>

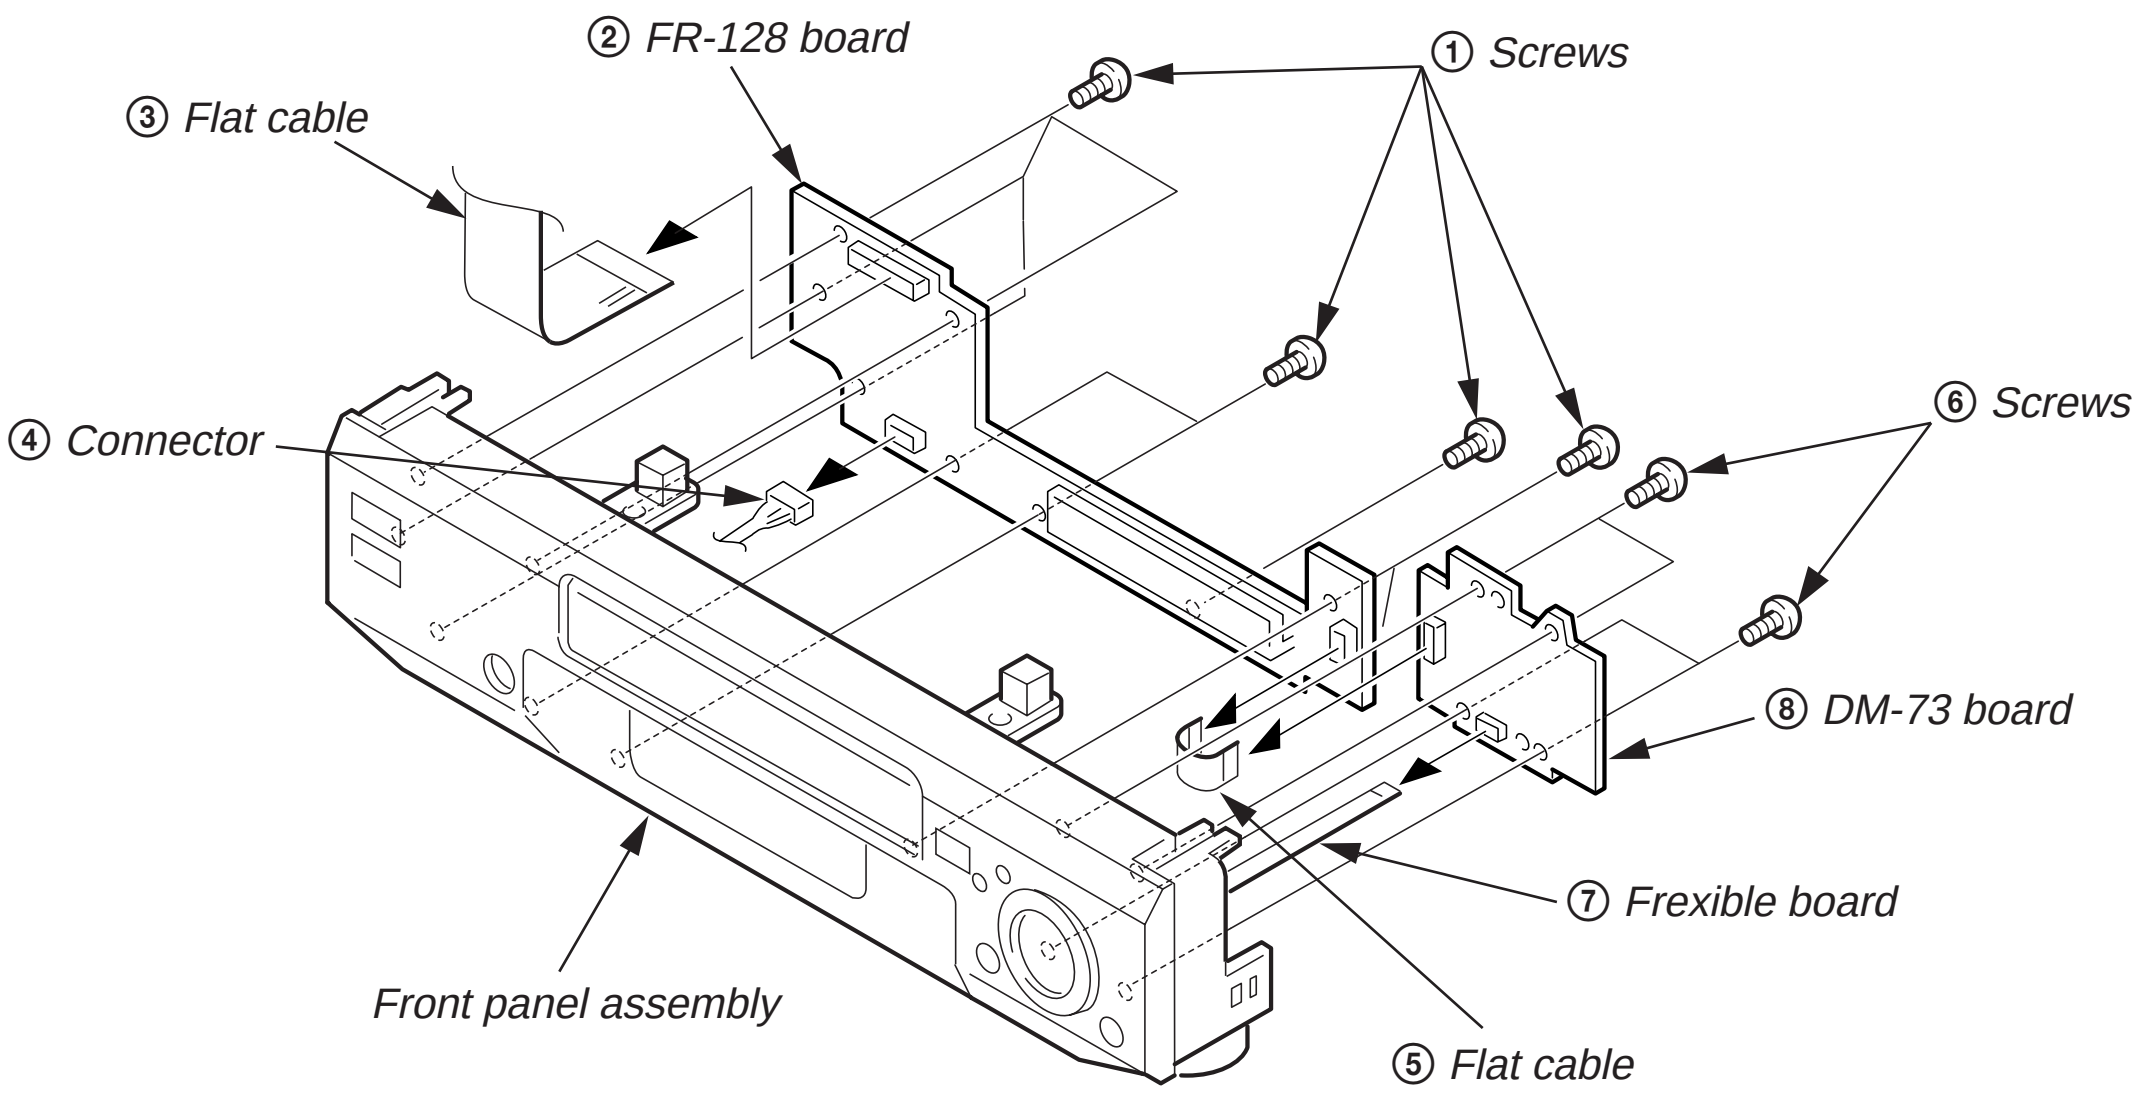

<F900, F990 MODEL>

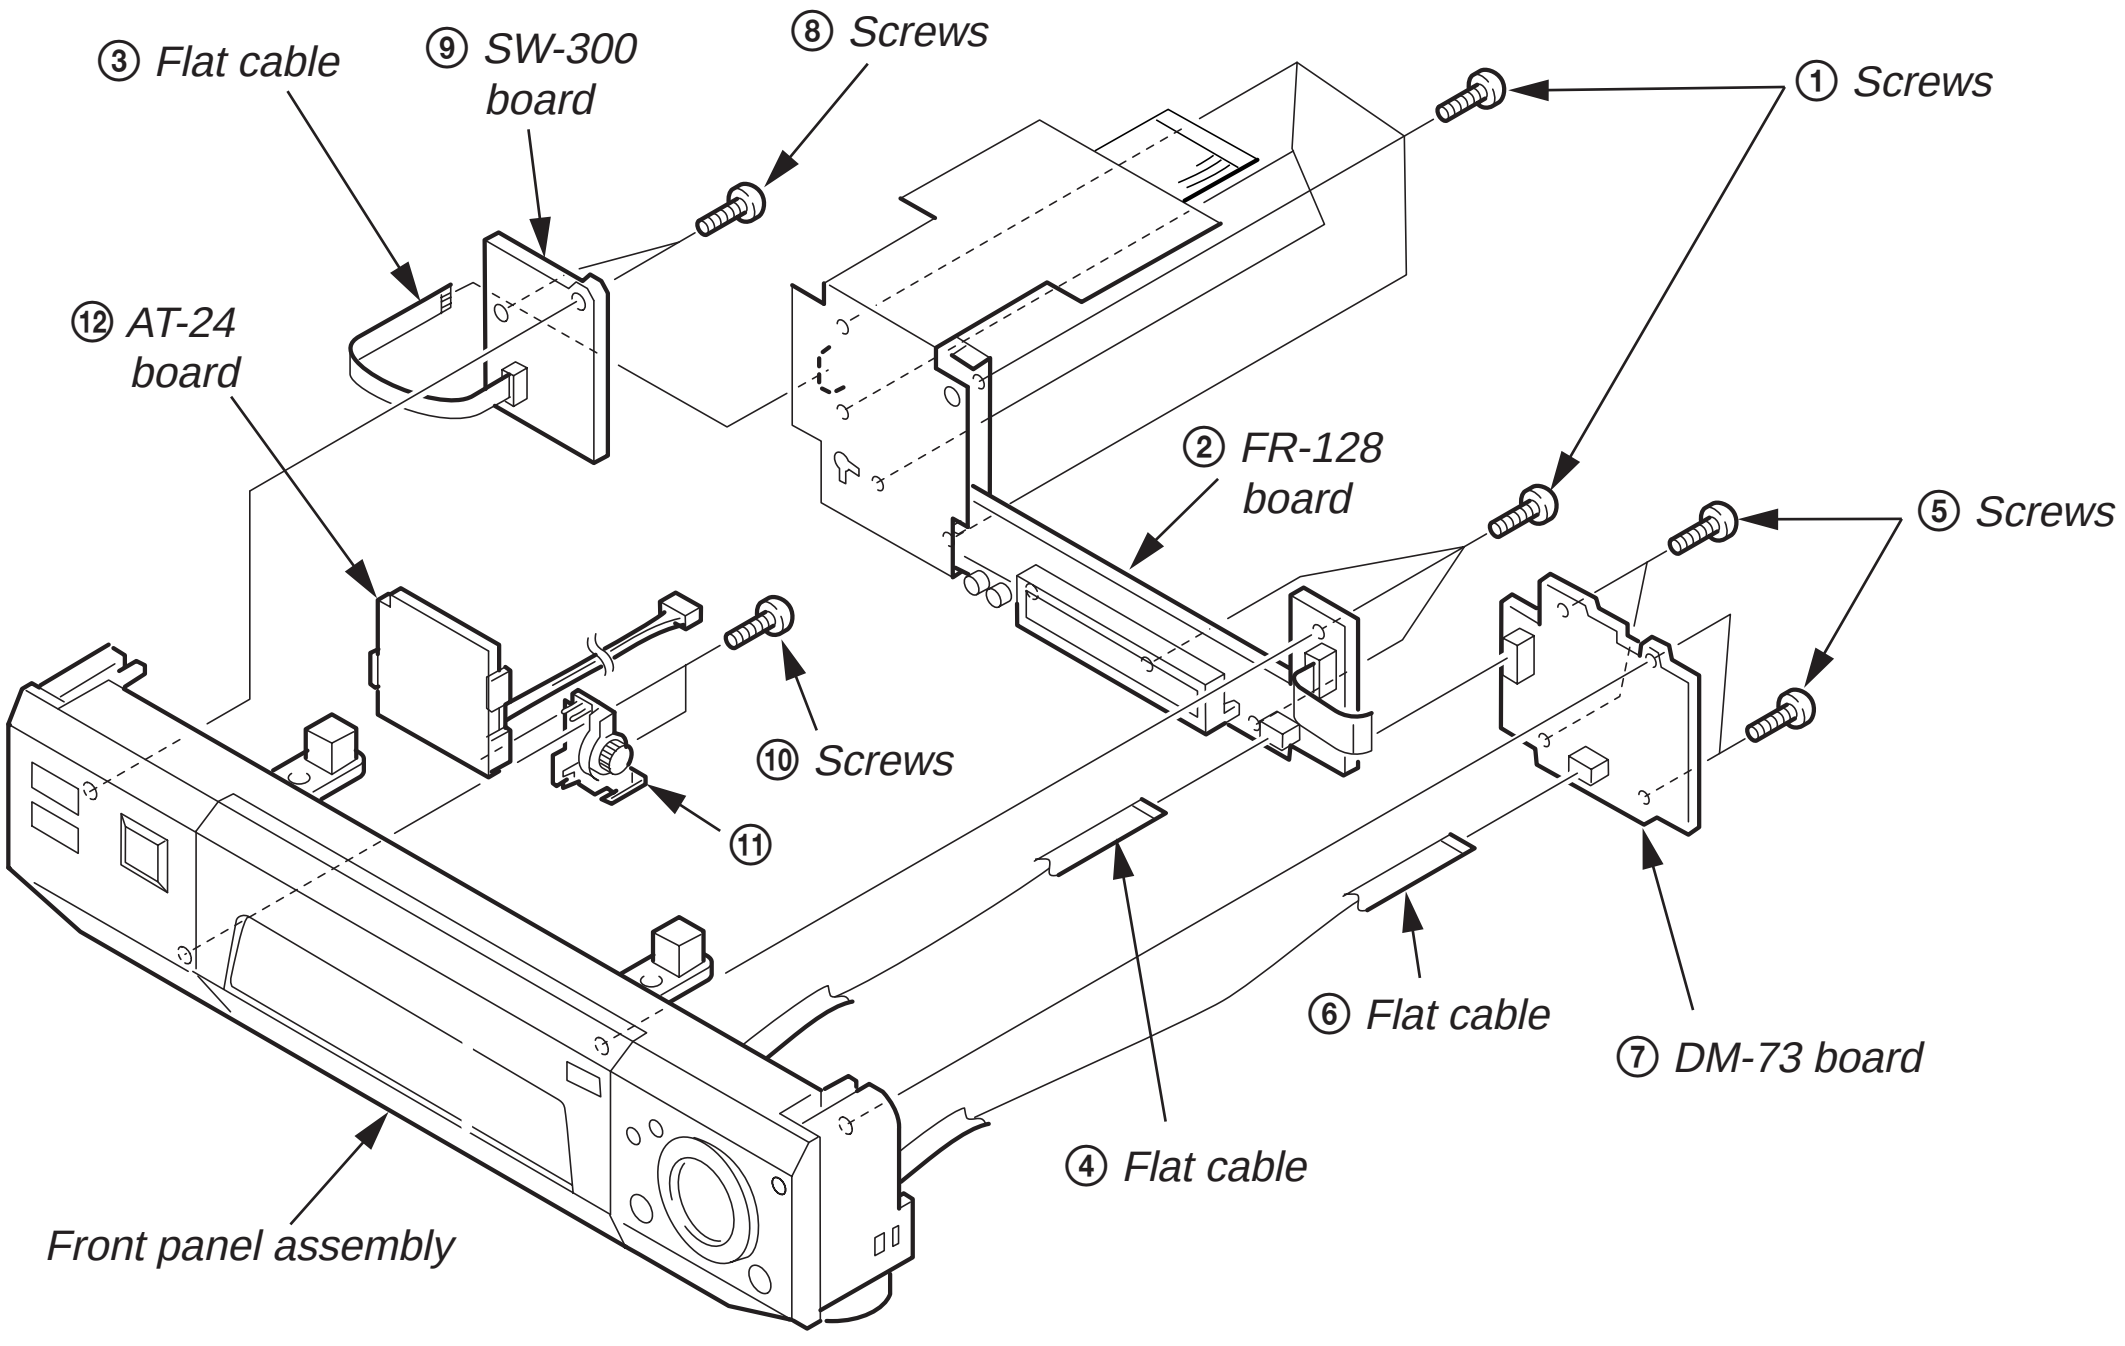

2-3. REAR PANEL

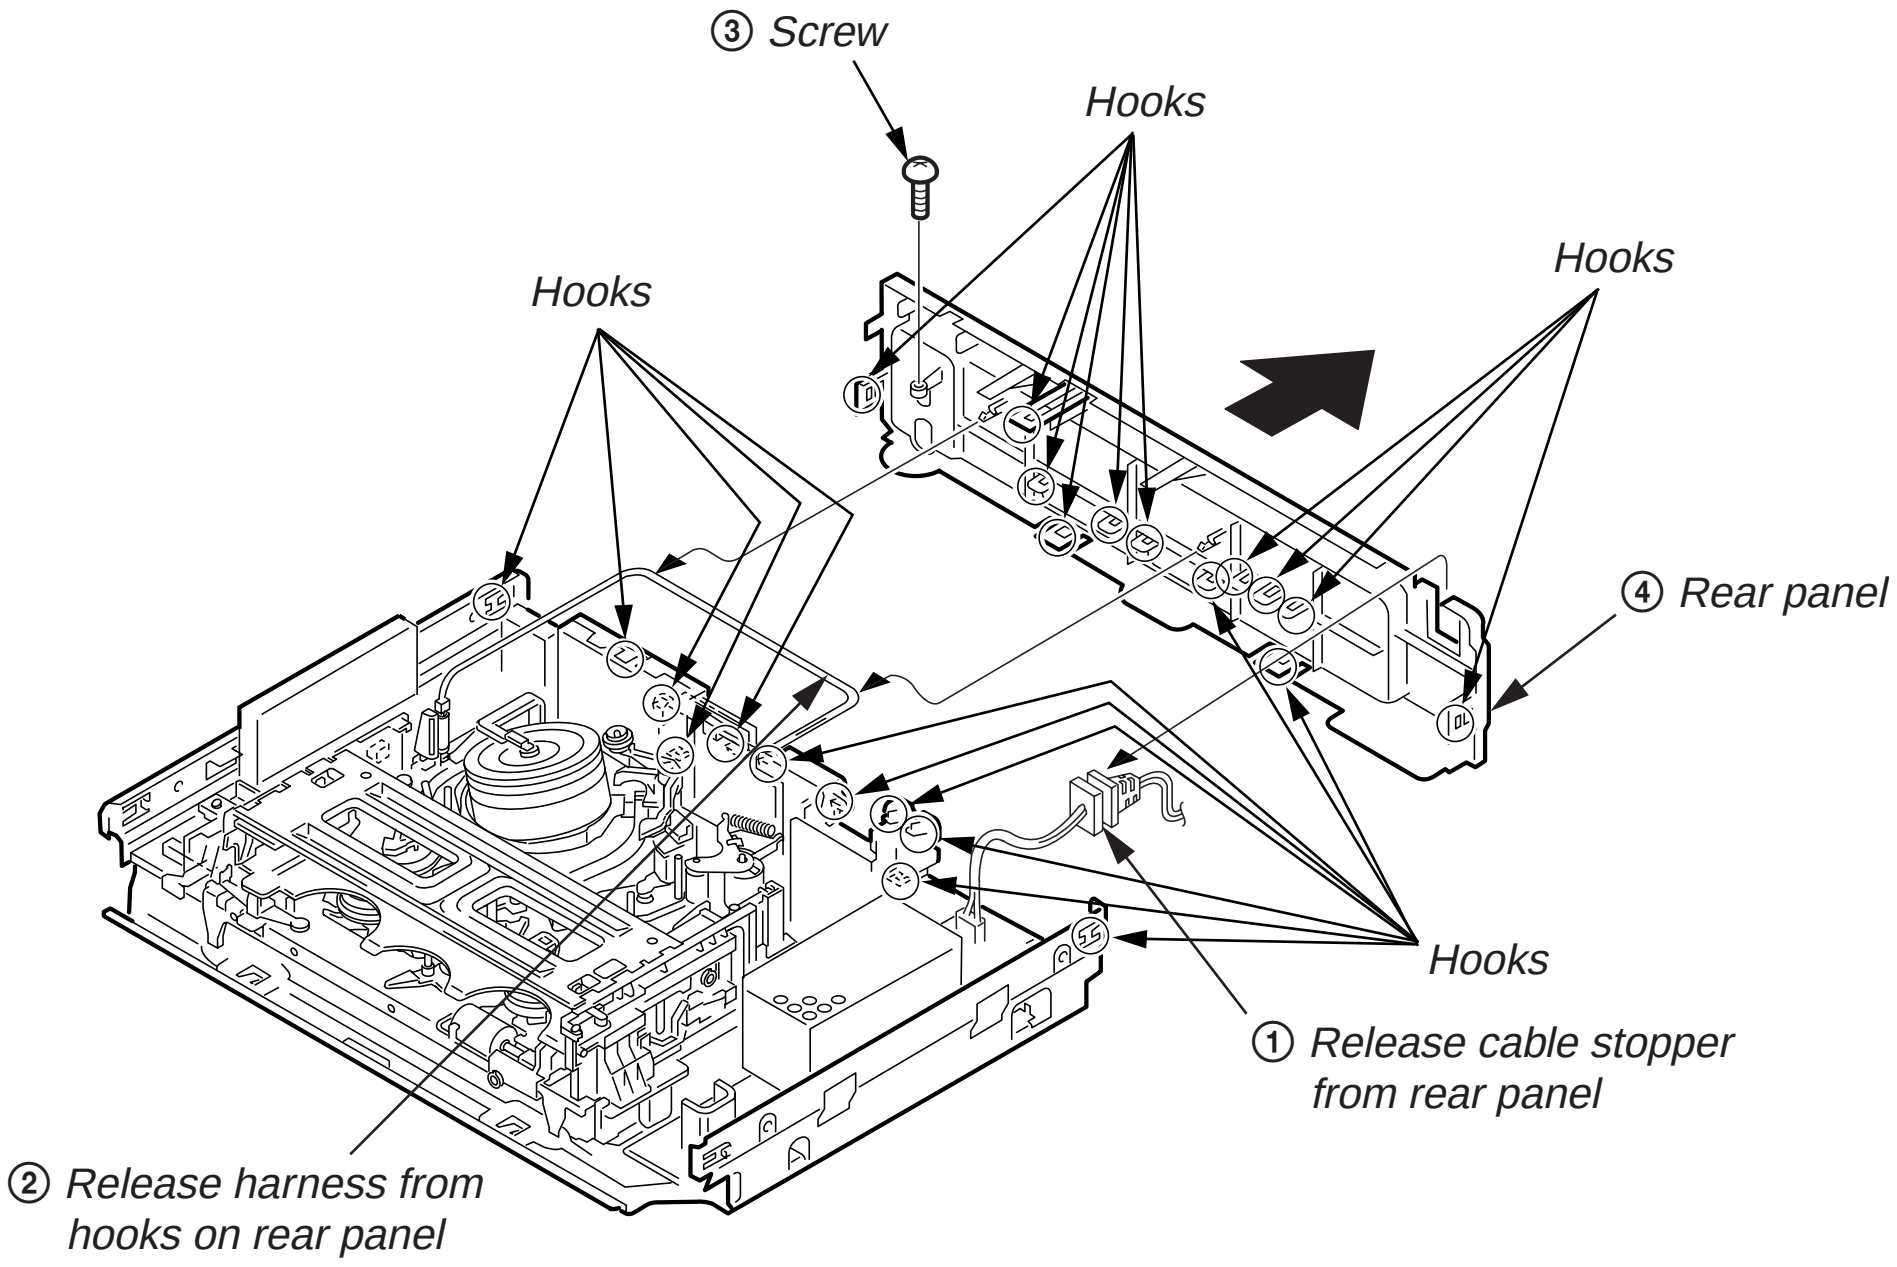

2-4. POWER BLOCK, MA-316 BOARD (WITH S MECHANISM DECK)

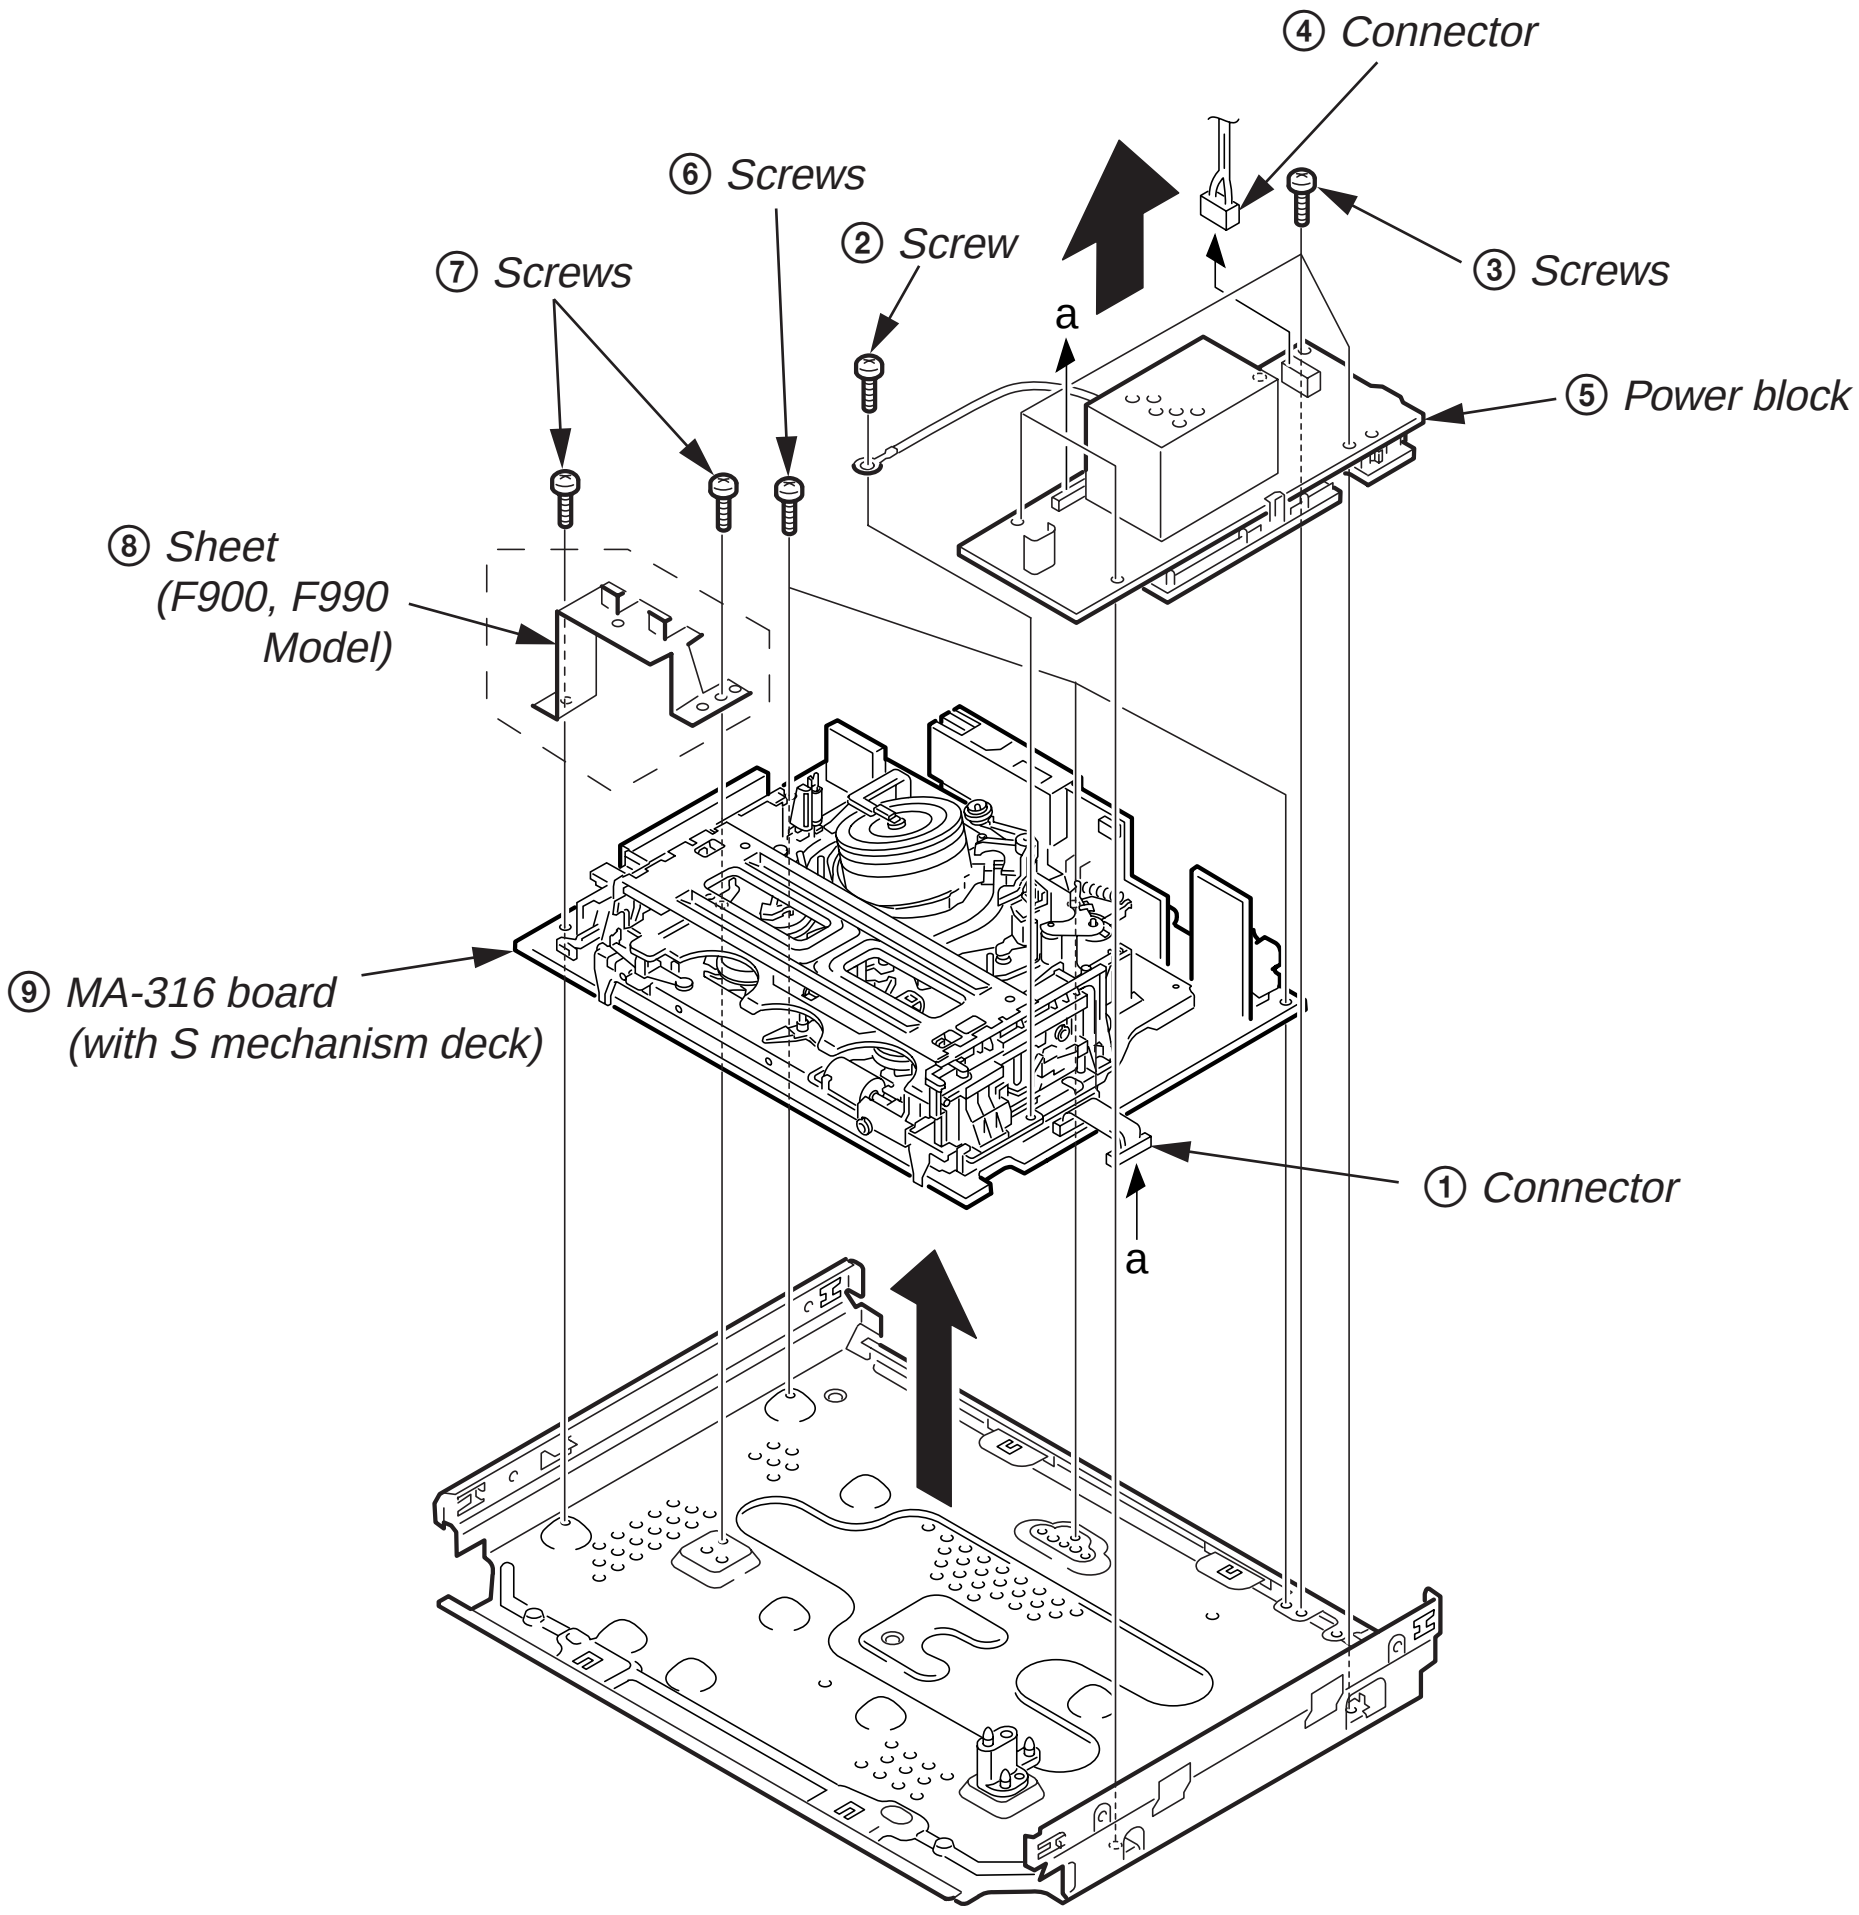

2-5. RP-231 BOARD, S MECHANISM DECK

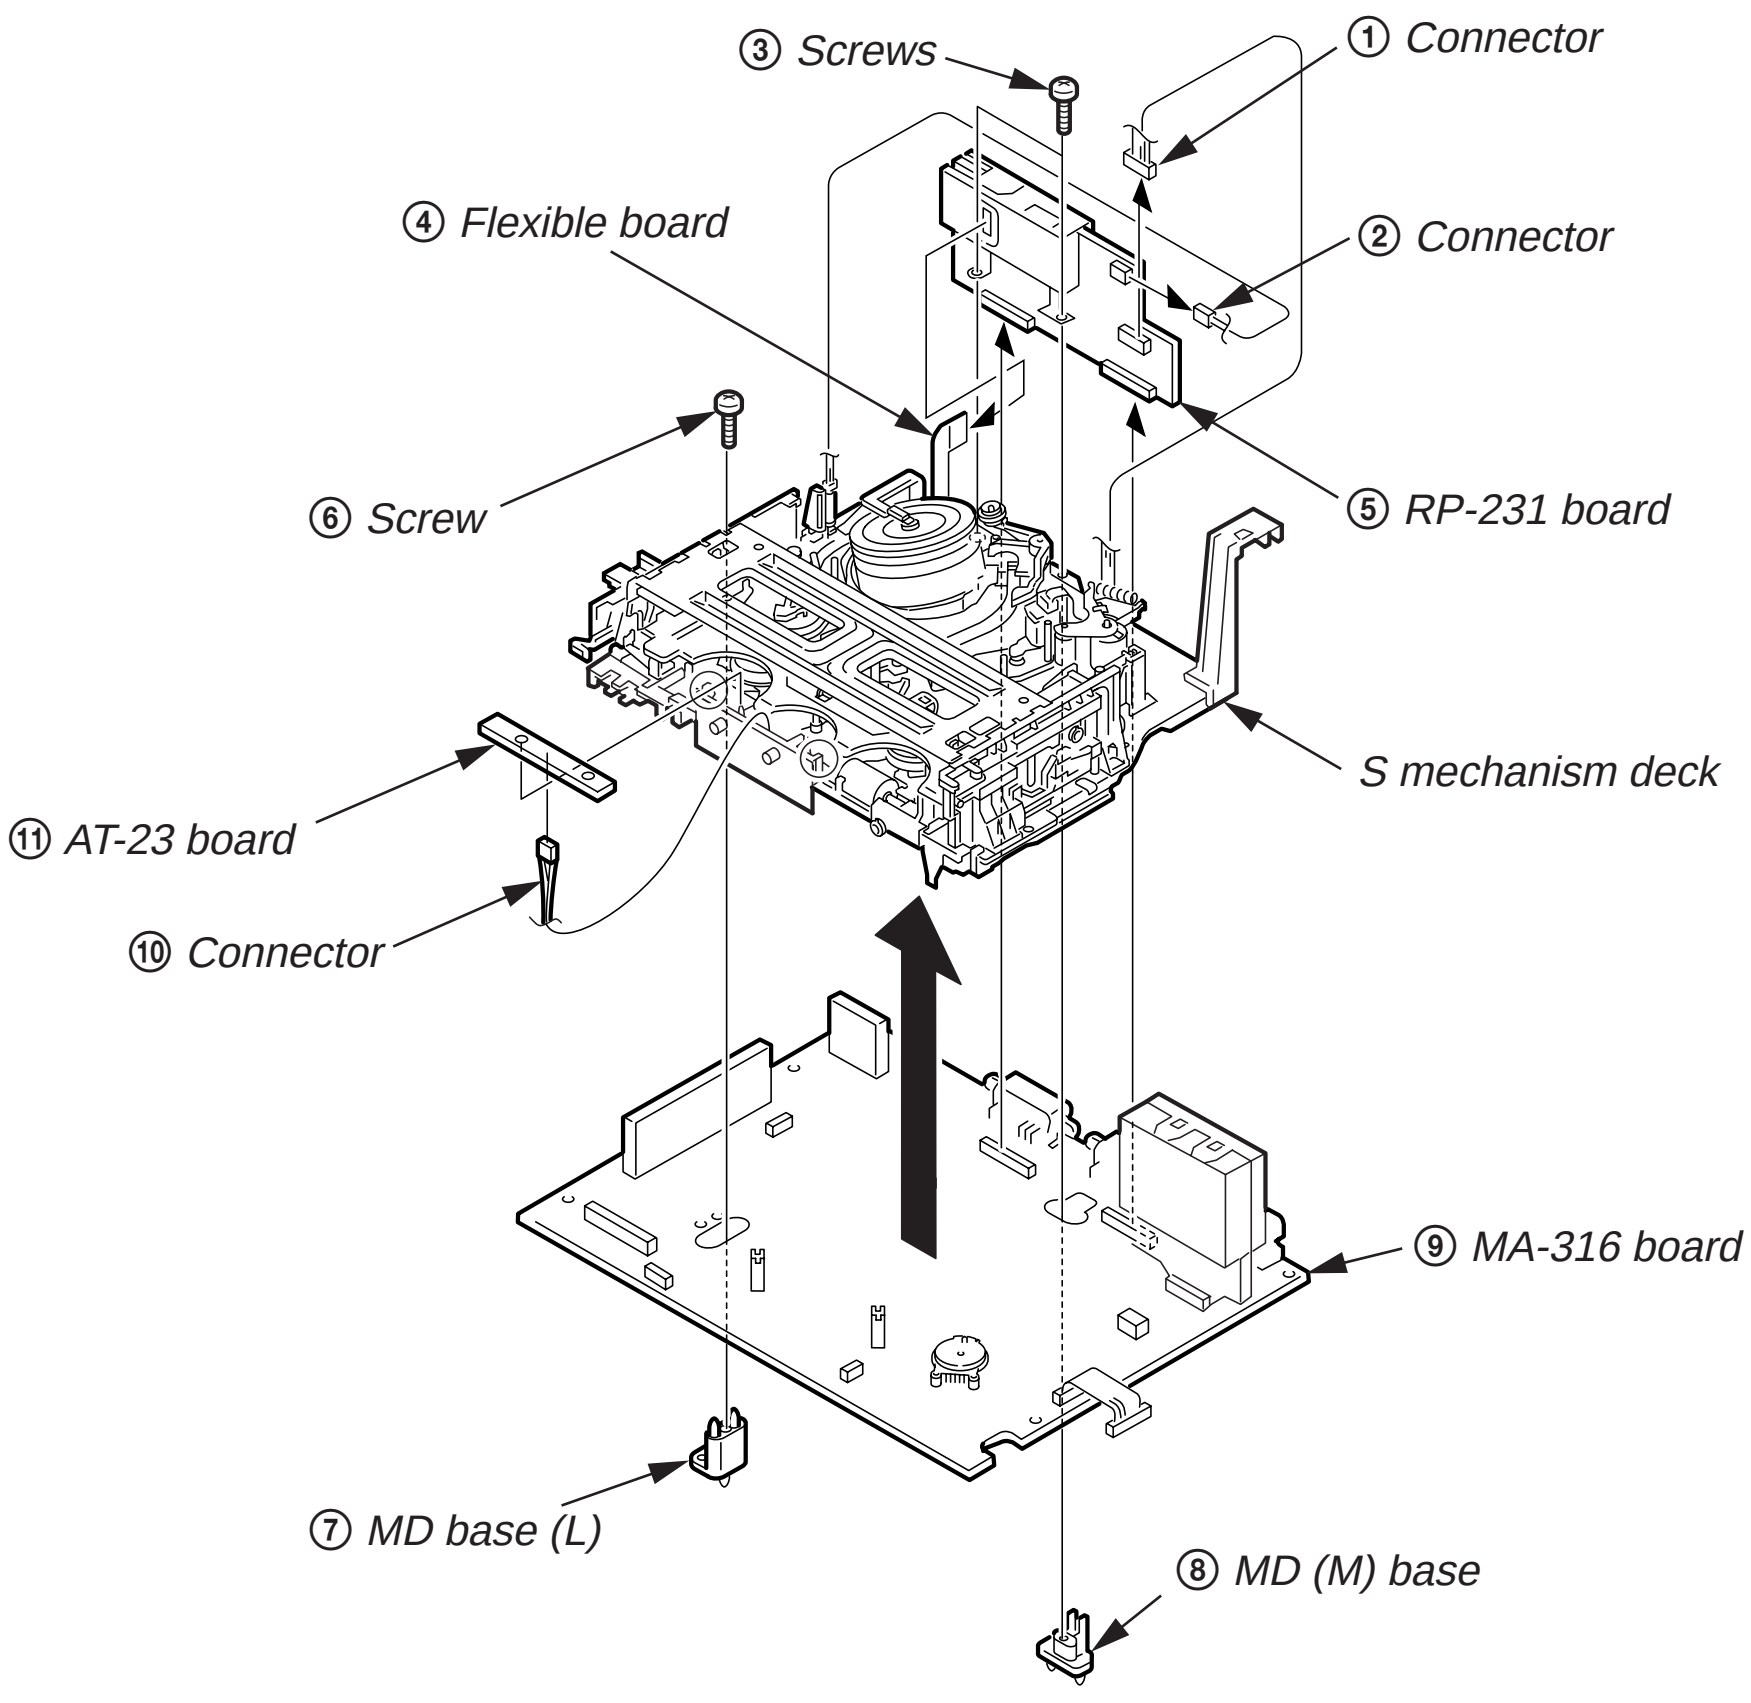

2-6. CIRCUIT BOARDS LOCATION

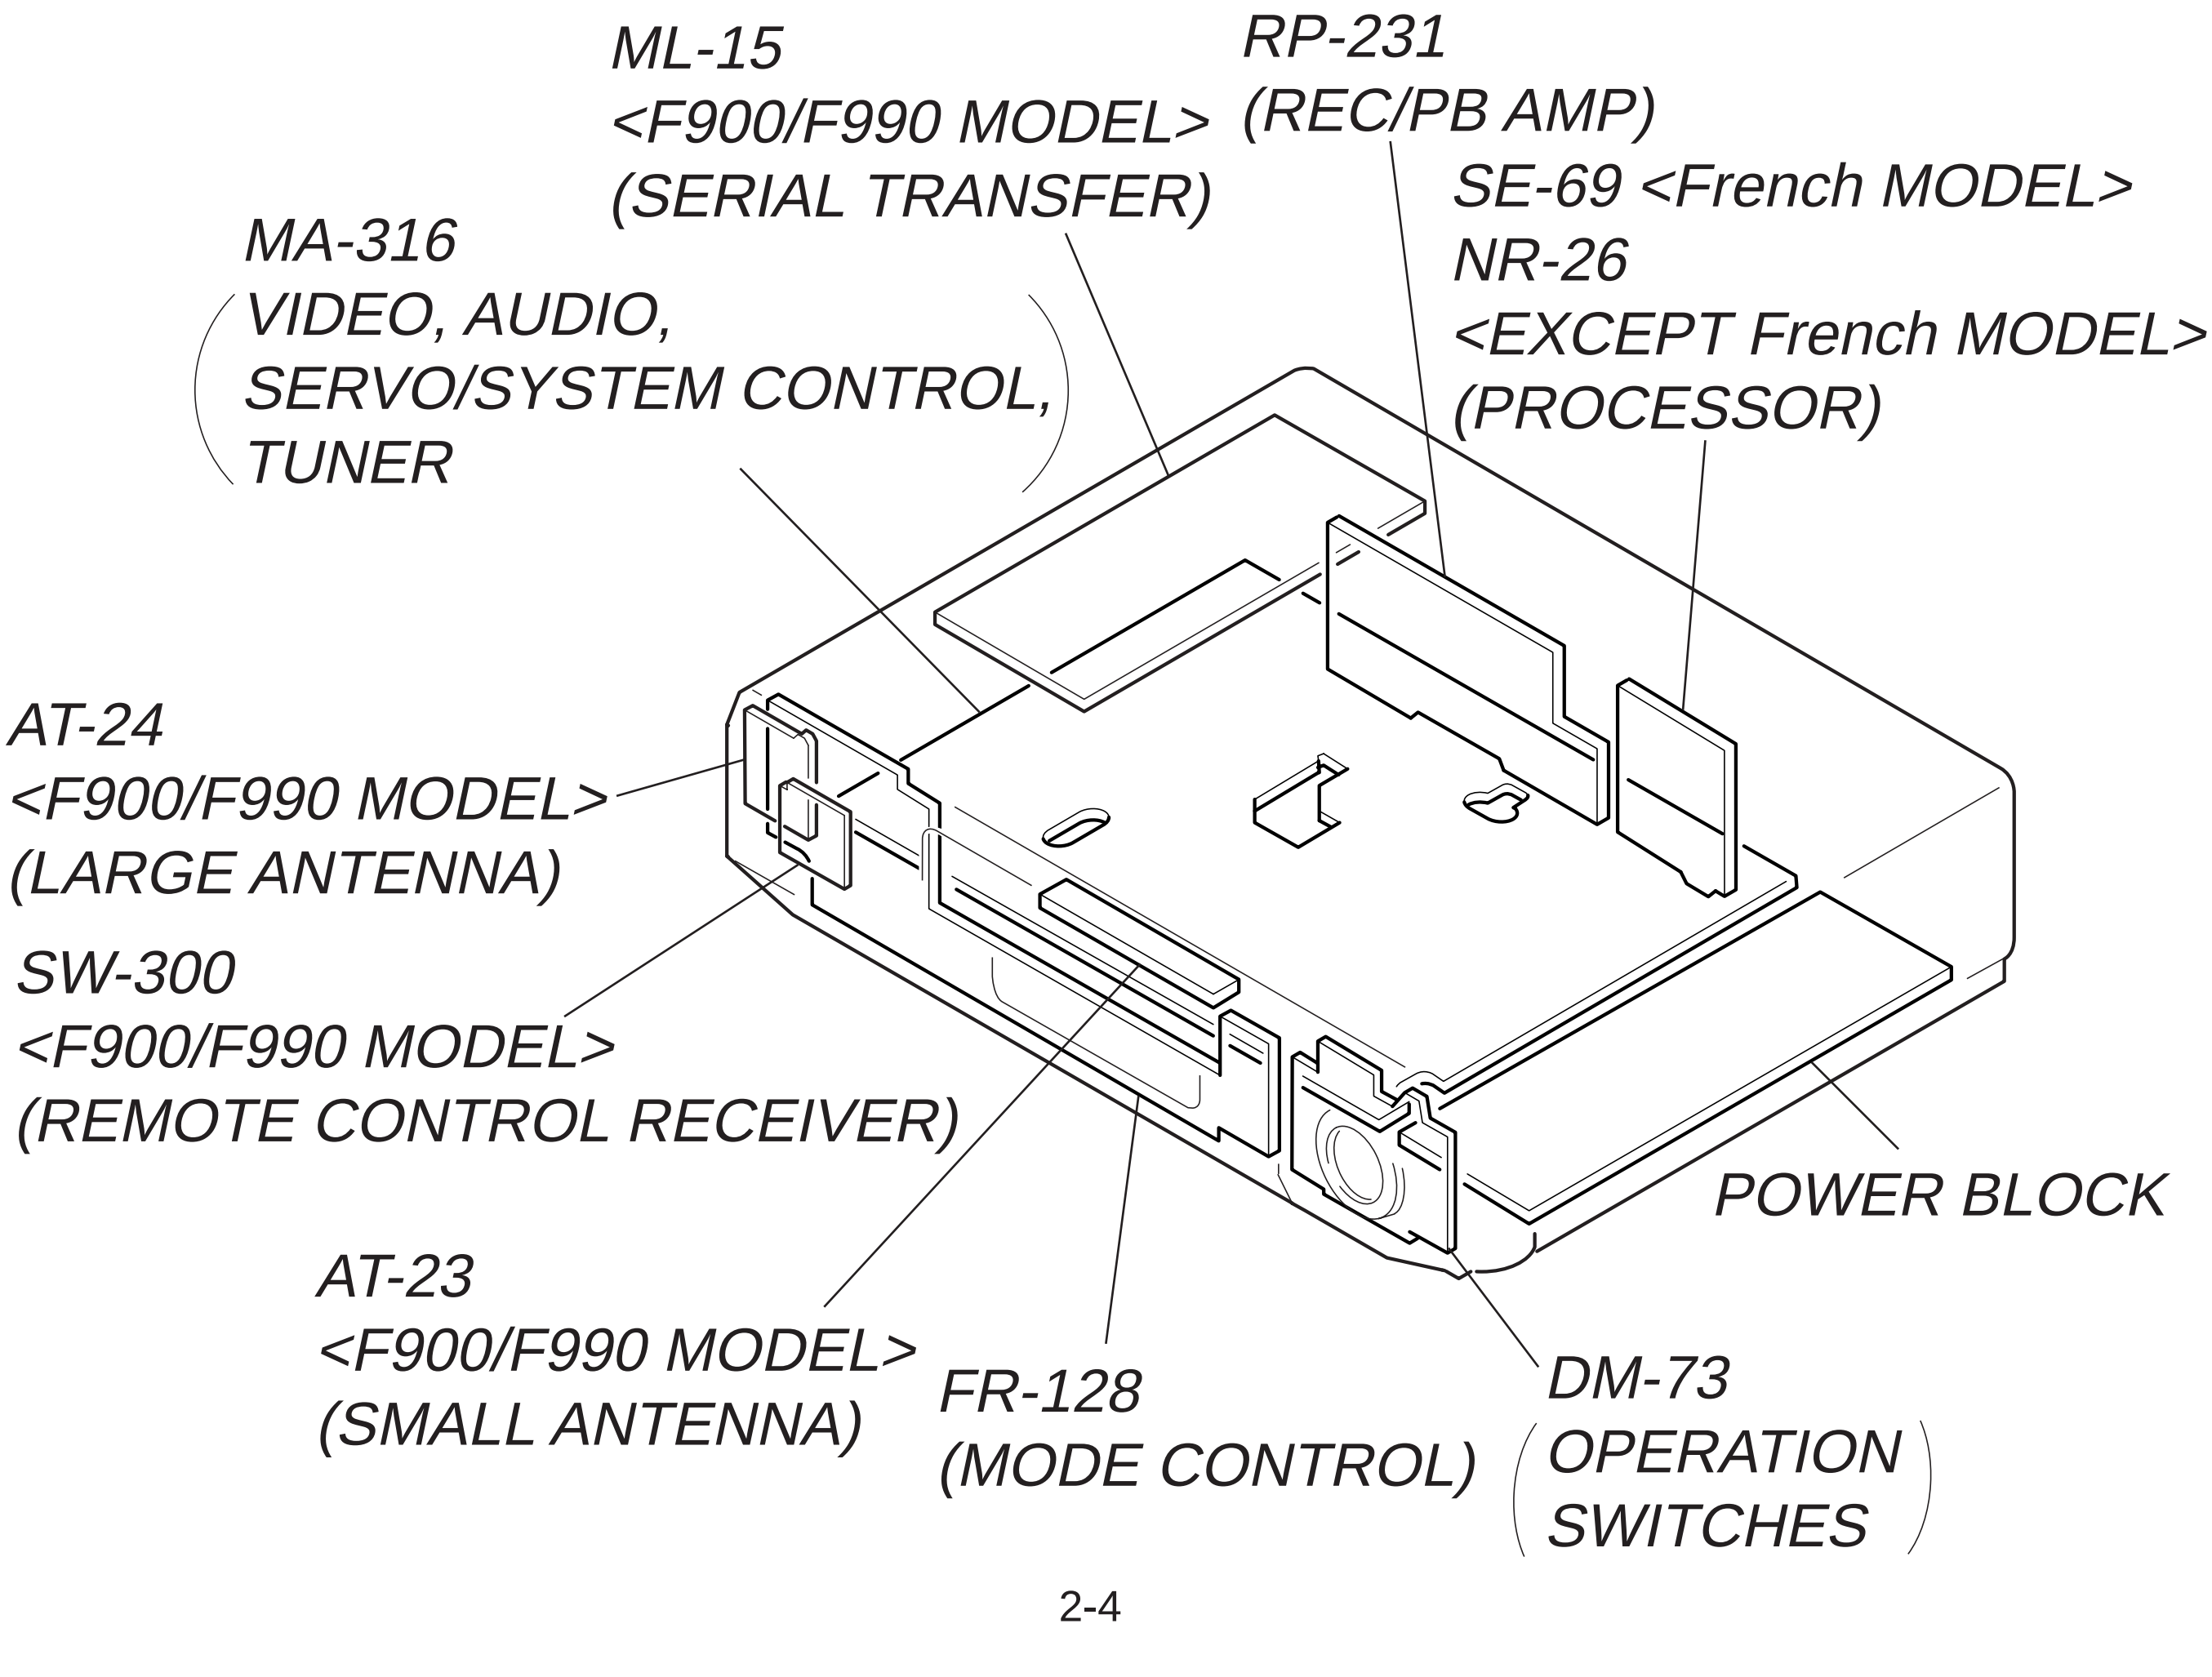

2-7. INTERNAL VIEWS

—Top View—

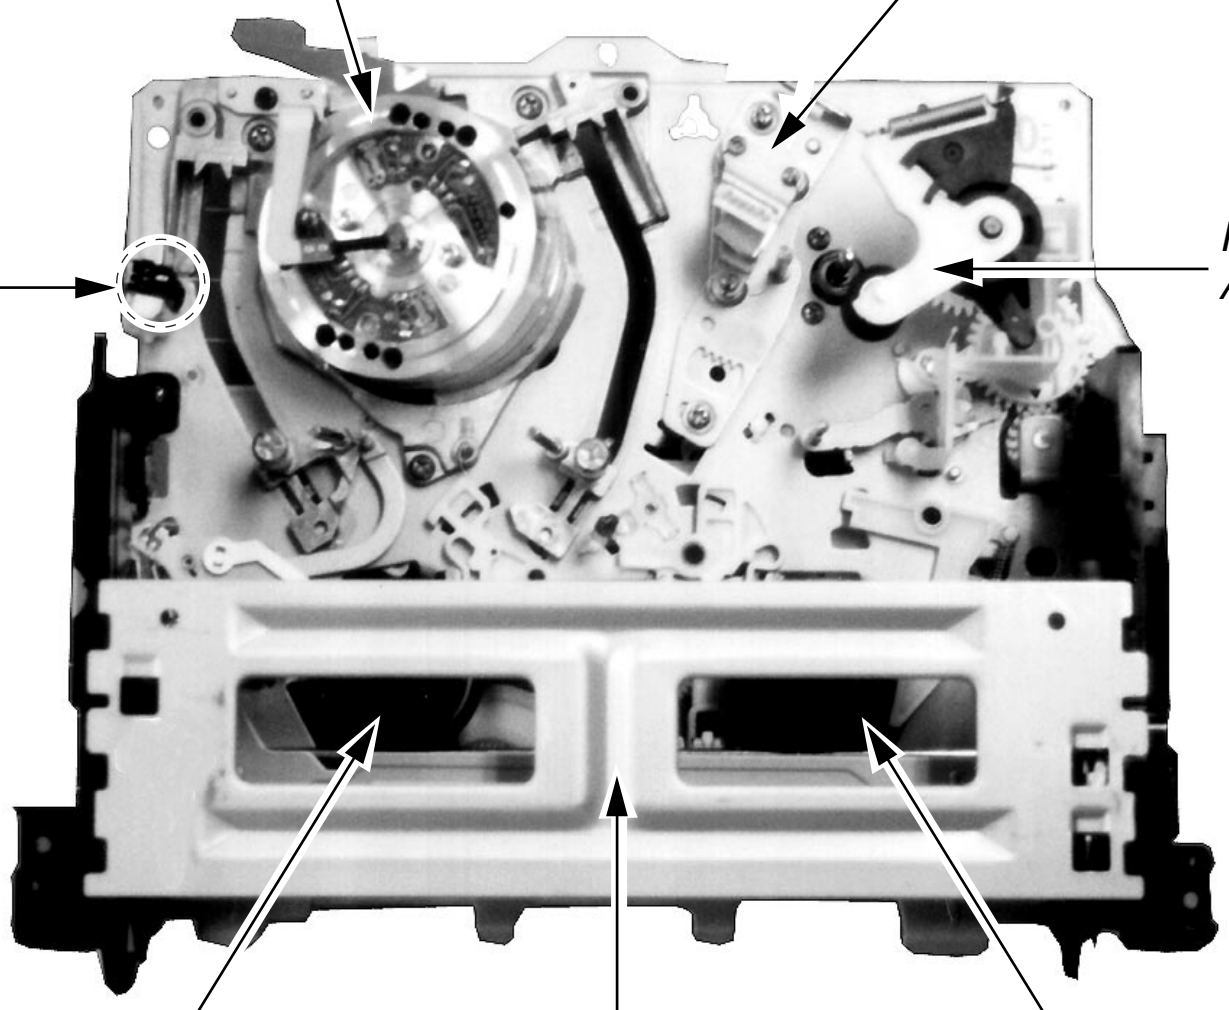

—Bottom View—

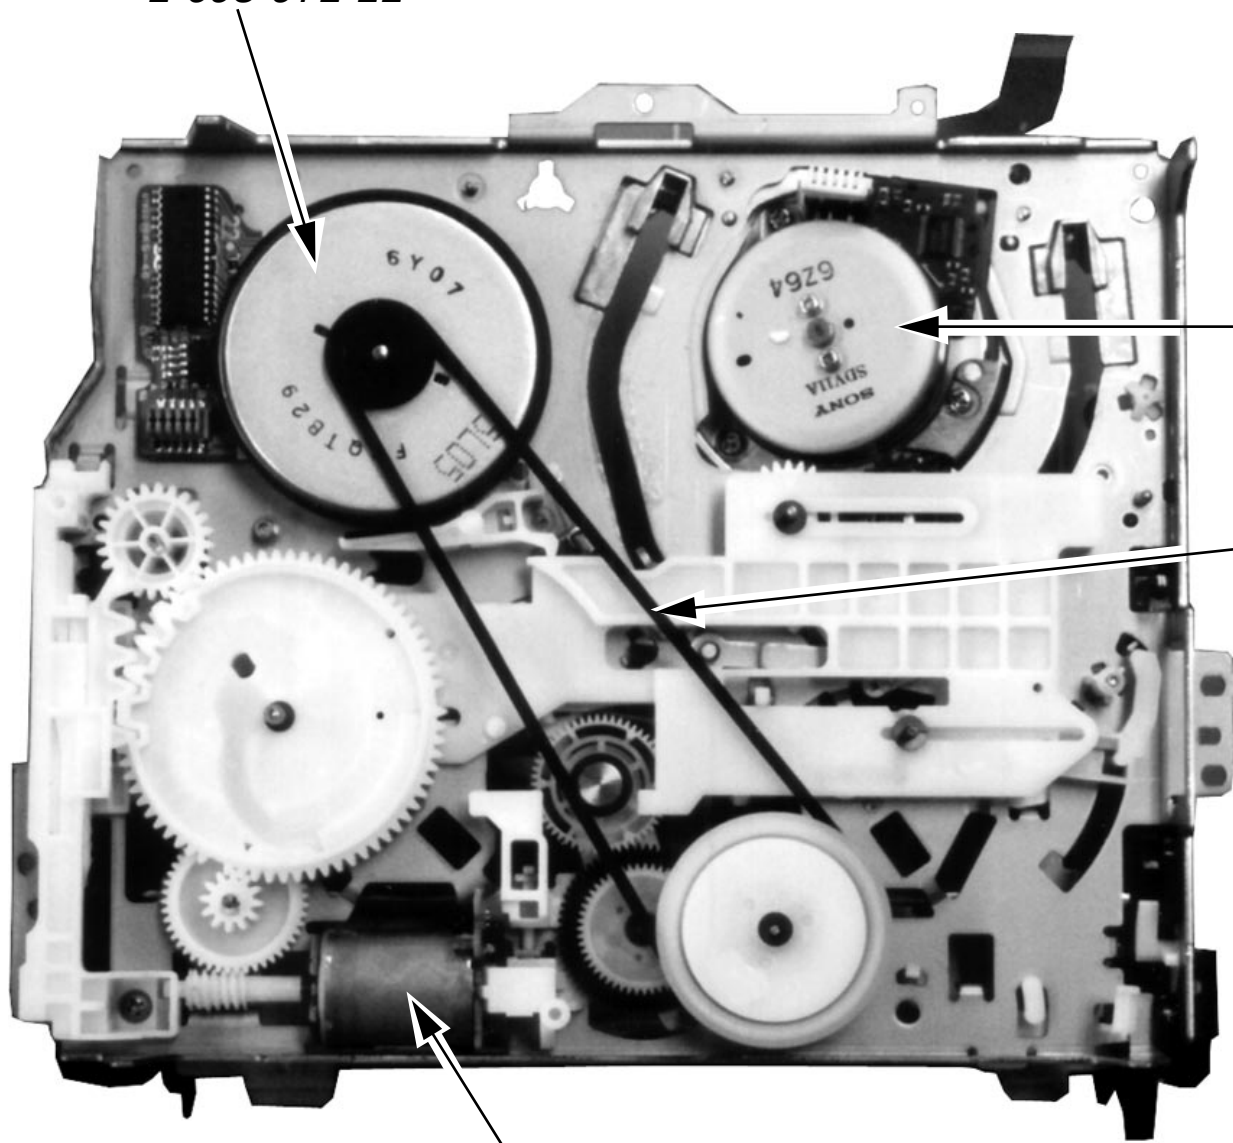

SECTION 3
BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM

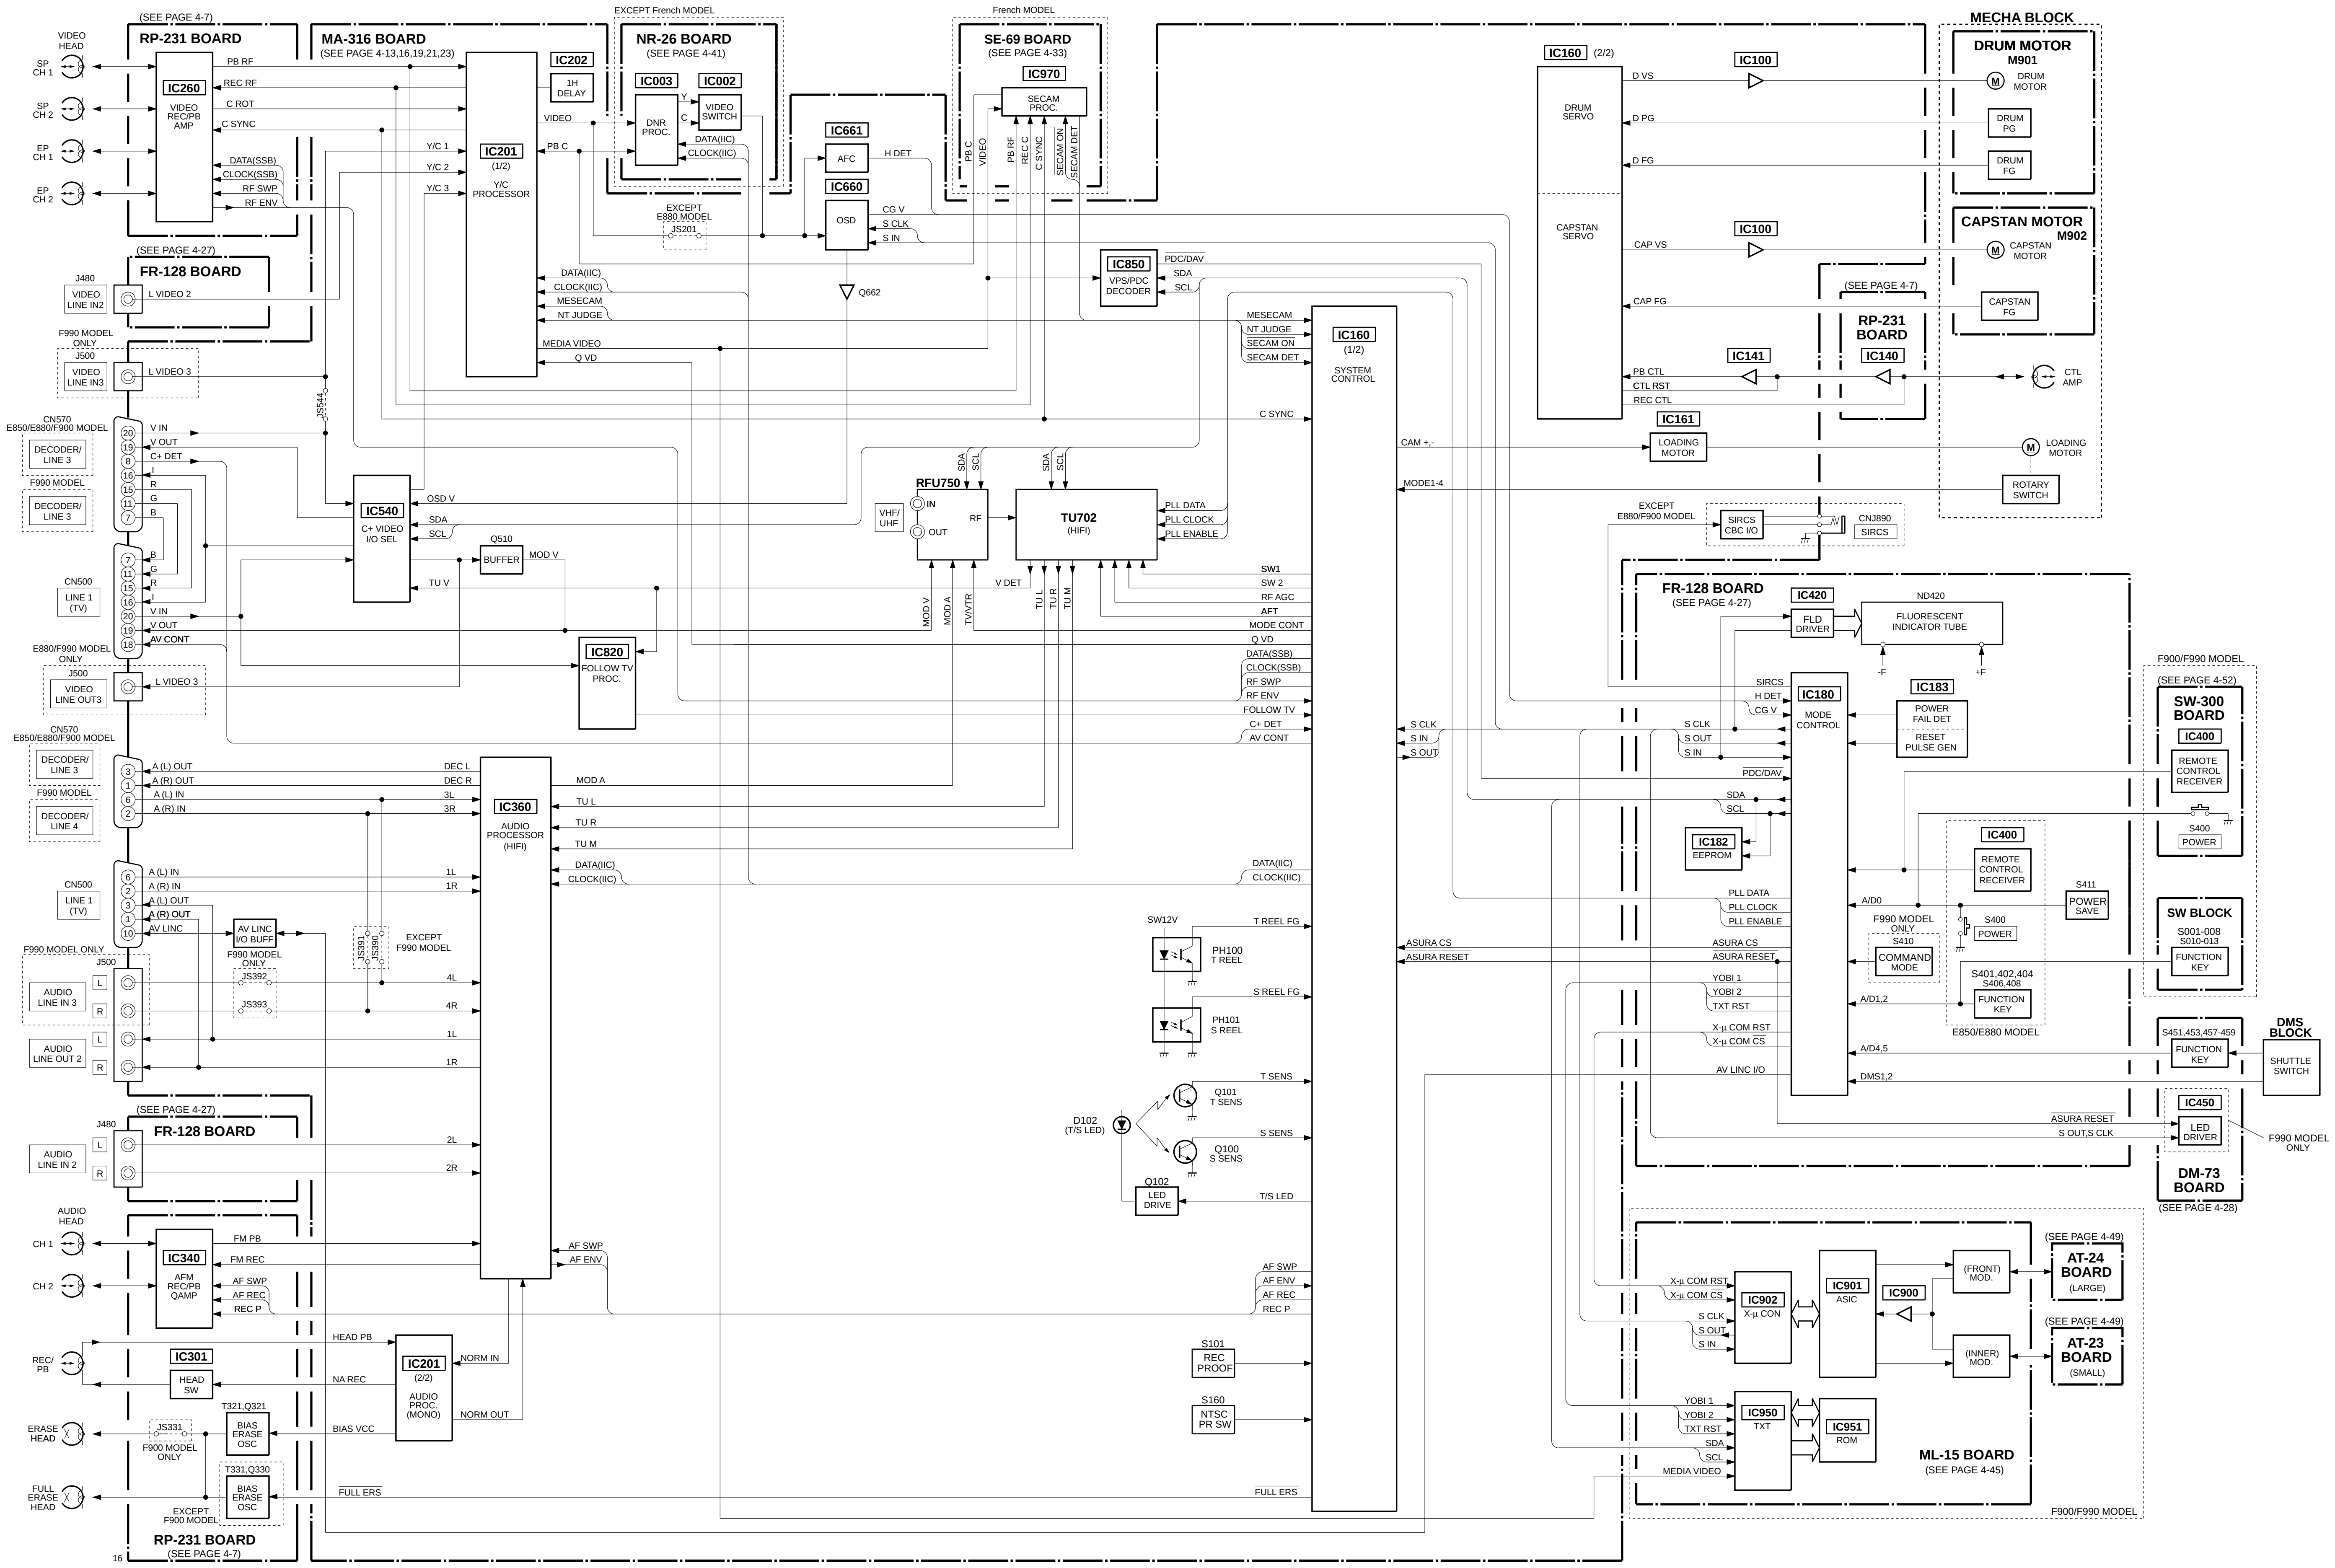

3-2. VIDEO BLOCK DIAGRAM

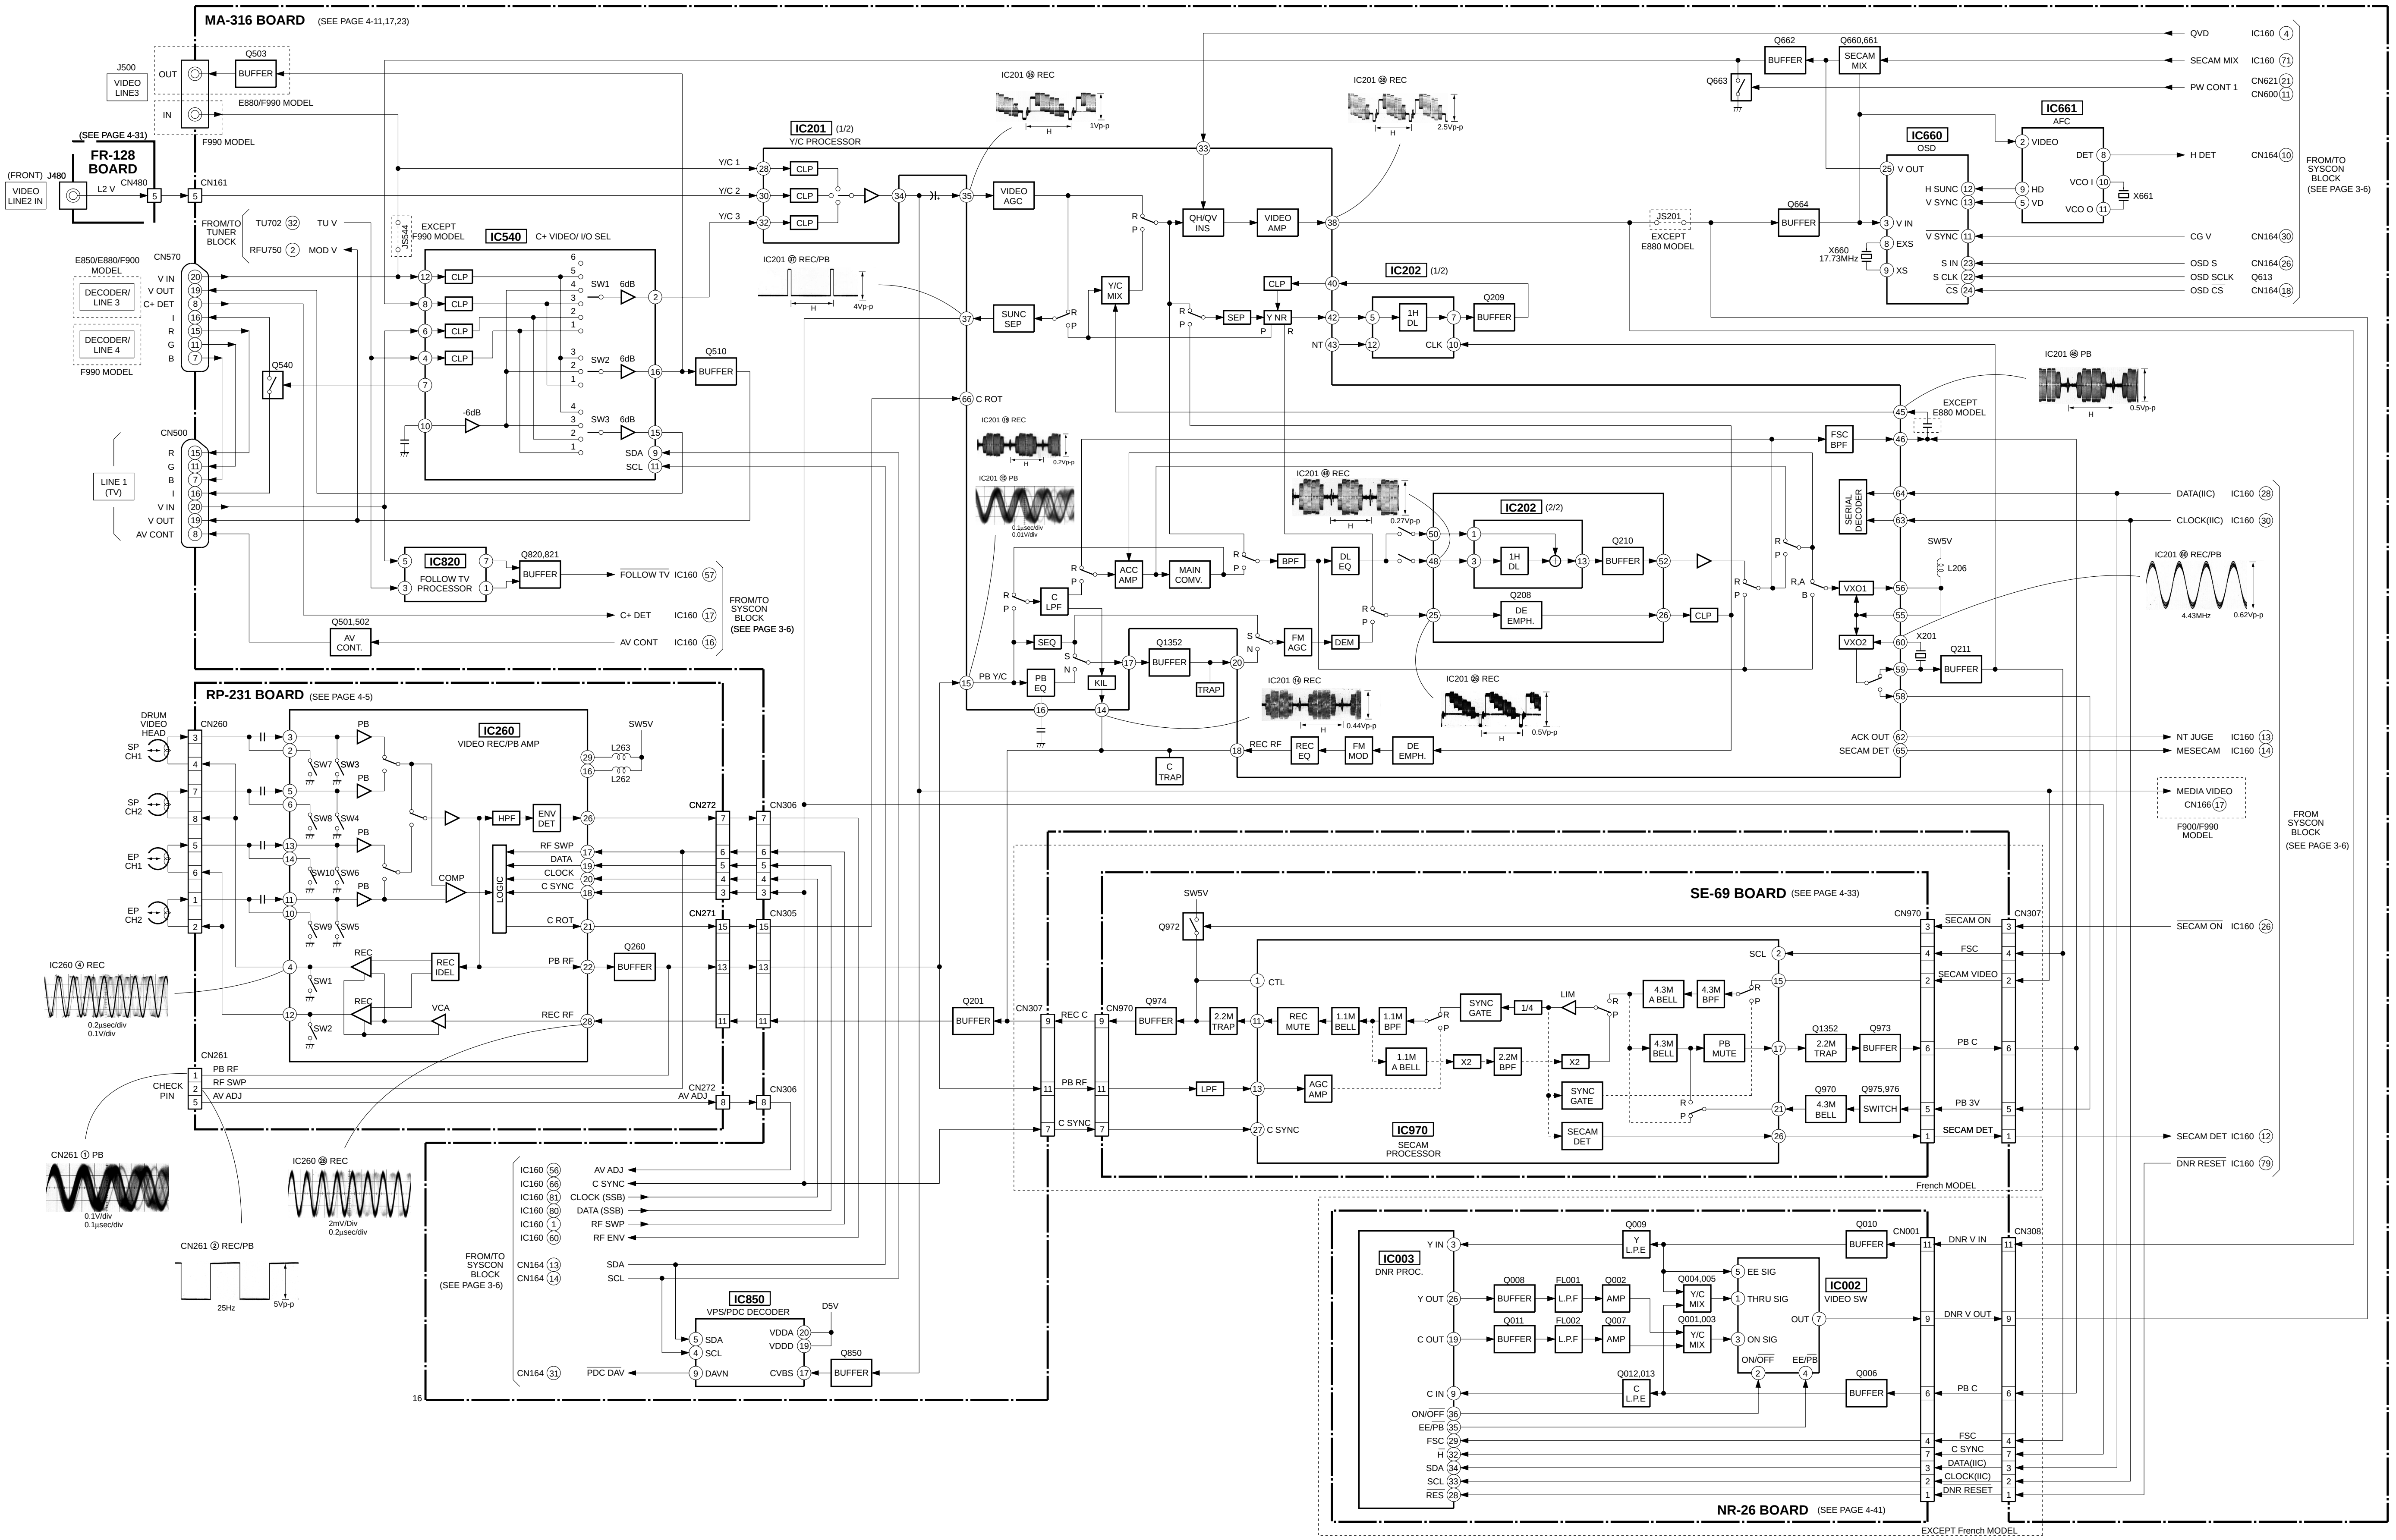

3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM

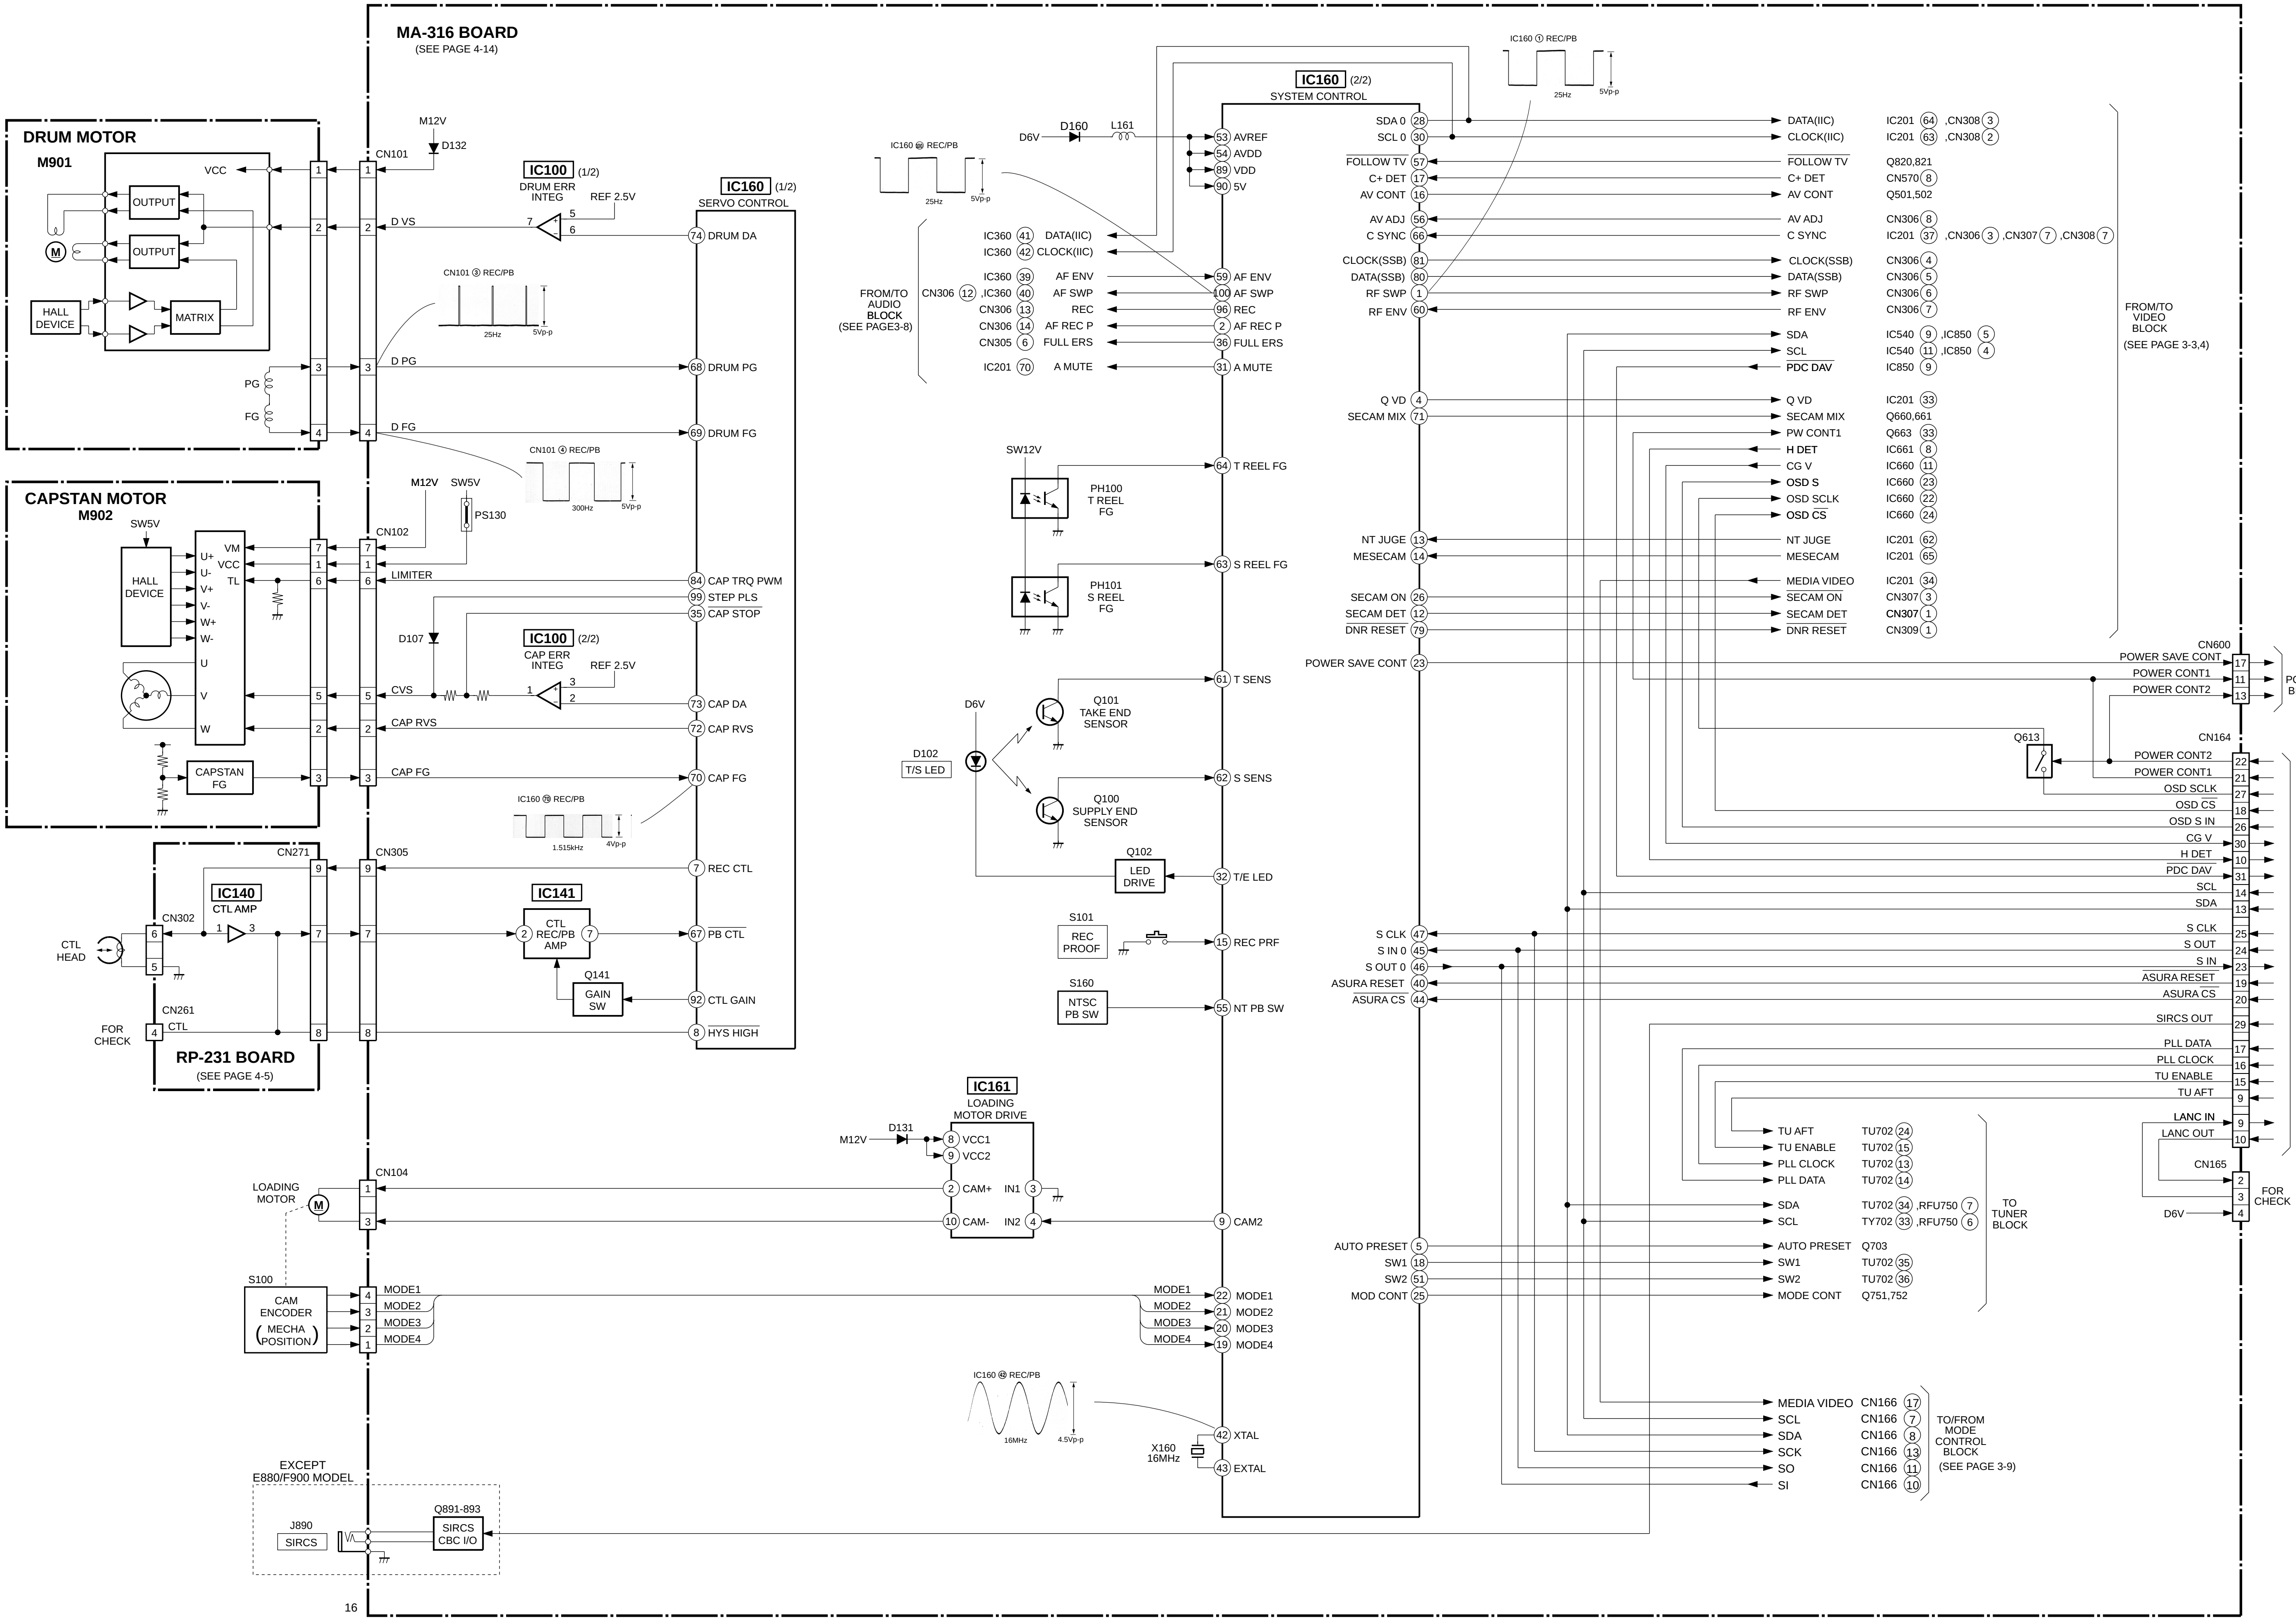

3-4. AUDIO BLOCK DIAGRAM

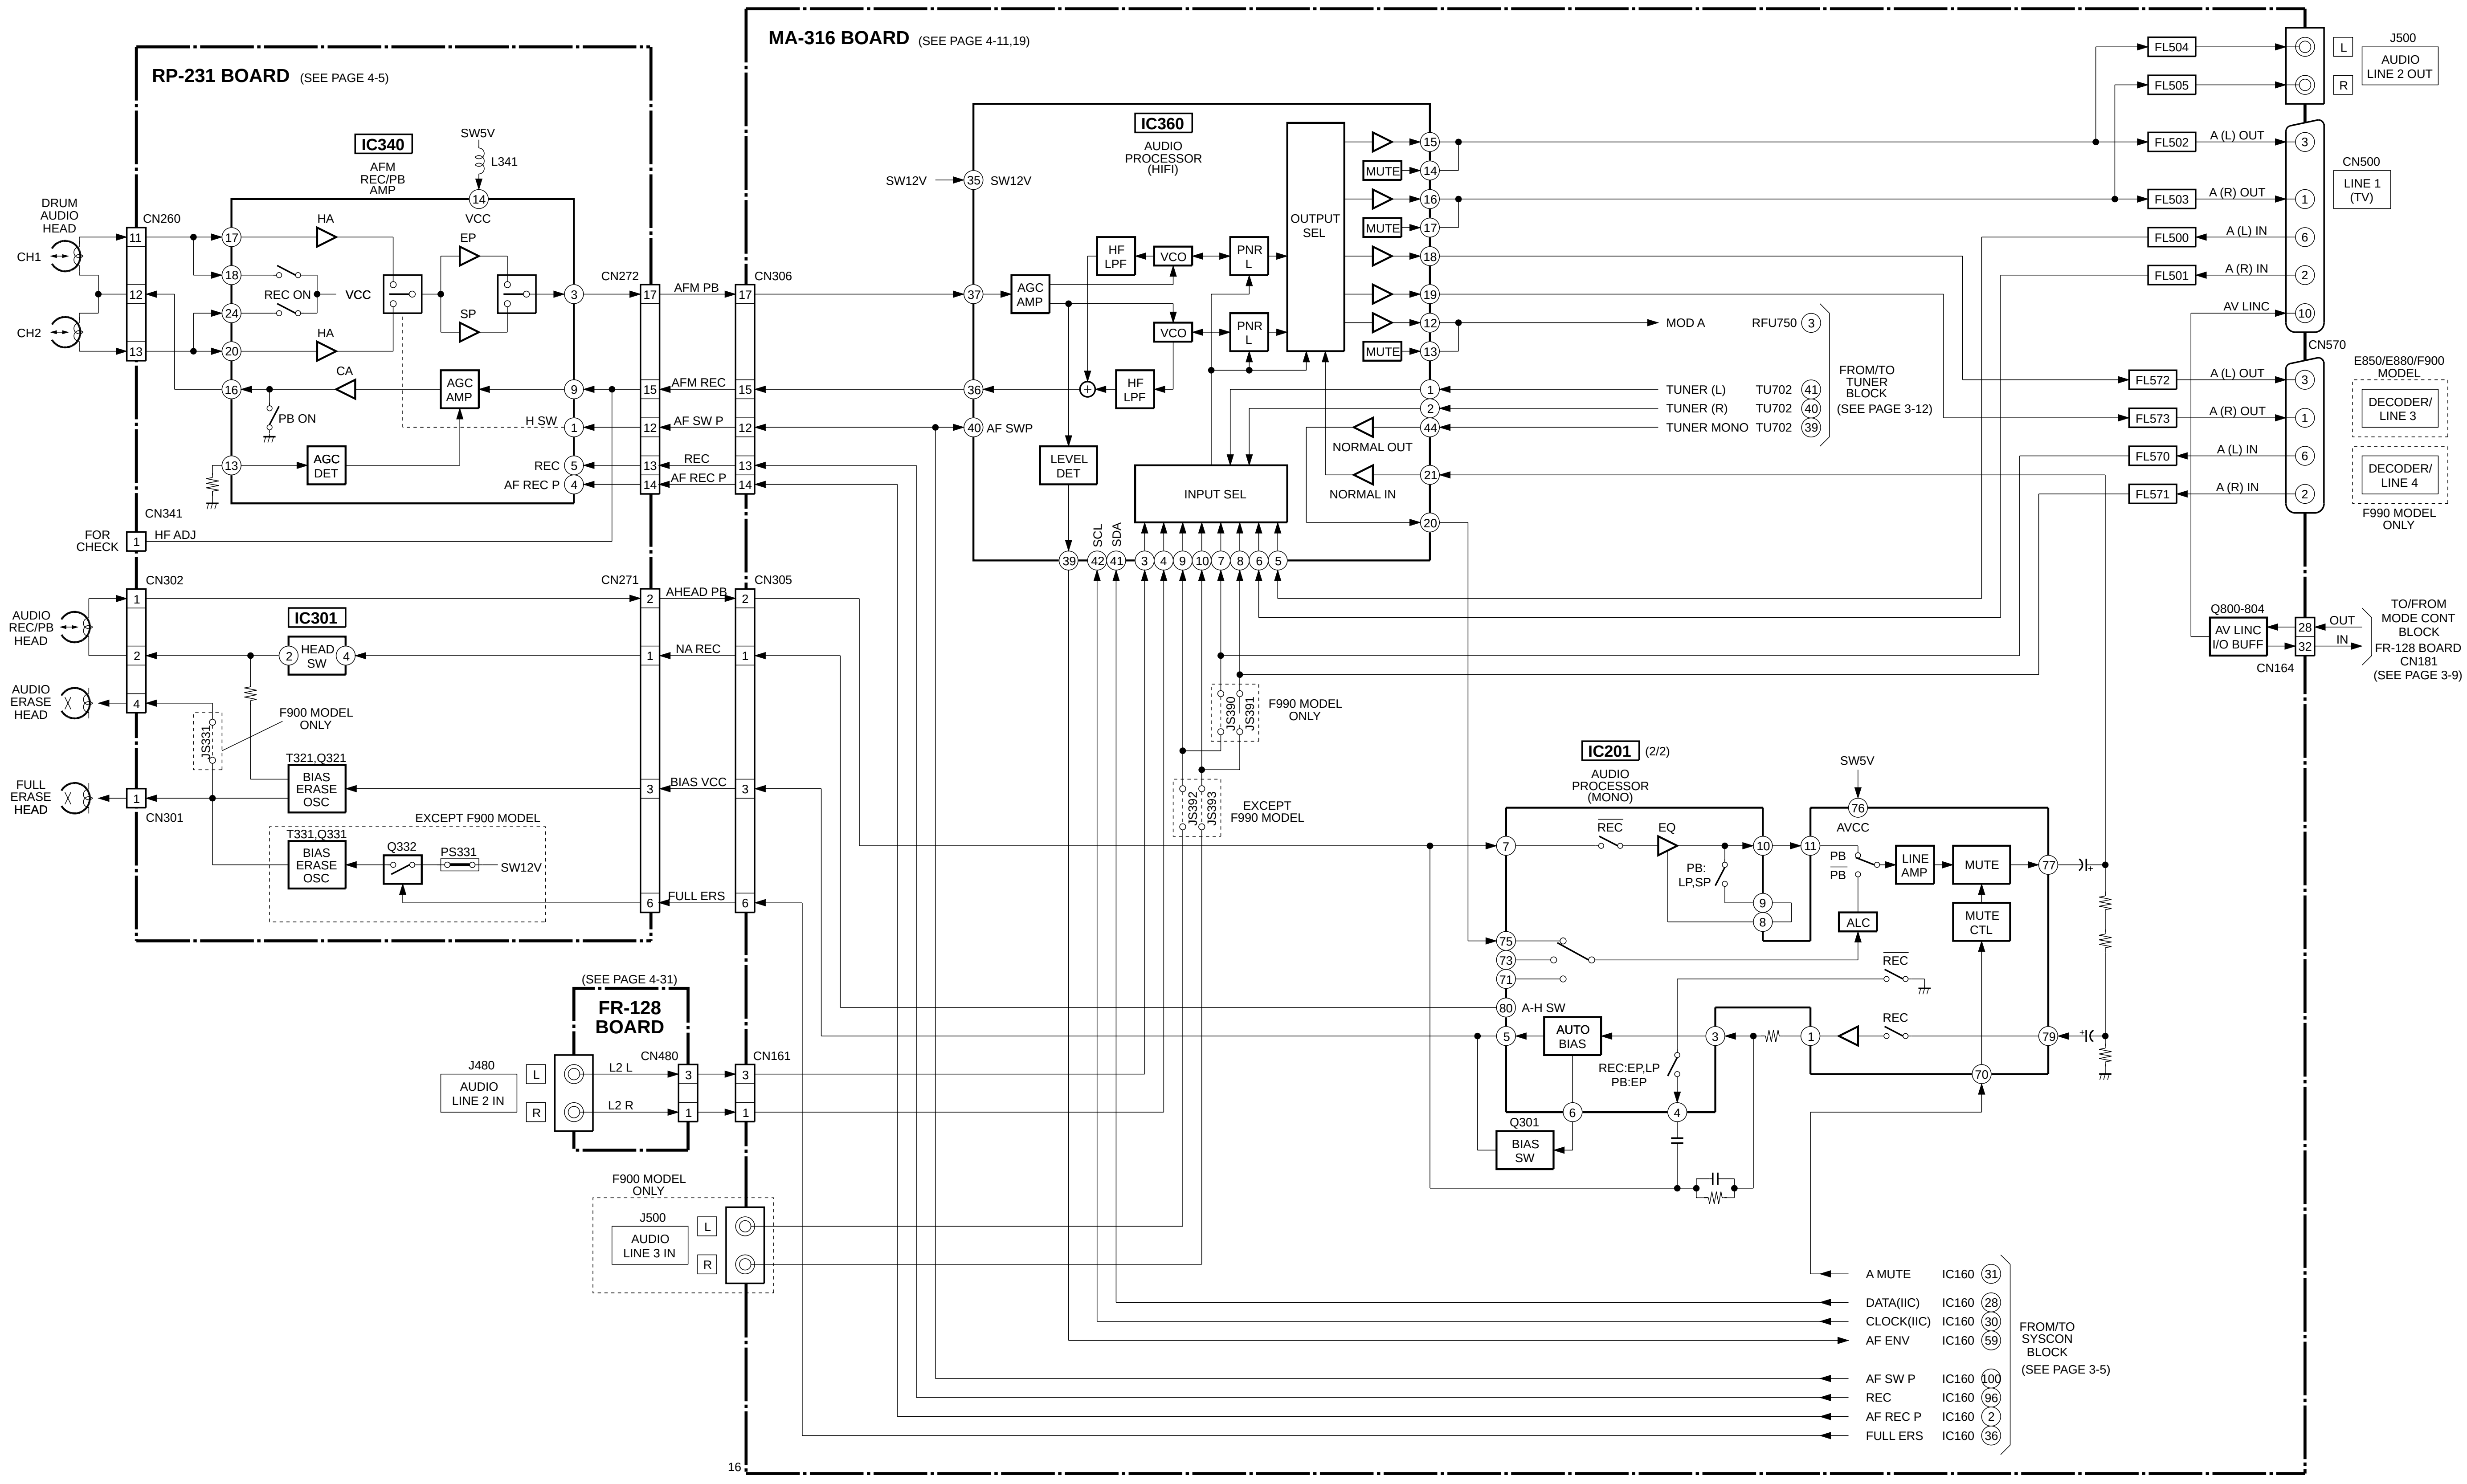

3-5. MODE CONTROL BLOCK DIAGRAM

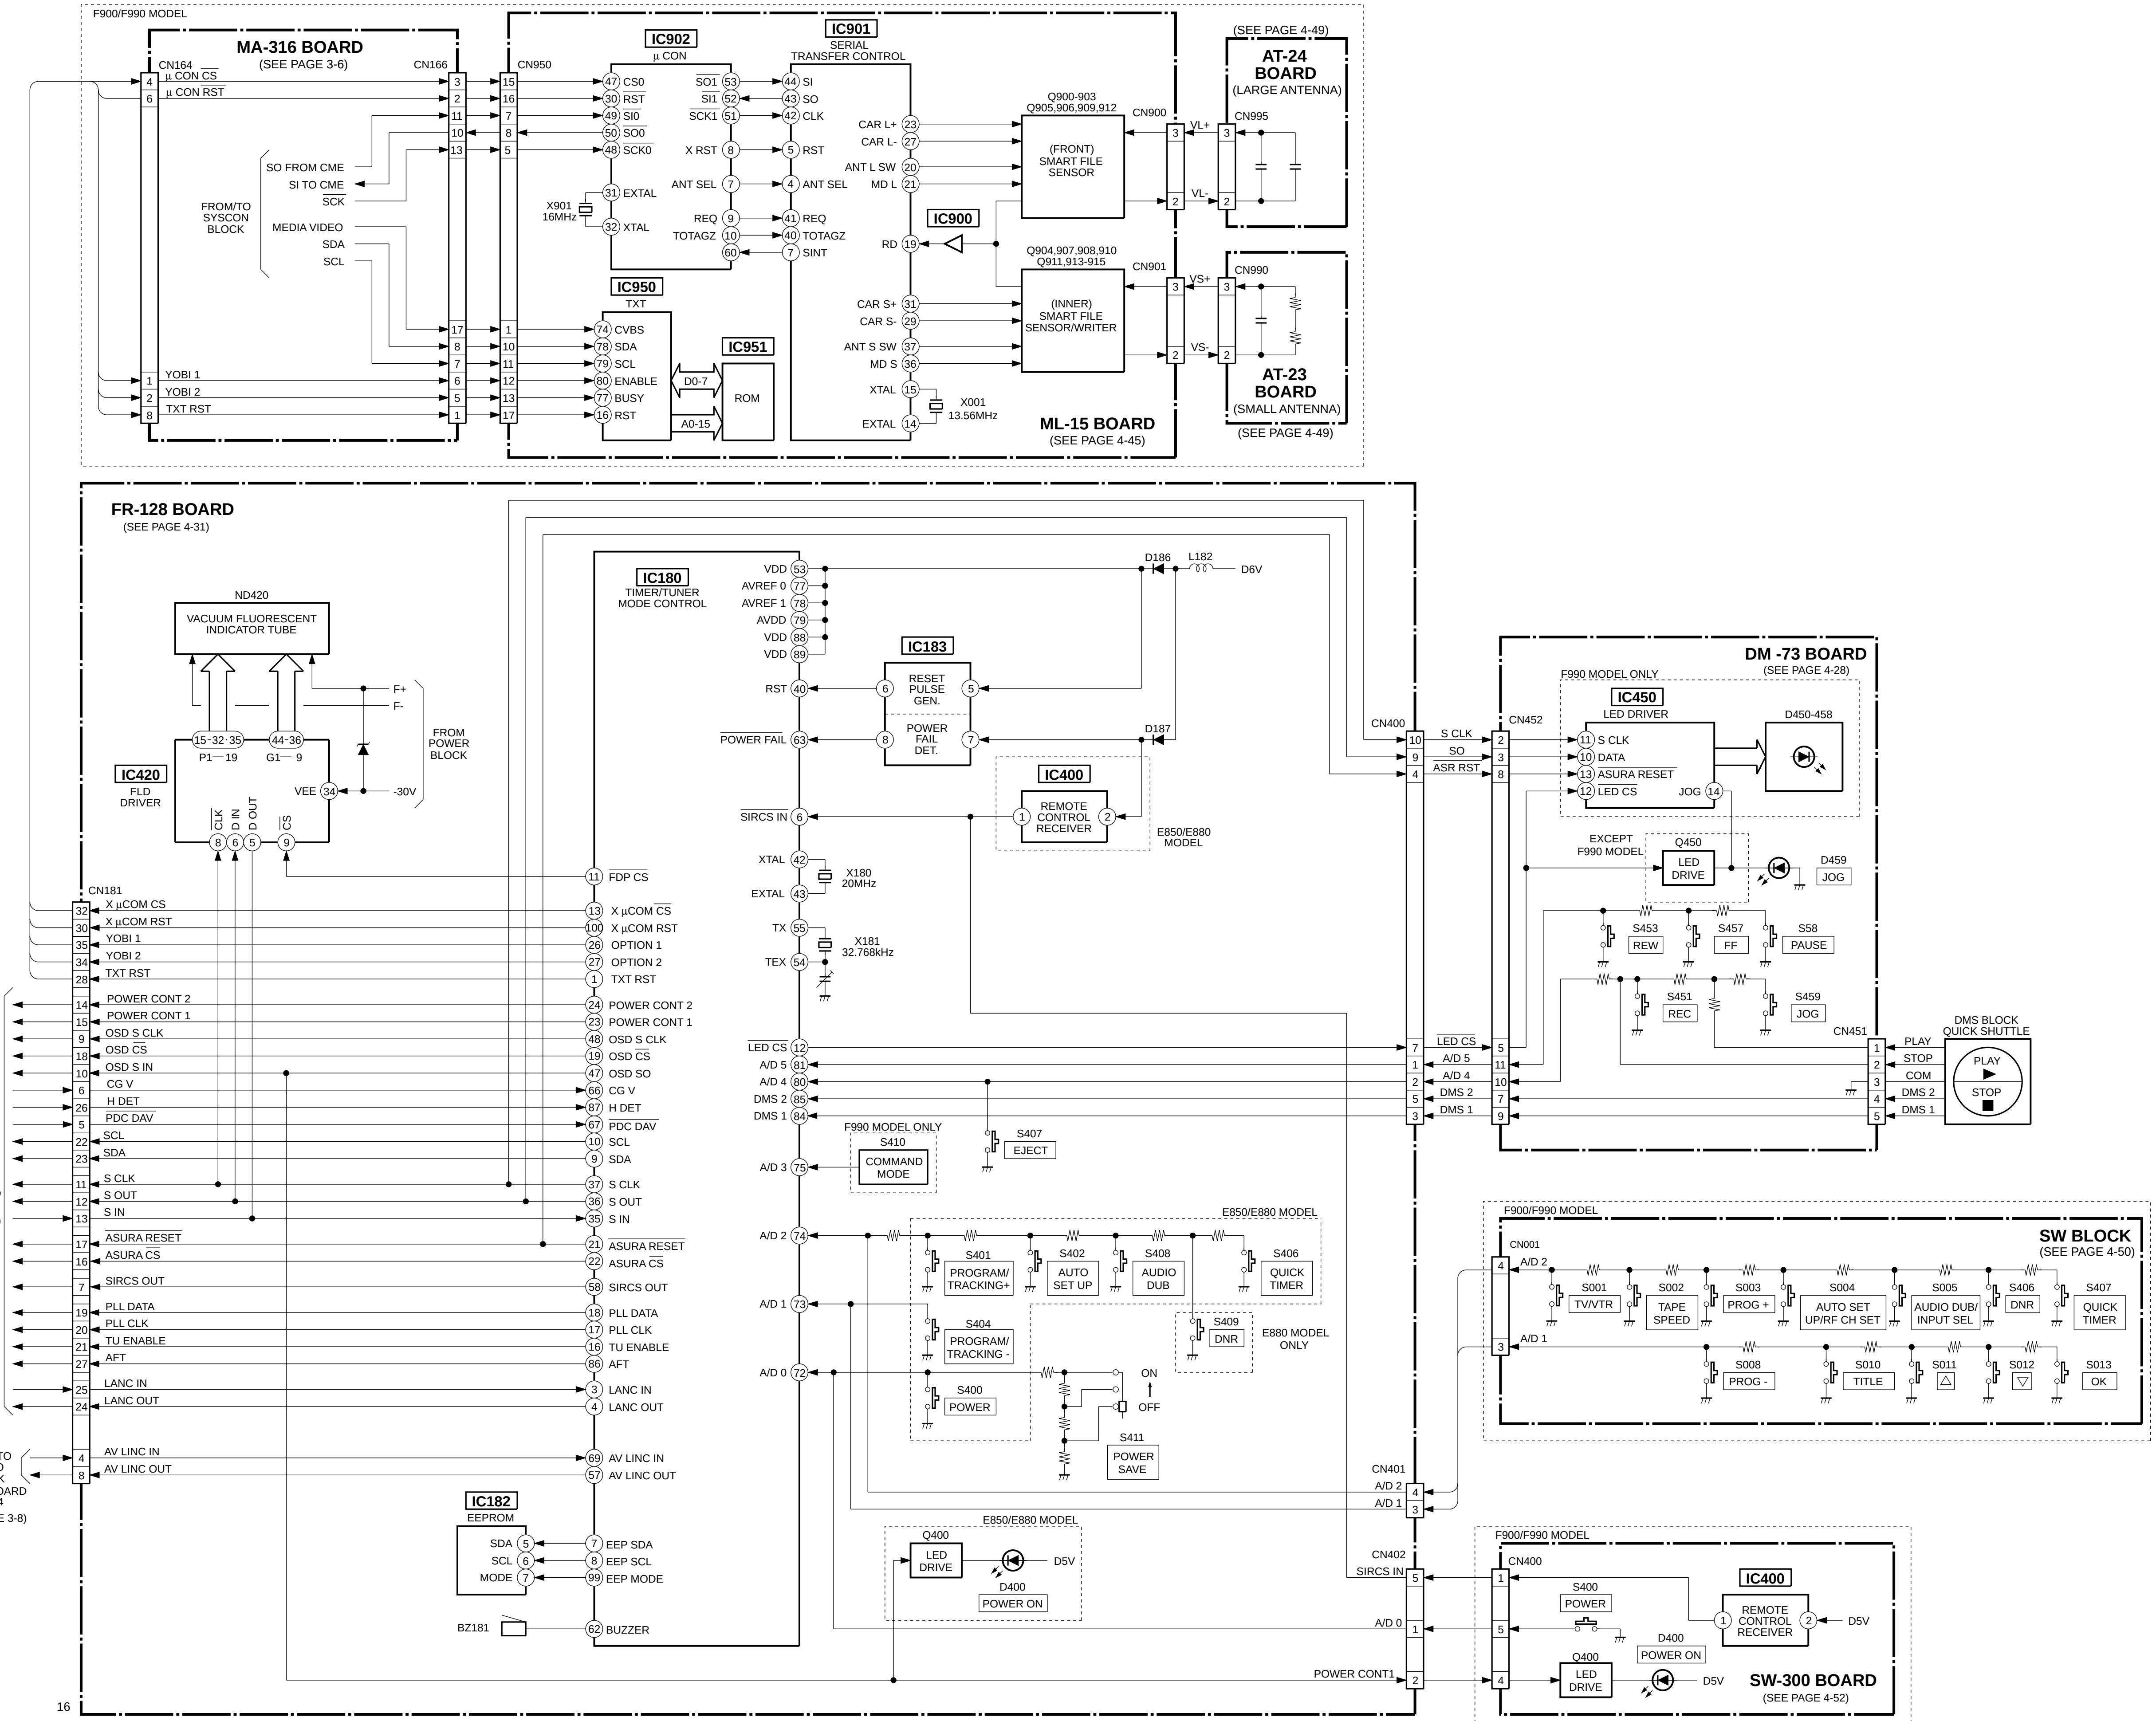

3-6. TUNER BLOCK DIAGRAM

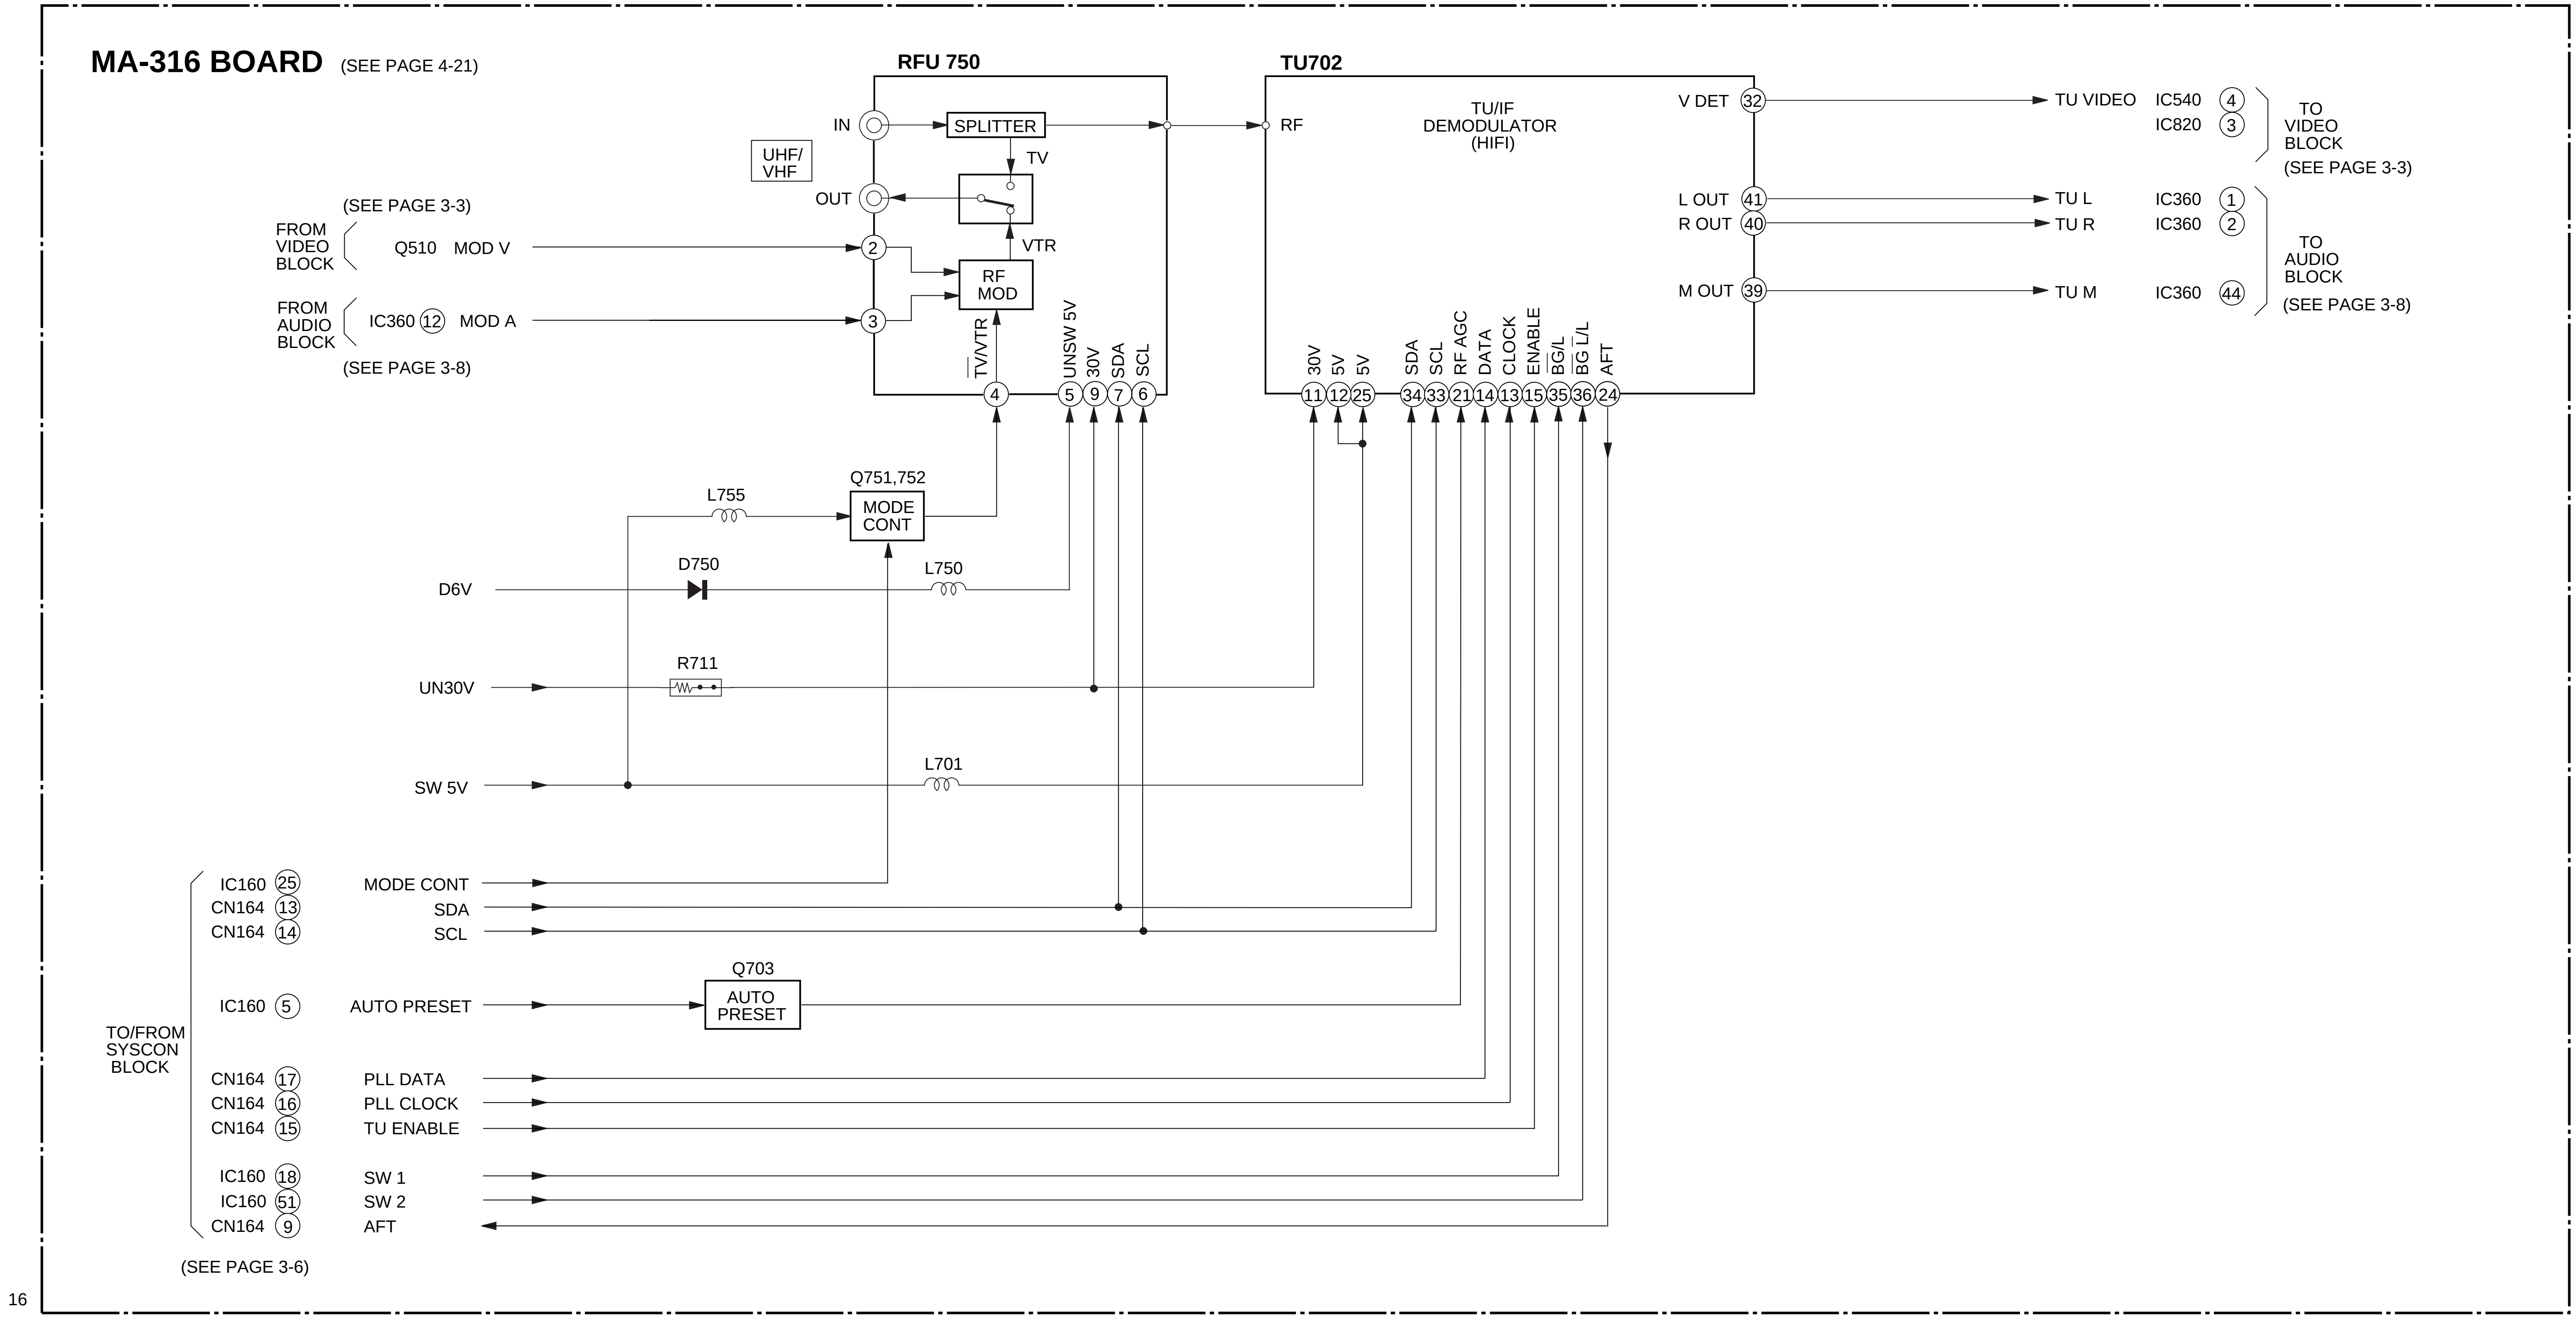

3-7. POWER SUPPLY BLOCK DIAGRAM

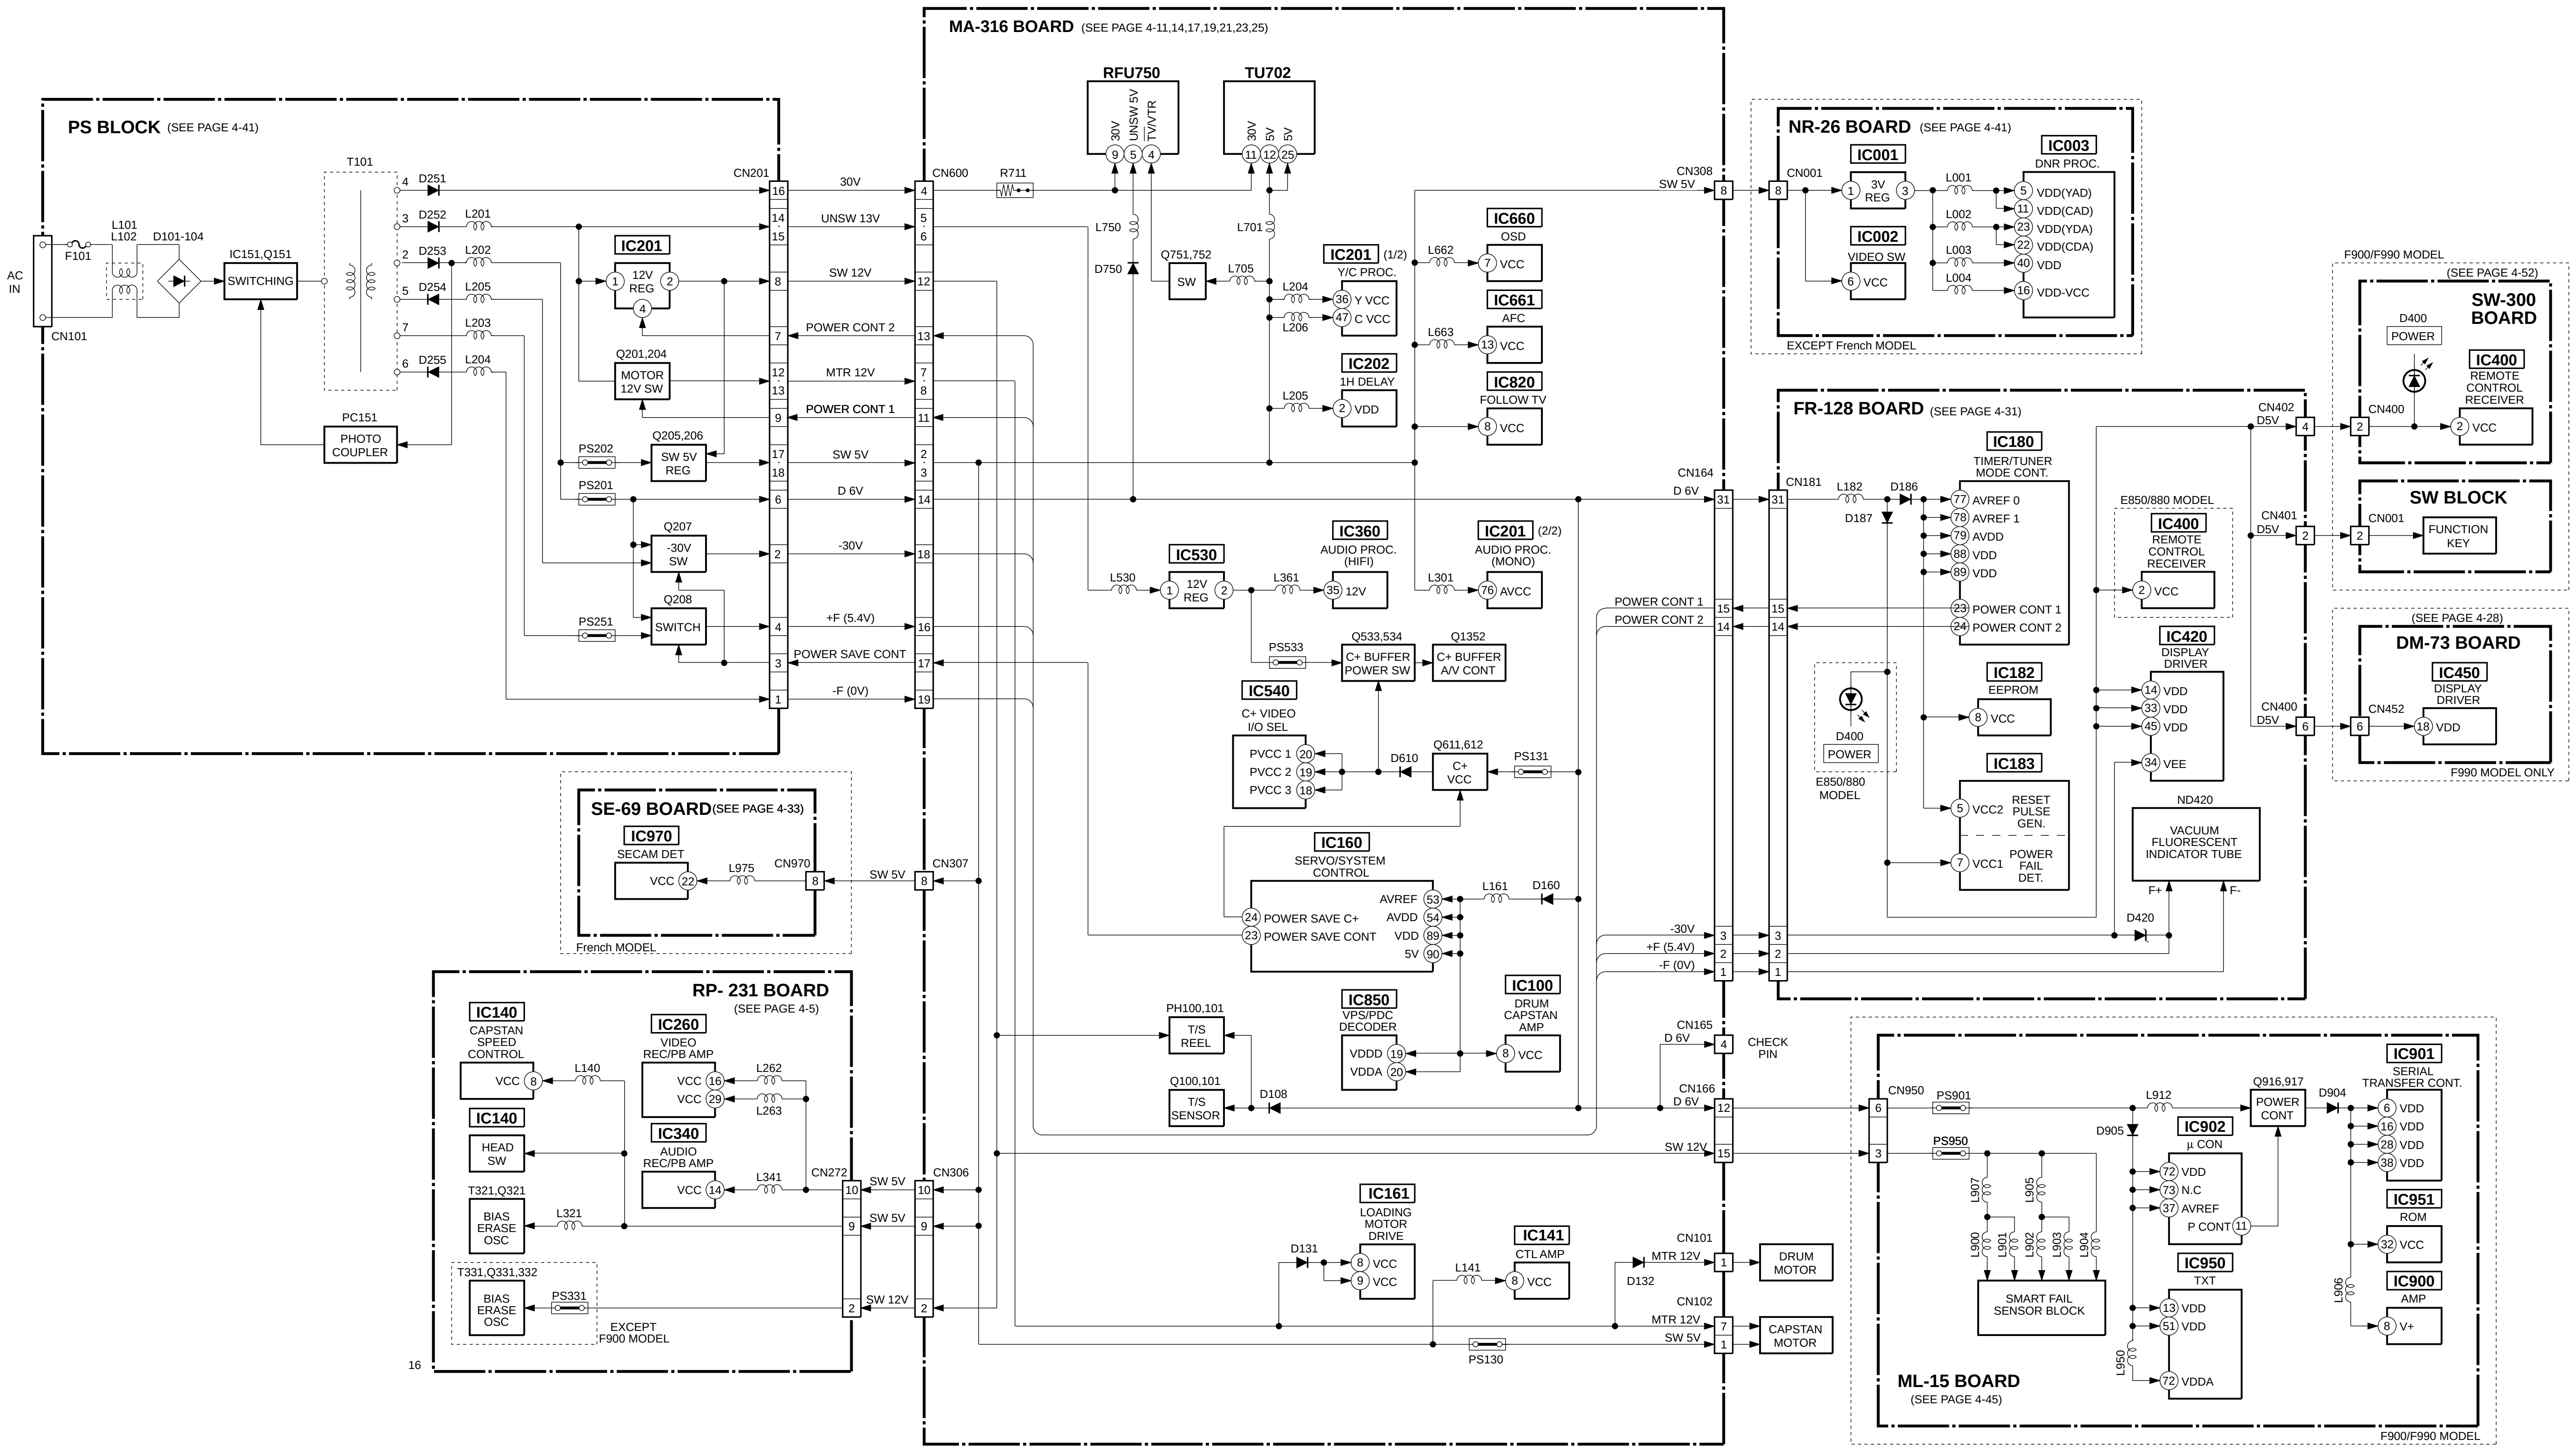

SECTION 4
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM

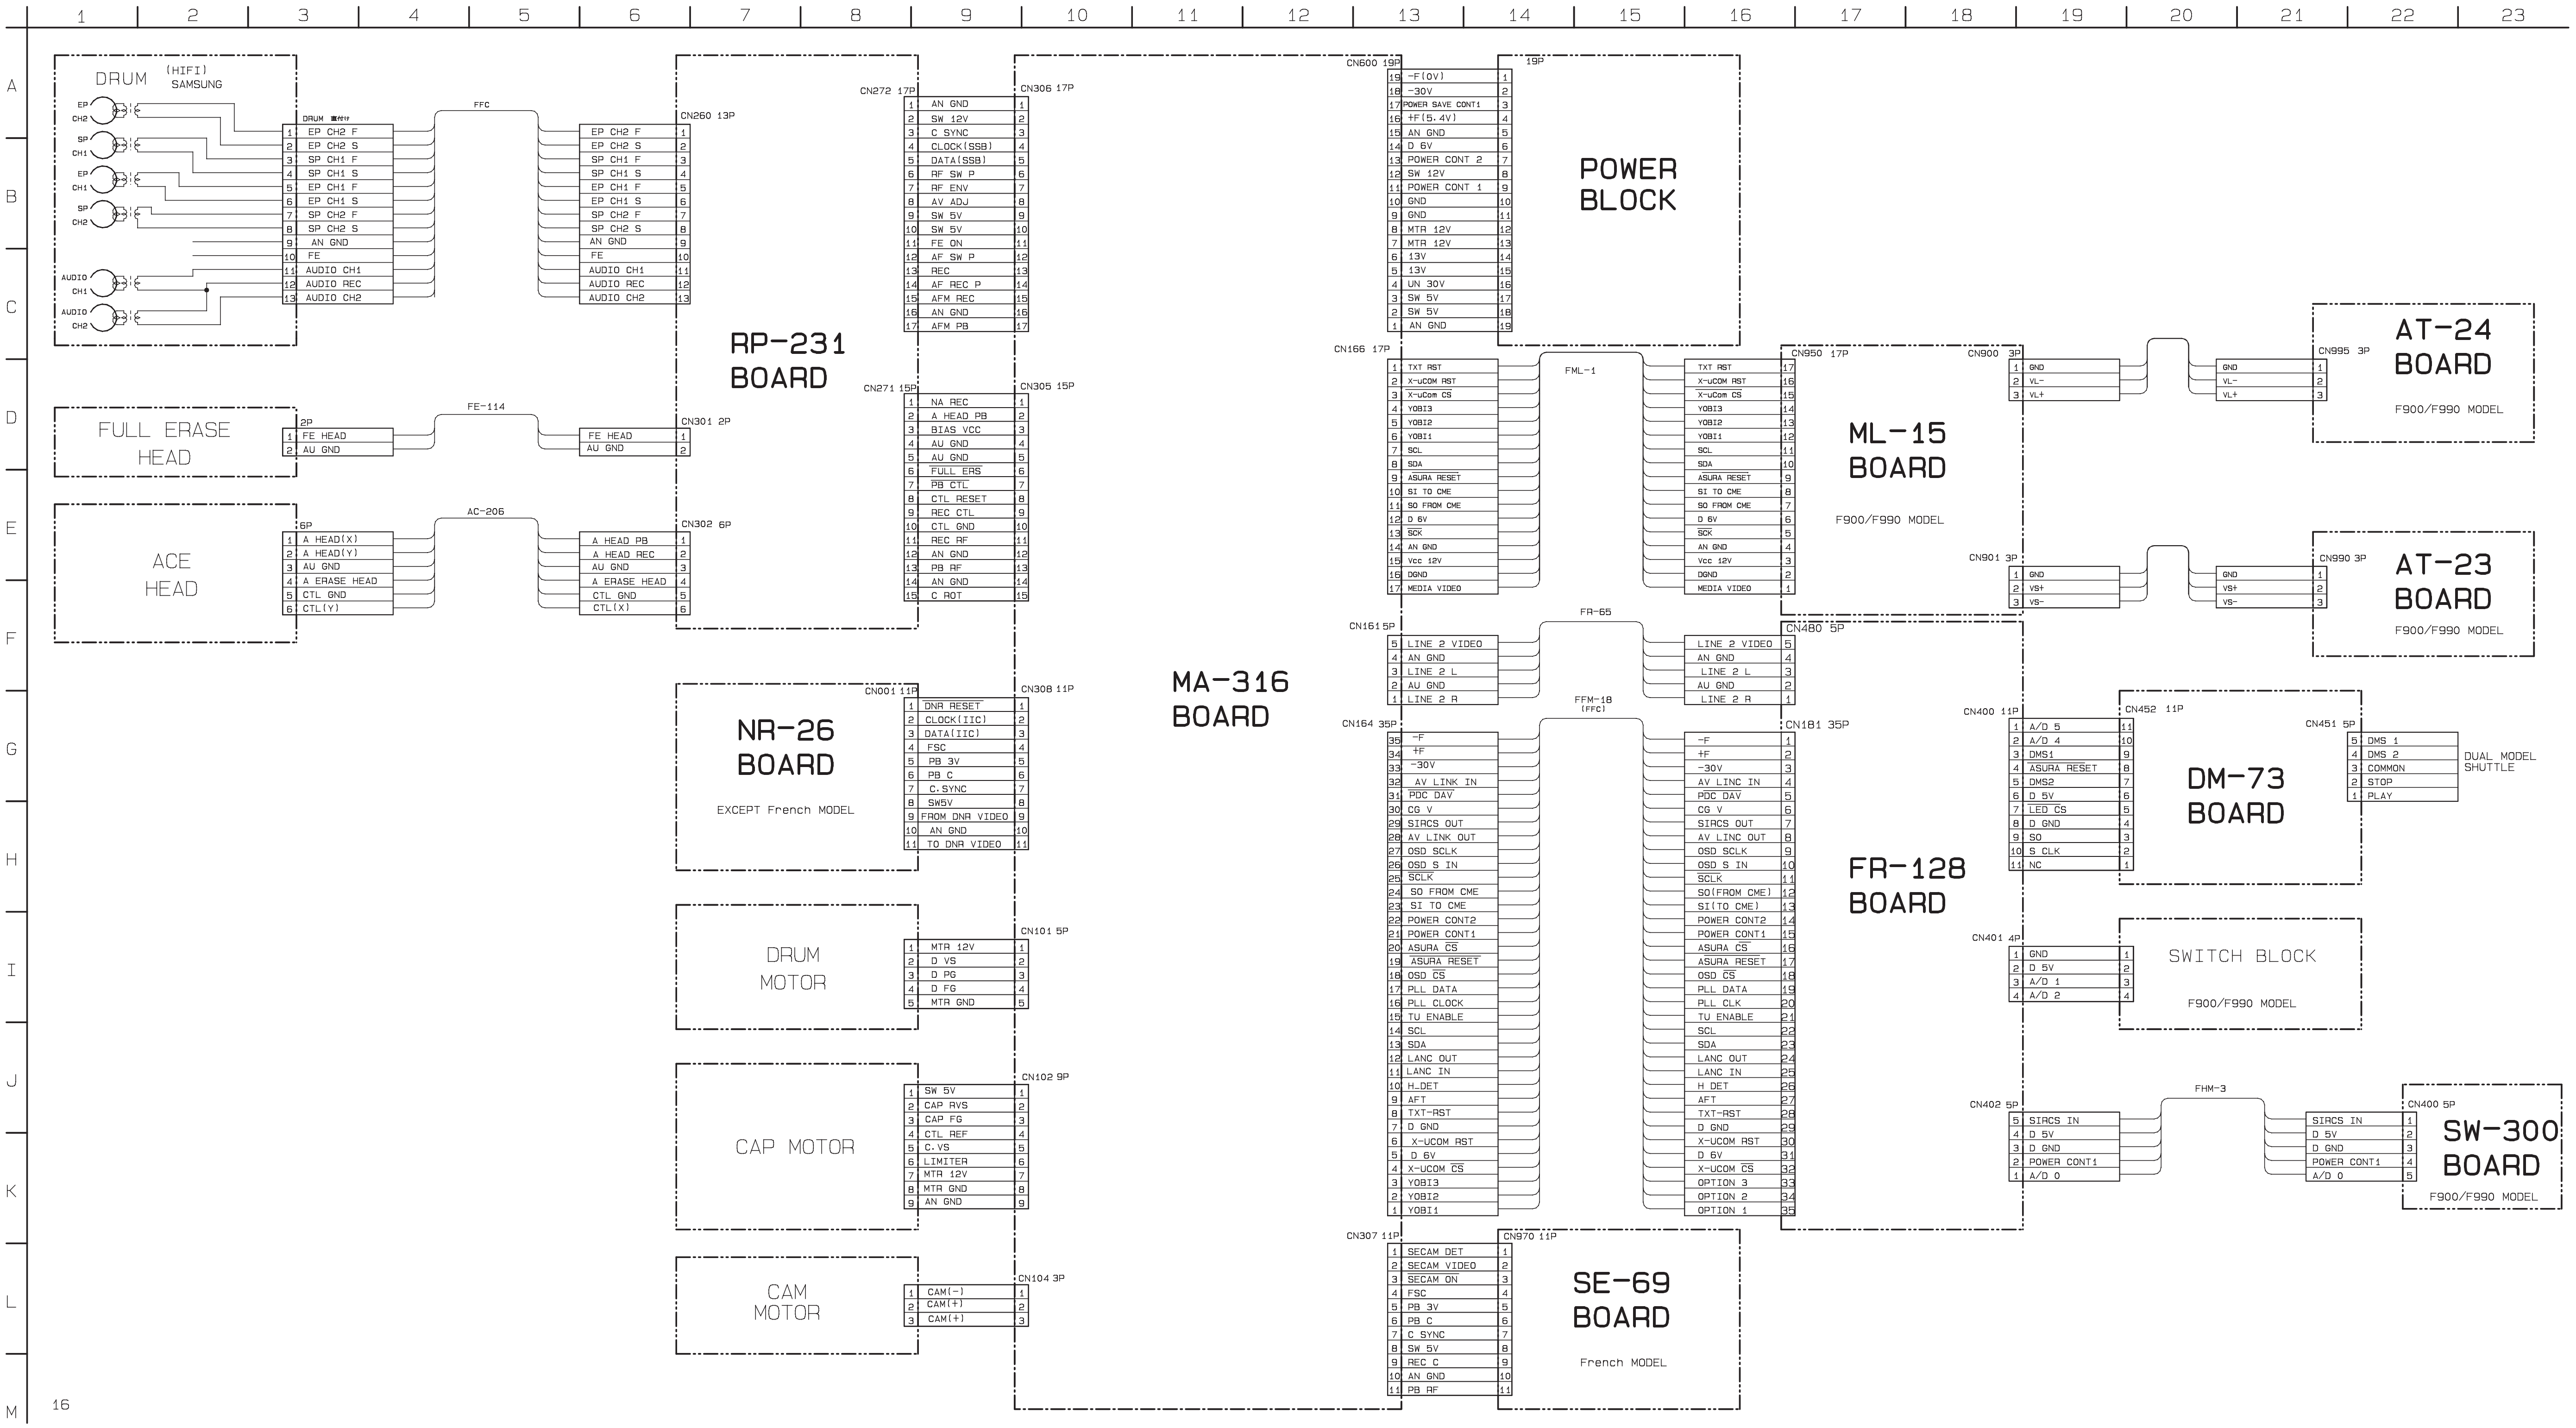

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

RP-231 (REC/PB AMP) PRINTED WIRING BOARD

— Ref. No.: RP-231 Board; 1,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

RP-231 BOARD (CONDUCTOR SIDE)

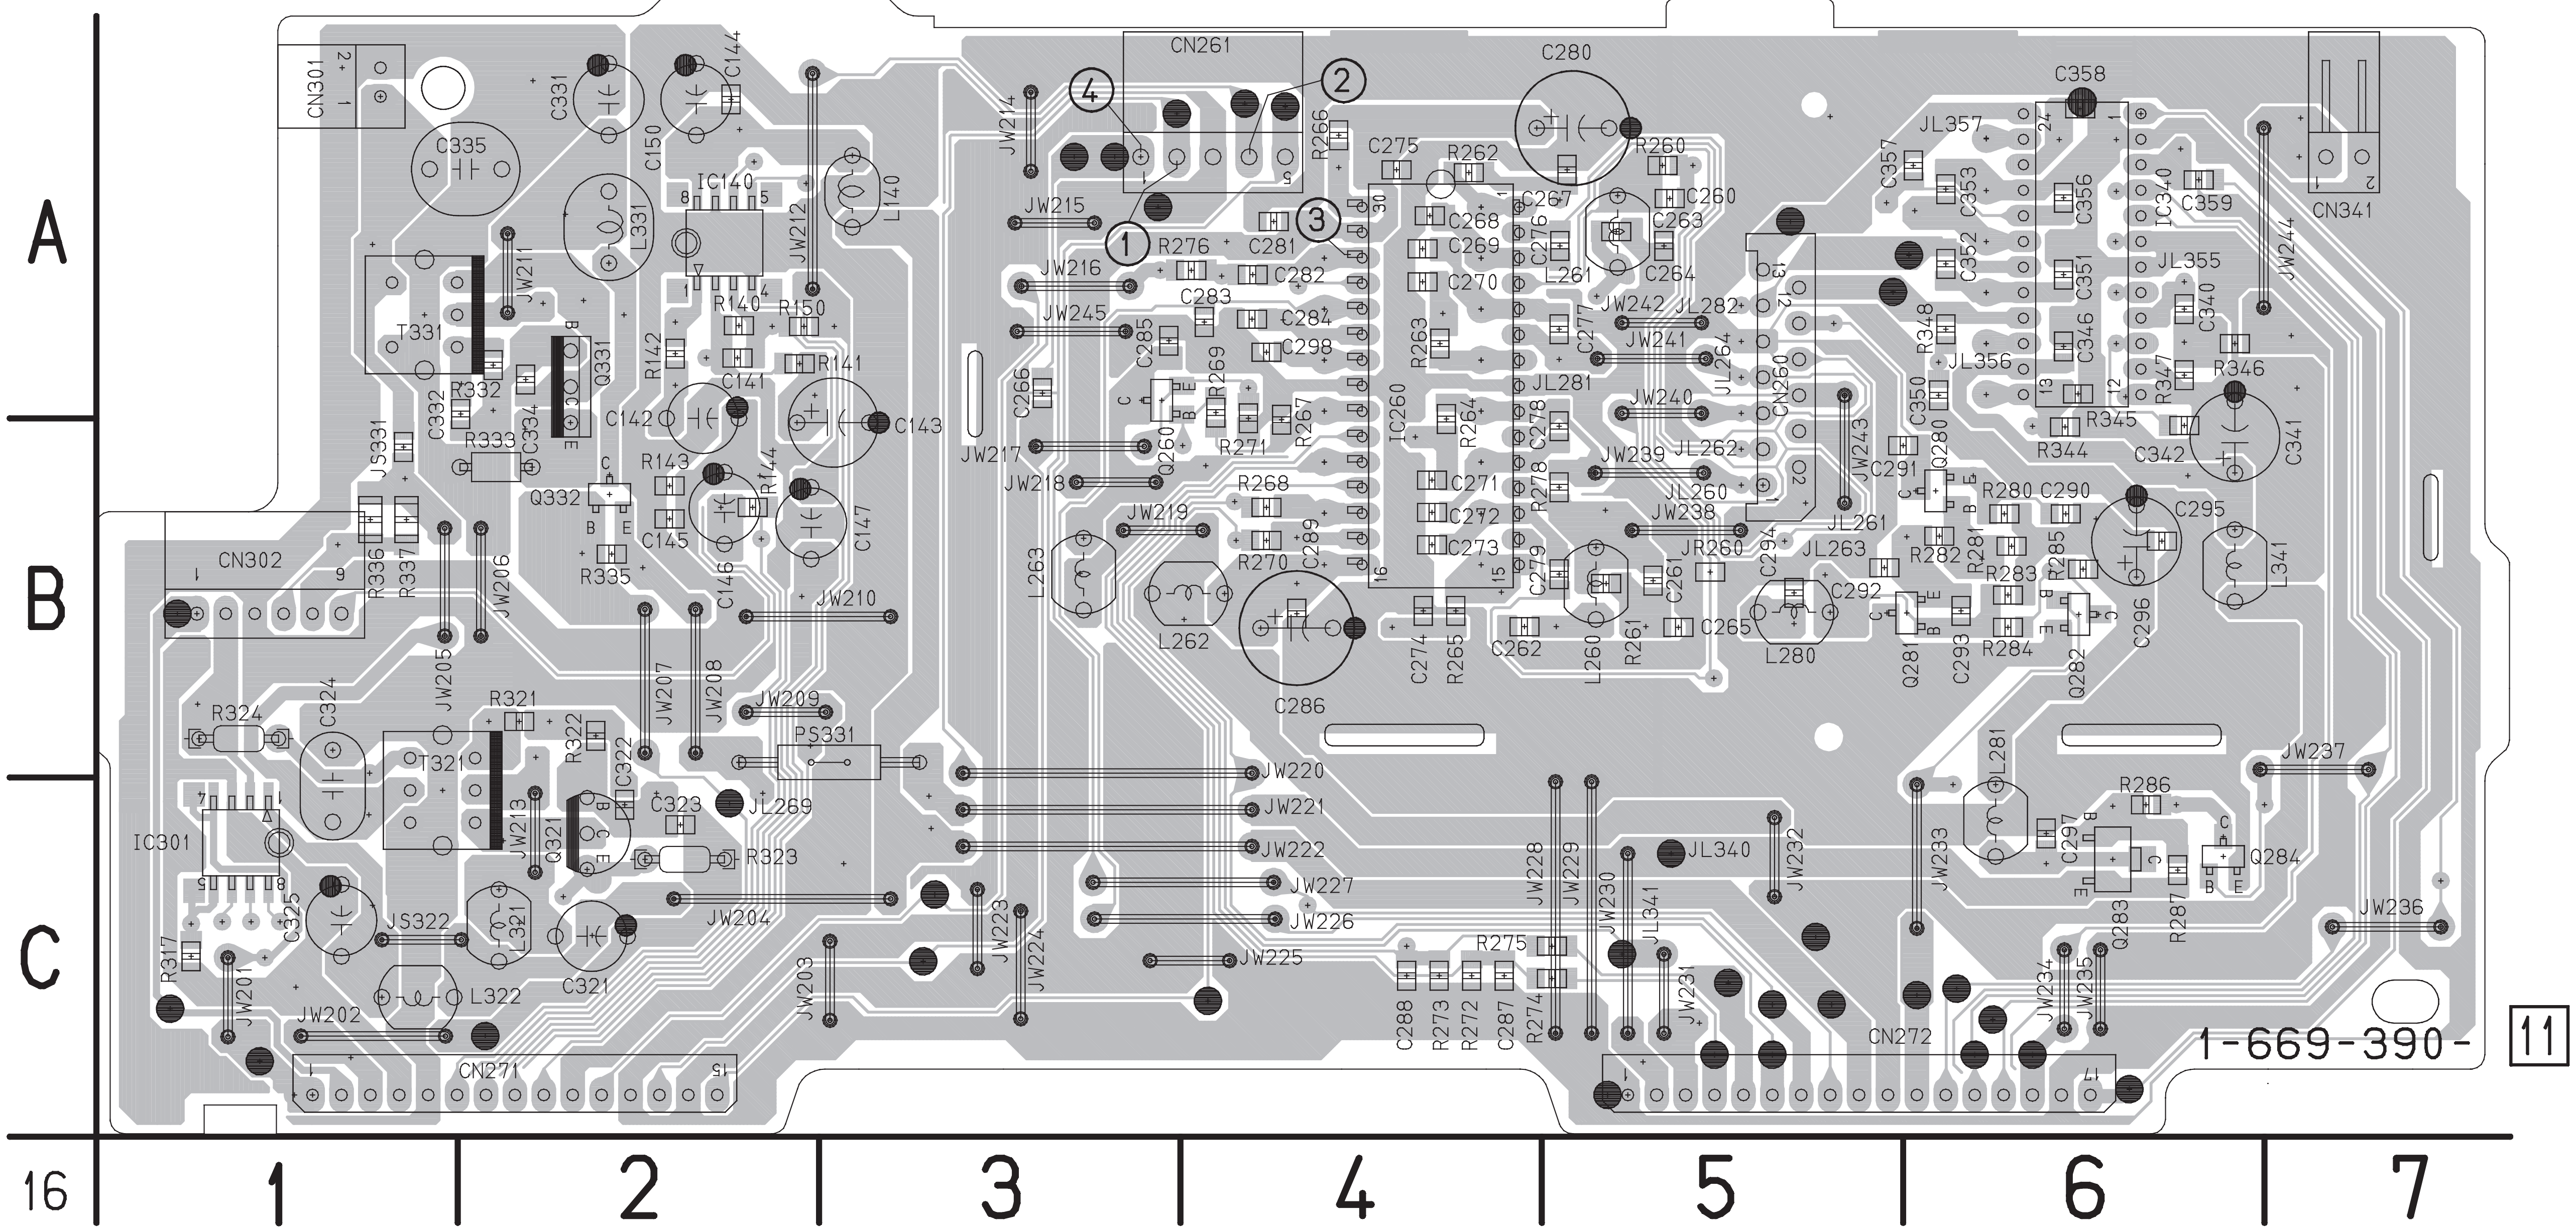

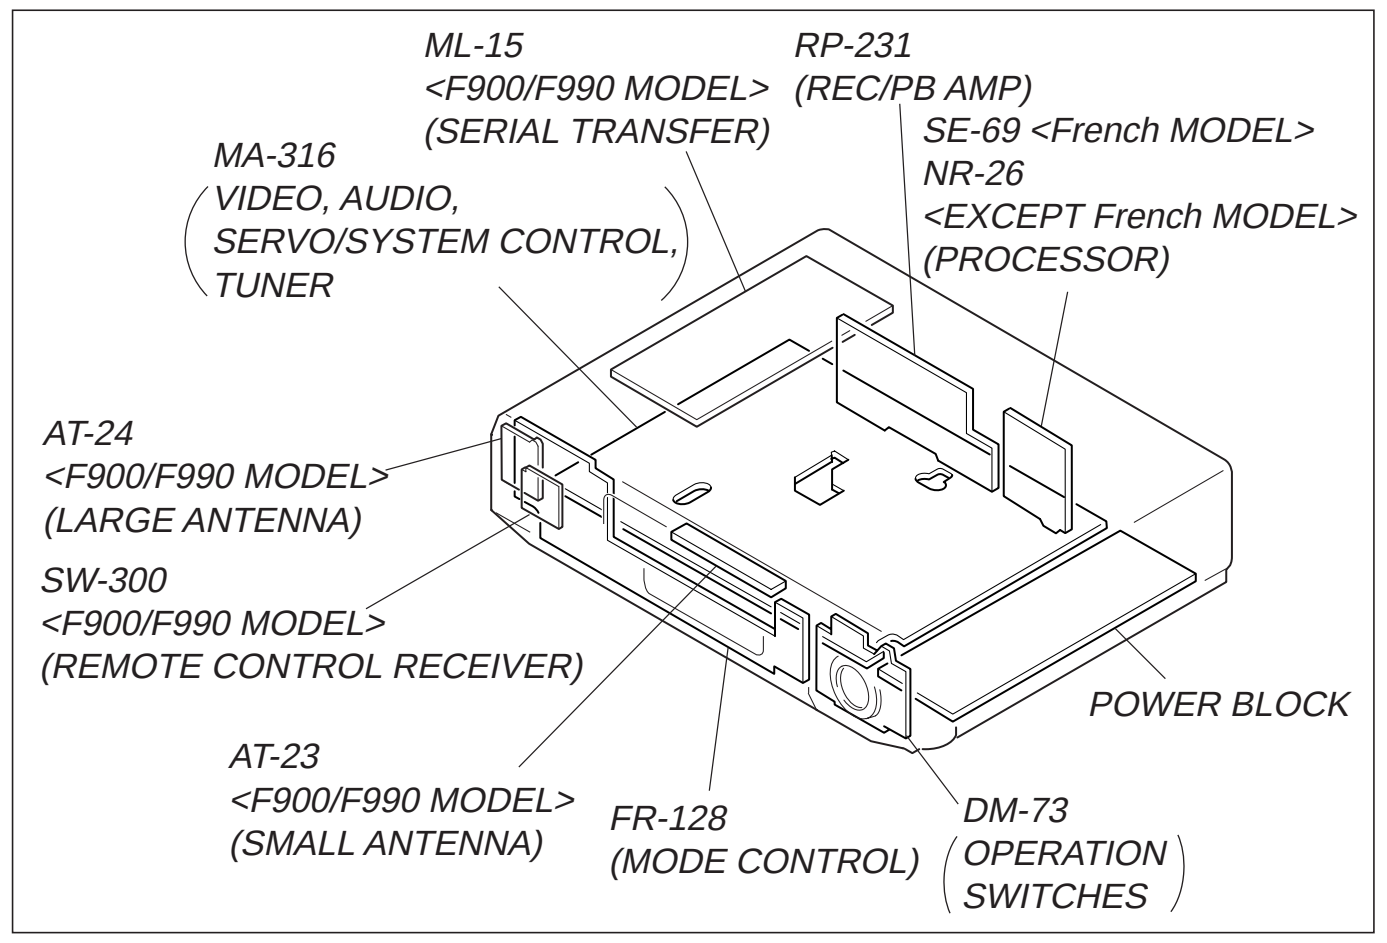

RP-231 BOARD

CN260	A-5	IC260	A-4
CN261	A-4	IC301	C-1
CN271	C-2	IC340	A-6
CN272	C-6		
CN301	A-1	Q260	A-3
CN302	B-1	Q321	C-2
CN341	A-7	Q331	A-2
		Q332	B-2
IC140	A-2		

RP-231 BOARD

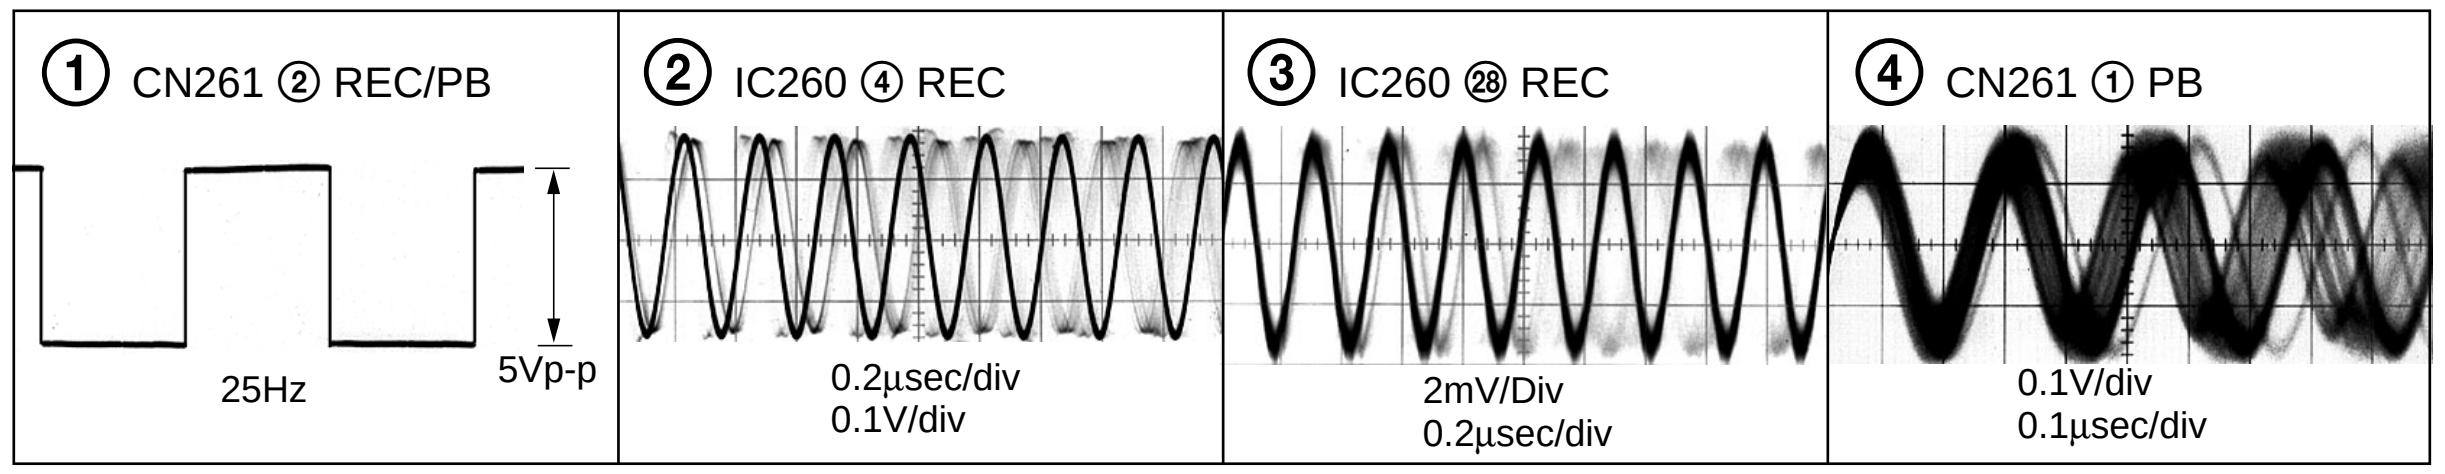

RP-231 (REC/PB AMP) SCHEMATIC DIAGRAM

— Ref. No.: RP-231 Board; 1,000 Series —

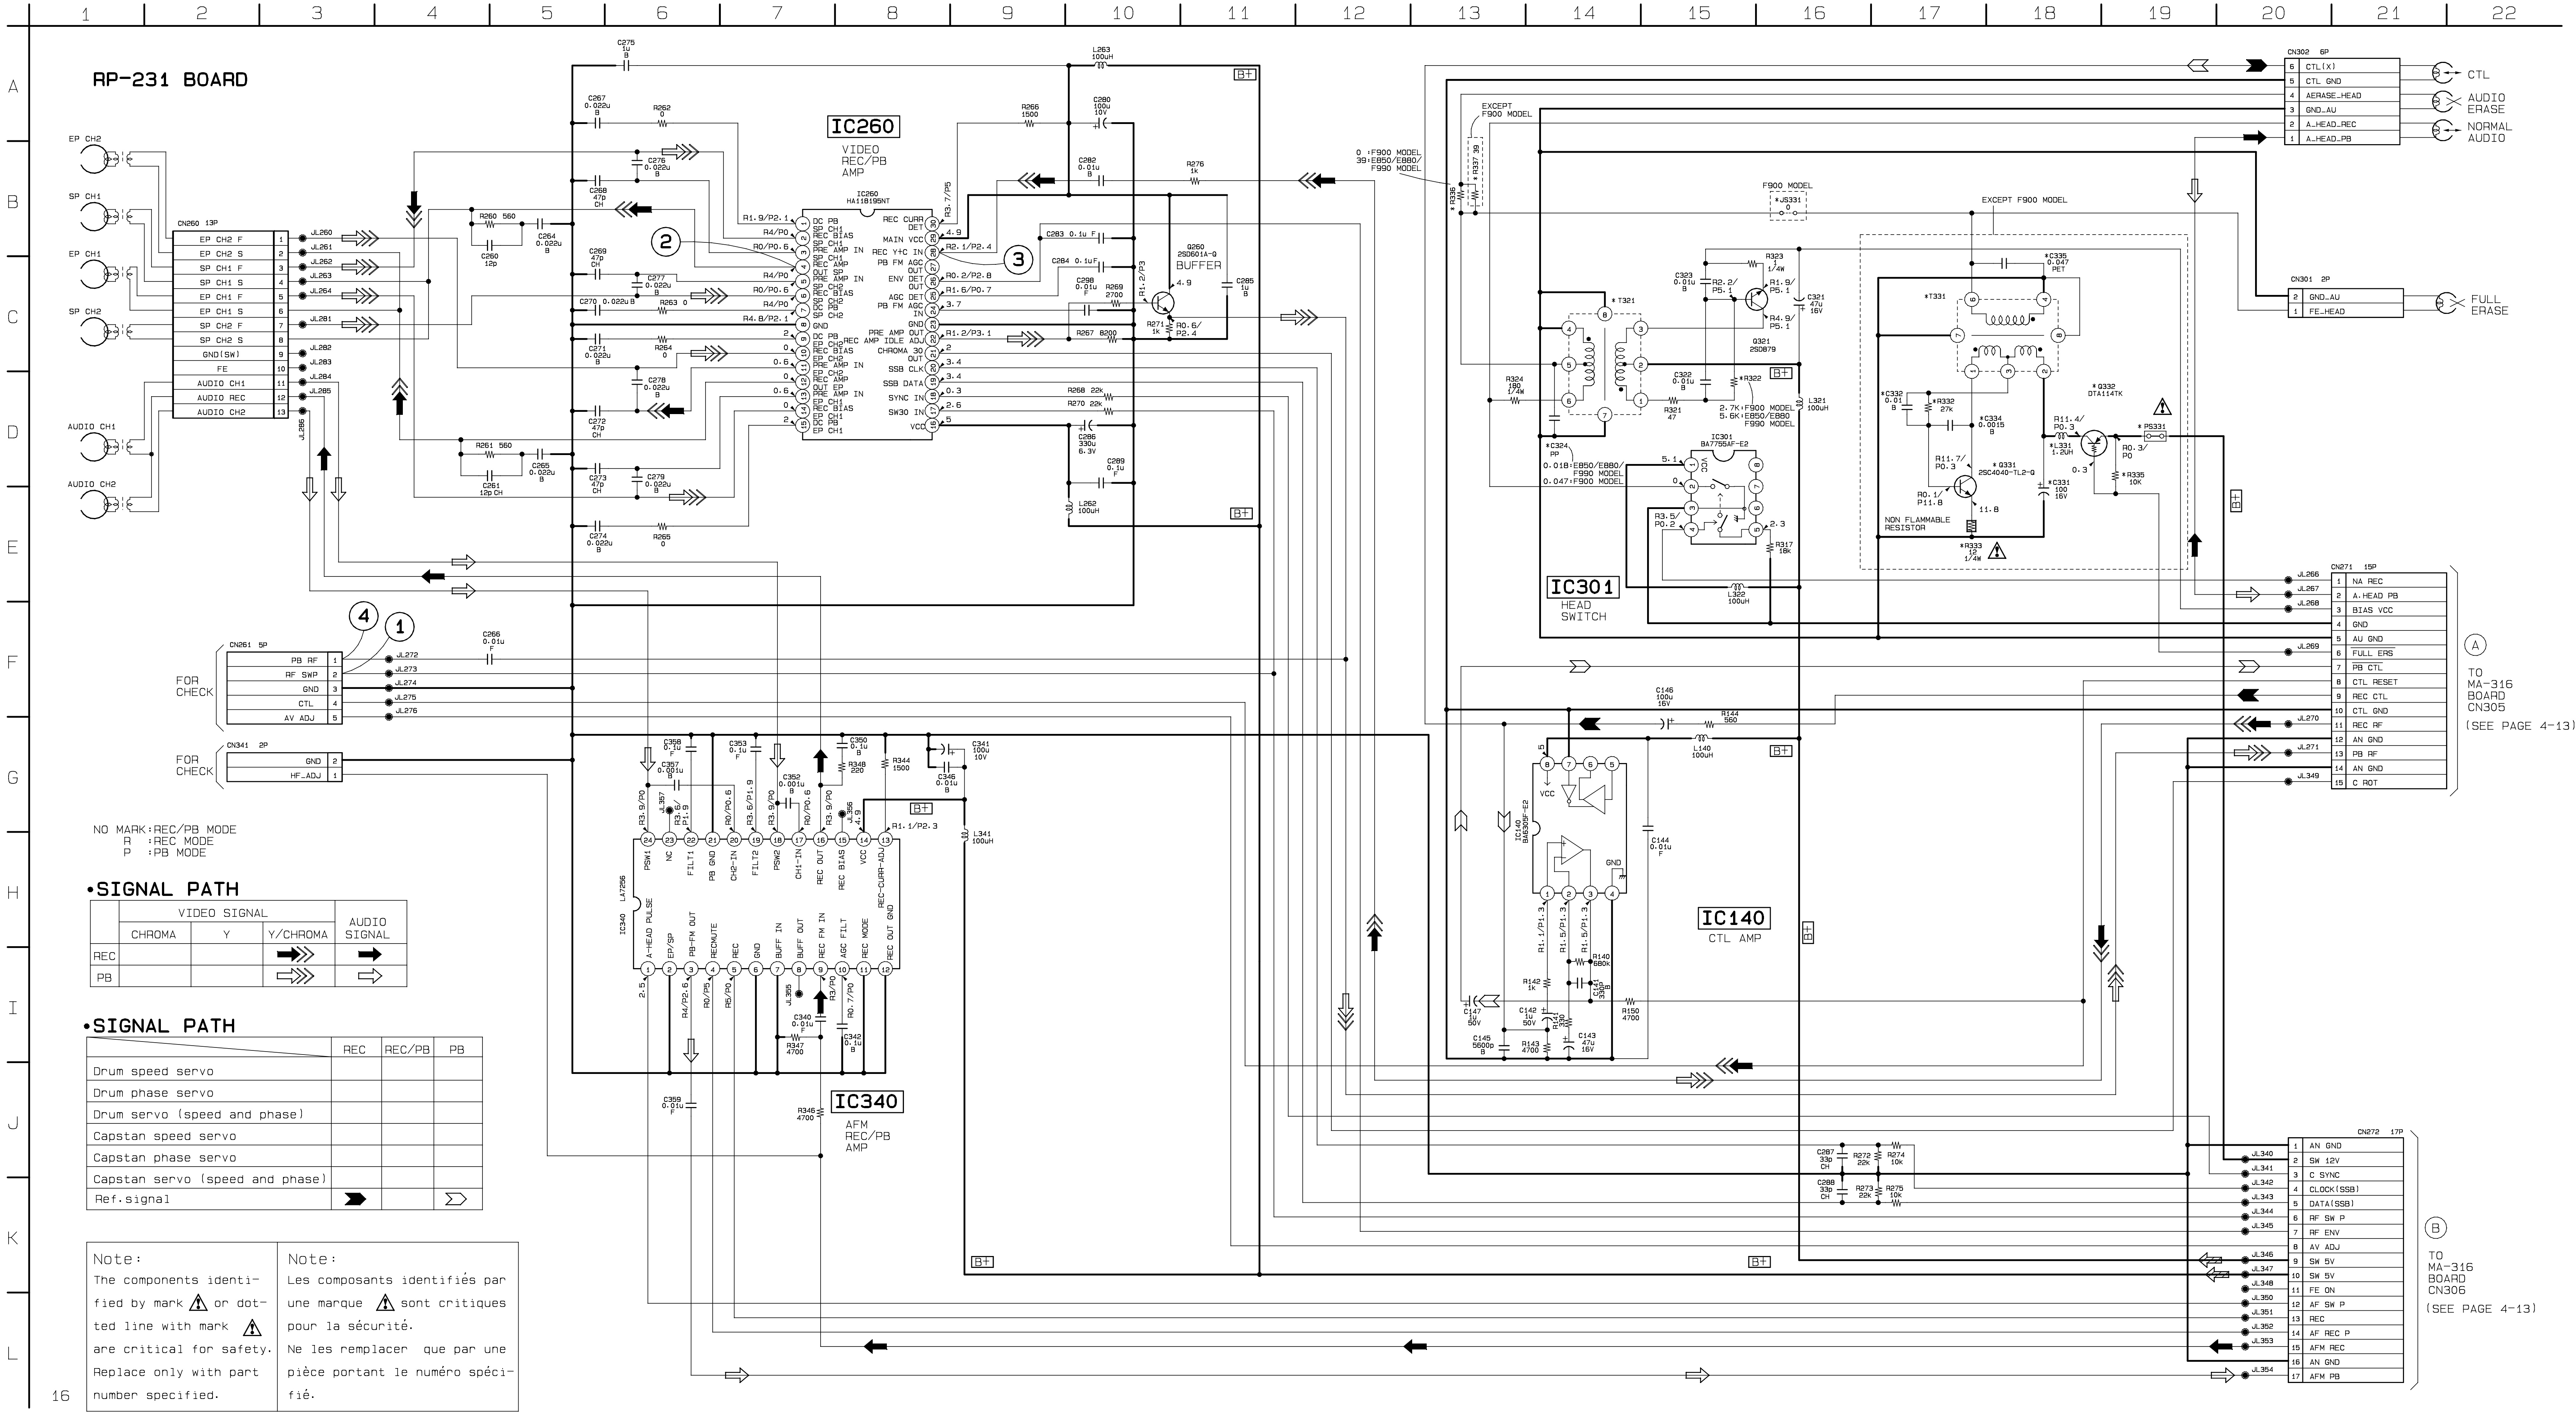

•SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡	➡
PB			⇨	⇨

•SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)			
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)			
Ref.signal	➡		⇨

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

16

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS. (In addition to this, the necessary note is printed in each block.)

- **For printed wiring boards.**
- ▬ : Pattern from the side which enables seeing.
- + : Through hole.

Caution :

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Pattern face side: (Component Side)	parts on the parts face side seen from the parts face are indicated.

- **For schematic diagrams.**
- Caution when replacing chip parts. New parts must be attached after removal of chip. Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistor are in ohms, 1/4W unless otherwise noted. Chip resistor are 1/10W unless otherwise noted. kΩ: 1000Ω, MΩ, : 1000kΩ.
- All capacitors are in µF unless otherwise noted. pF : µµF. 50V or less are not indicated except for electrolytics and tantalums.
- ▭ : panel designation.
- △ : internal component.
- ▬ : B+ Line.
- ▬▬▬ : B– Line.
- ⇨ : IN/OUT direction of (+,–) B LINE.
- Circled numbers refer to waveforms.
- Readings are taken with a PAL color-bar signal input.
- Voltage are dc between ground and measurement points.
- Readings are taken with a digital multimeter (DC10MΩ).
- Voltage variations may be noted due to normal production tolerances.

When indicating parts by reference number, please include the board name.

MA-316 (VIDEO, SERVO/SYSTEM CONTROL, AUDIO, TUNER) PRINTED WIRING BOARD

— Ref. No.: MA-316 Board; 2,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

MA-316 BOARD

CN101	D-7	D542	B-7	PH101	H-8
CN102	F-2	D543	B-7		
CN104	J-4	D544	B-7	Q100	G-10
CN161	E-12	D570	A-9	Q101	G-1
CN164	J-13	D571	B-8	Q102	J-2
CN165	J-11	D572	B-8	Q141	E-6
CN305	C-5	D573	B-9	Q201	C-4
CN306	C-8	D574	B-9	Q202	C-4
CN500	A-5	D575	B-8	Q208	C-3
CN570	A-8	D576	B-8	Q209	D-2
CN600	H-1	D577	B-8	Q210	E-2
		D578	B-8	Q211	F-3
D102	H-6	D579	B-7	Q301	C-5
D107	H-7	D580	B-2	Q501	B-5
D108	I-2	D610	F-1	Q502	B-6
D131	H-5	D660	F-9	Q510	B-3
D132	F-7	D661	F-8	Q533	B-8
D160	J-9	D663	F-8	Q534	B-9
D500	B-5	D702	C-13	Q540	B-6
D501	B-5	D750	B-13	Q611	F-1
D502	B-6	D800	B-11	Q612	F-1
D503	B-6			Q613	J-11
D504	B-4	IC100	F-11	Q660	E-9
D505	B-4	IC141	E-6	Q661	E-9
D506	B-5	IC160	H-9	Q662	D-9
D507	B-5	IC161	H-5	Q663	D-9
D508	B-6	IC201	D-4	Q664	F-9
D510	B-4	IC202	E-2	Q703	F-13
D511	B-4	IC360	D-11	Q751	A-12
D512	B-4	IC530	C-12	Q752	A-12
D513	B-4	IC540	F-4	Q800	B-11
D514	B-4	IC660	E-9	Q801	B-11
D515	A-4	IC661	D-9	Q802	B-11
D516	A-4	IC820	E-13	Q803	B-11
D517	B-4	IC850	I-12	Q804	B-11
D518	B-4			Q820	D-13
D519	B-4	J500	A-2	Q821	D-12
D540	B-7			Q850	H-12
D541	B-7	PH100	I-4		

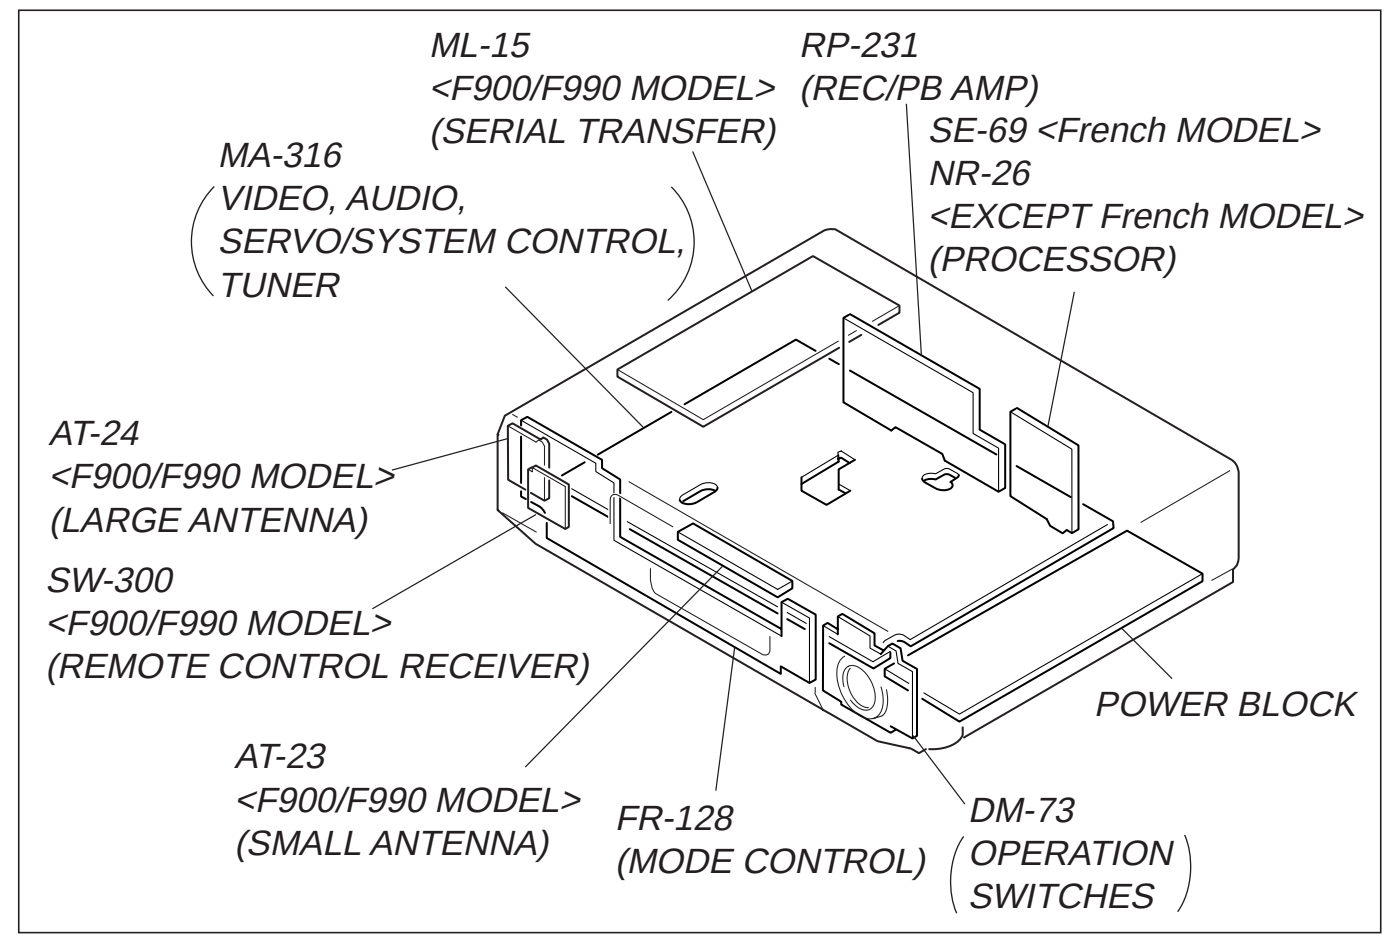

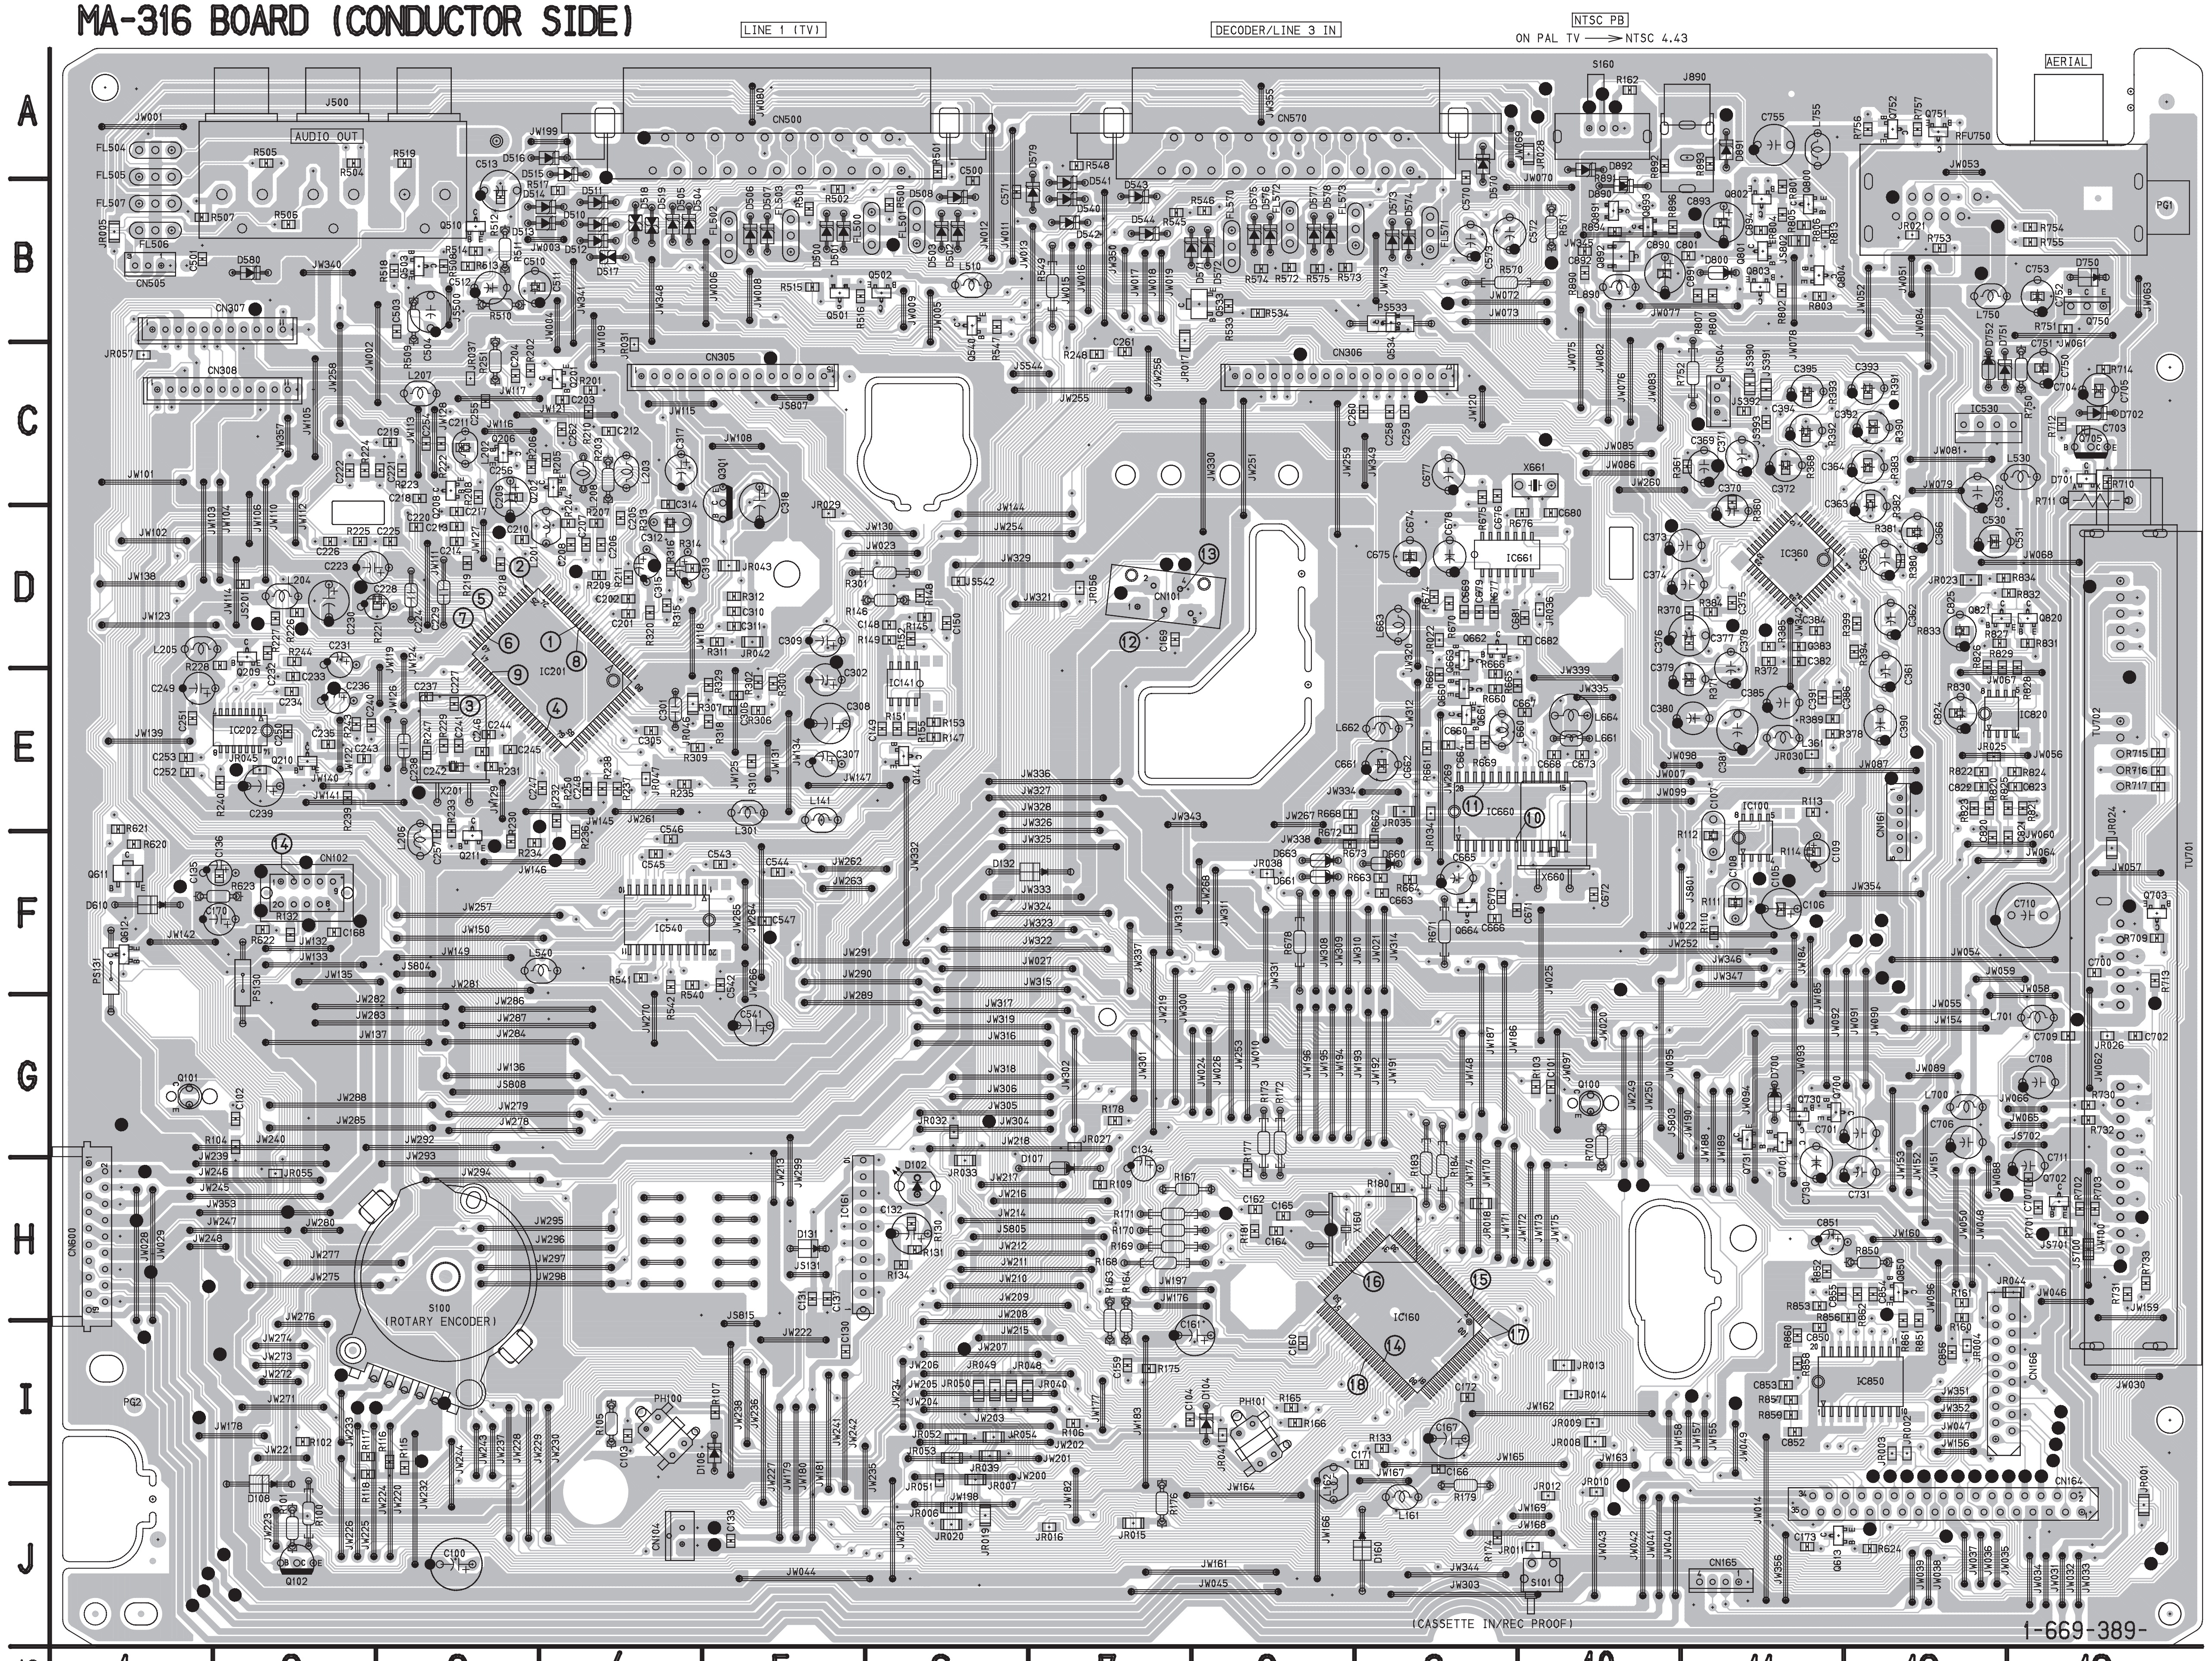

VIDEO, SERVO/SYSTEM CONTROL, AUDIO, TUNER
MA-316

MA-316 (VIDEO, NORMAL AUDIO) SCHEMATIC DIAGRAM

— Ref. No.: MA-316 Board; 2,000 Series —

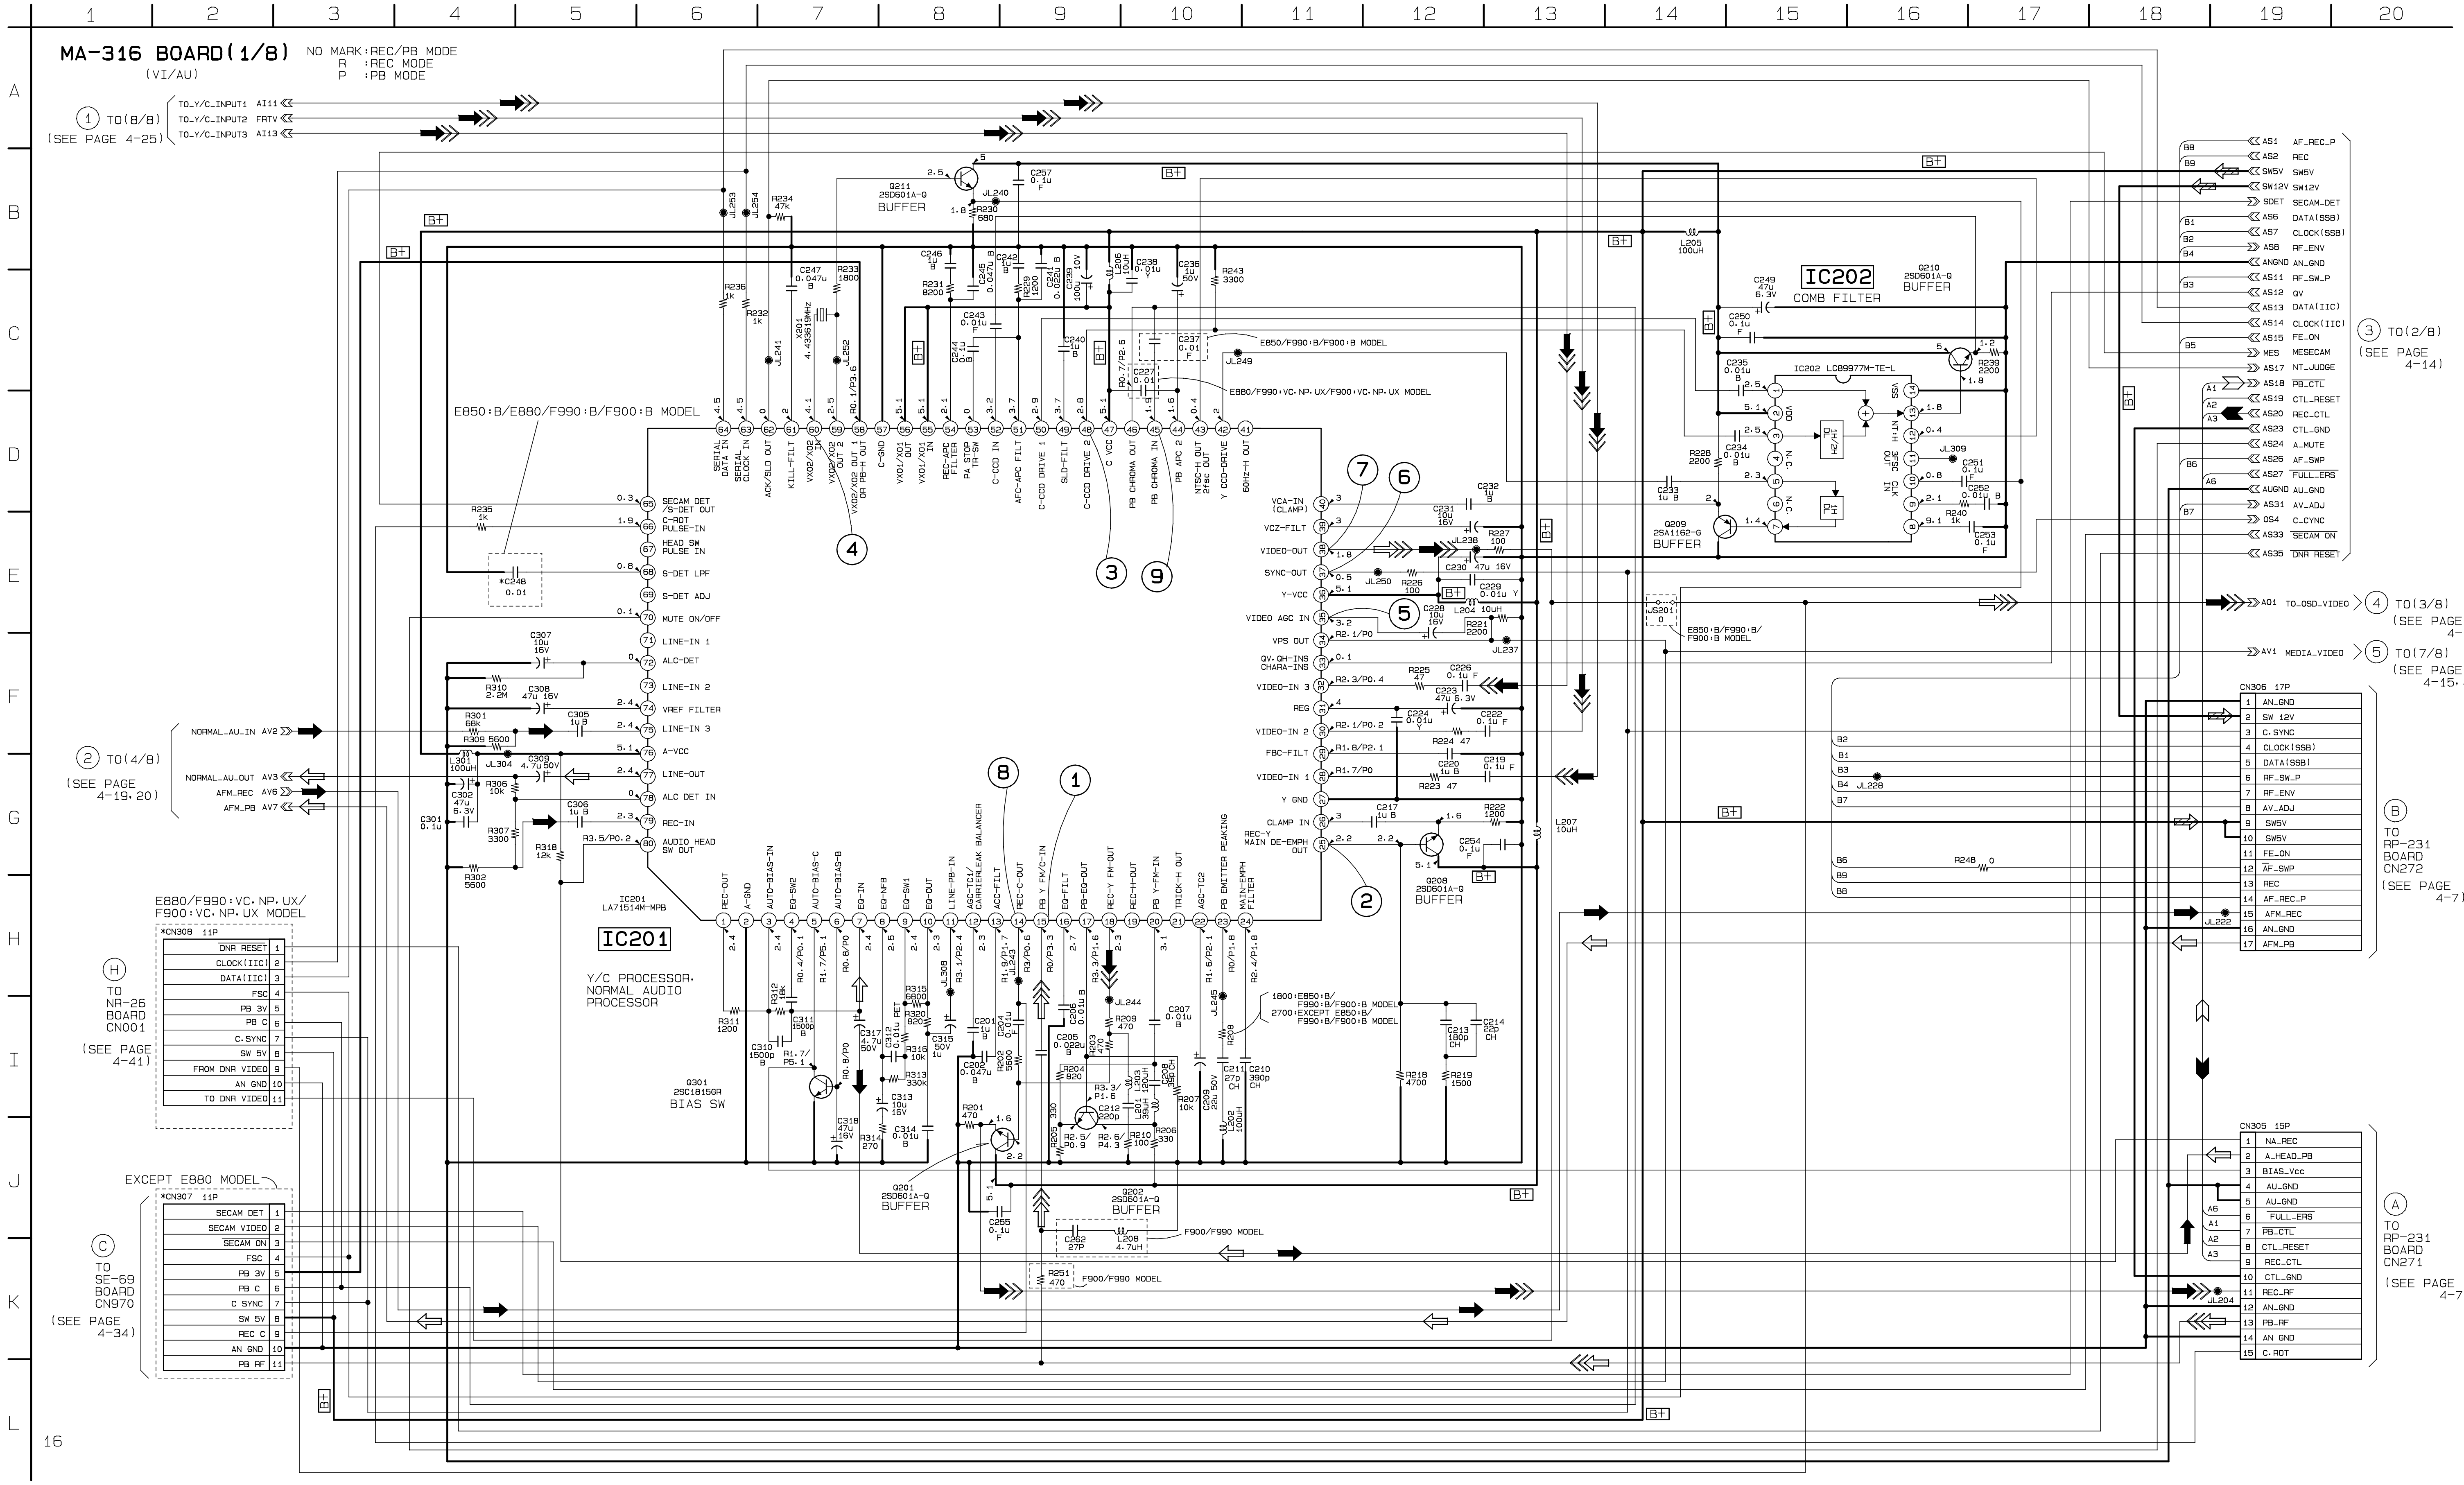

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡⟫	➡
PB			⇨⟫	⇨

	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)			
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)			
Ref.signal	➡		⇨

MA-316 BOARD (1/3)

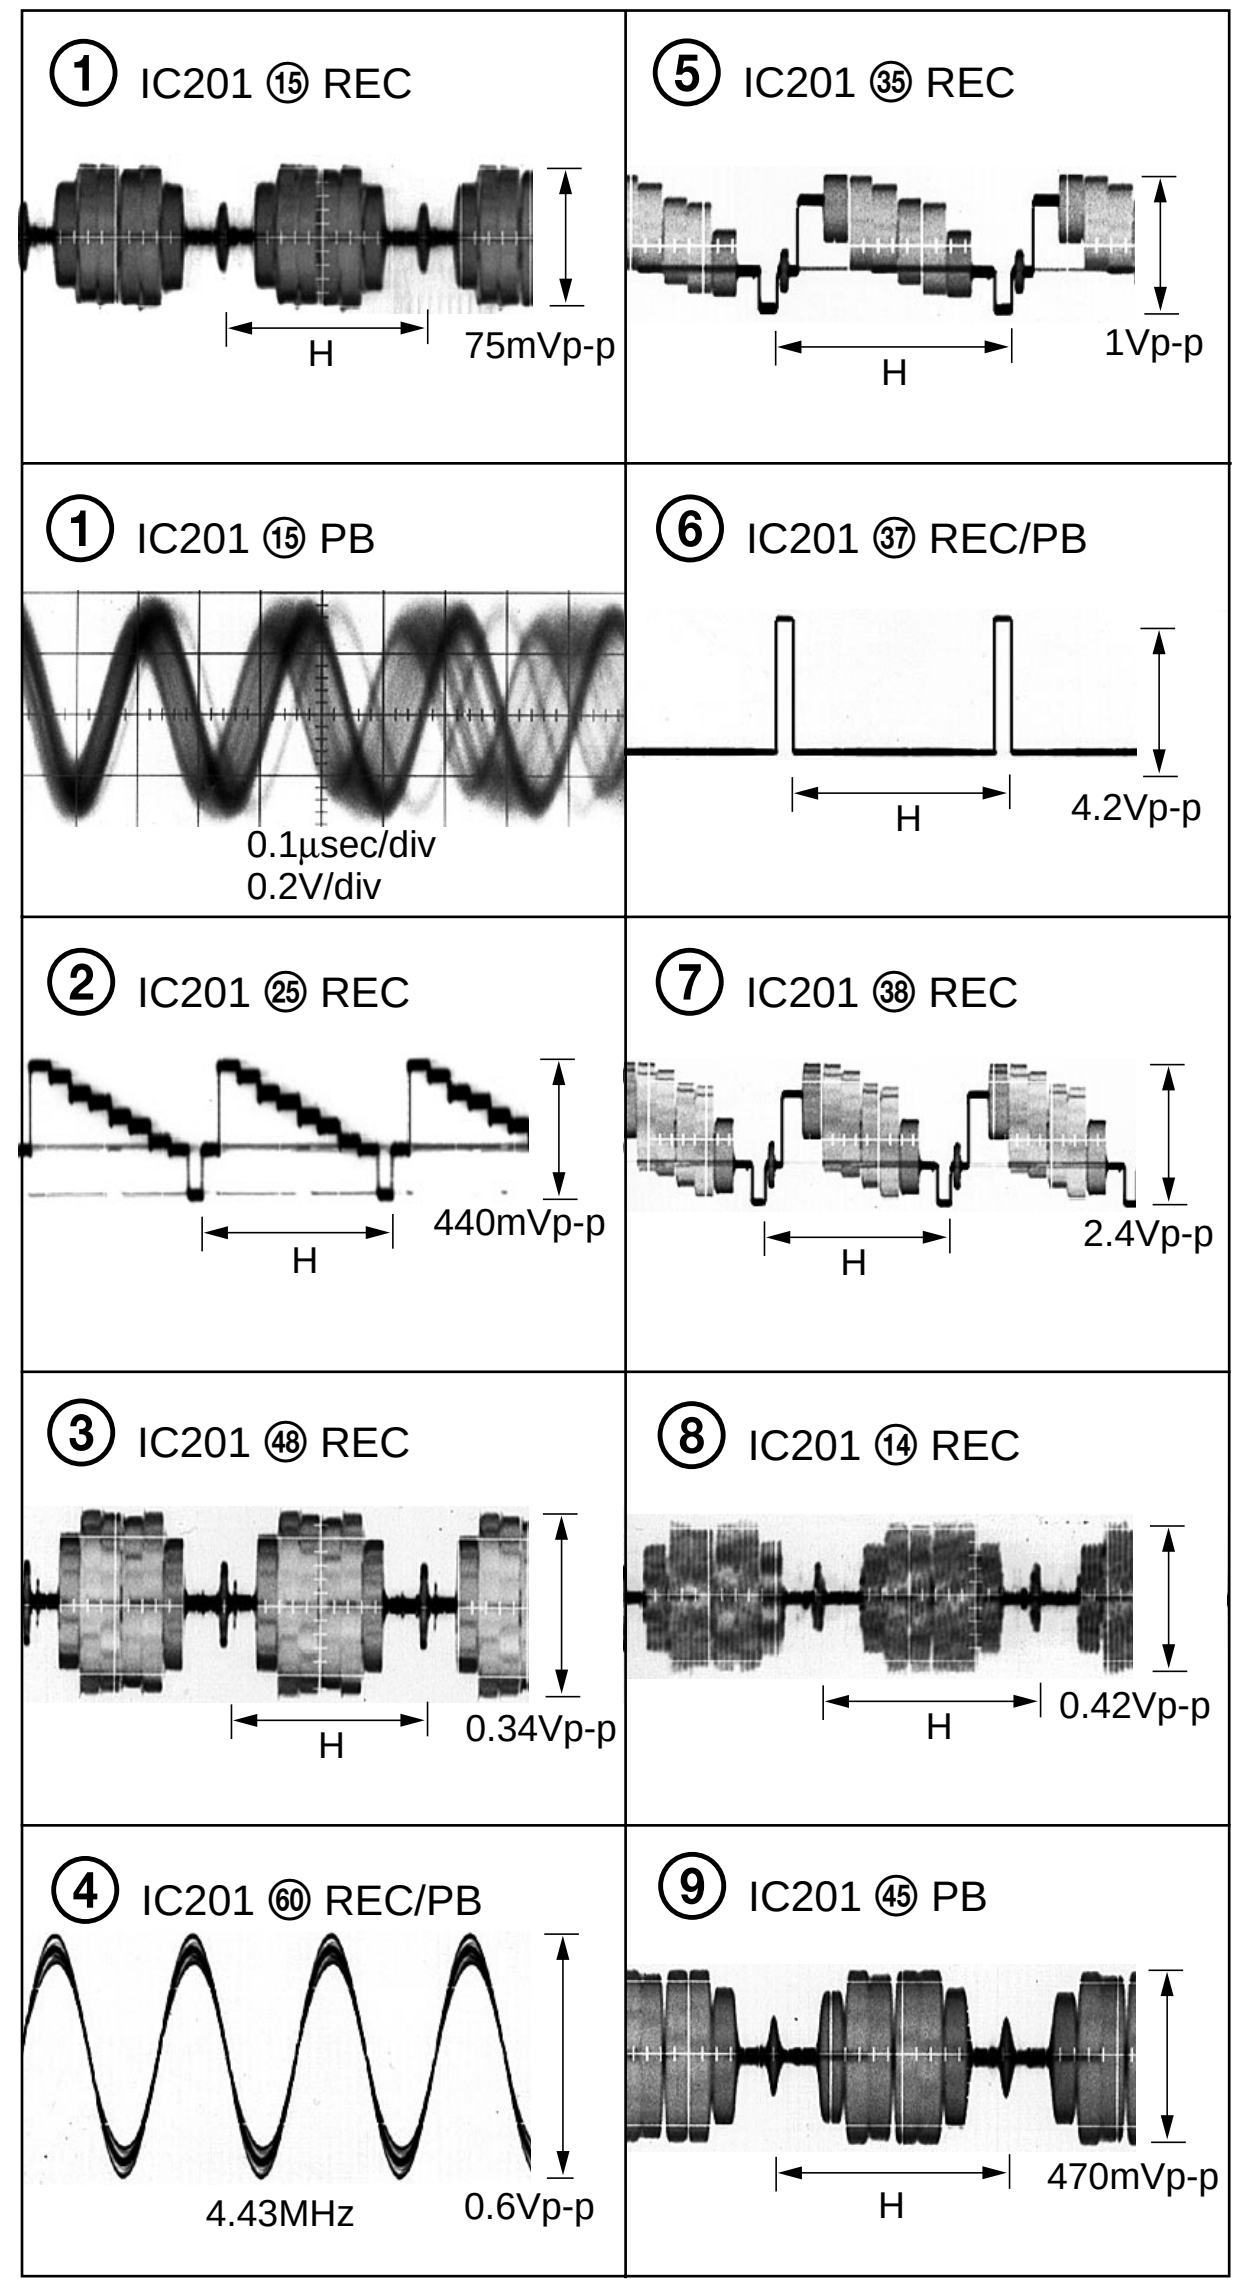

MA-316 (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM

• See page 4-9 for MA-316 BOARD printed wiring board.

— Ref. No.: MA-316 Board; 2,000 Series —

MA-316 BOARD (2/3)

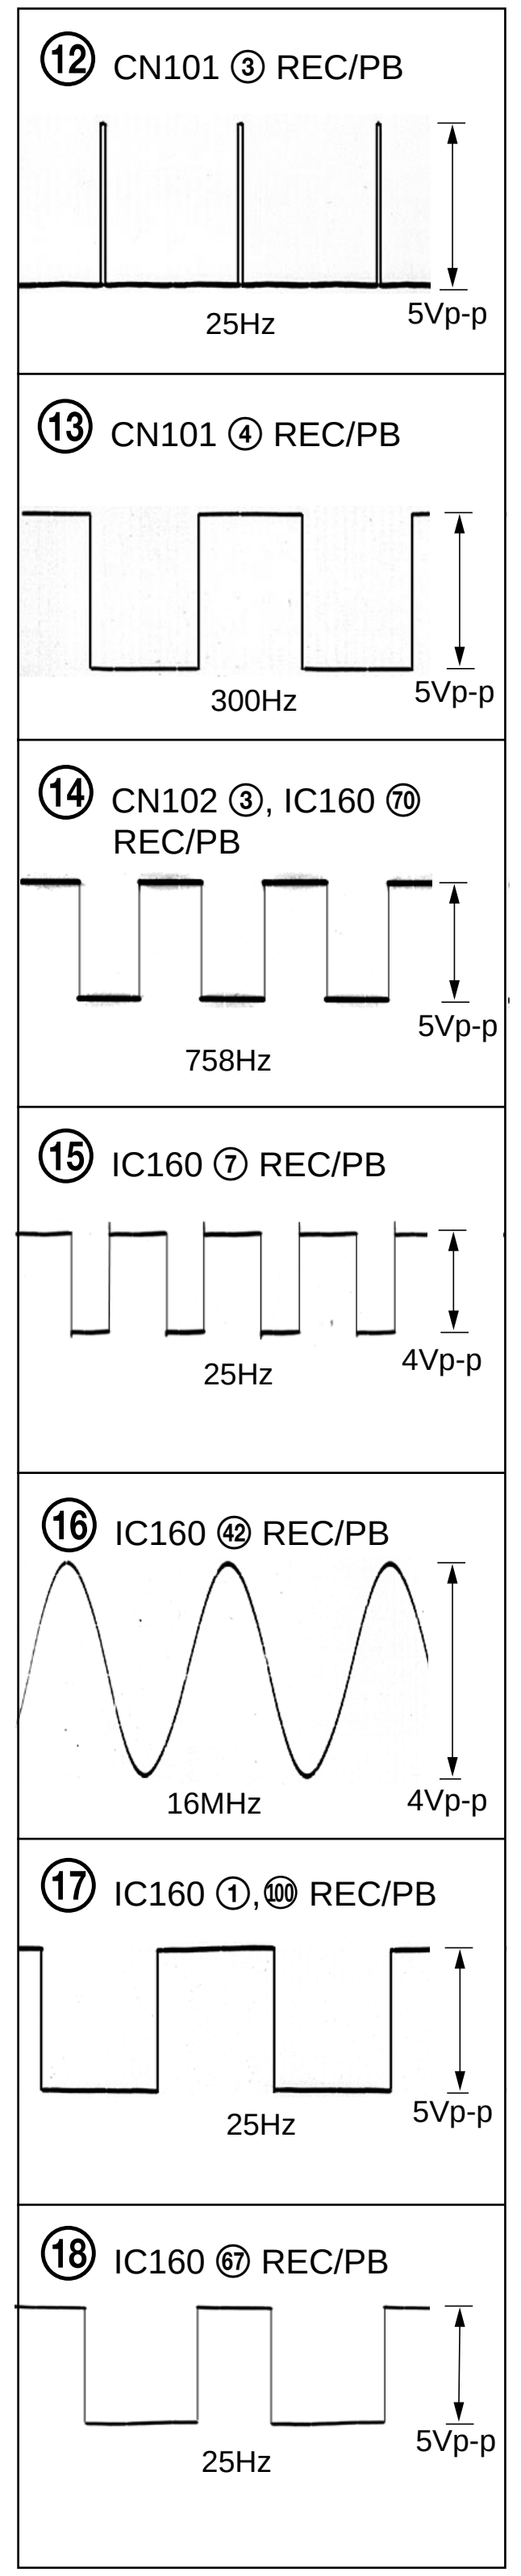

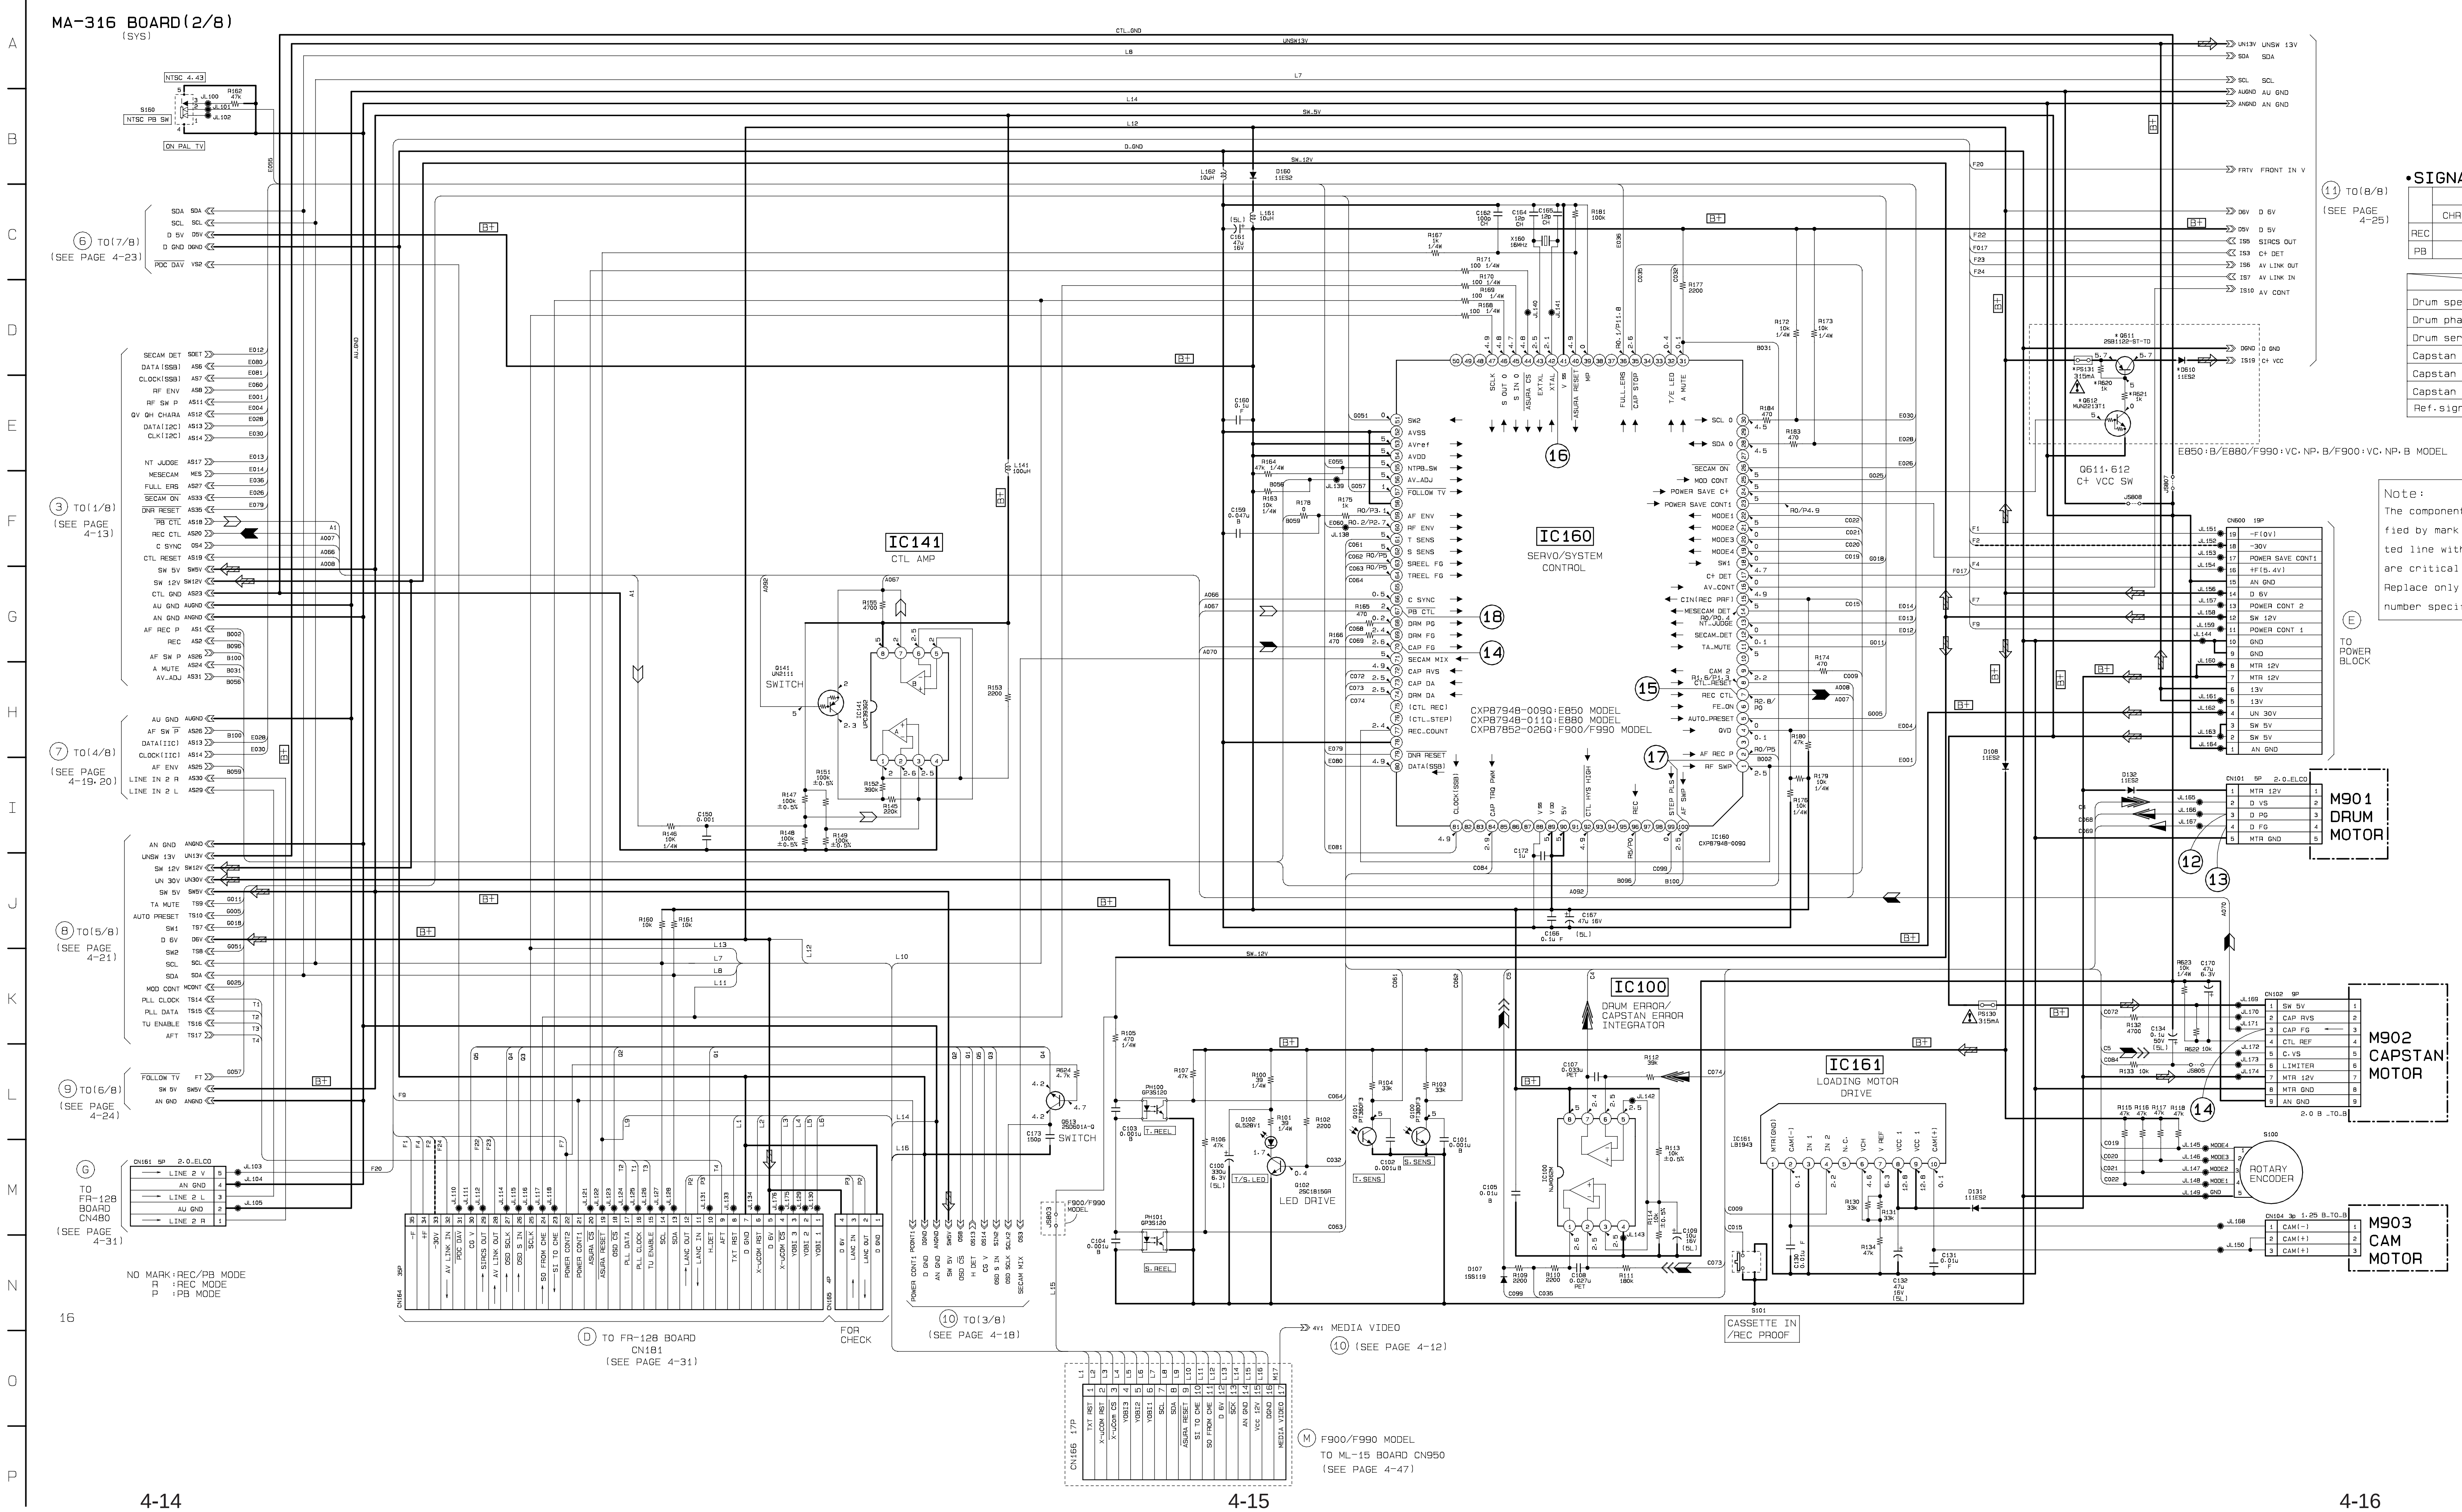

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				➡
PB				⇨

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶	
Drum servo (speed and phase)		▶	
Capstan speed servo		▶	
Capstan phase servo			
Capstan servo (speed and phase)		▶	
Ref.signal	▶		▷

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

MA-316 (ON SCREEN DISPLAY) SCHEMATIC DIAGRAM

— Ref. No.: MA-316 Board; 2,000 Series —

• See page 4-9 for MA-316 BOARD printed wiring board.

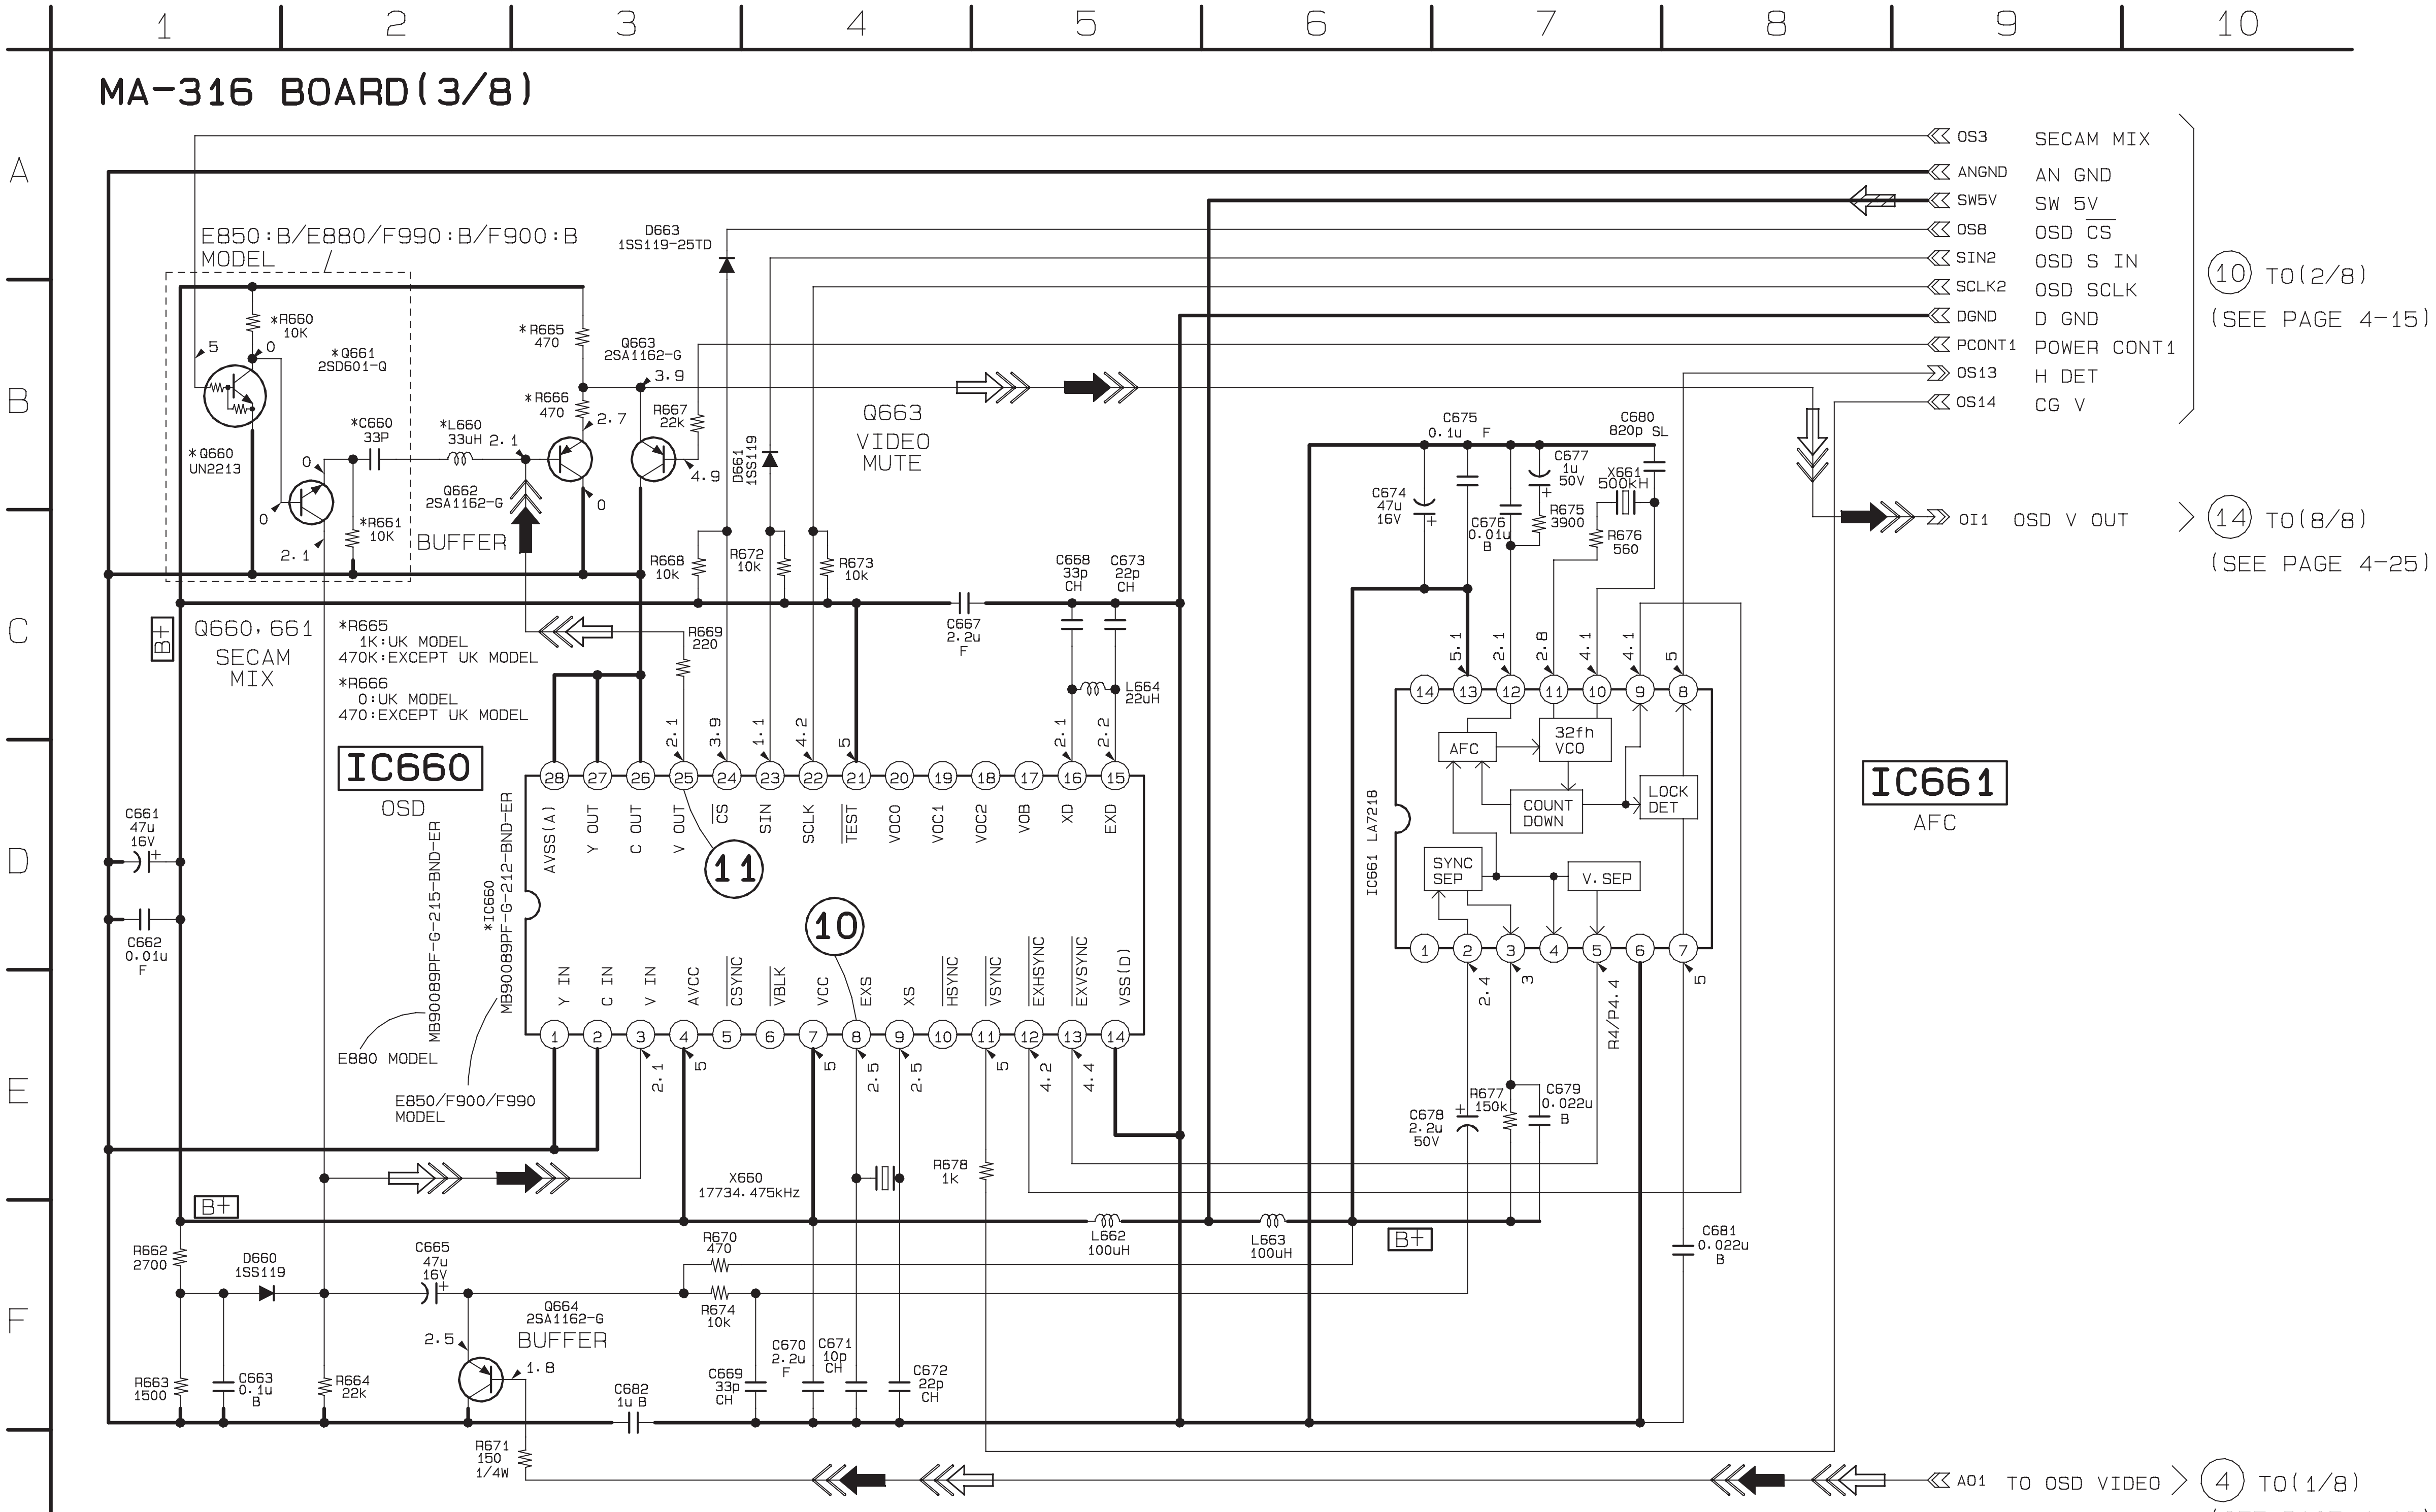

•SIGNAL PATH

NO MARK : REC/PB MODE
R : REC MODE
P : PB MODE

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡ (solid arrow)	
PB			⇨ (outline arrow)	

16

MA-316 BOARD (3/3)

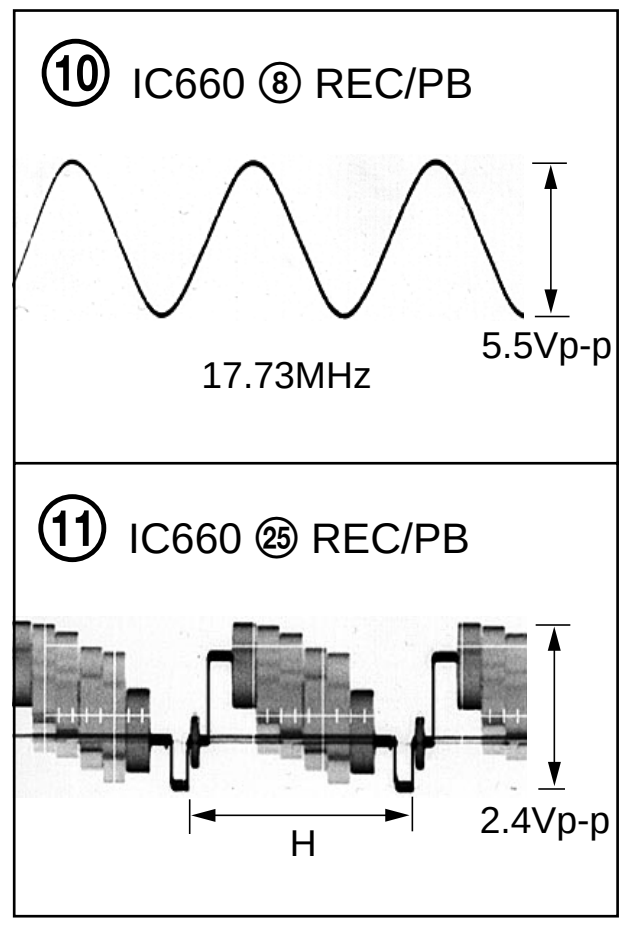

MA-316 (AFM AUDIO) SCHEMATIC DIAGRAM
— Ref. No.: MA-316 Board; 2,000 Series —

• See page 4-9 for MA-316 BOARD printed wiring board.

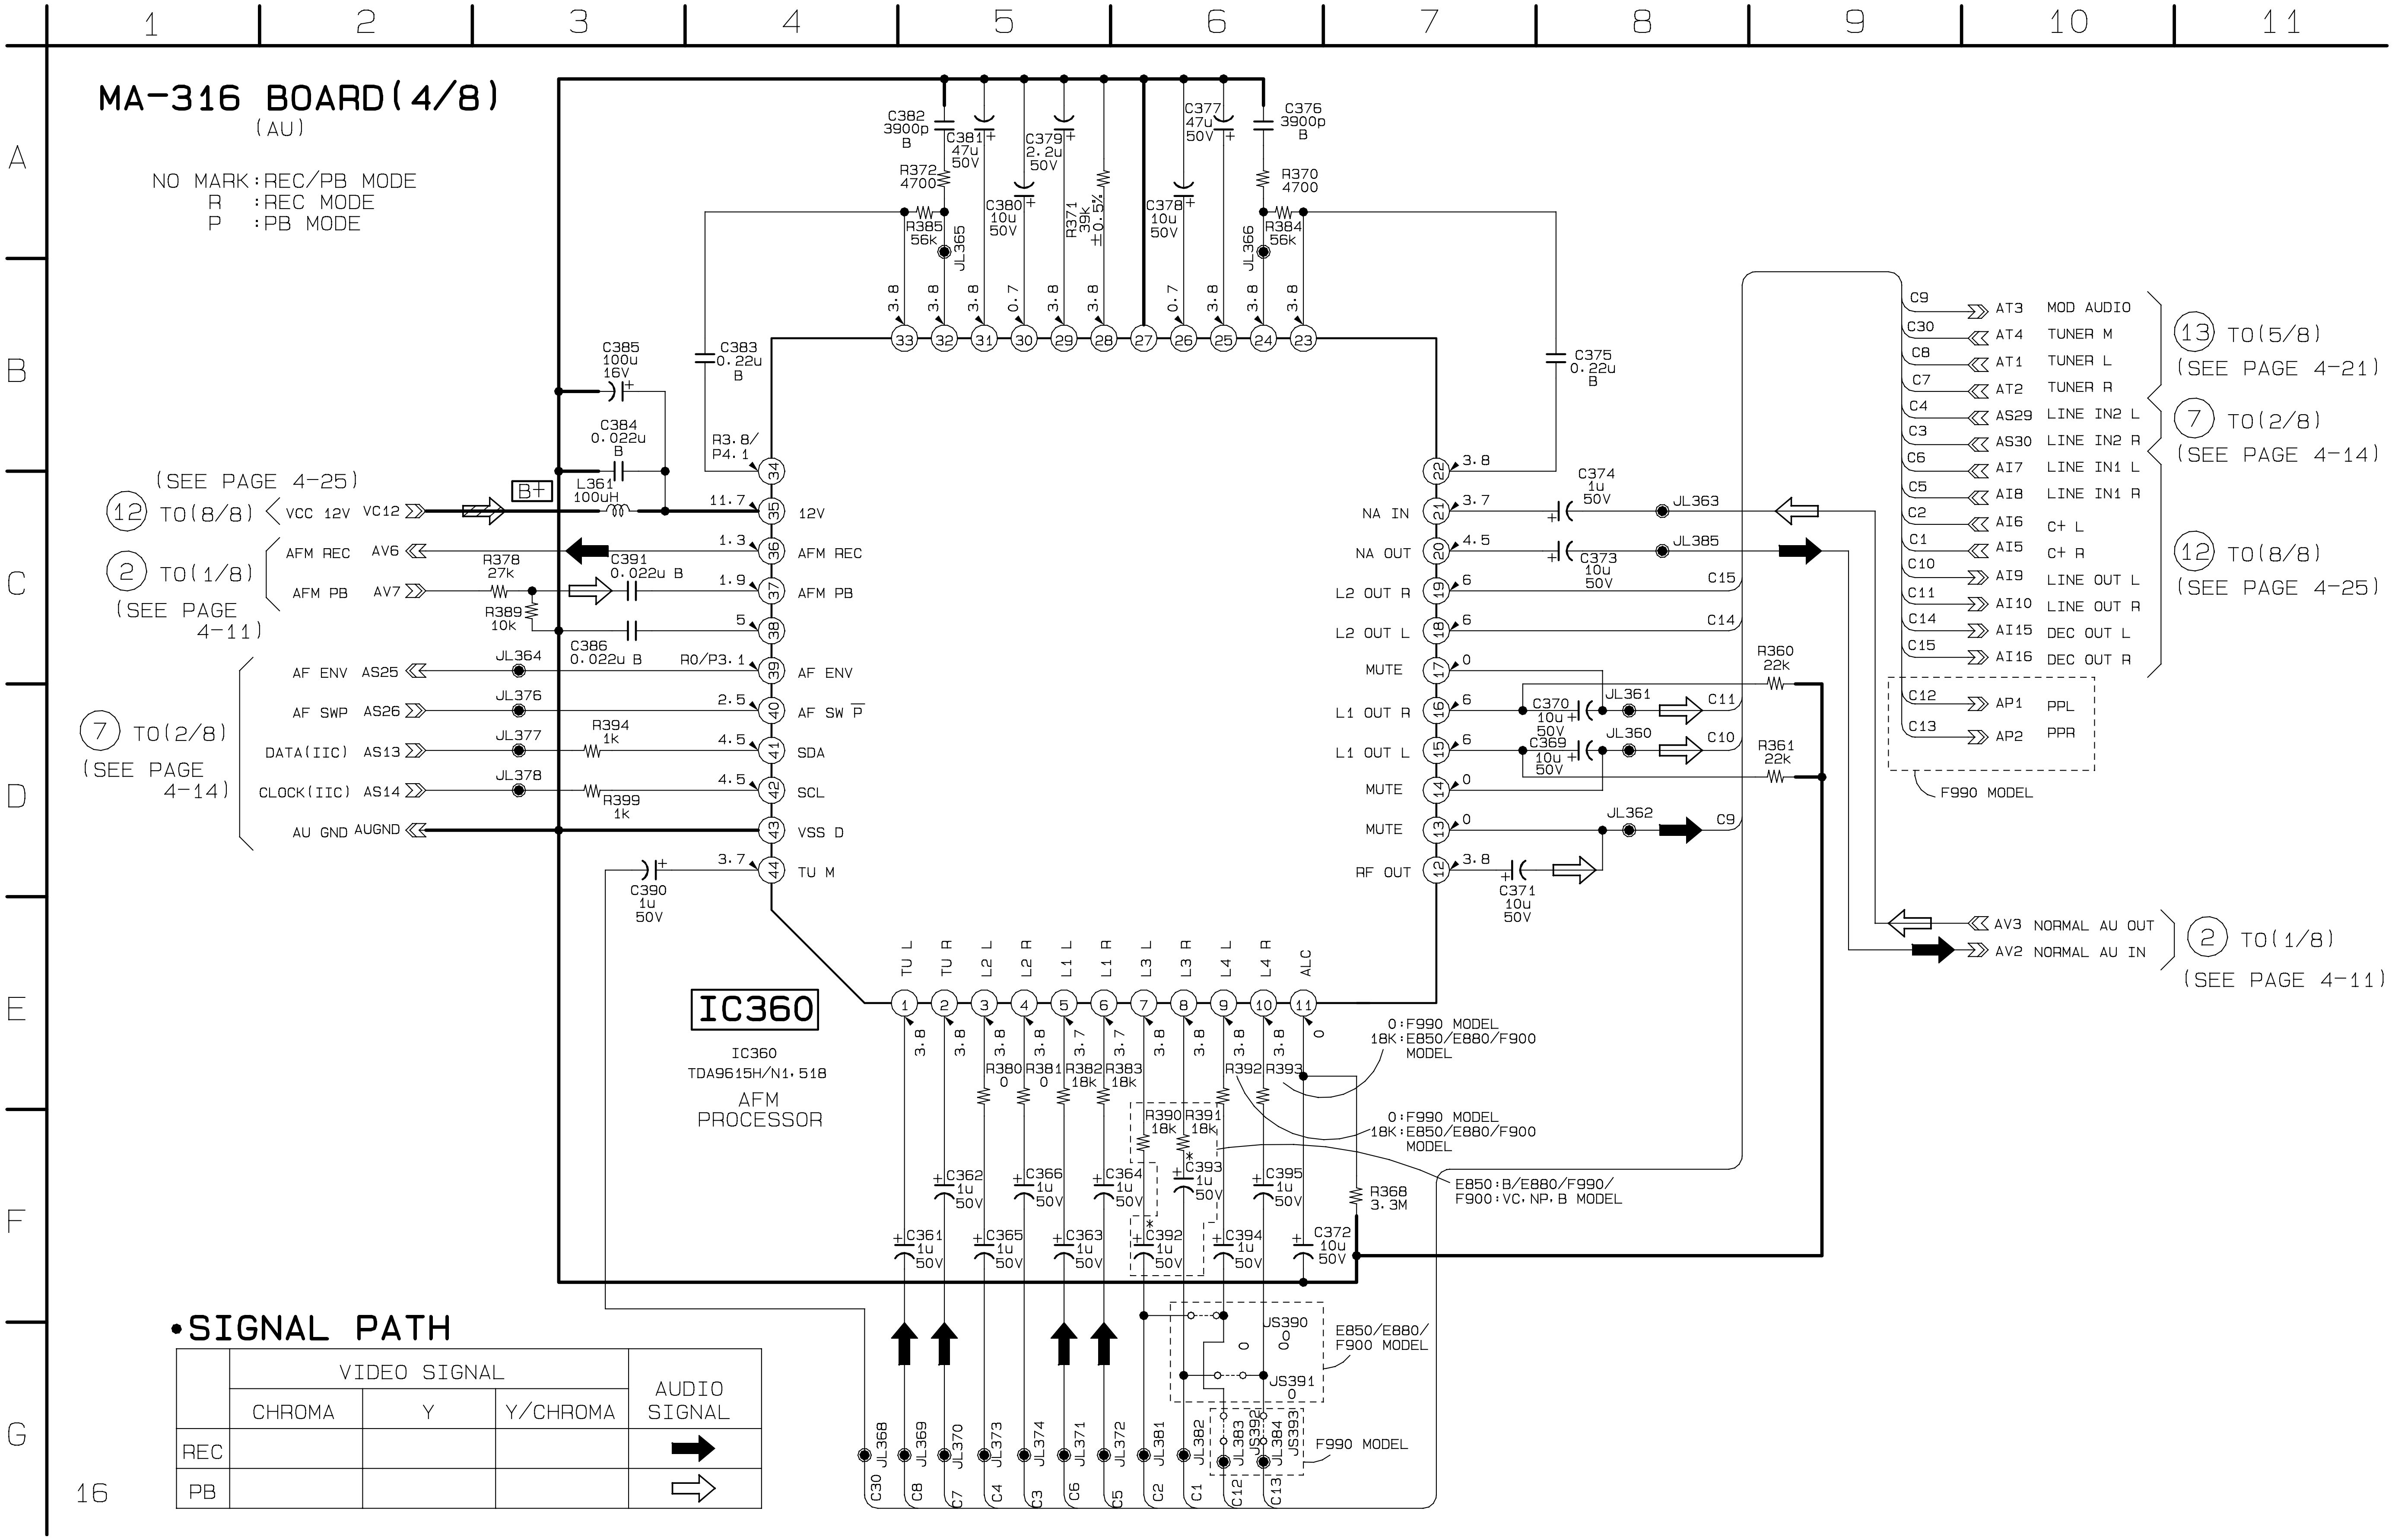

•SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				➡ (solid arrow)
PB				⇨ (outline arrow)

MA-316 (TUNER) SCHEMATIC DIAGRAM

— Ref. No.: MA-316 Board; 2,000 Series —

• See page 4-9 for MA-316 BOARD printed wiring board.

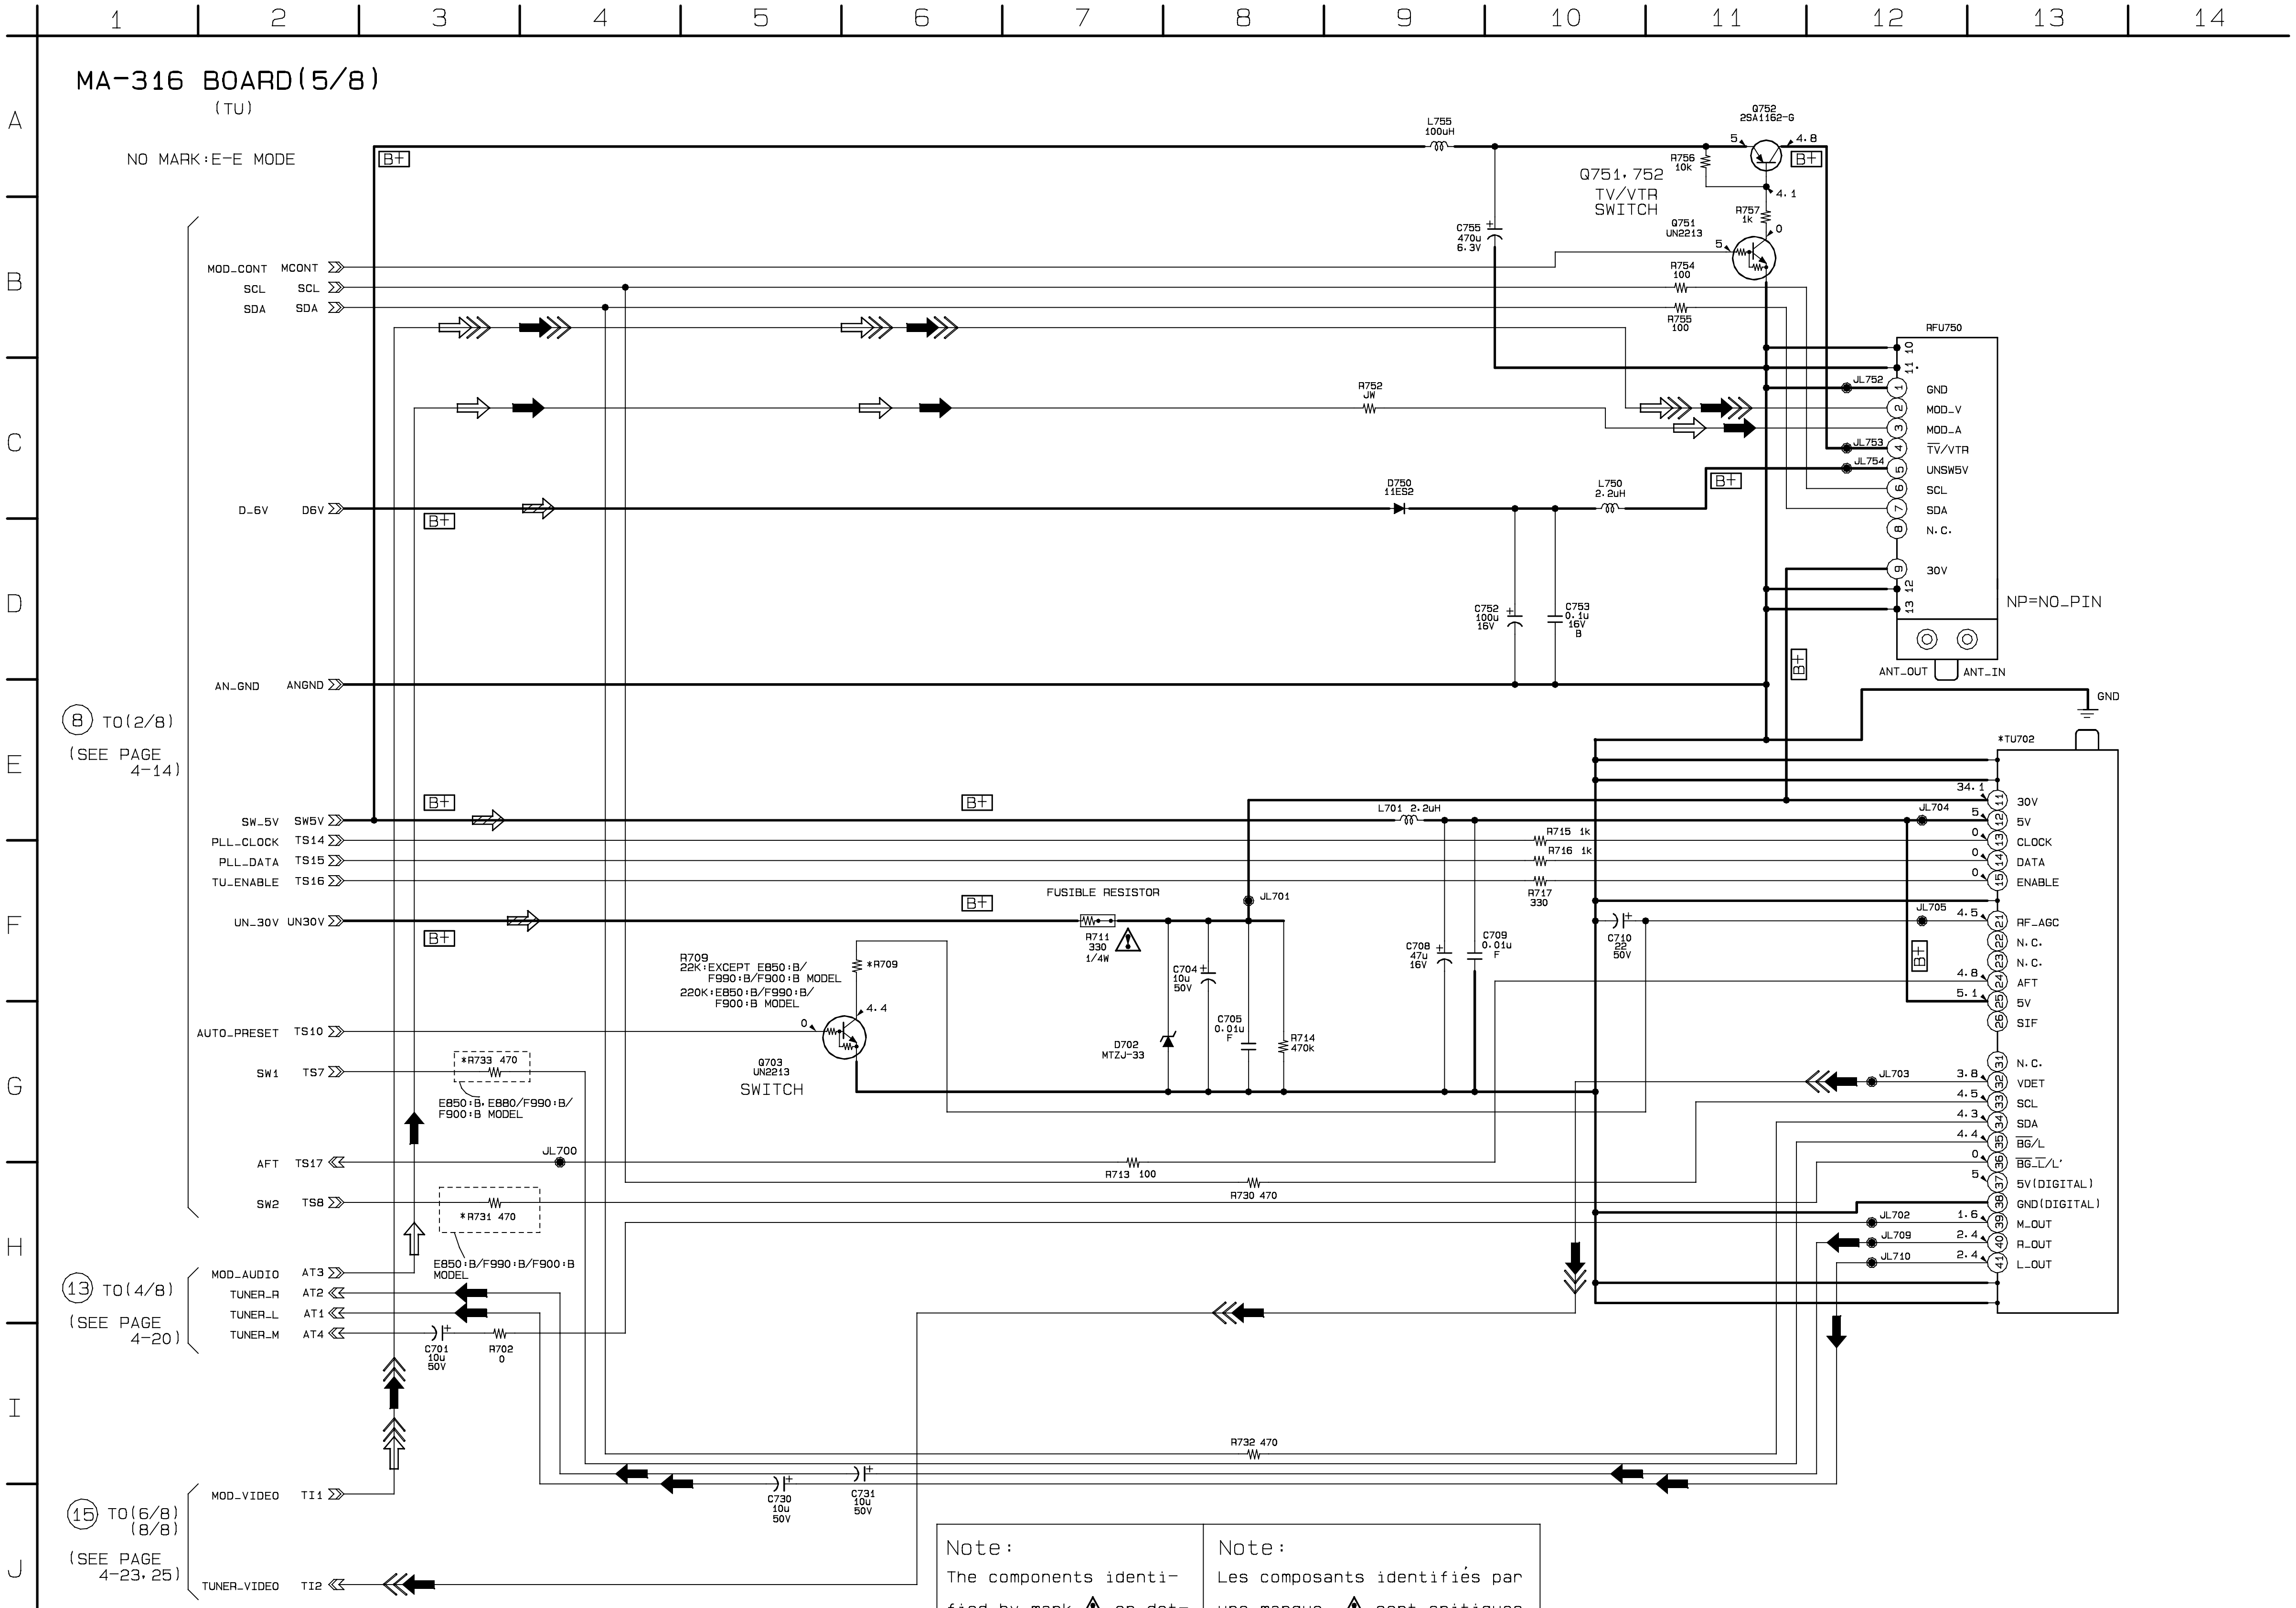

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

•SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡⟫	➡
PB			⇨⟫	⇨

16

MA-316 (FOLLOW TV, PDC, VPS) SCHEMATIC DIAGRAM • See page 4-9 for MA-316 BOARD printed wiring board.

— Ref. No.: MA-316 Board; 2,000 Series —

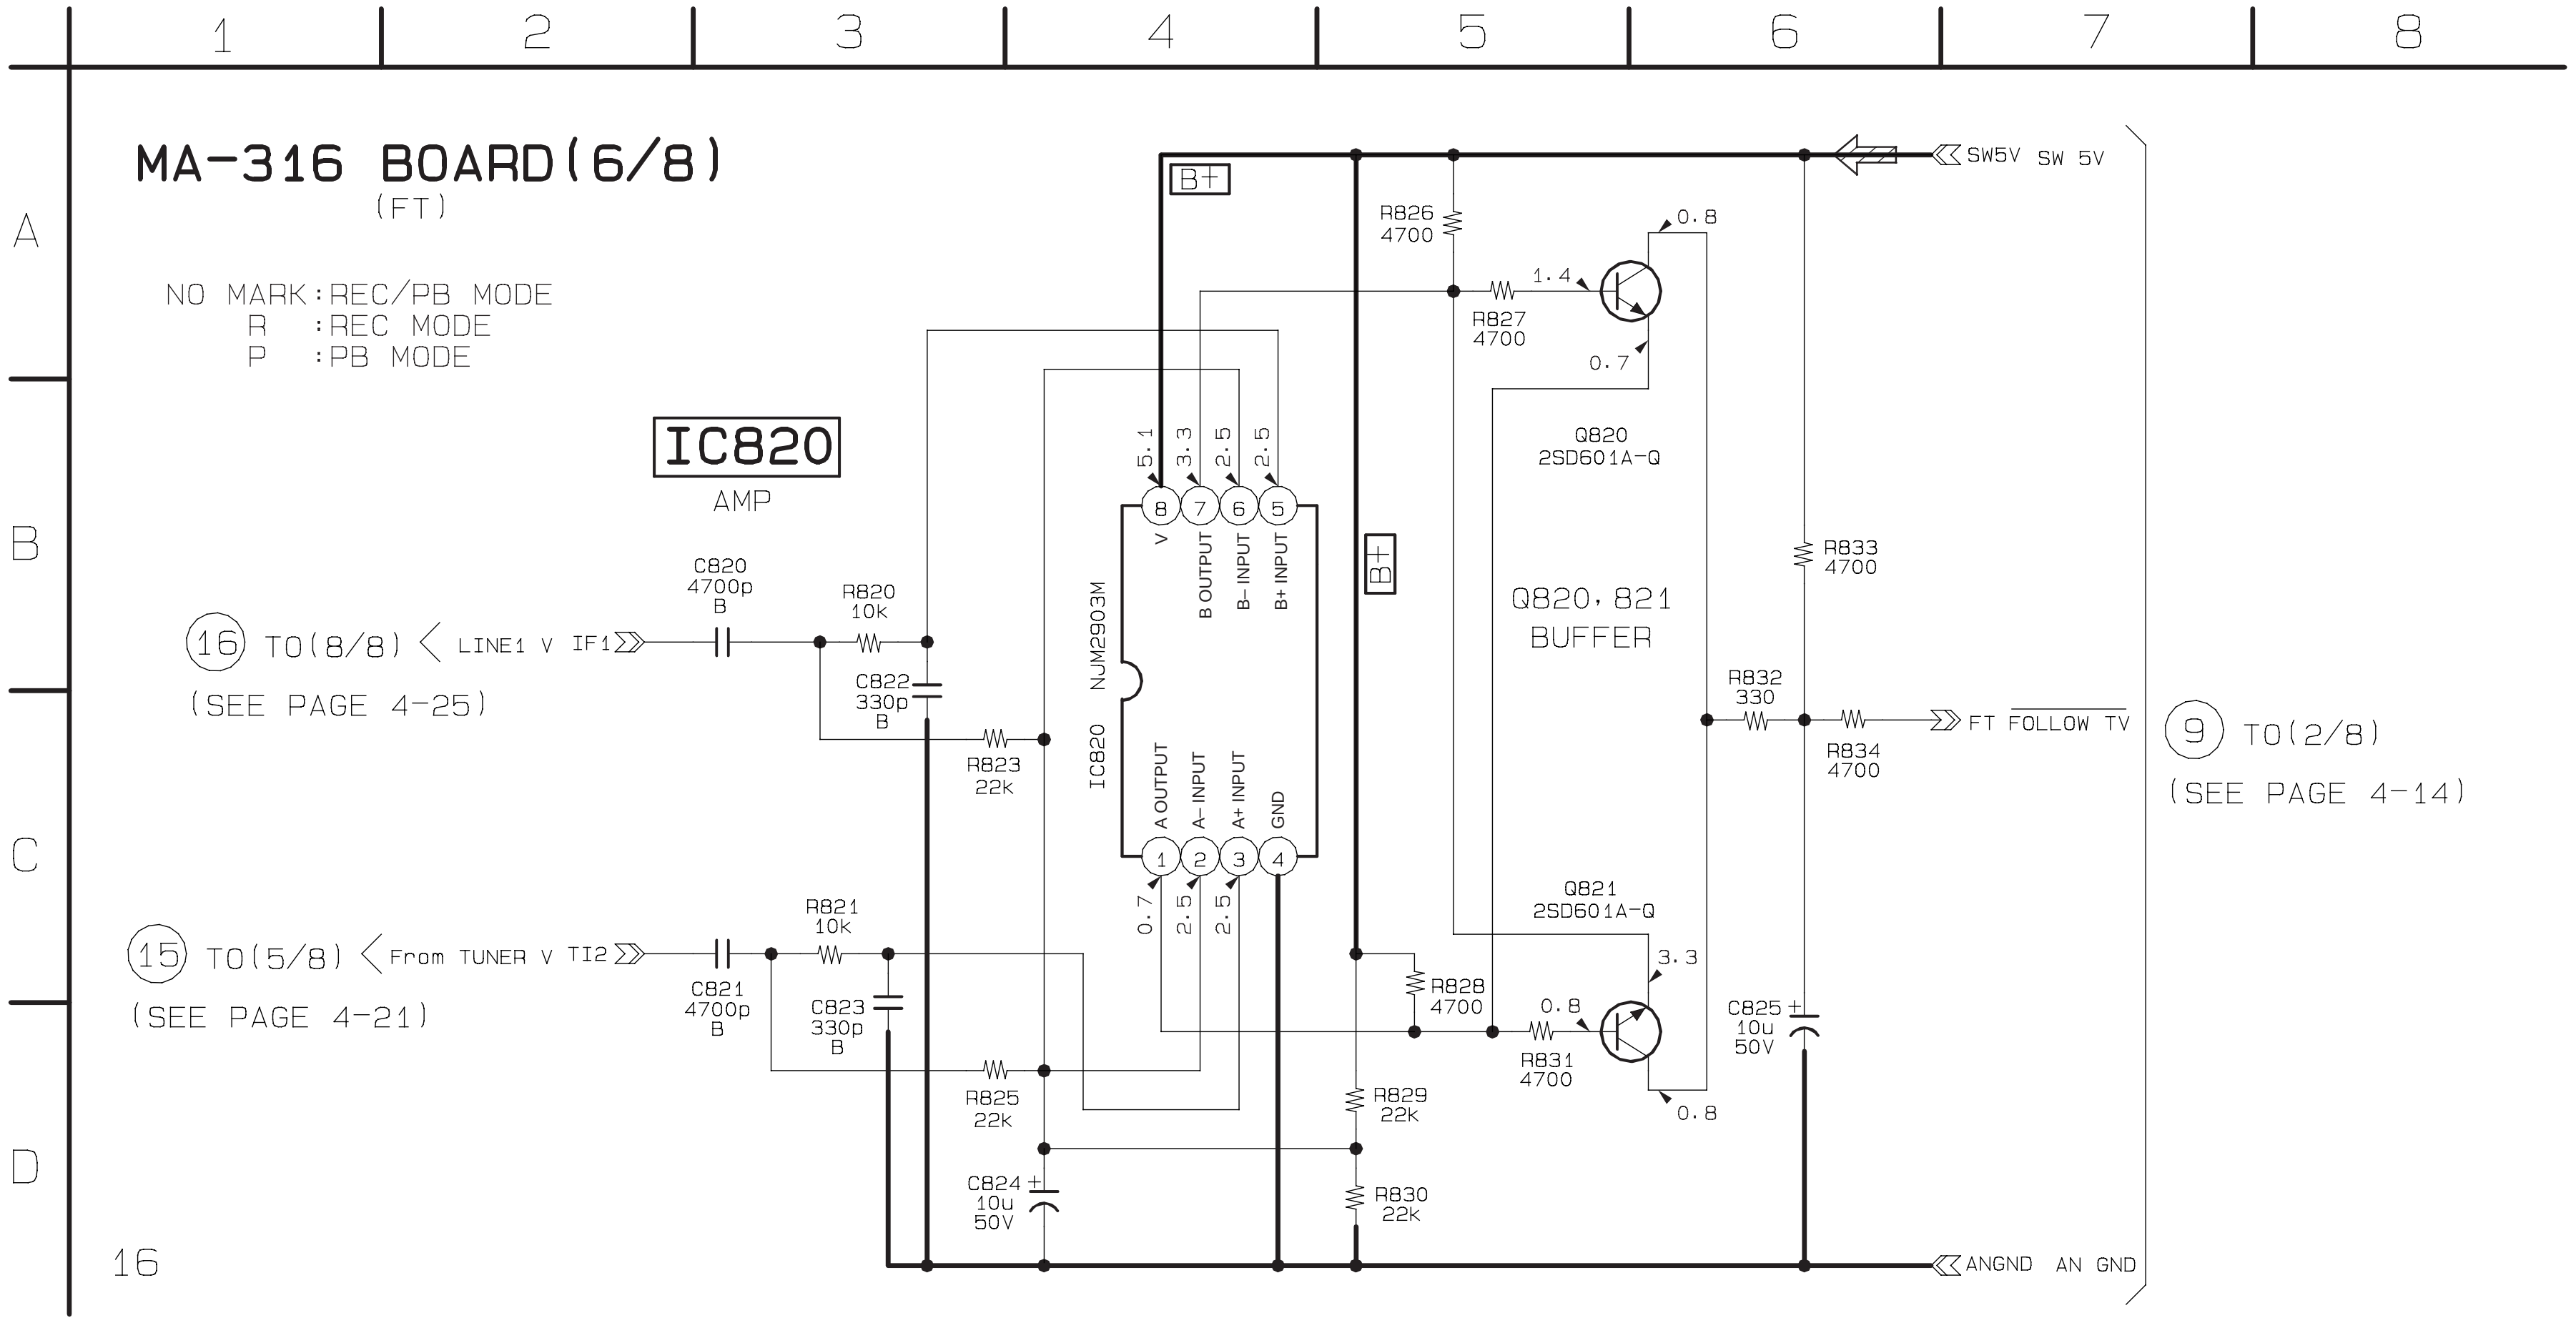

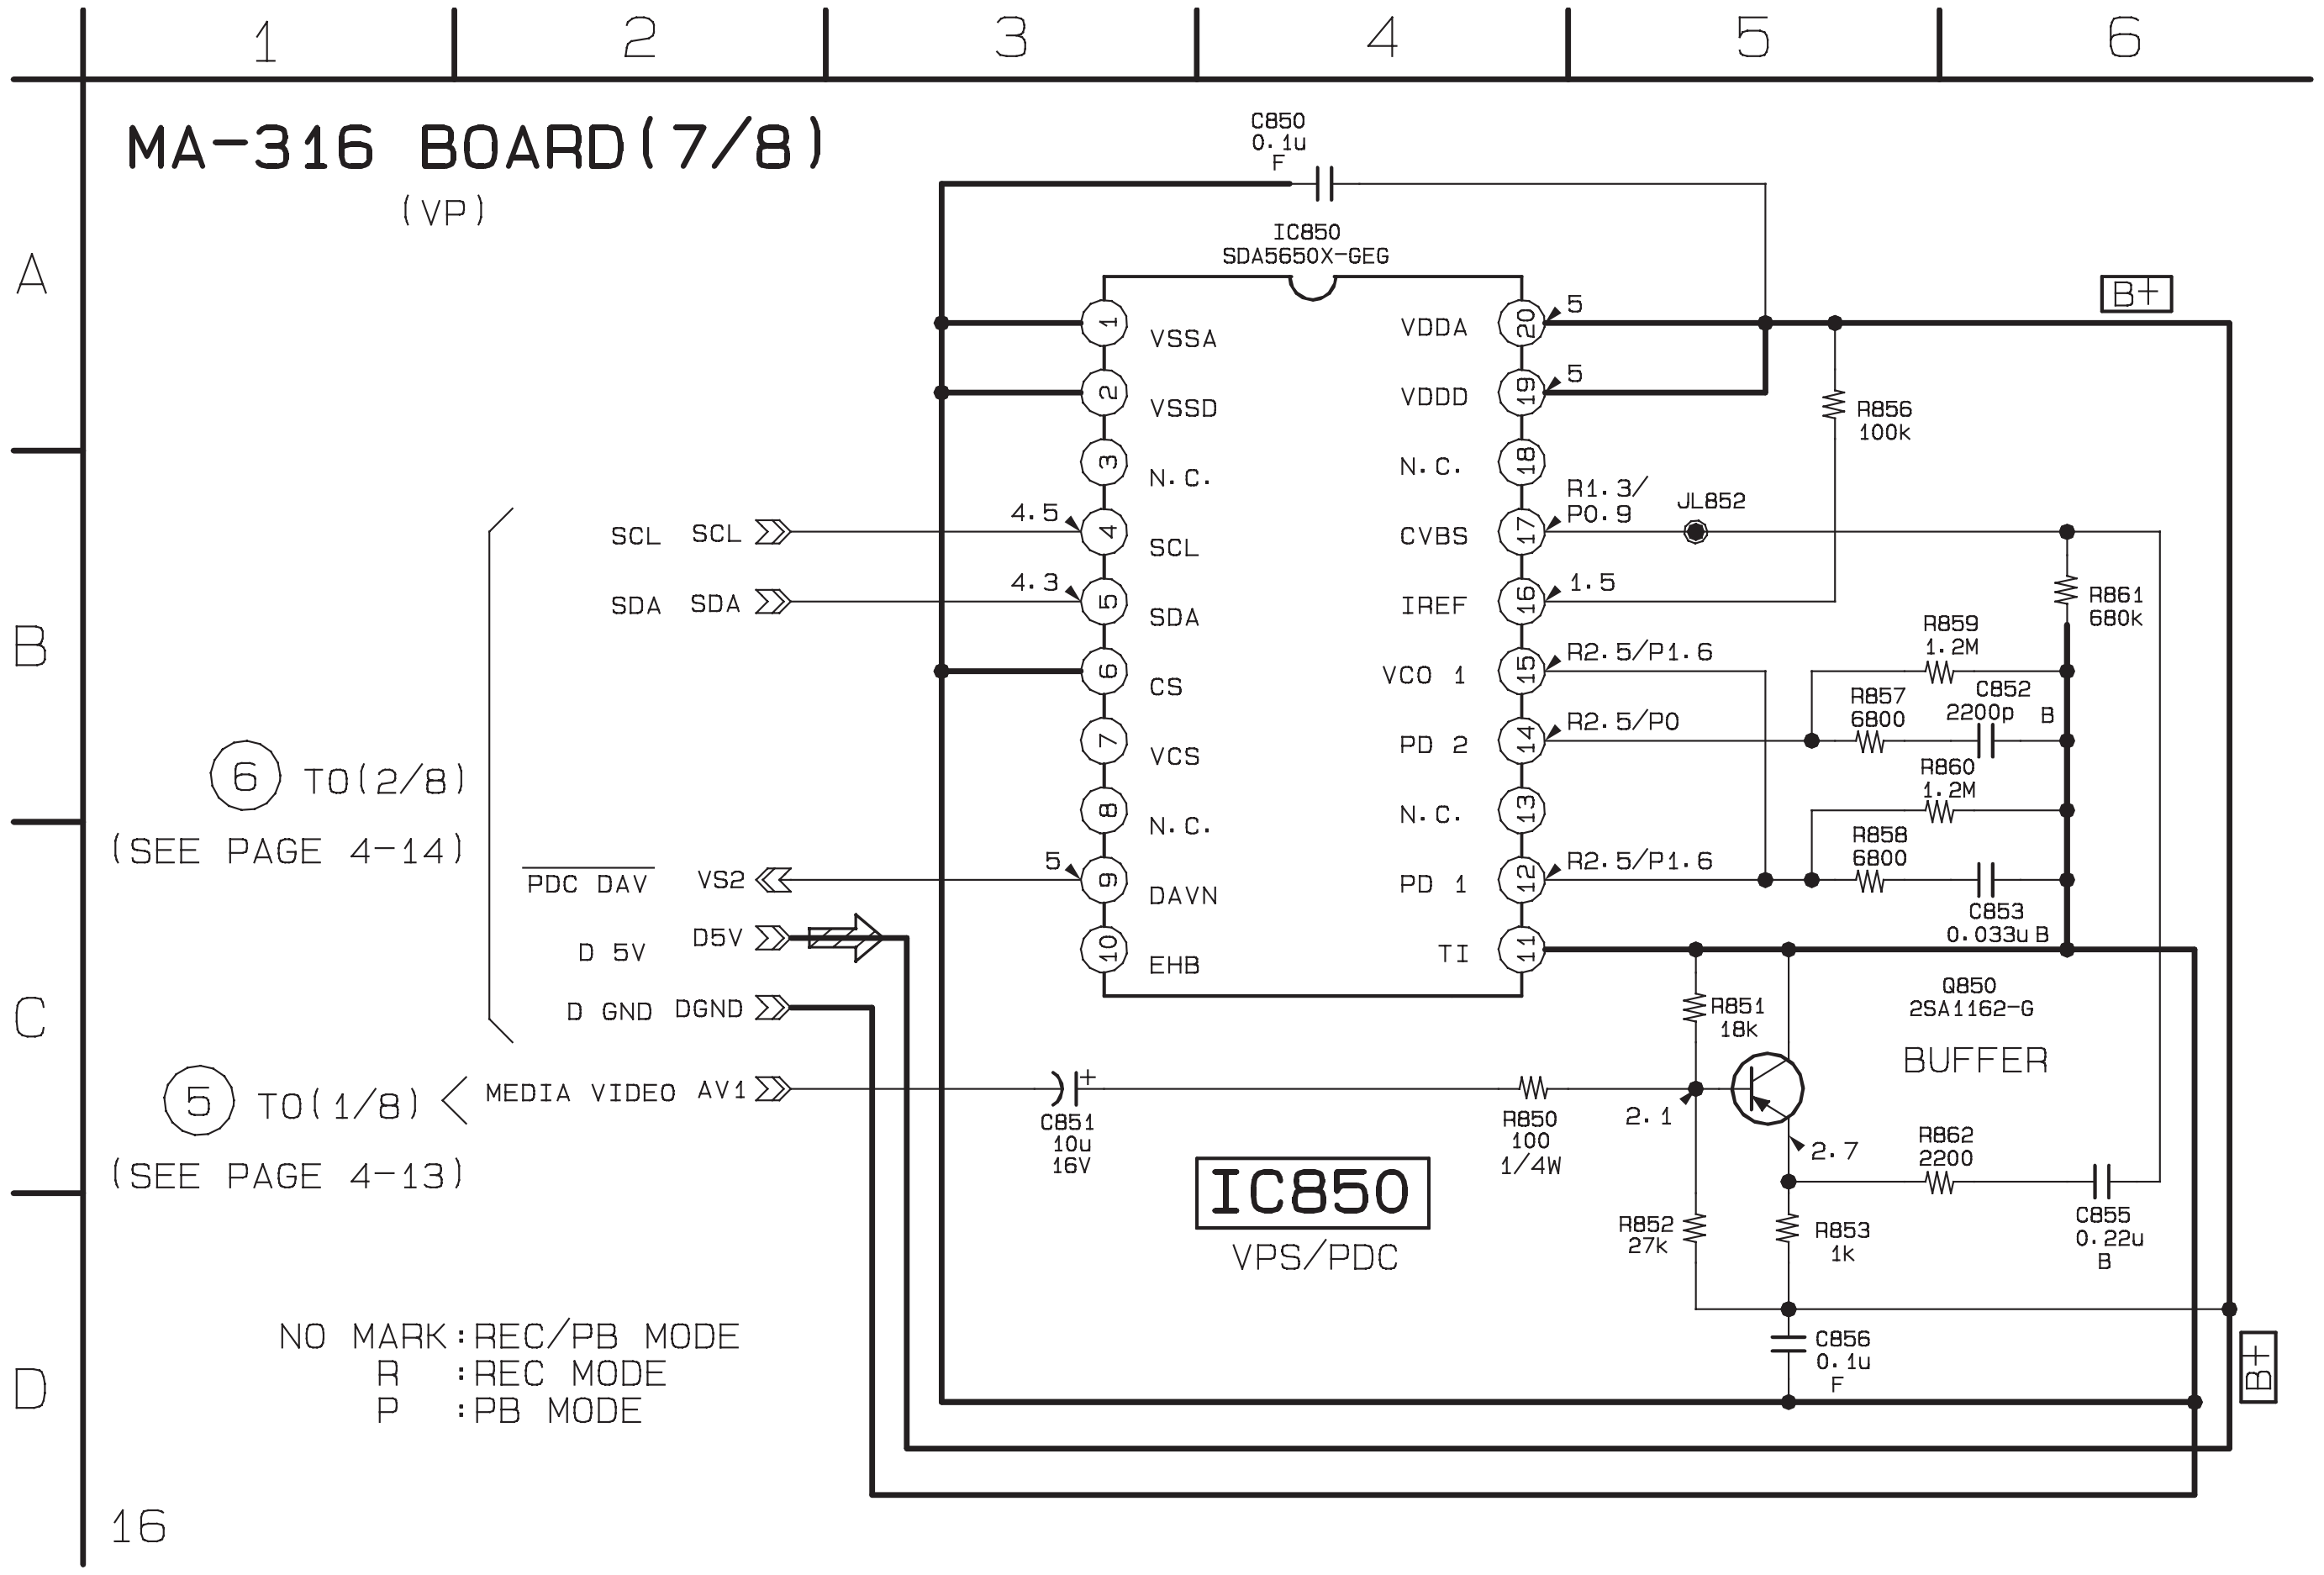

MA-316 (I/O) SCHEMATIC DIAGRAM
— Ref. No.: MA-316 Board; 2,000 Series —

• See page 4-9 for MA-316 BOARD printed wiring board.

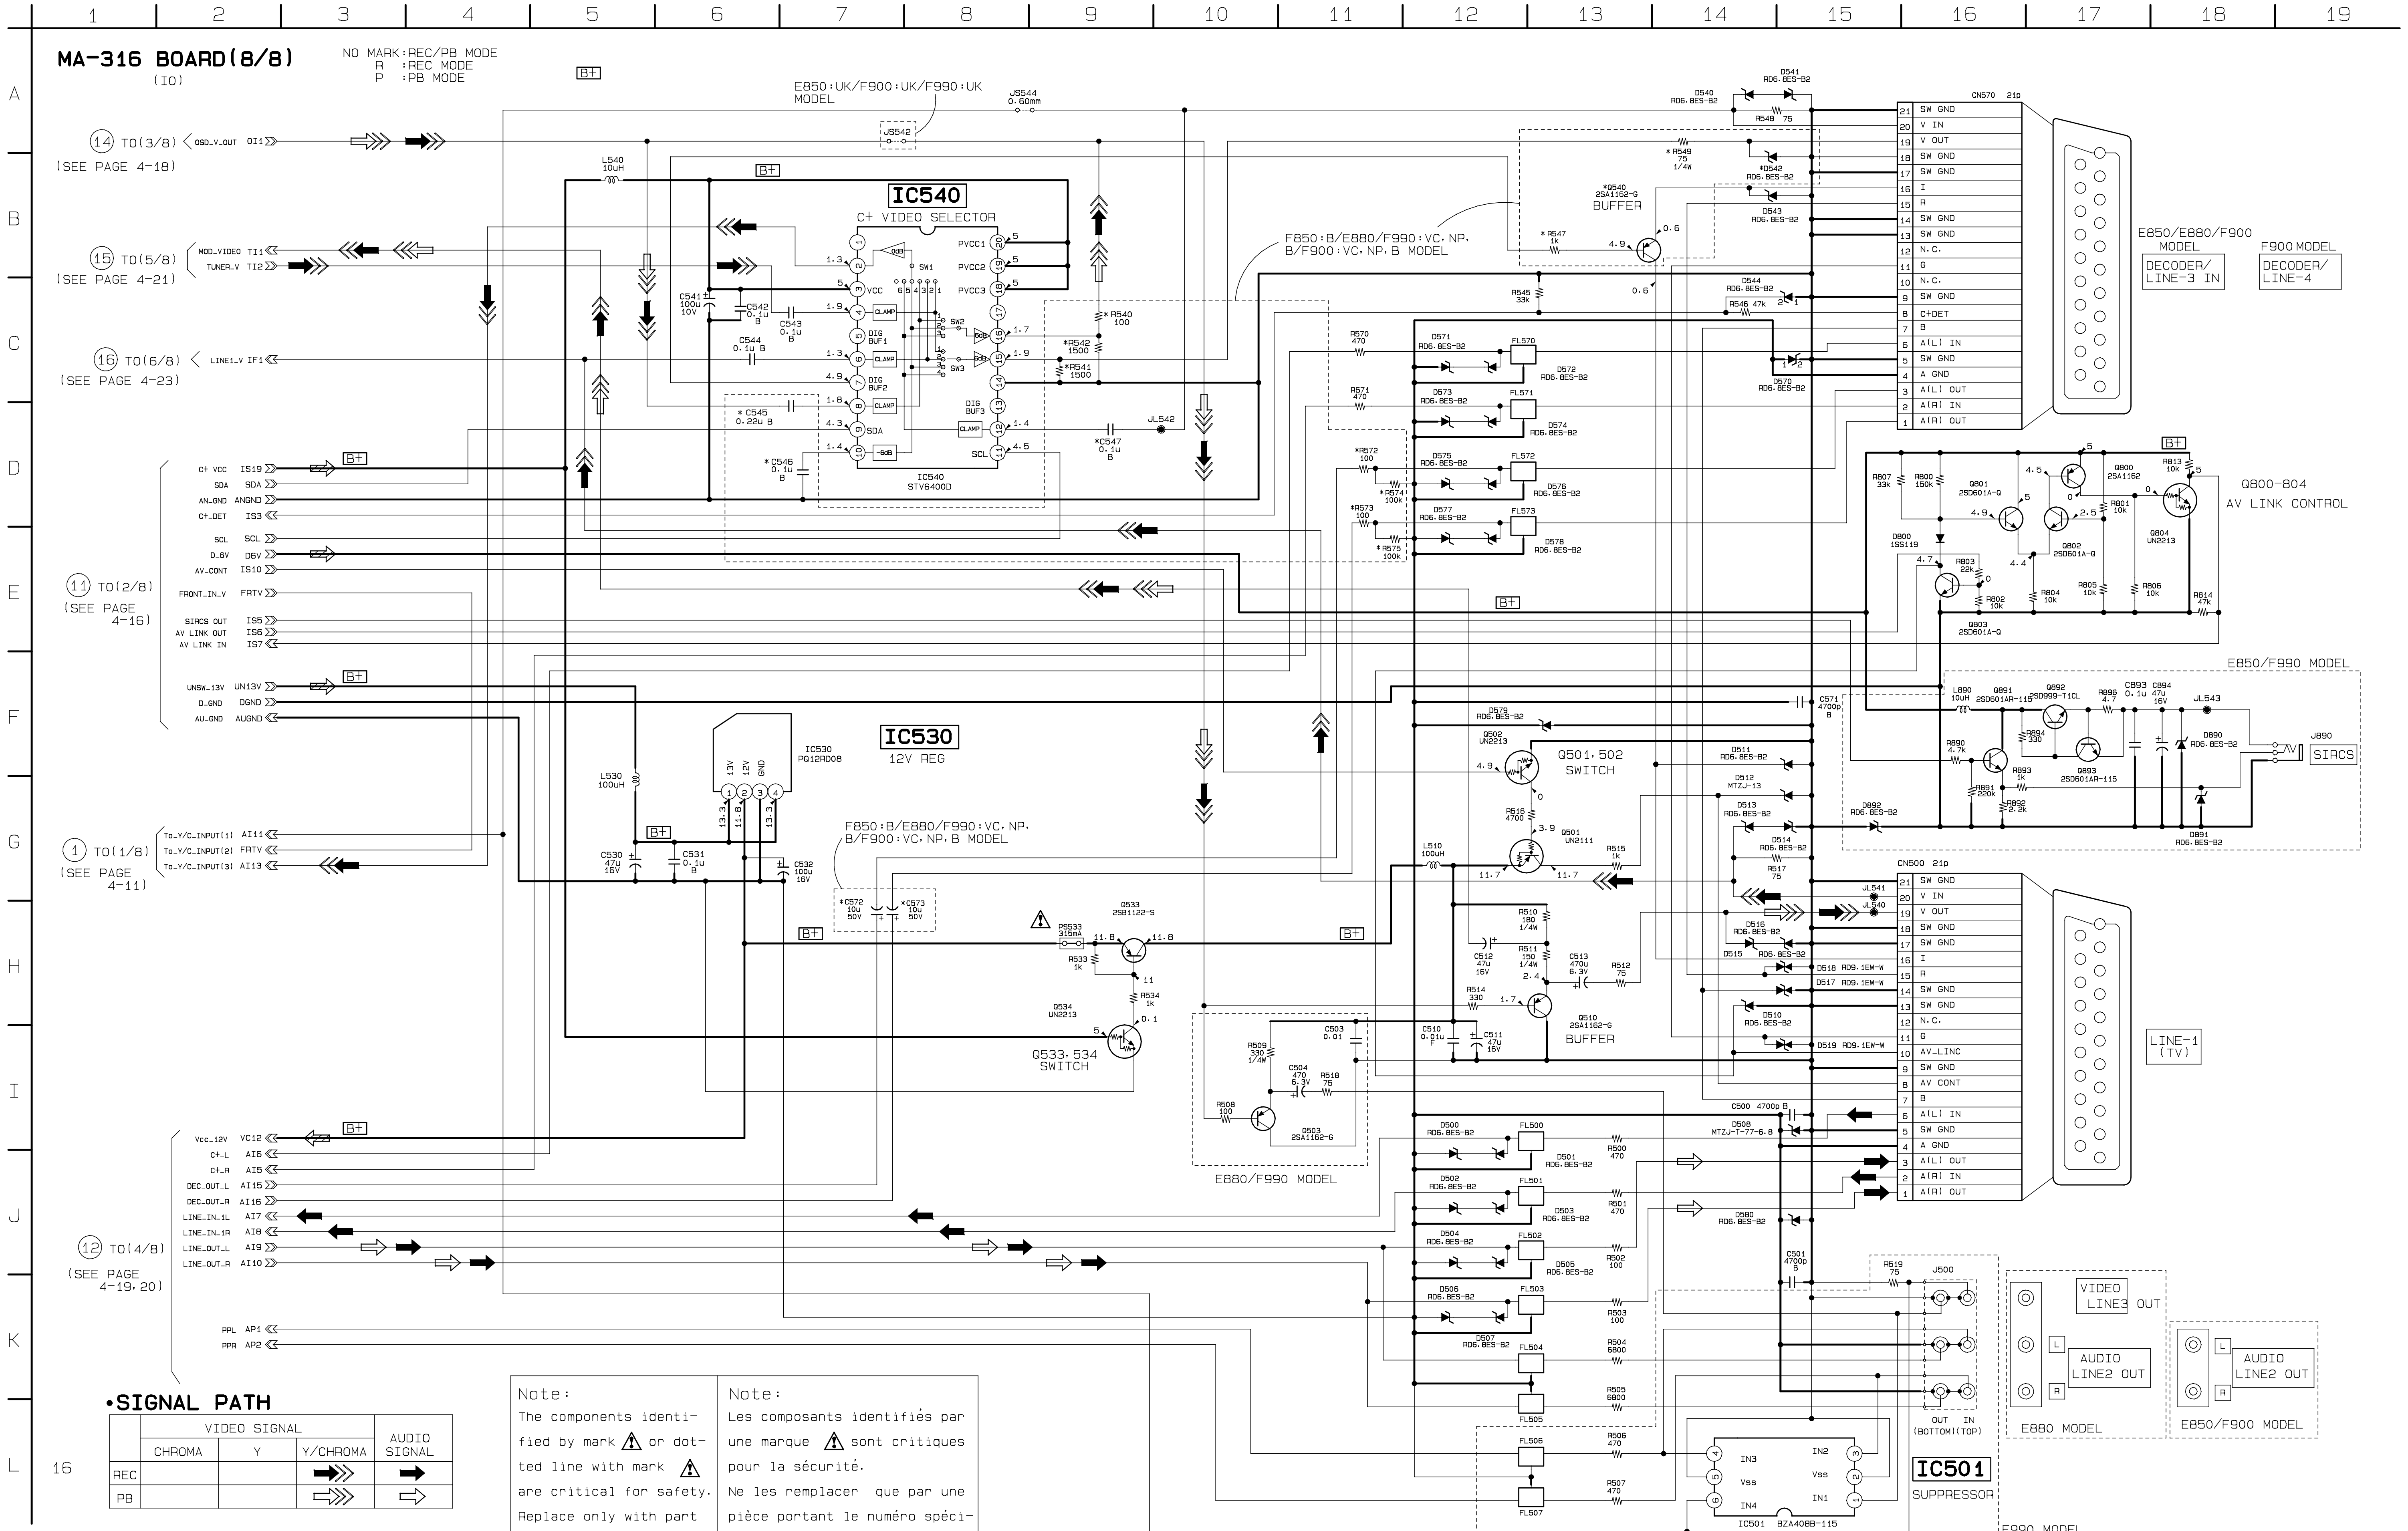

•SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡	➡
PB			⇨	

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

FR-128 (MODE CONTROL) PRINTED WIRING BOARD
— Ref. No.: FR-128 Board; 3,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

FR-128 BOARD (CONDUCTOR SIDE)

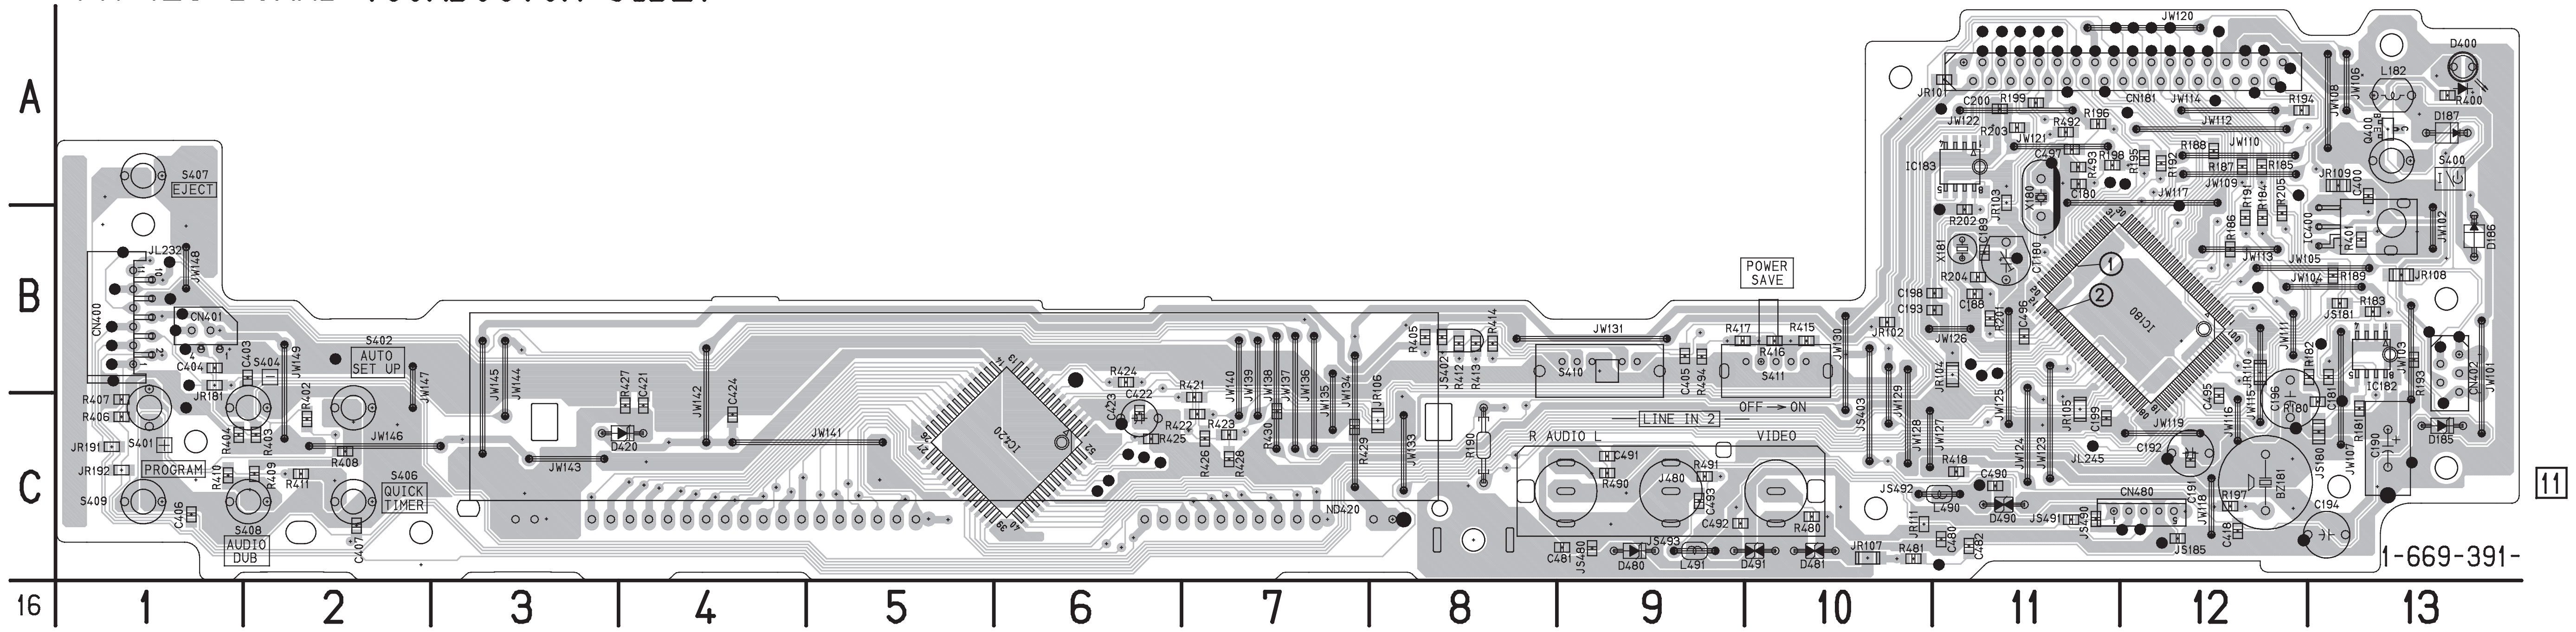

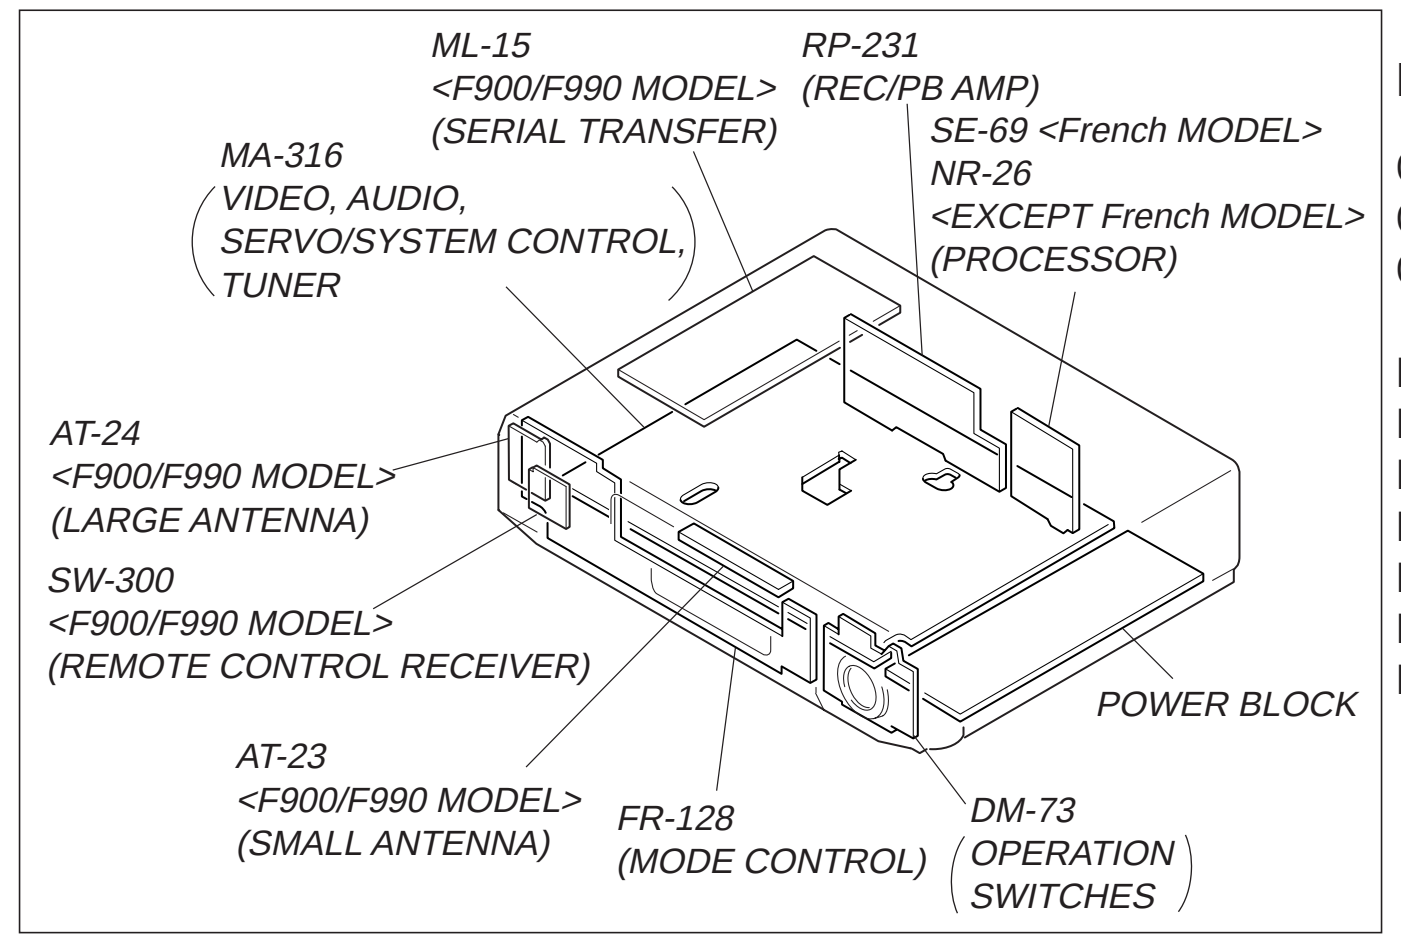

FR-128 BOARD

CN181	A-12	D491	C-10
CN400	B-1		
CN480	C-12	IC180	B-12
		IC182	B-13
D186	B-13	IC183	A-11
D187	A-13	IC400	B-13
D400	A-13	IC420	C-6
D420	C-4		
D480	C-9	J480	C-9
D481	C-10		
D490	C-11	Q400	A-13

FR-128 BOARD

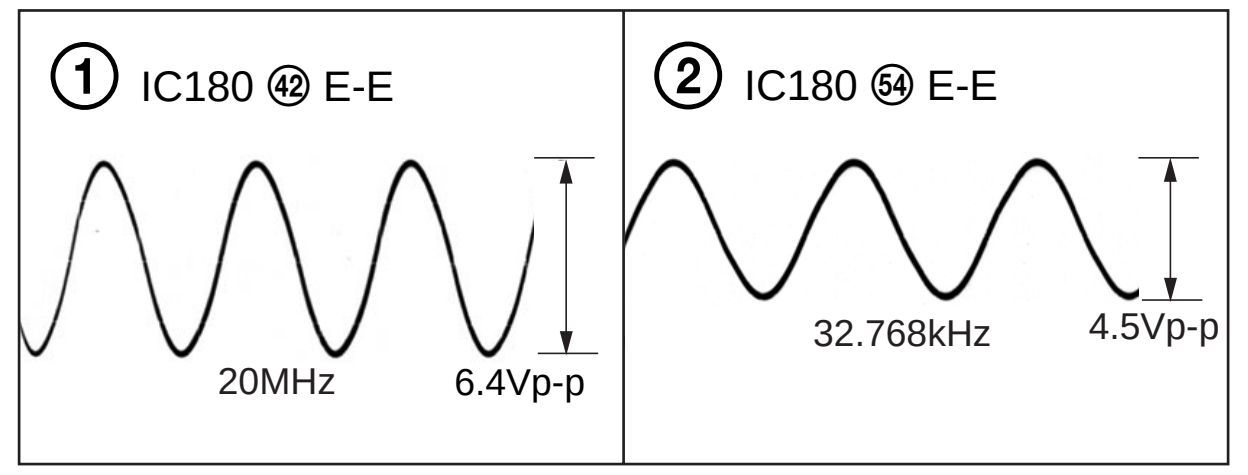

FR-128 (MODE CONTROL) SCHEMATIC DIAGRAM

— Ref. No.: FR-128 Board; 3,000 Series —

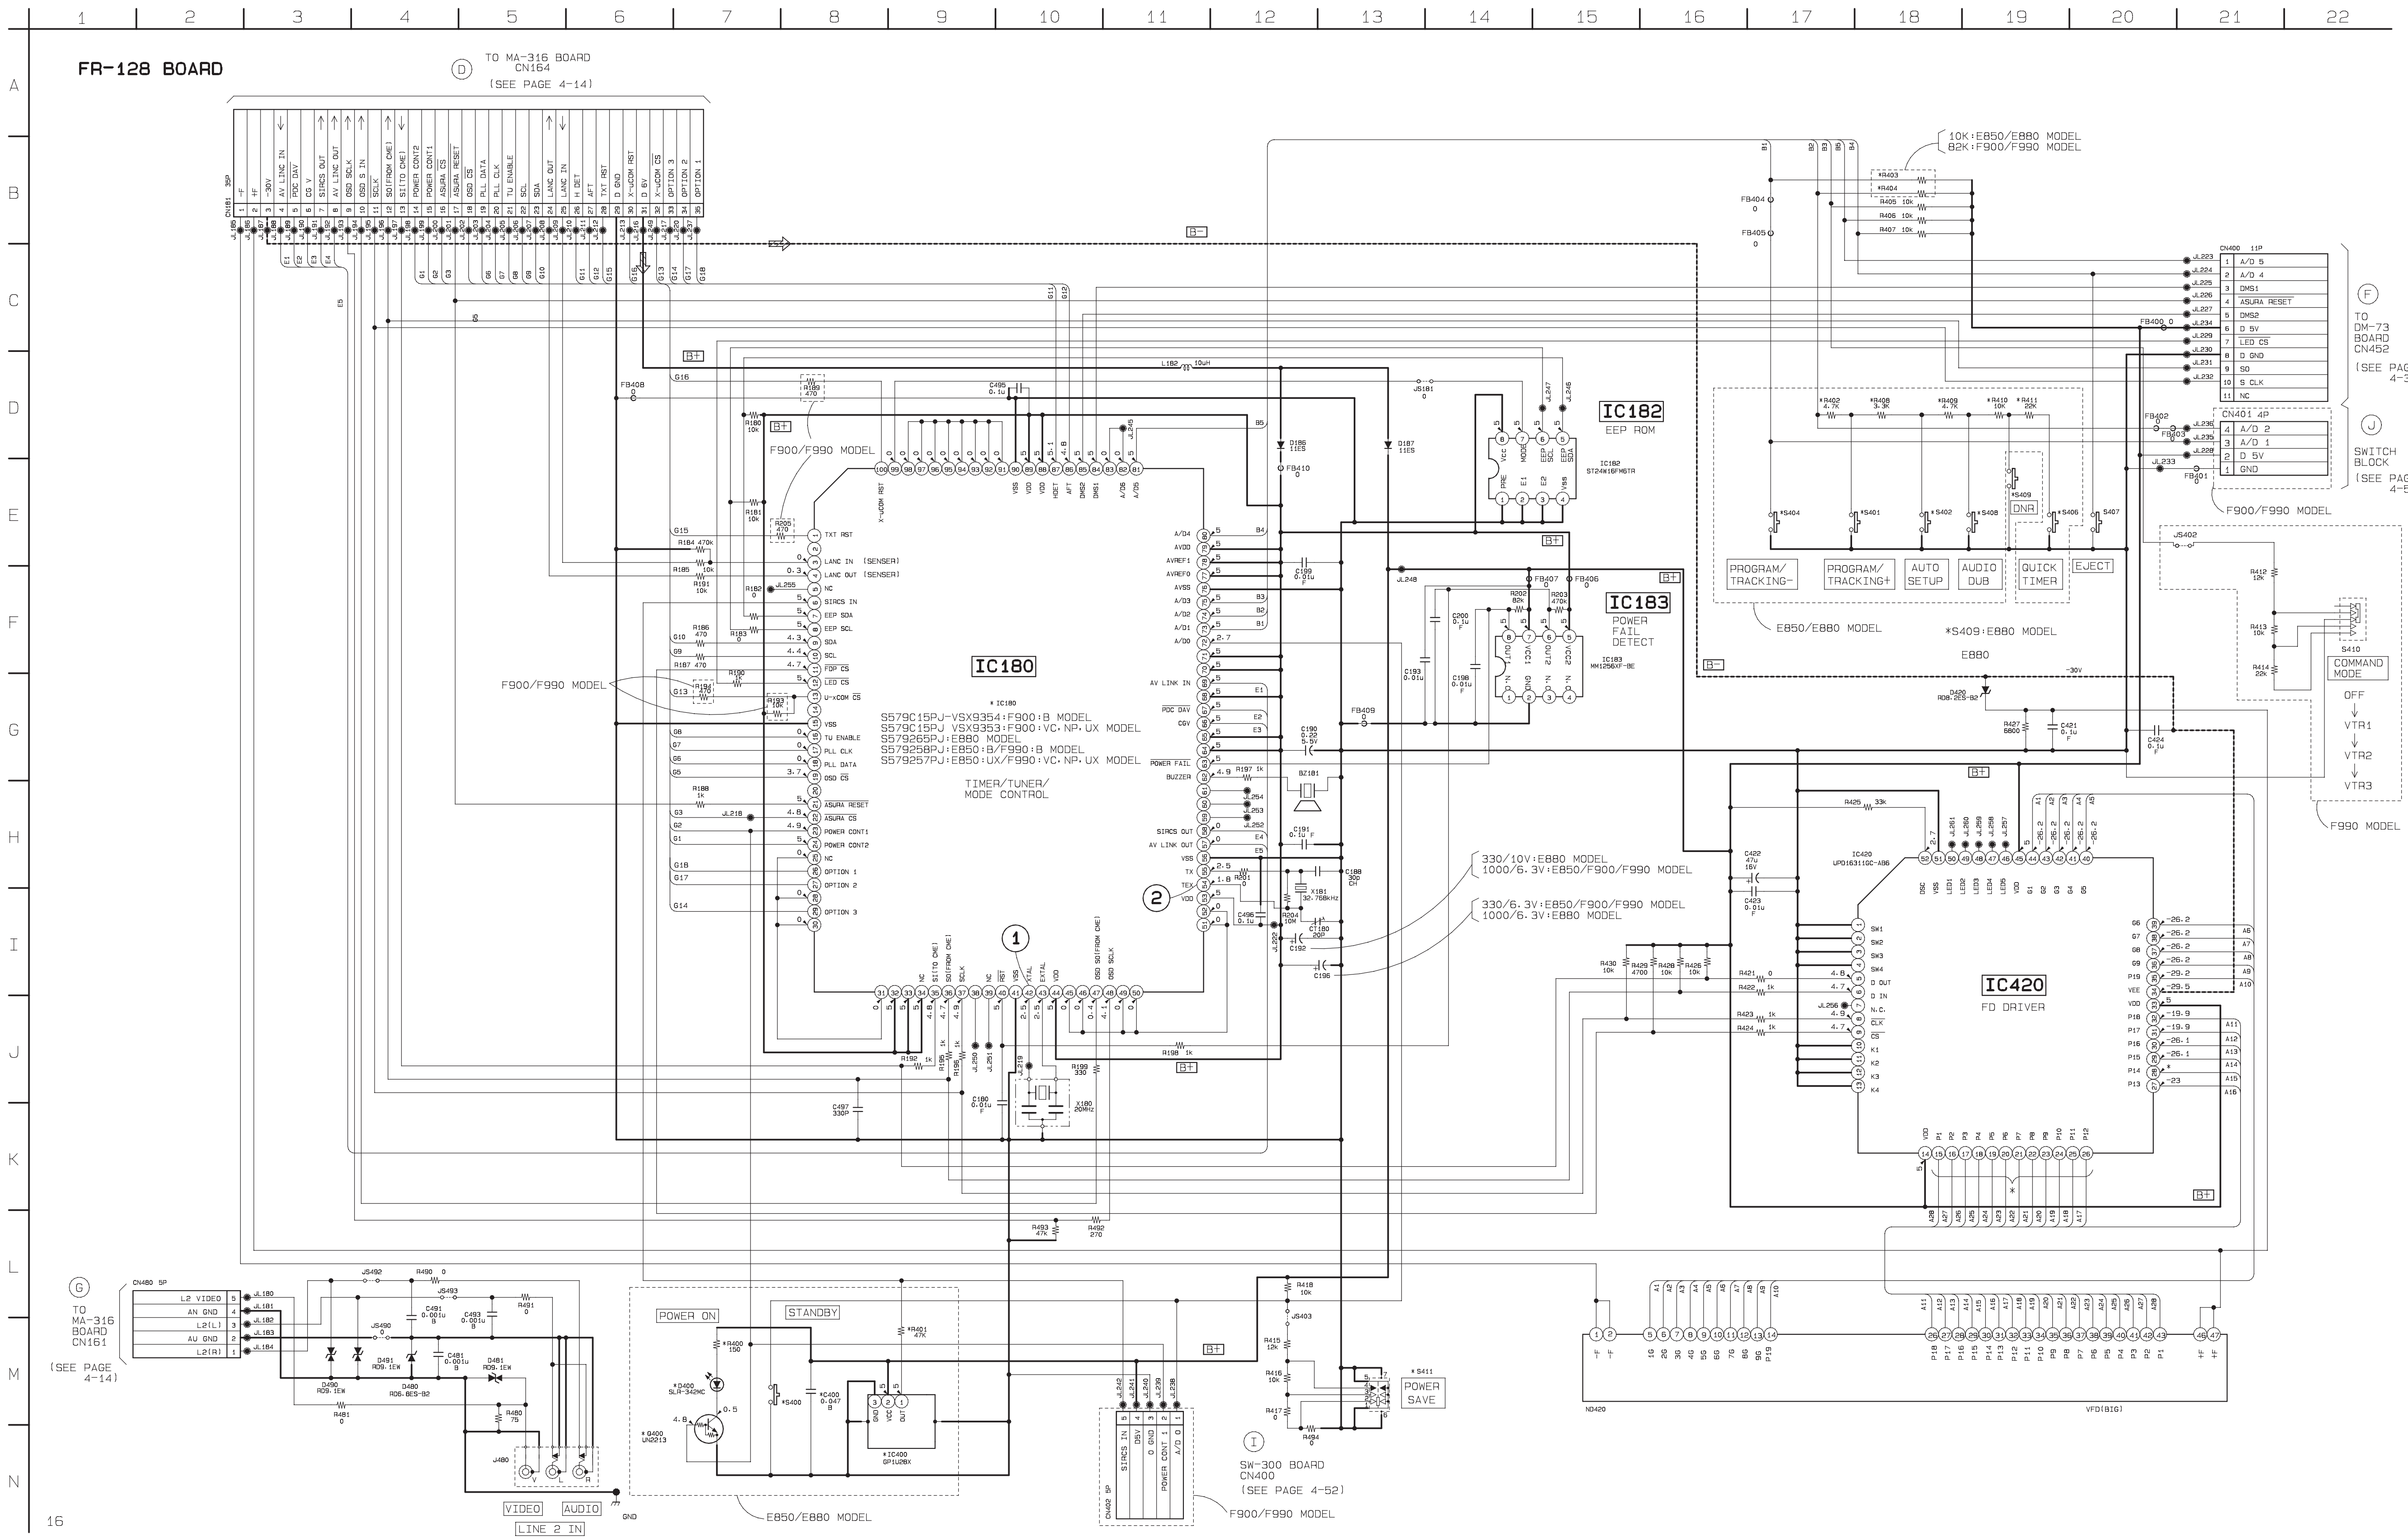

SE-69 (SECAM VIDEO SIGNAL PROCESS) SCHEMATIC DIAGRAM

— Ref. No.: SE-69 Board; 2,000 Series —

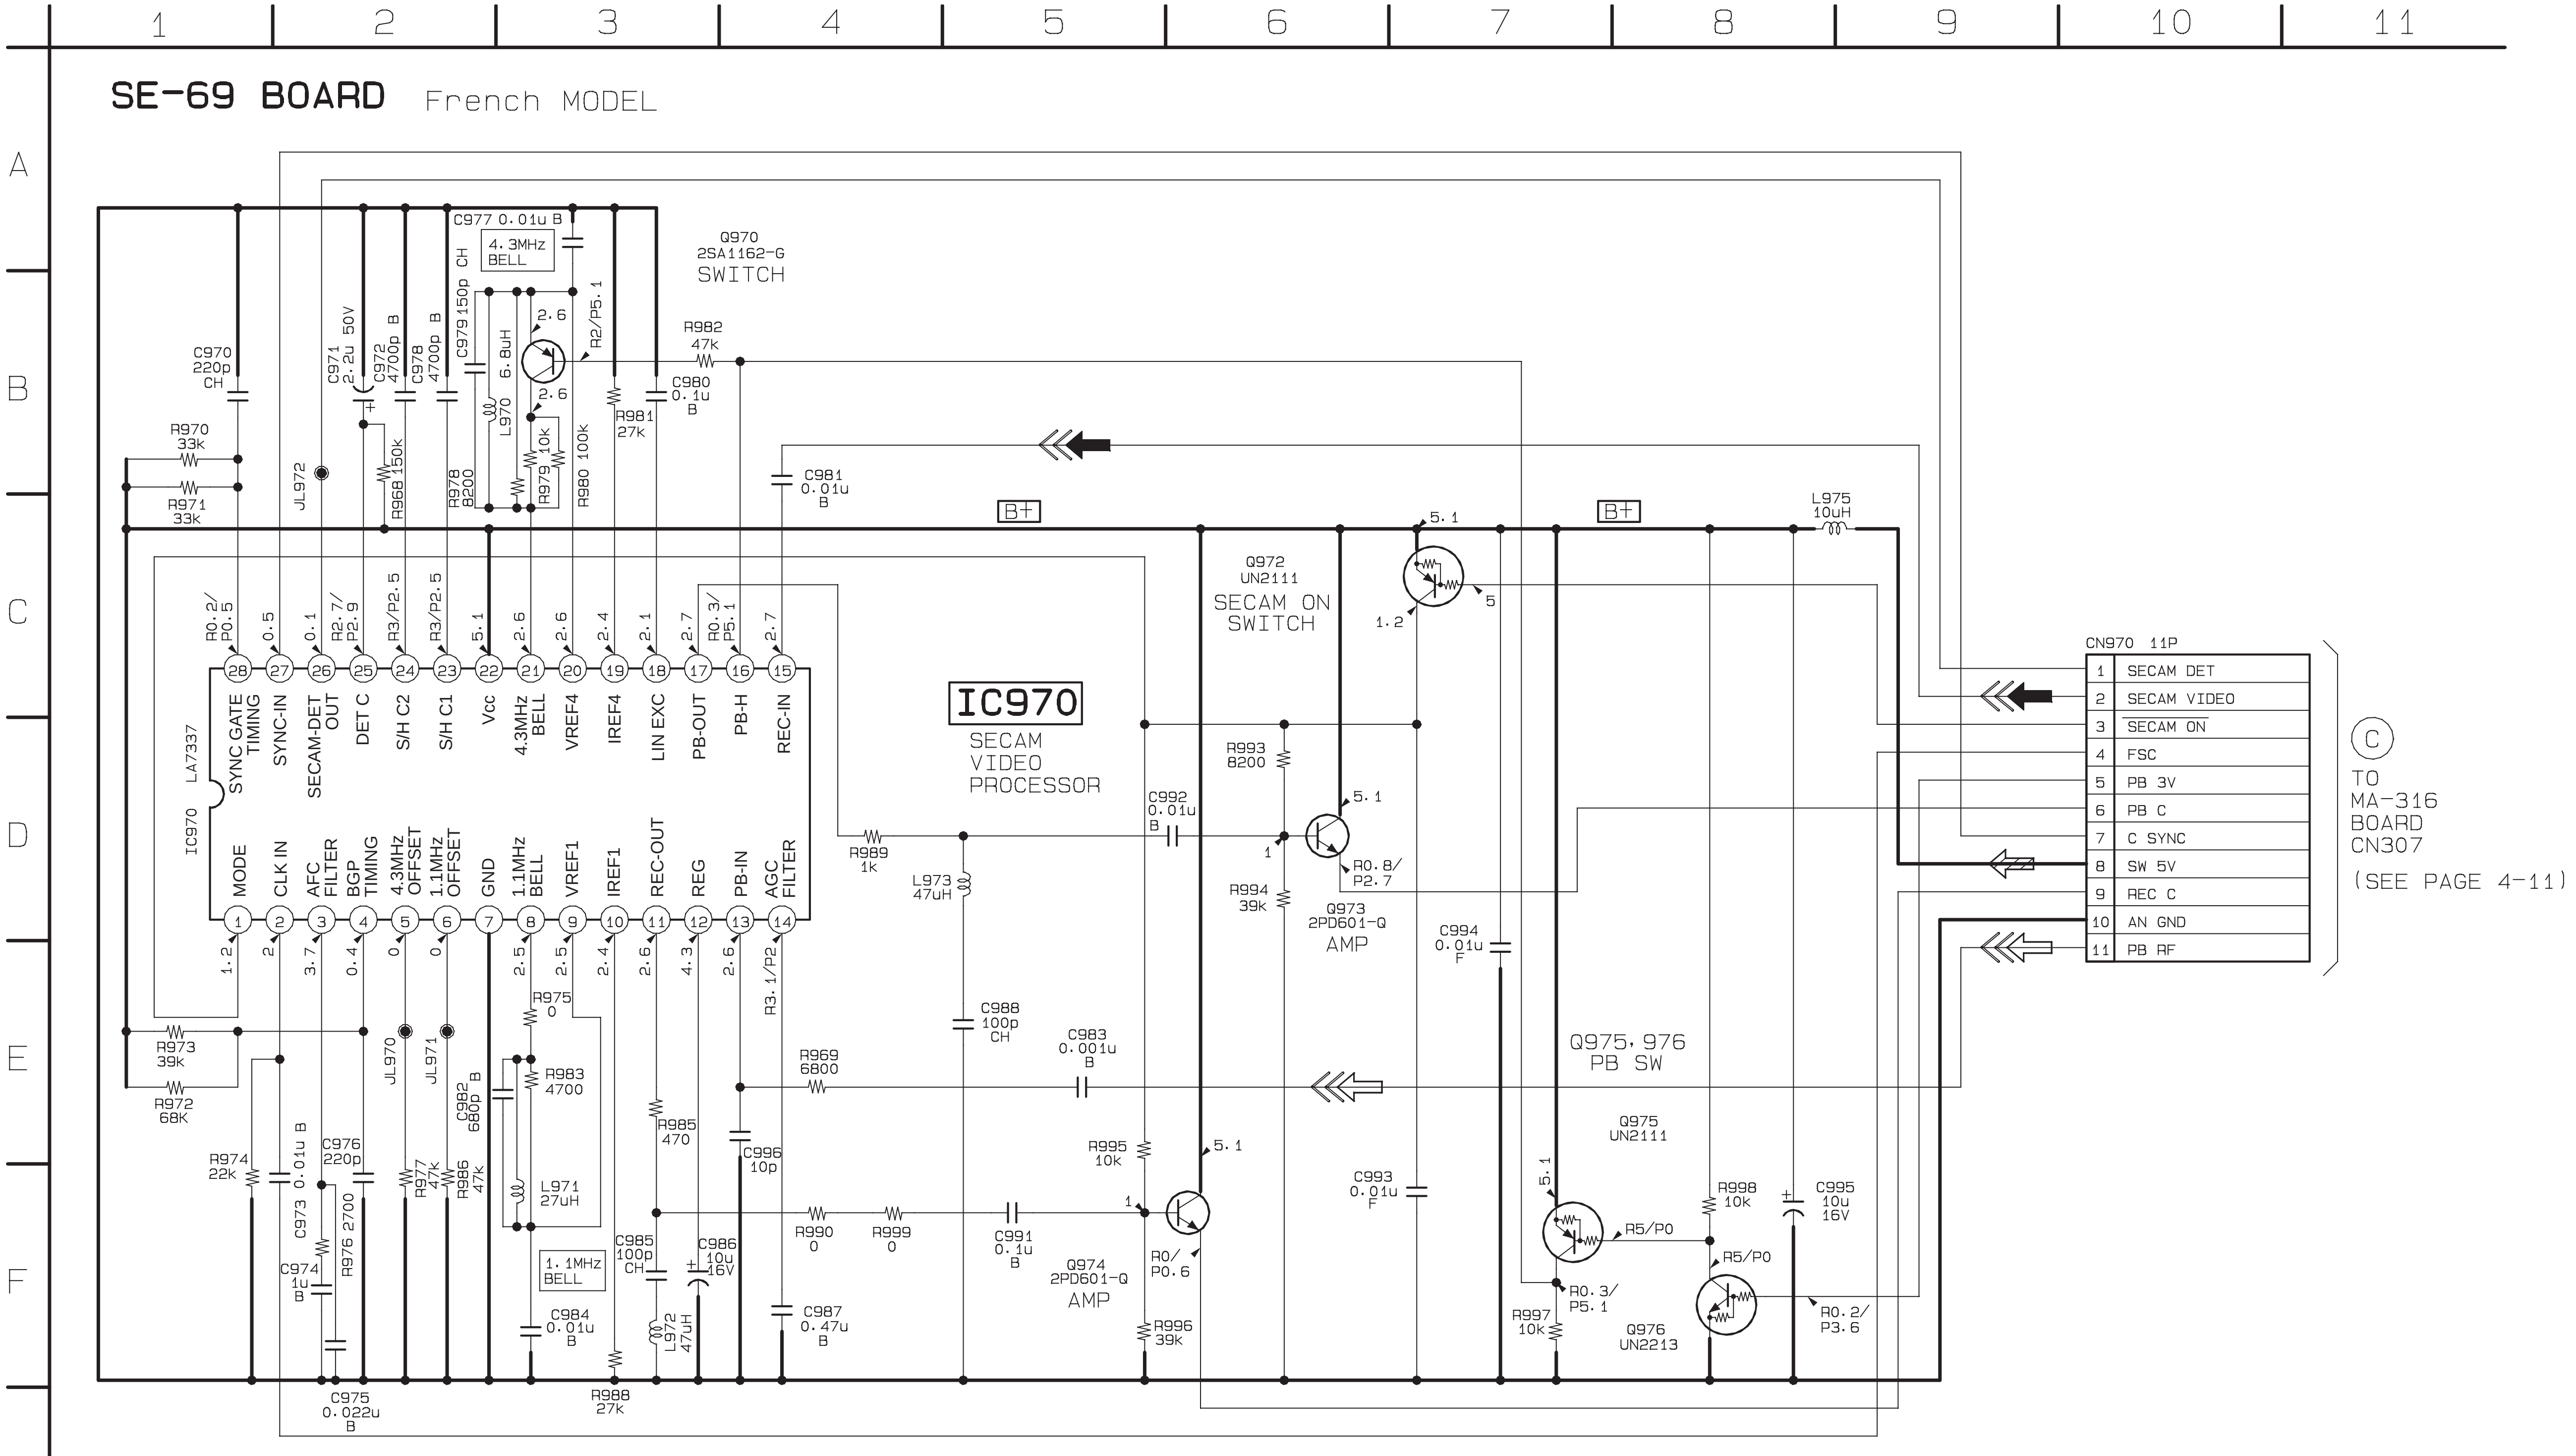

NO MARK : REC/PB MODE
R : REC MODE
P : PB MODE

•SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡ (solid arrow)	
PB			⇨ (open arrow)	

16

SE-69 (SECAM VIDEO SIGNAL PROCESS) PRINTED WIRING BOARD

— Ref. No.: SE-69 Board; 2,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

SE-69 BOARD (CONDUCTOR SIDE)

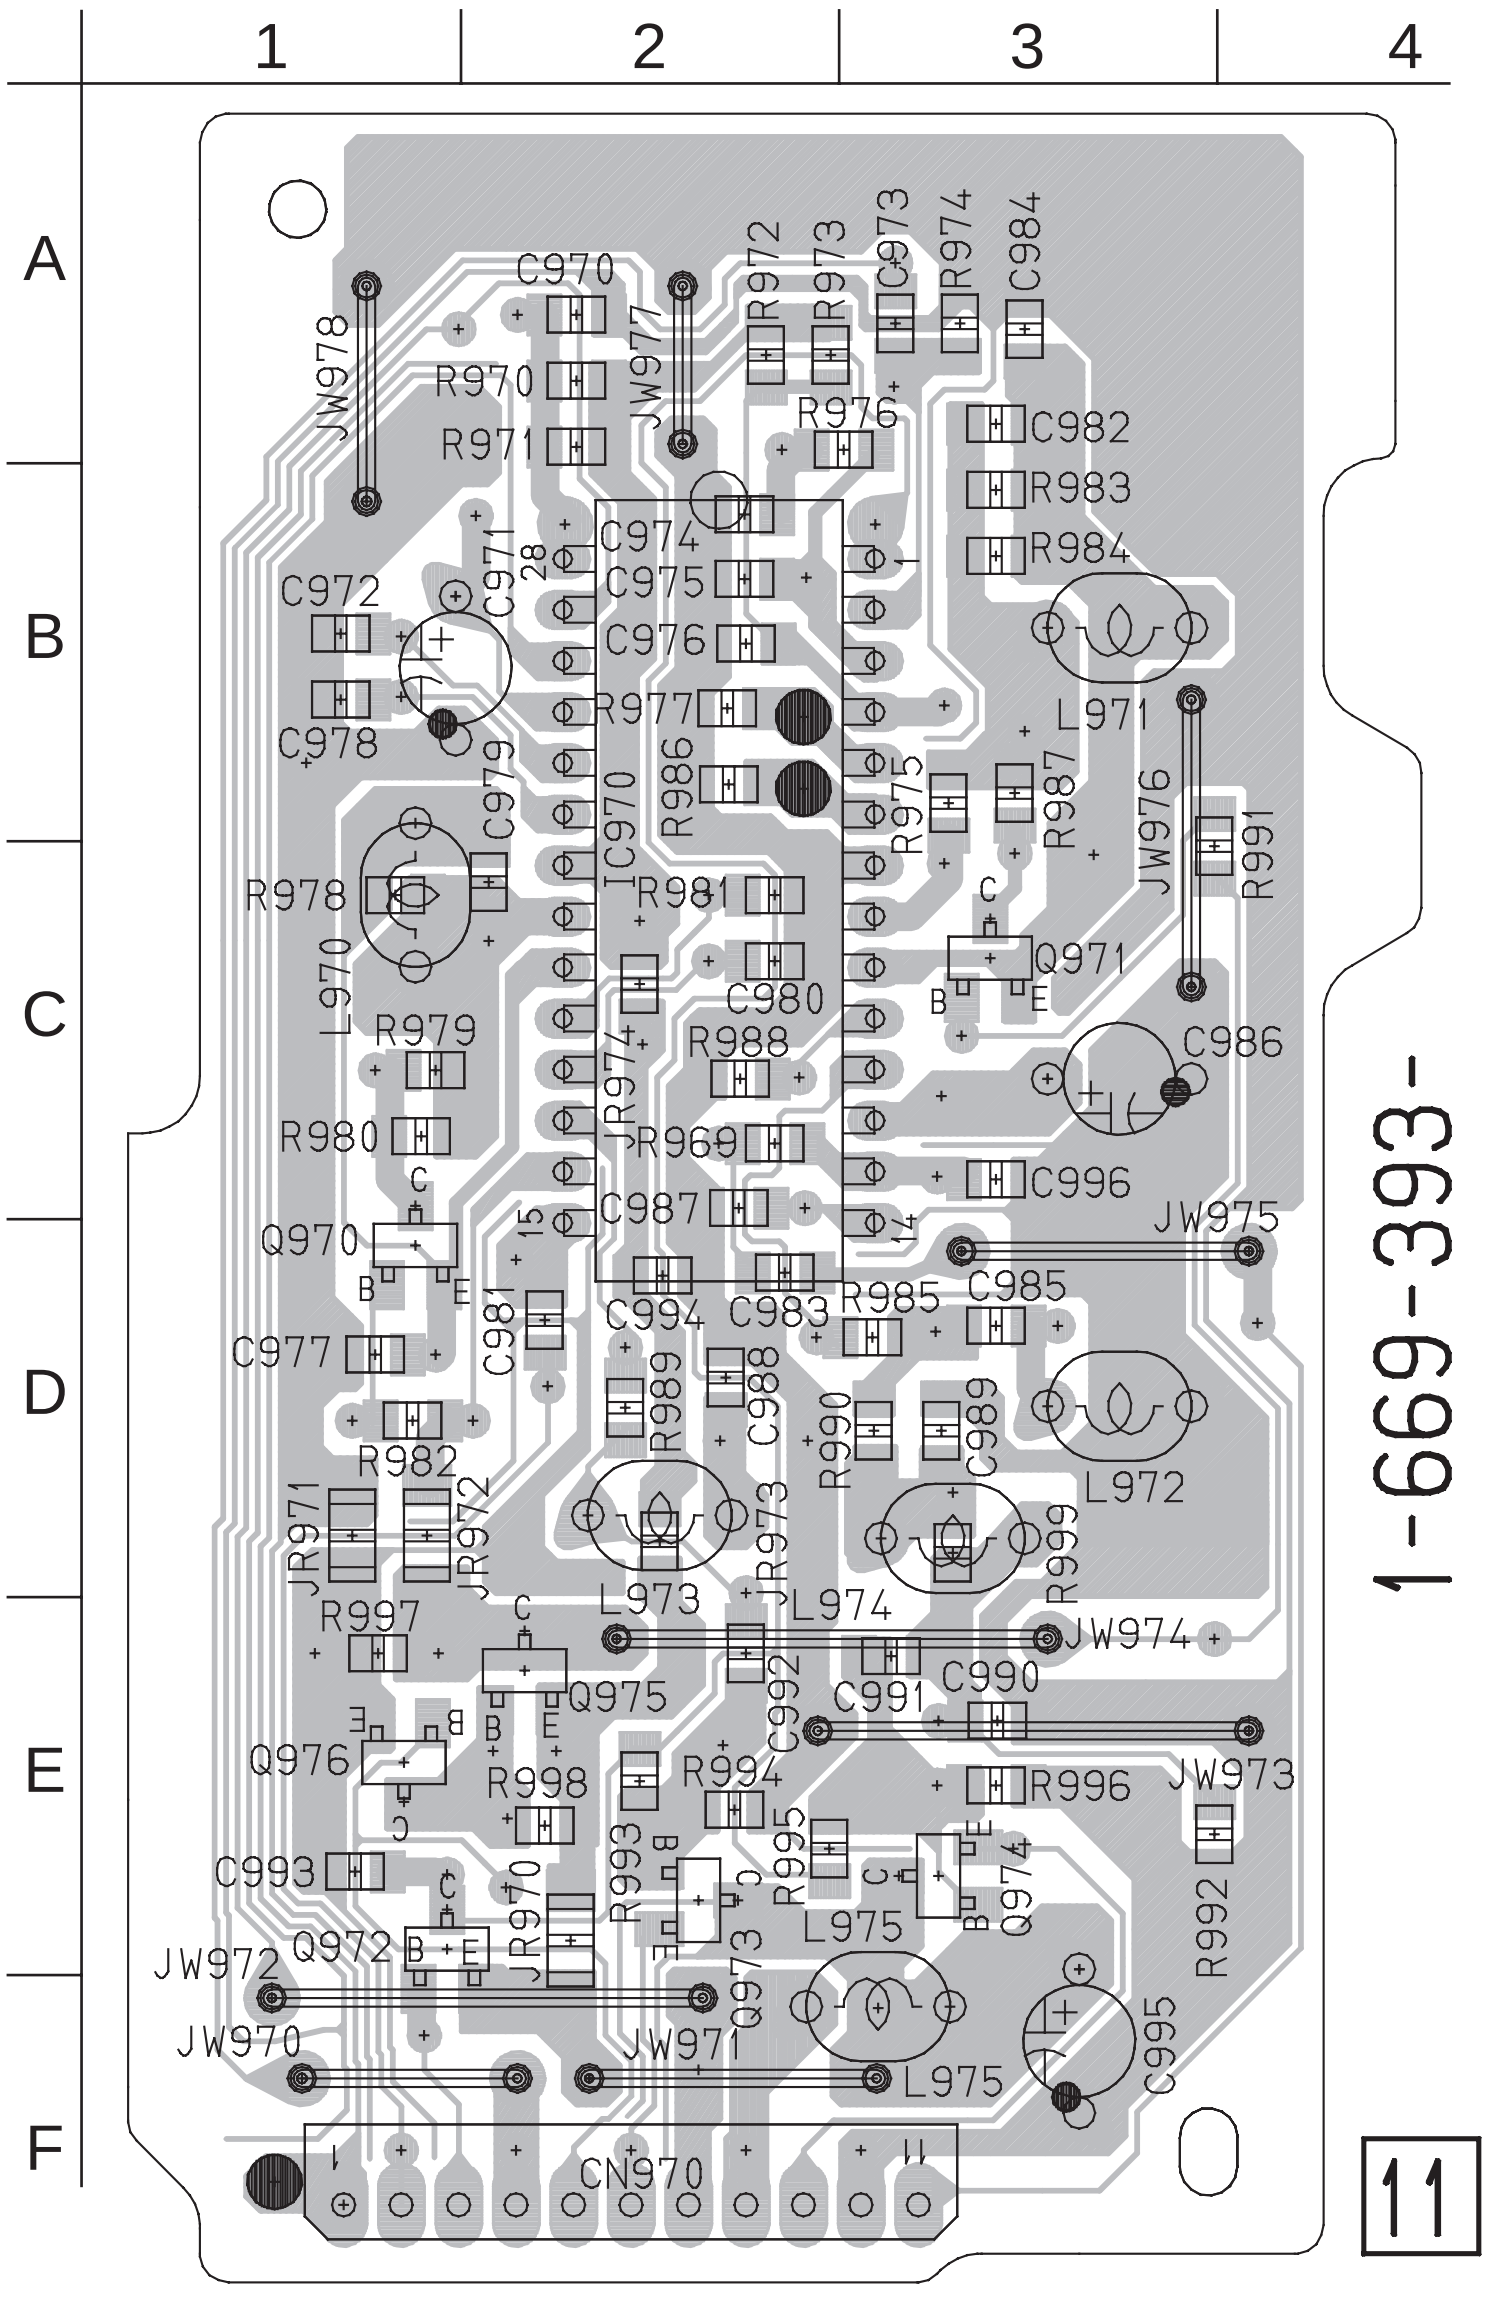

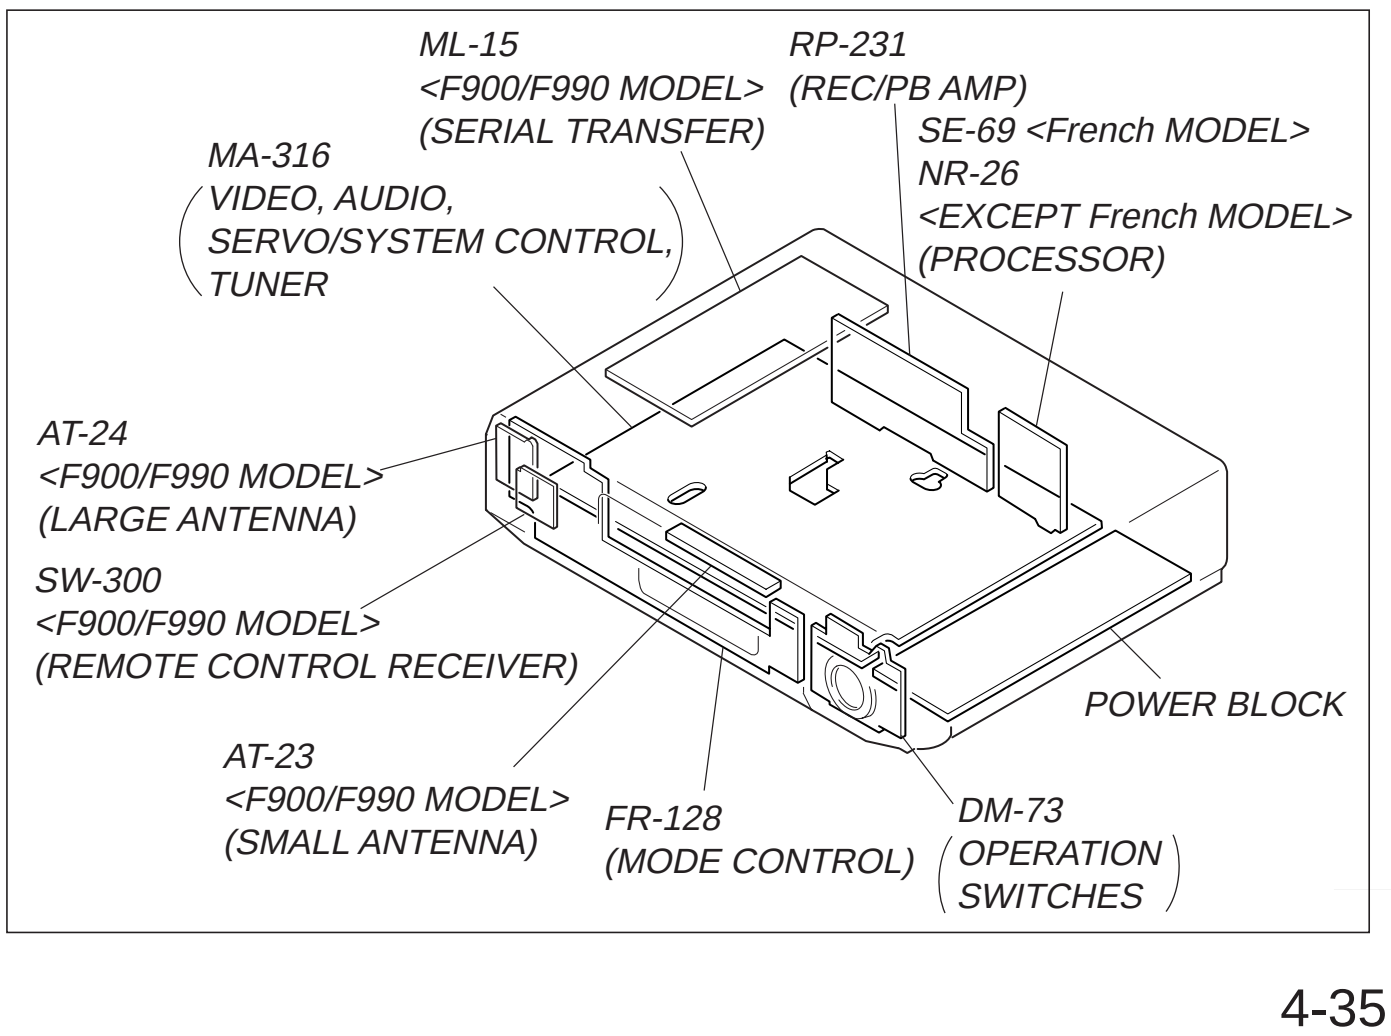

DM-73 (OPERATION SWITCHES) PRINTED WIRING BOARD

— Ref. No.: DM-73 Board; 2,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

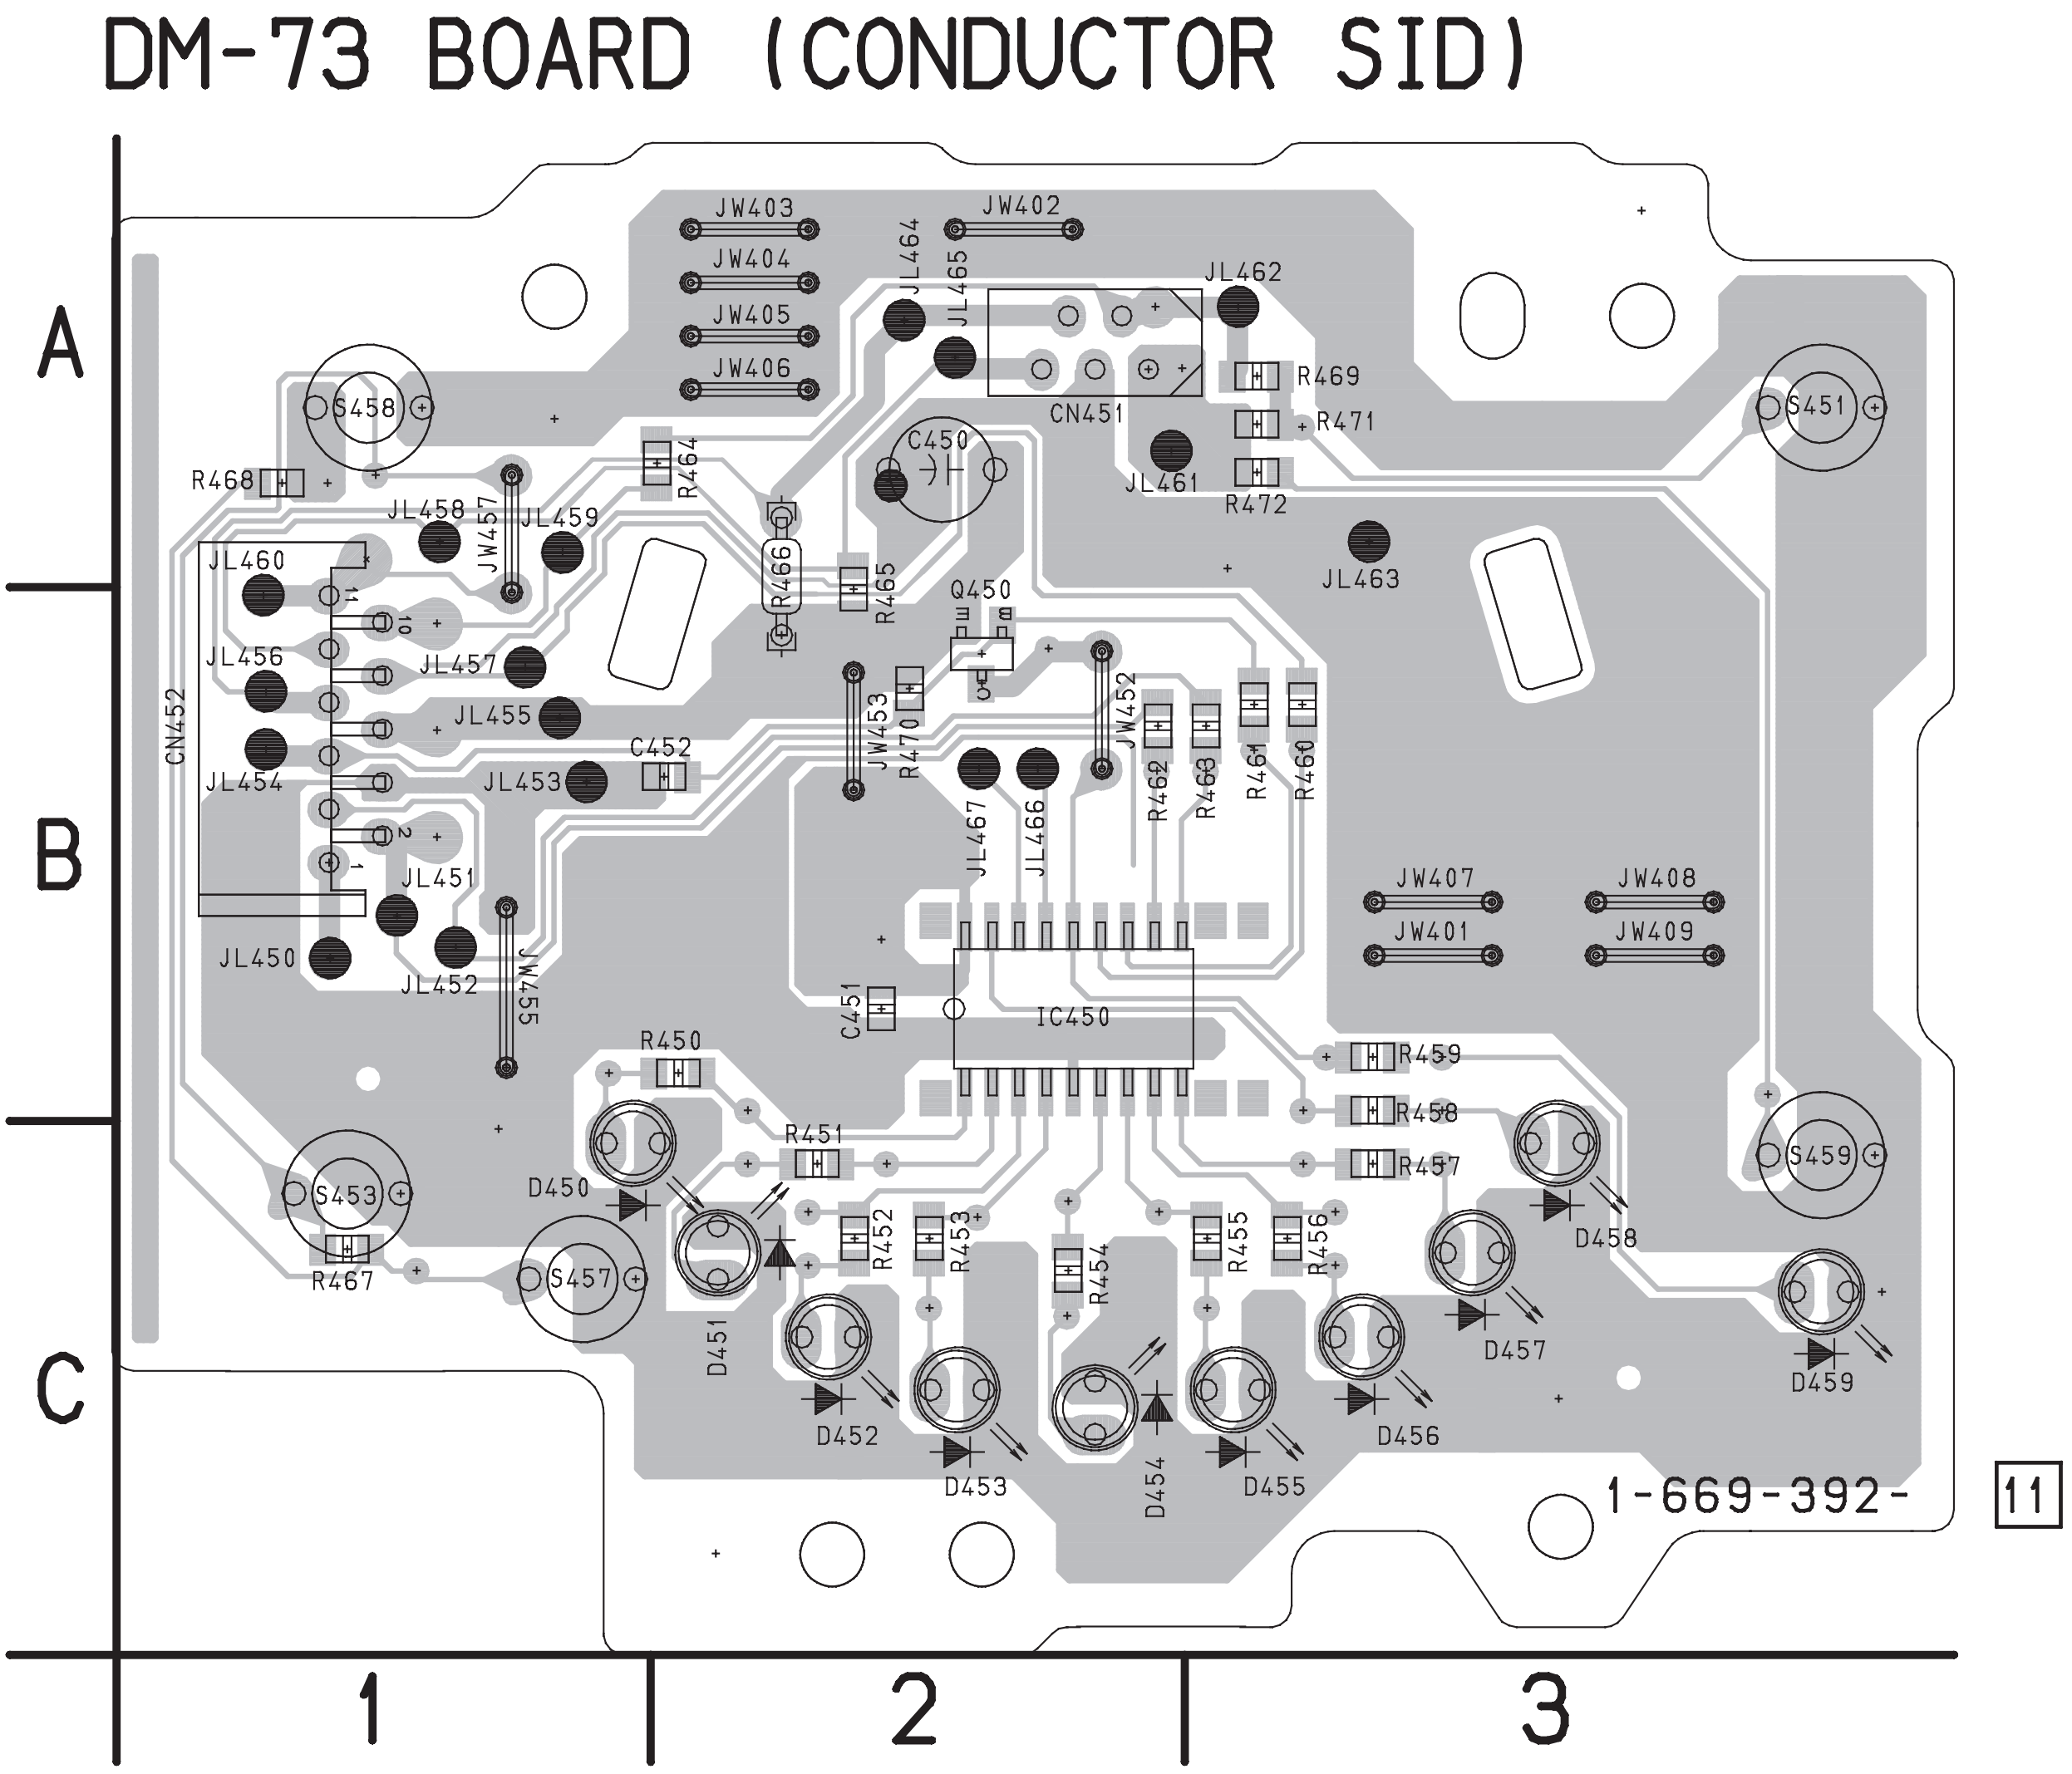

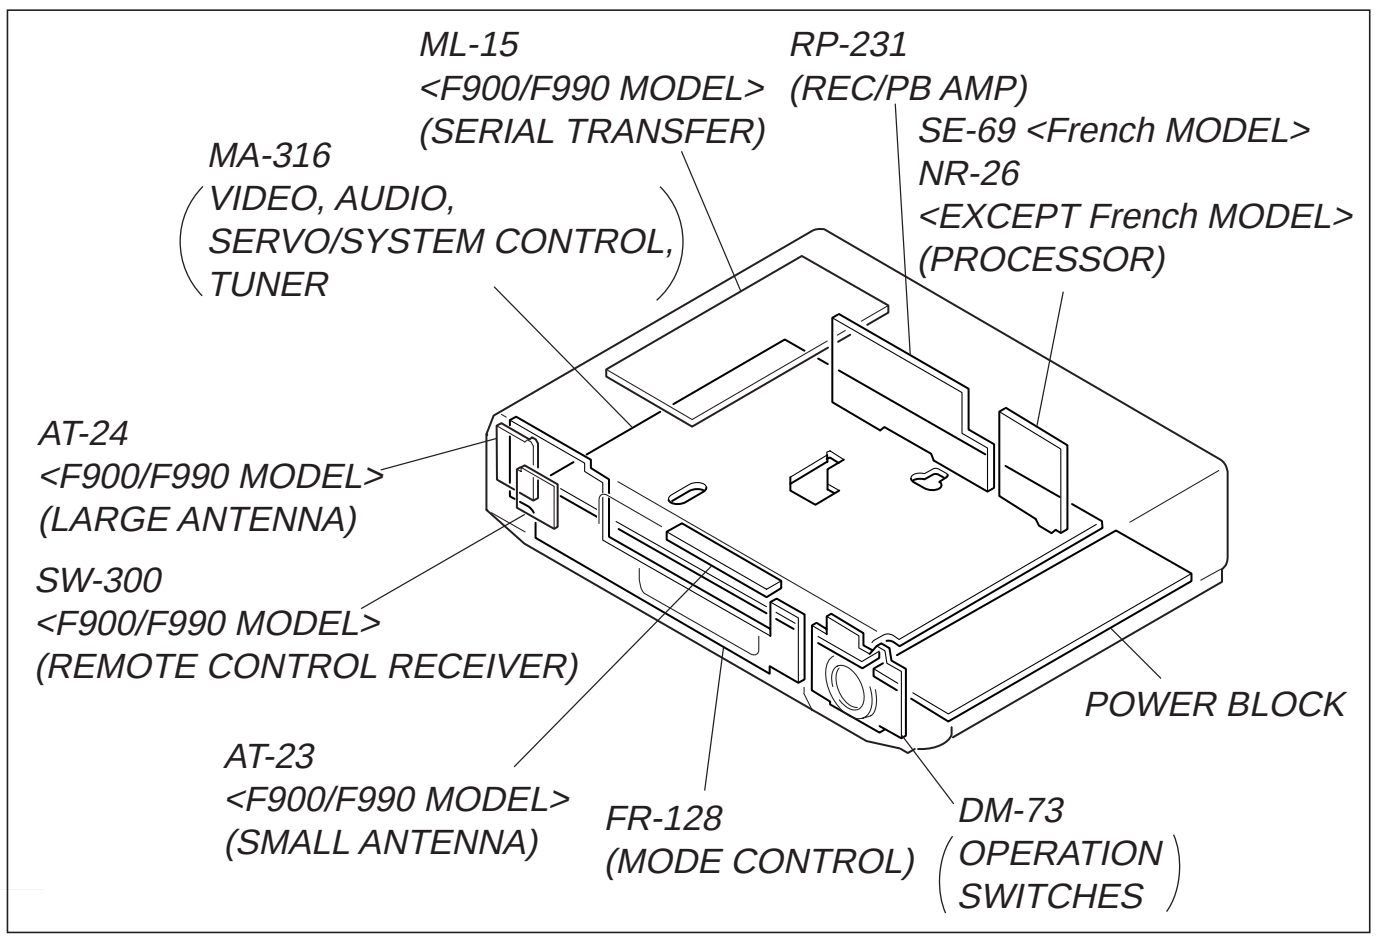

DM-73 (OPERATION SWITCHES) SCHEMATIC DIAGRAM

— Ref. No.: DM-73 Board; 2,000 Series —

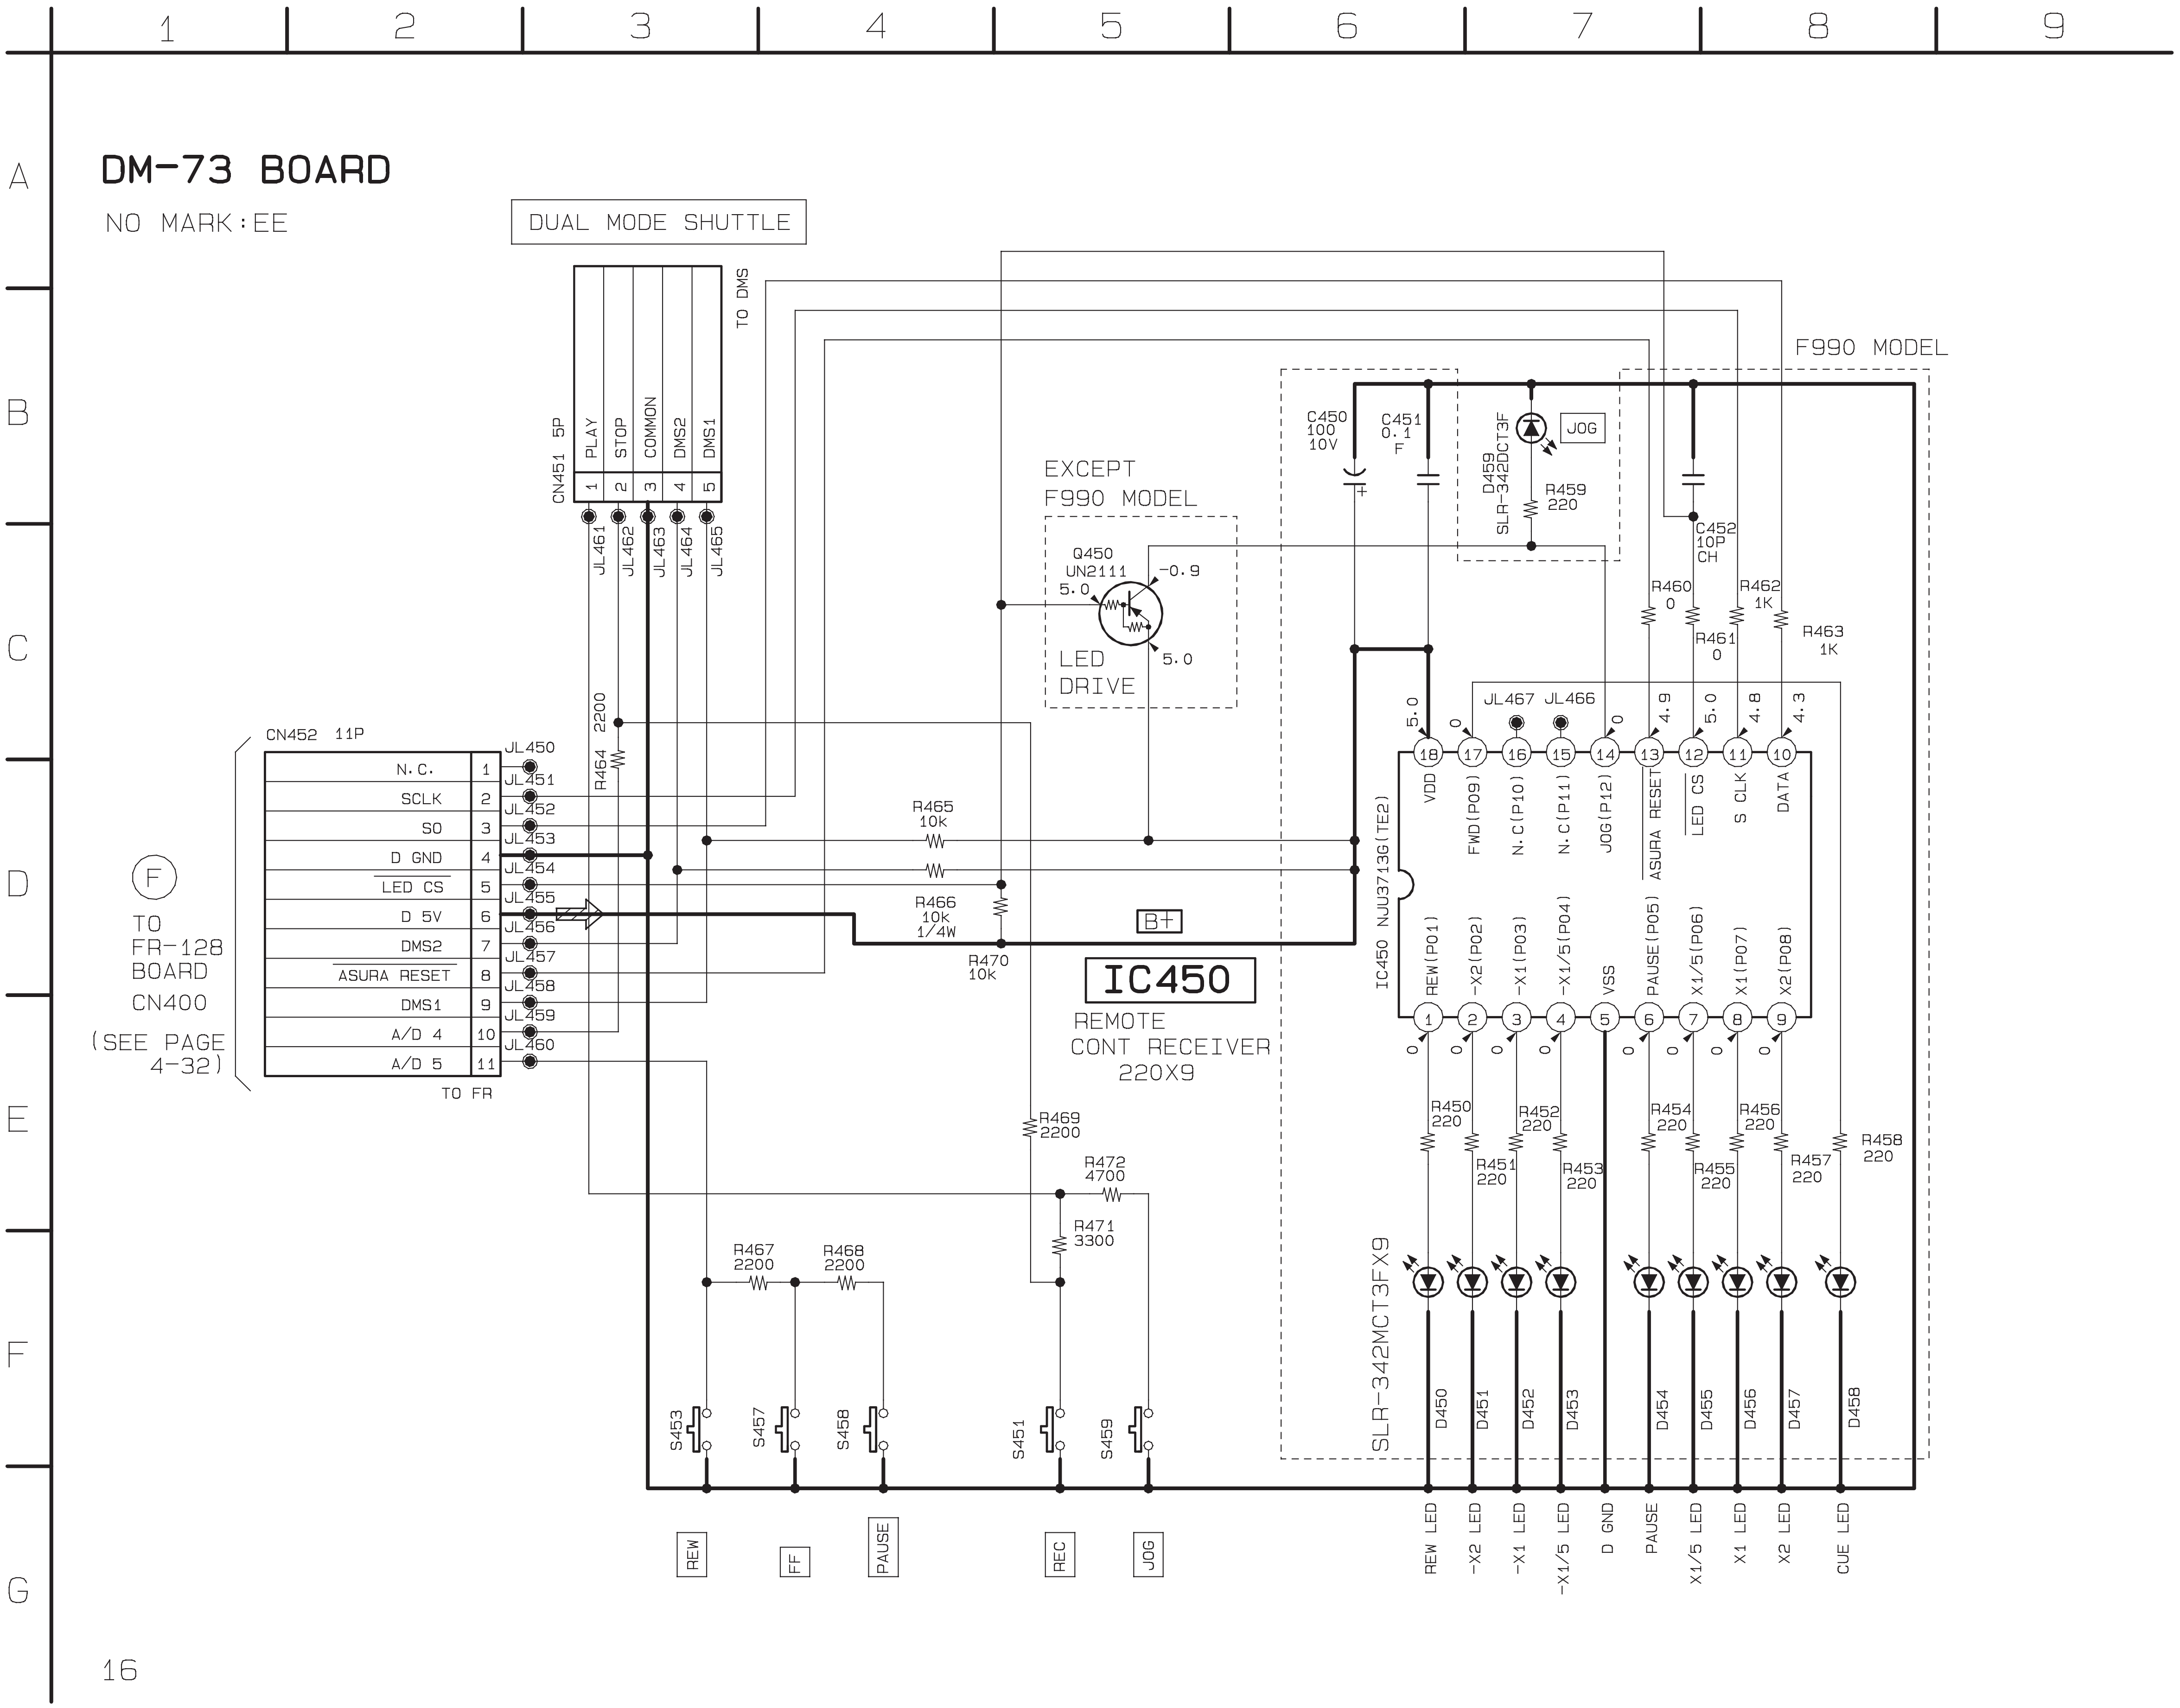

NR-26 (DNR PROCESSOR) PRINTED WIRING BOARD
— Ref. No.: NR-26 Board; 6,000 Series —

There are few cases that the part printed on this diagram isn’t mounted in this model.

NR-26 BOARD (COMPONENT SIDE)

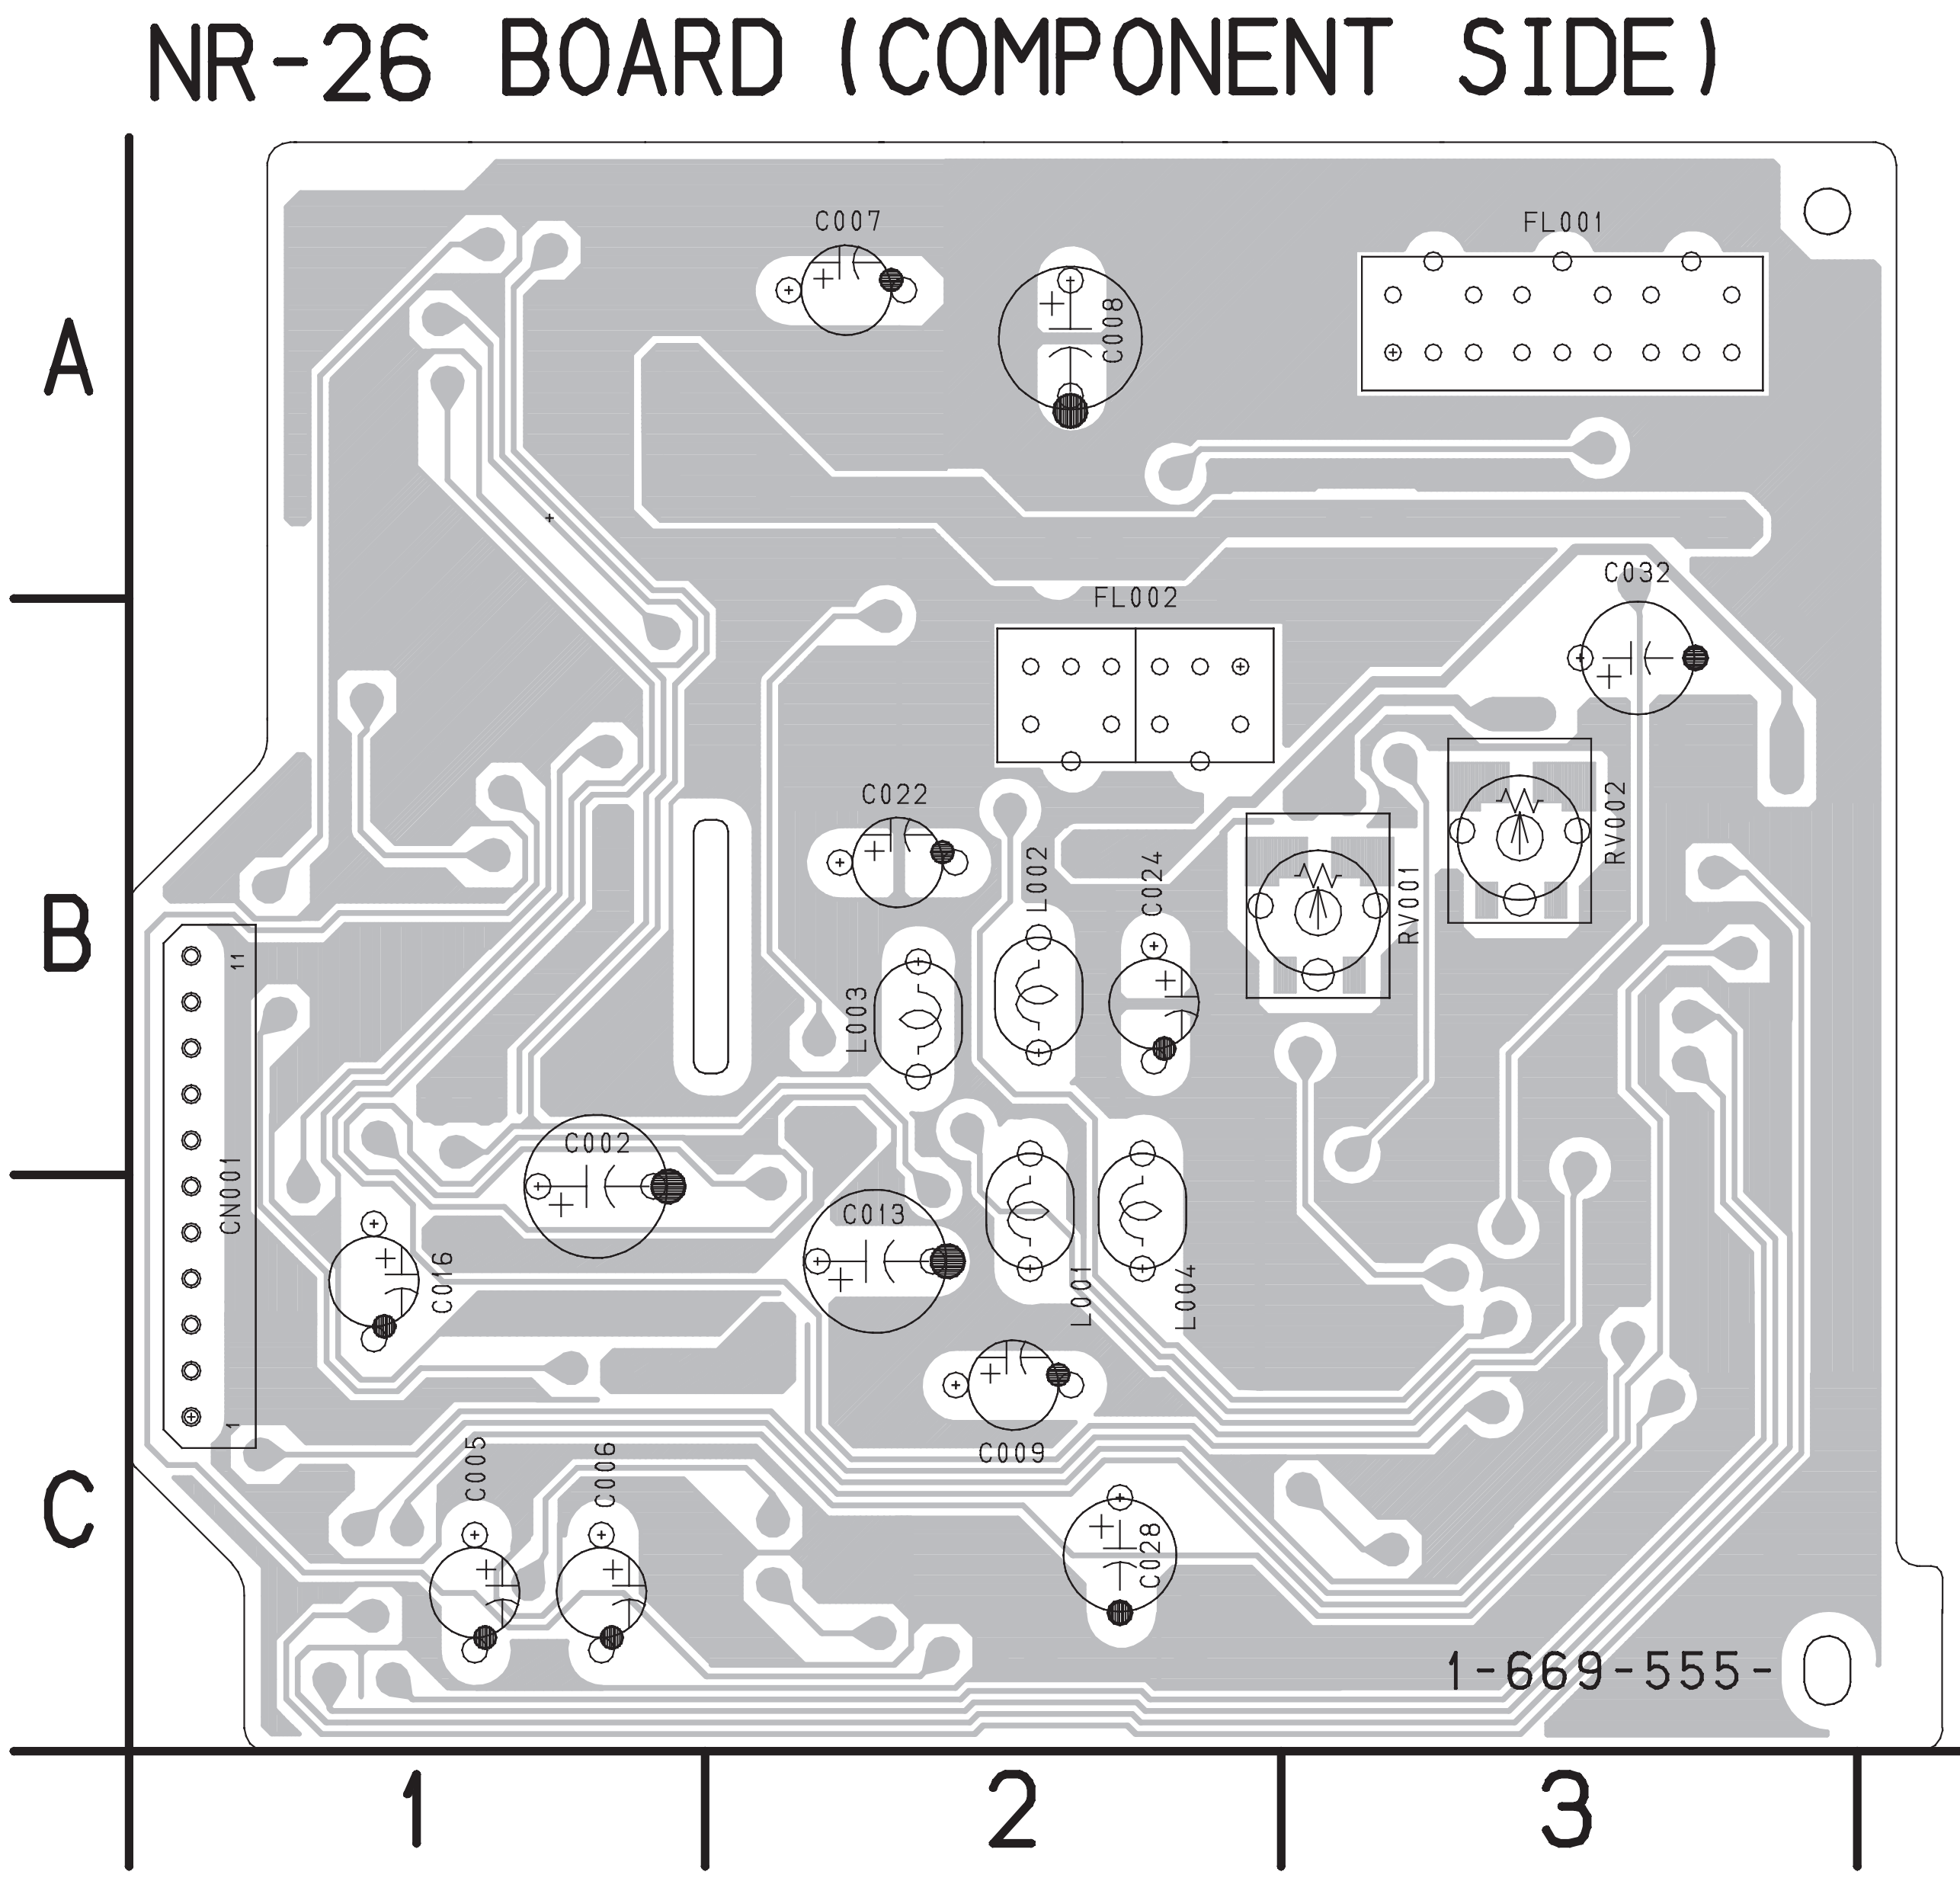

NR-26 BOARD (CONDUCTOR SIDE)

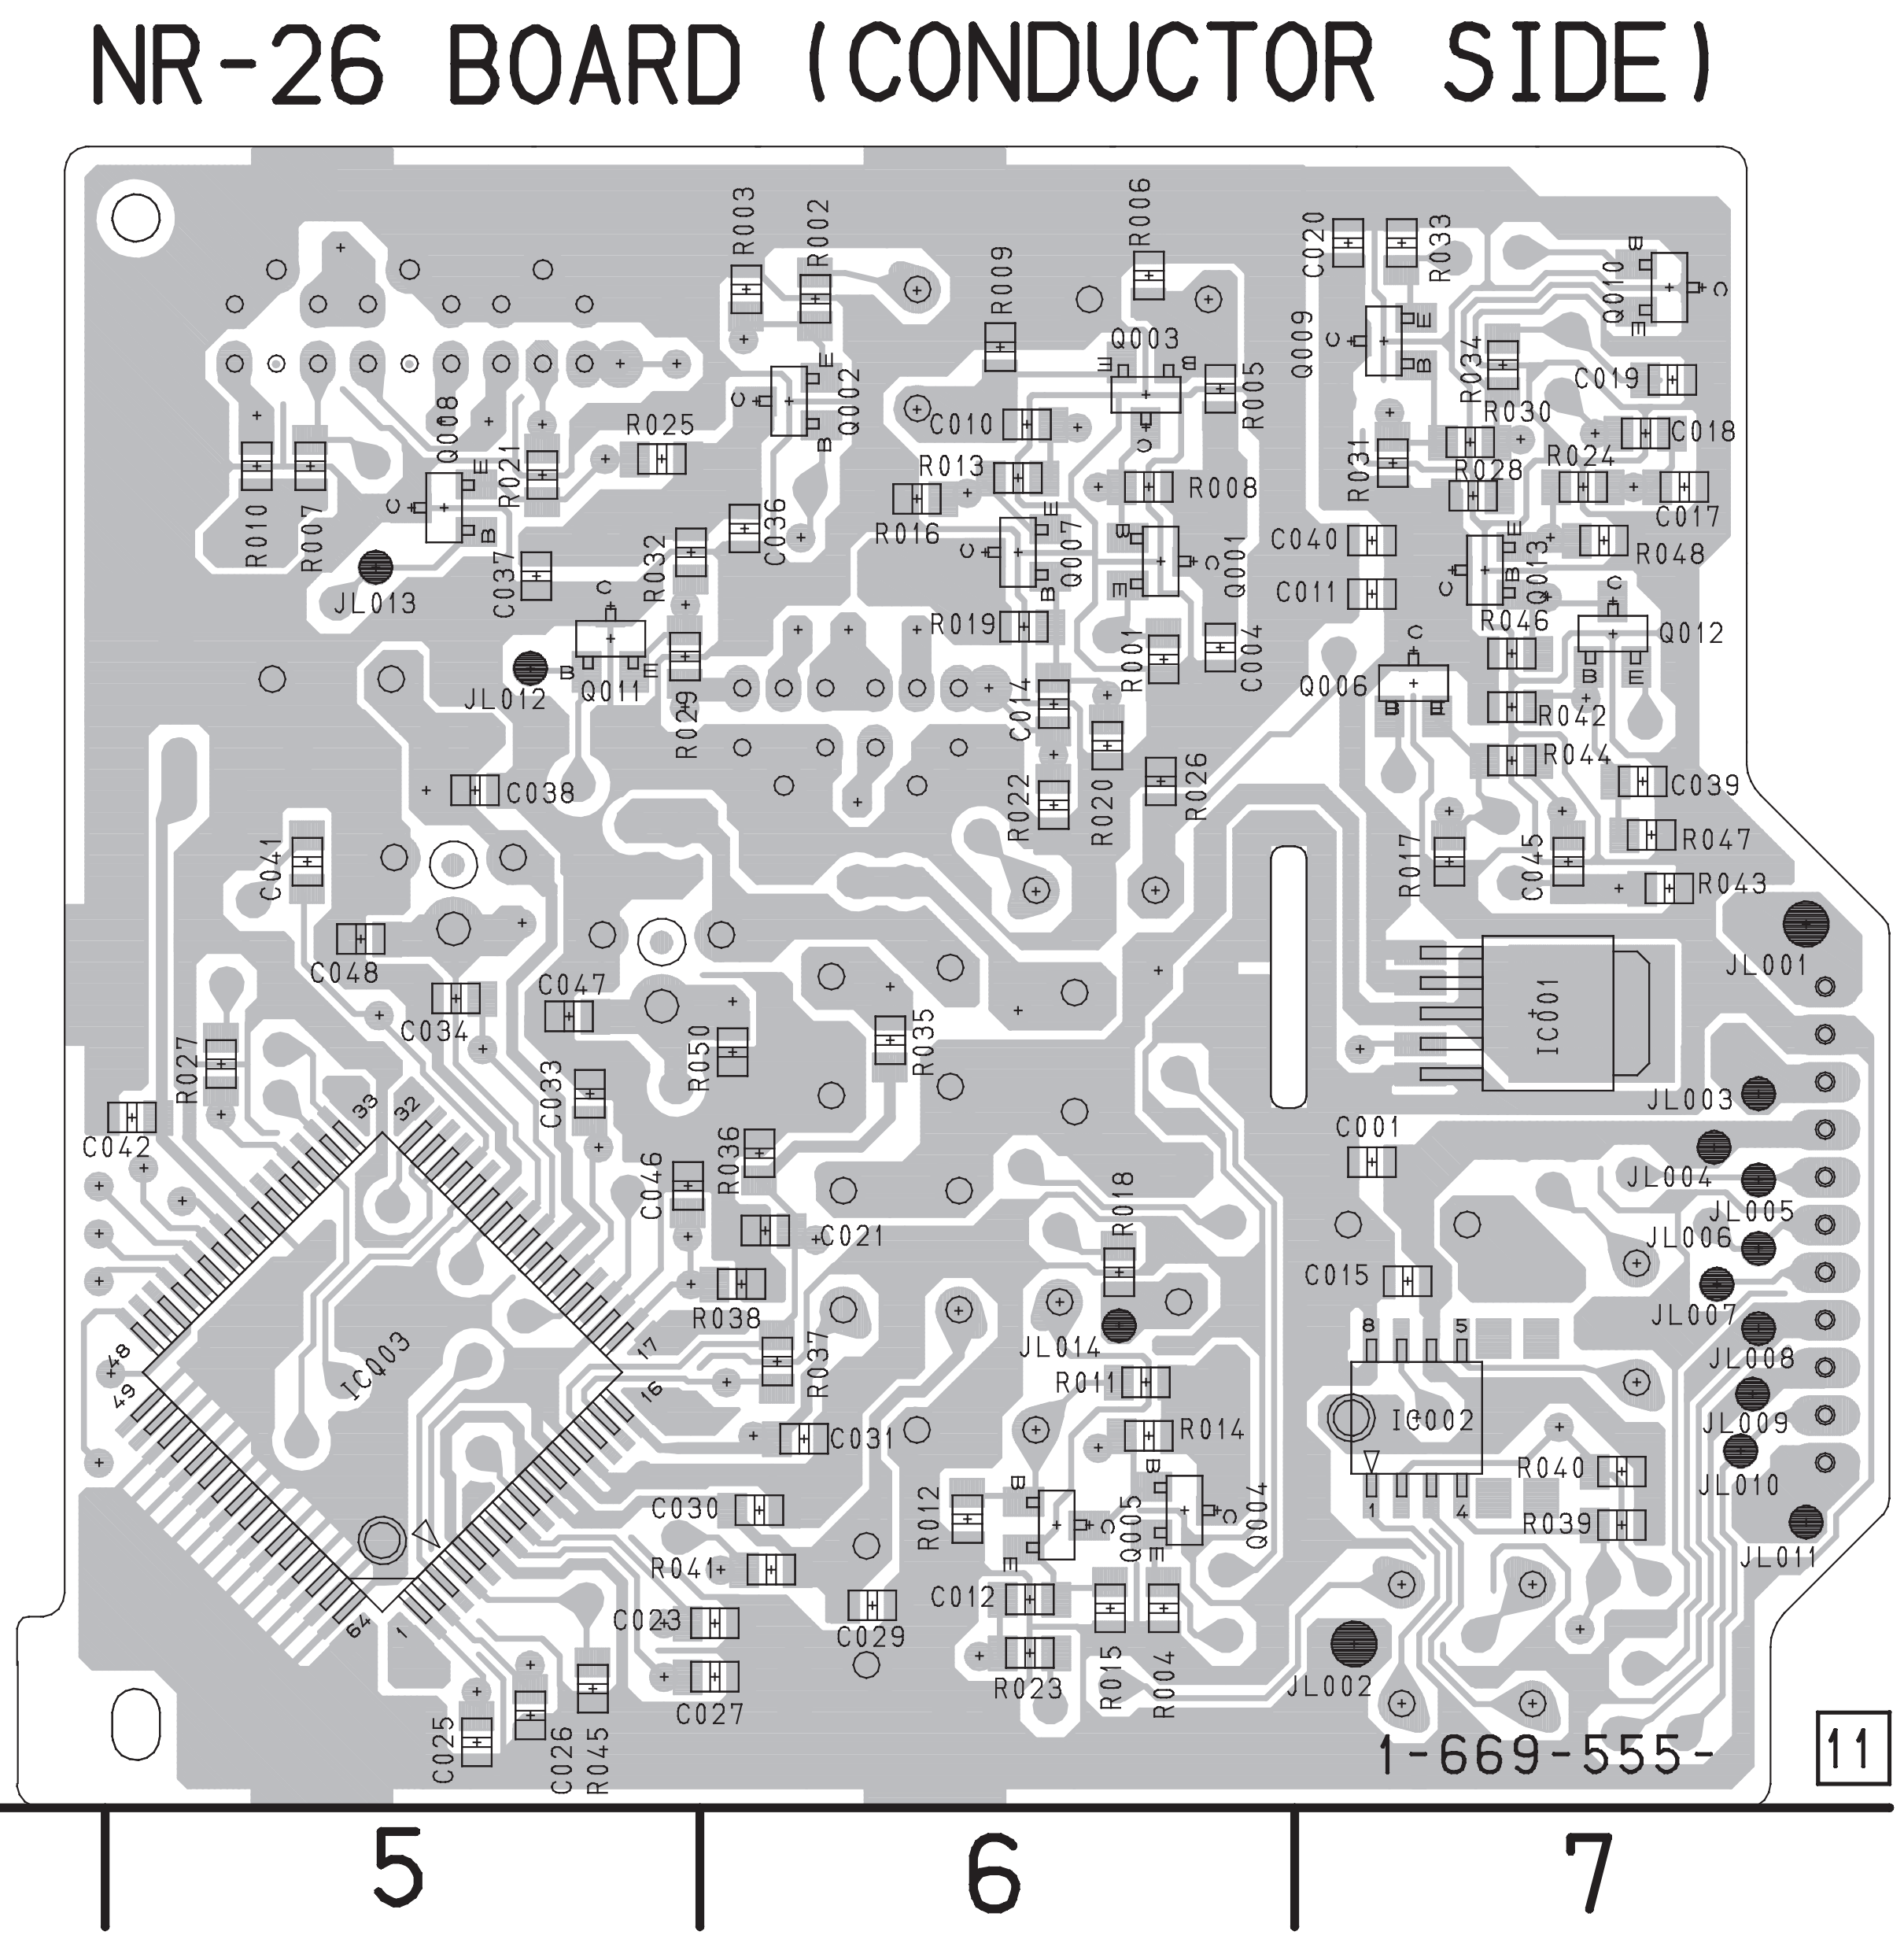

NR-26 BOARD

IC001	B-7	Q006	B-7
IC002	C-7	Q007	B-6
IC003	C-5	Q008	A-5
		Q009	A-7
Q001	B-6	Q010	A-7
Q002	A-6	Q011	B-5
Q003	A-6	Q012	B-7
Q004	C-6	Q013	B-7
Q005	C-6		

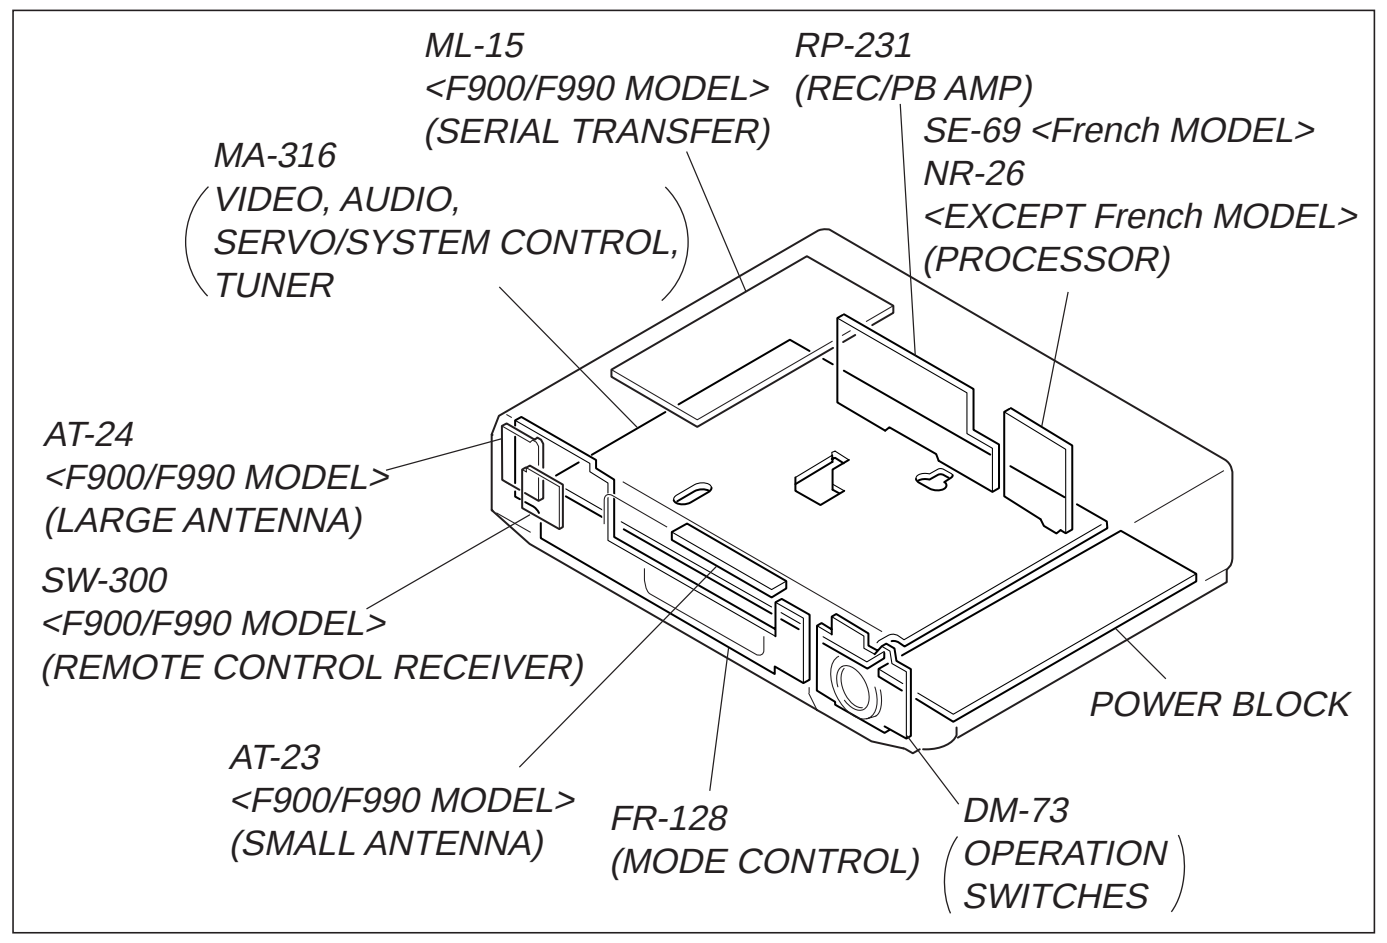

NR-26 (DNR PROCESSOR) SCHEMATIC DIAGRAM
— Ref. No.: NR-26 Board; 6,000 Series —

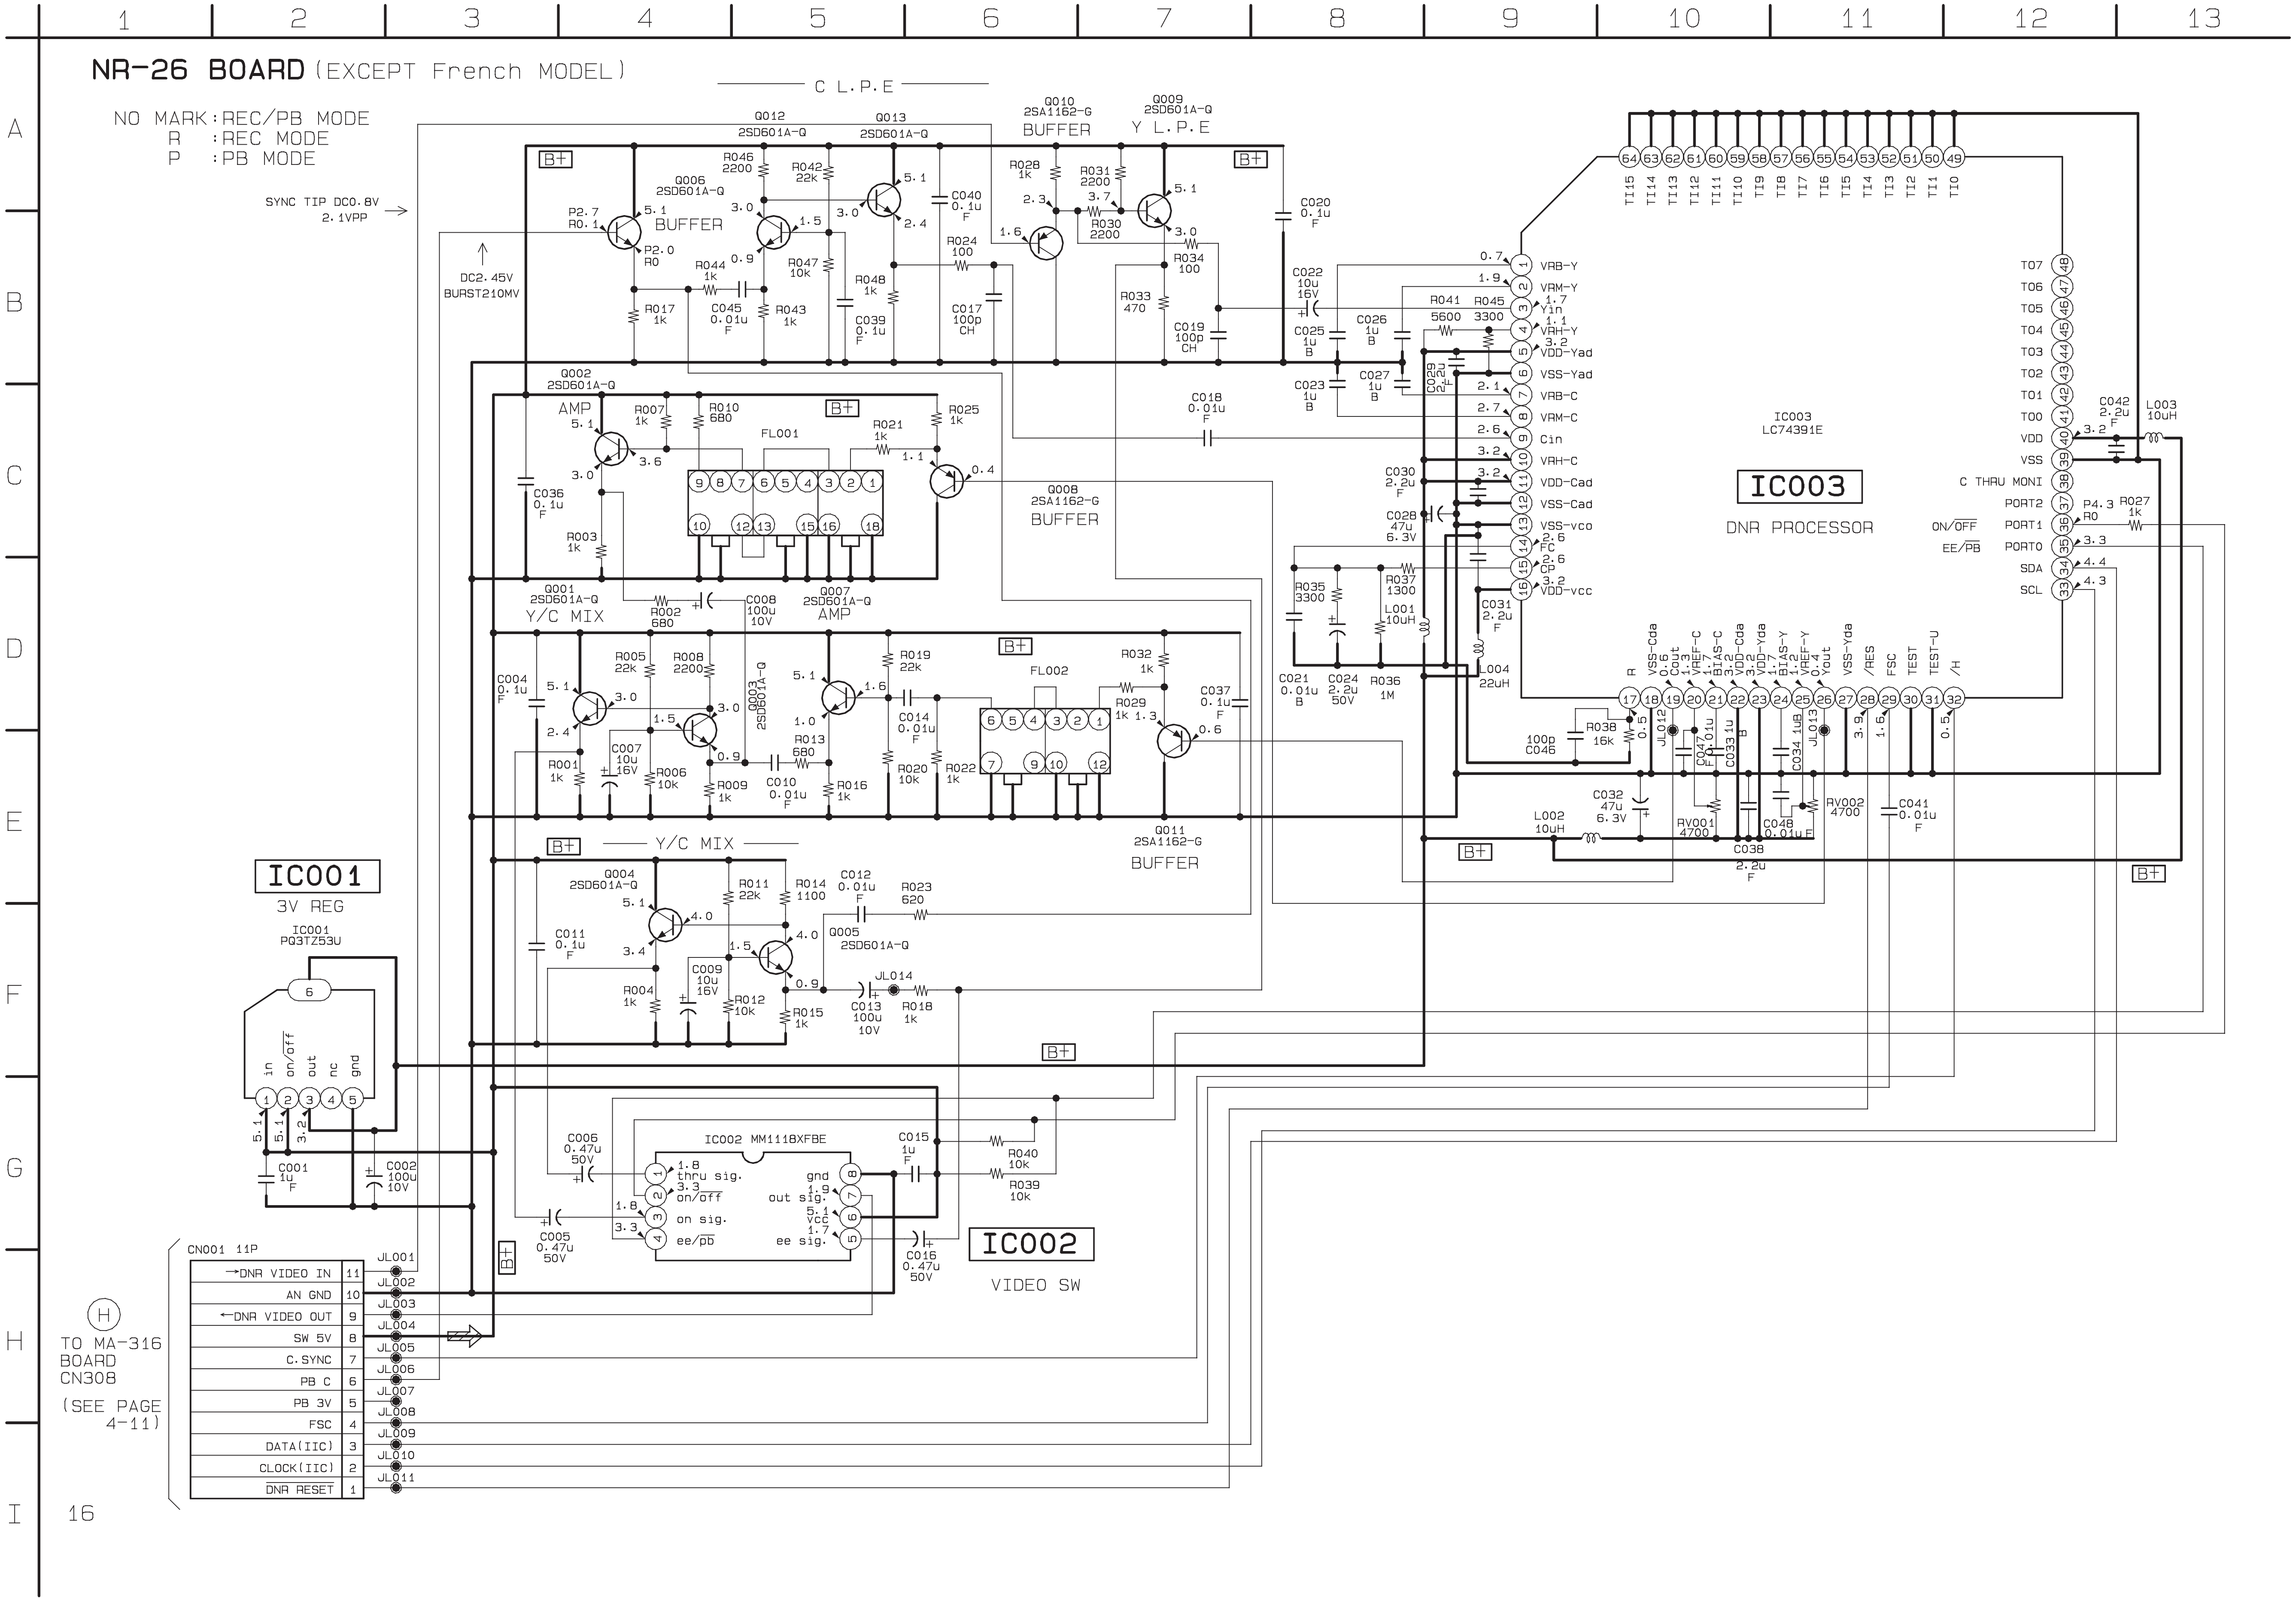

ML-15 (SERIAL TRANSFER) PRINTED WIRING BOARD
— Ref. No.: ML-15 Board; 6,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

ML-15 BOARD (CONDUCTOR SIDE)

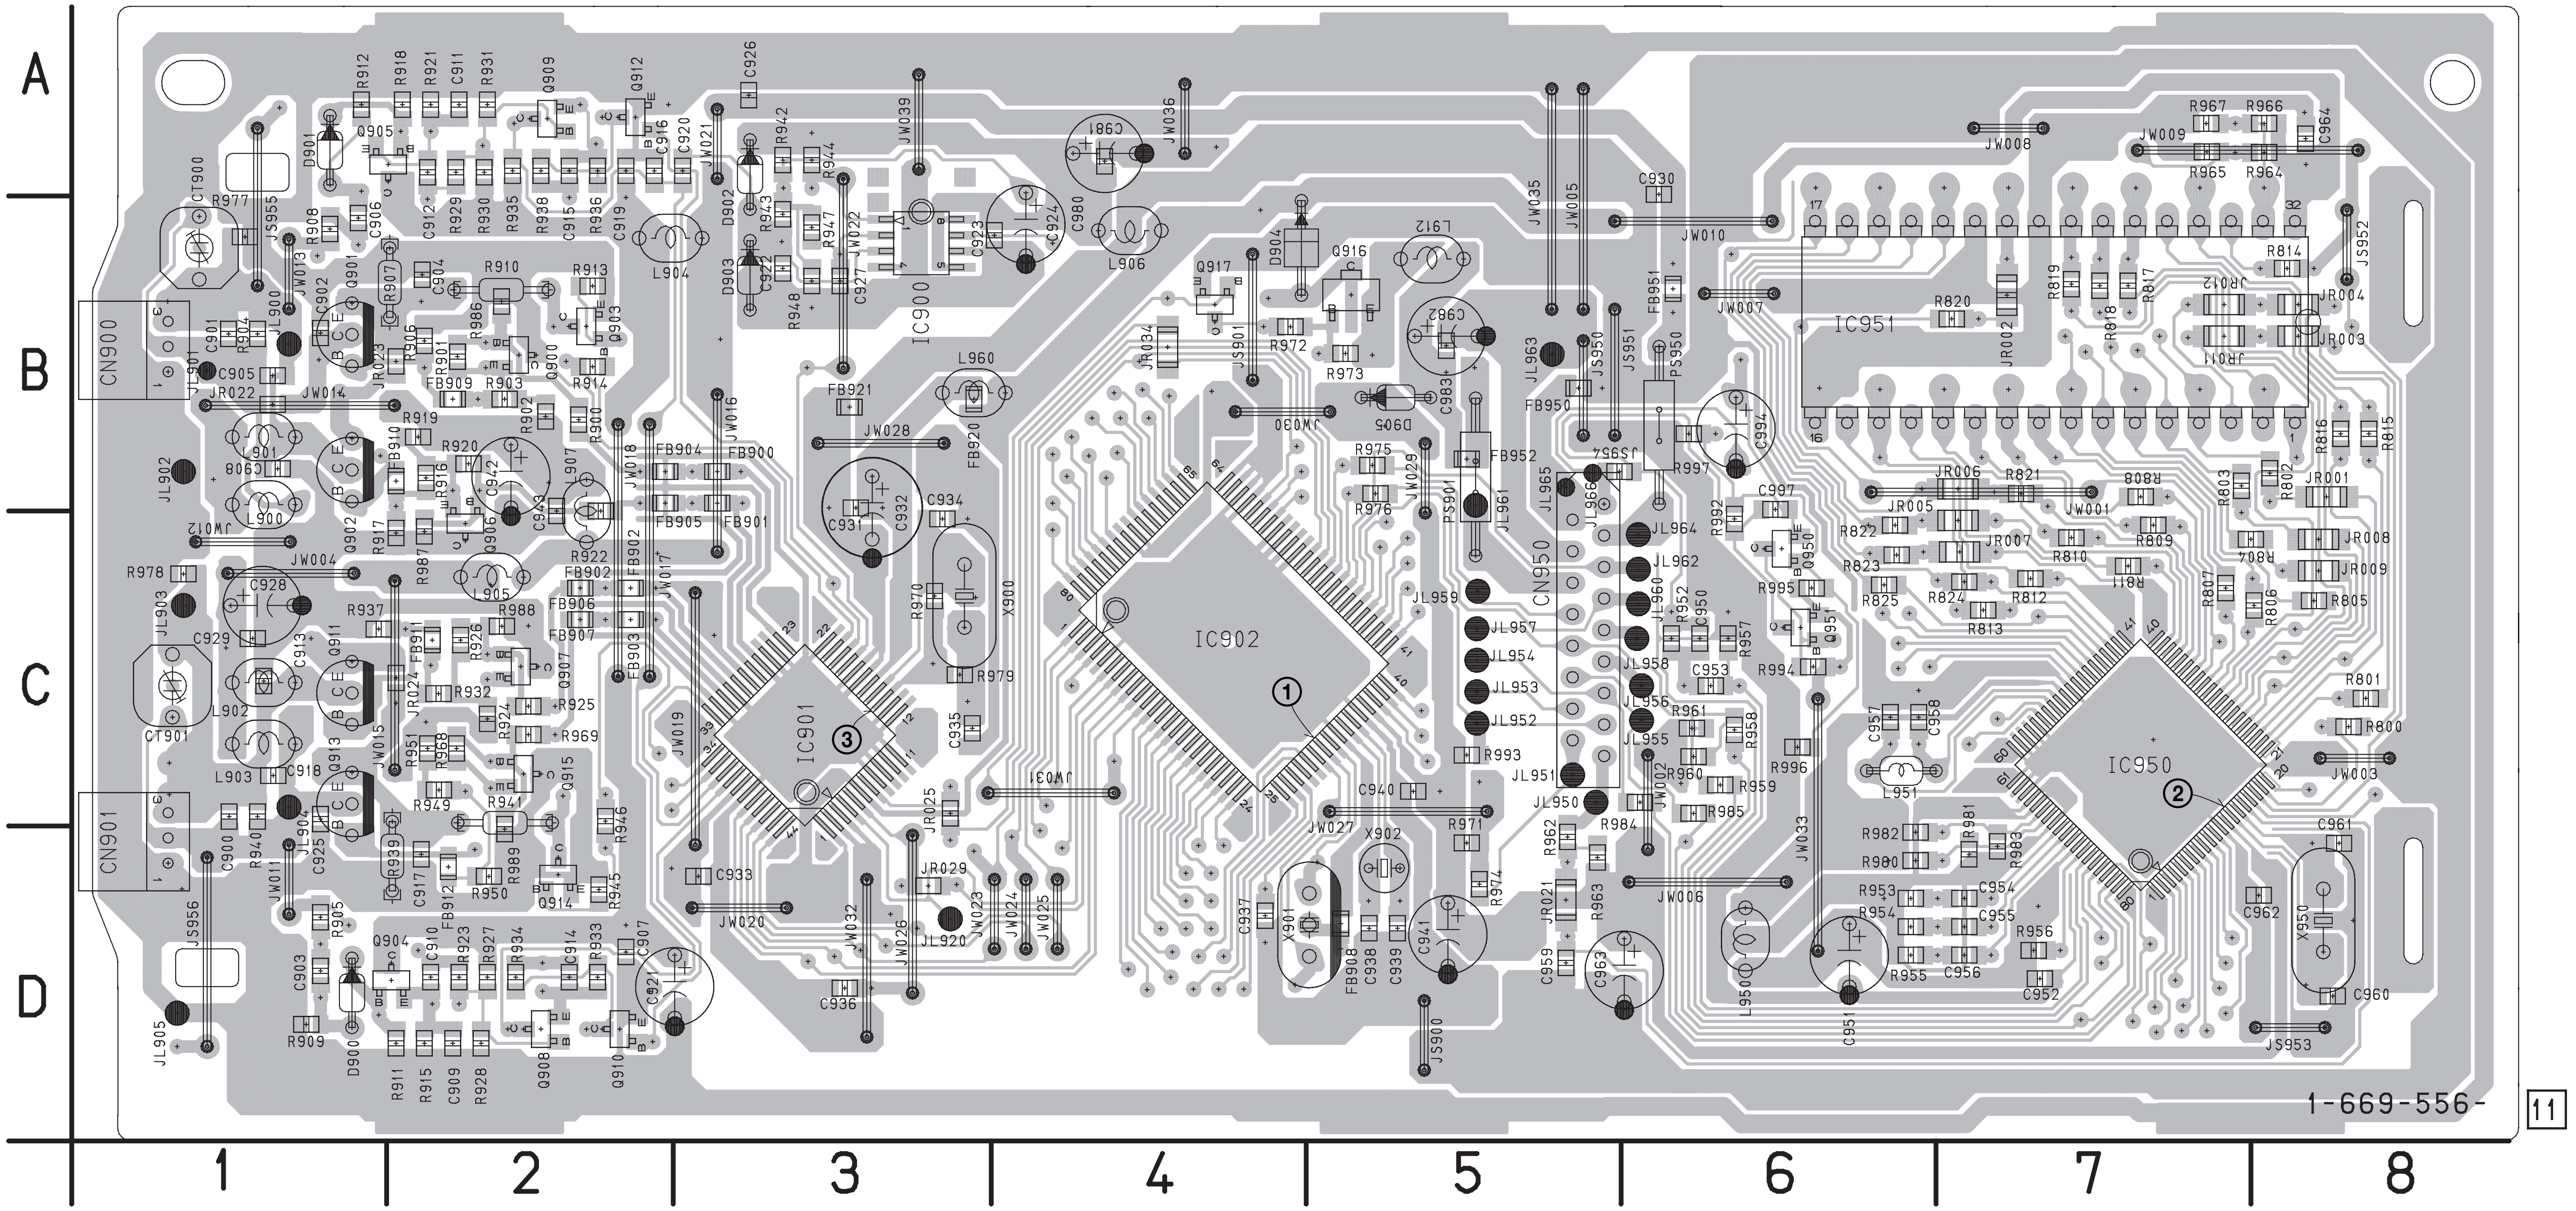

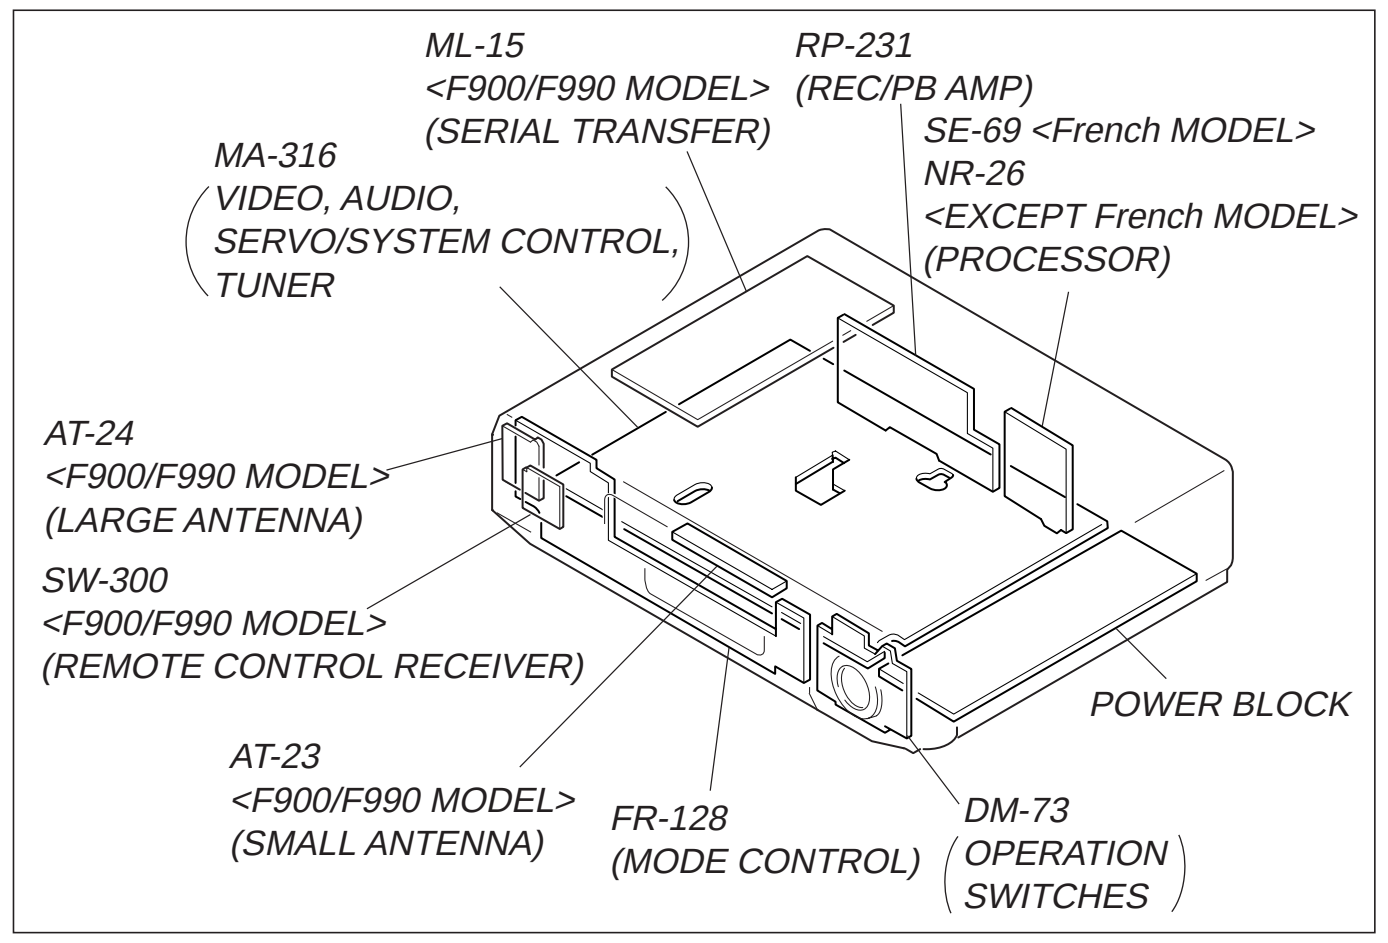

ML-15 BOARD

D900	D-1	Q904	D-2
D901	A-1	Q905	A-2
D902	A-3	Q906	C-2
D903	B-3	Q907	C-2
D904	B-5	Q908	D-2
D905	B-5	Q909	B-2
		Q910	D-2
IC900	B-3	Q911	C-1
IC901	C-3	Q912	A-2
IC902	C-4	Q913	C-1
IC950	D-7	Q914	D-2
		Q915	C-2
Q900	B-2	Q916	B-5
Q901	B-1	Q917	B-4
Q902	B-1		
Q903	B-2		

ML-15 (SERIAL TRANSFER) SCHEMATIC DIAGRAM

— Ref. No.: ML-15 Board; 6,000 Series —

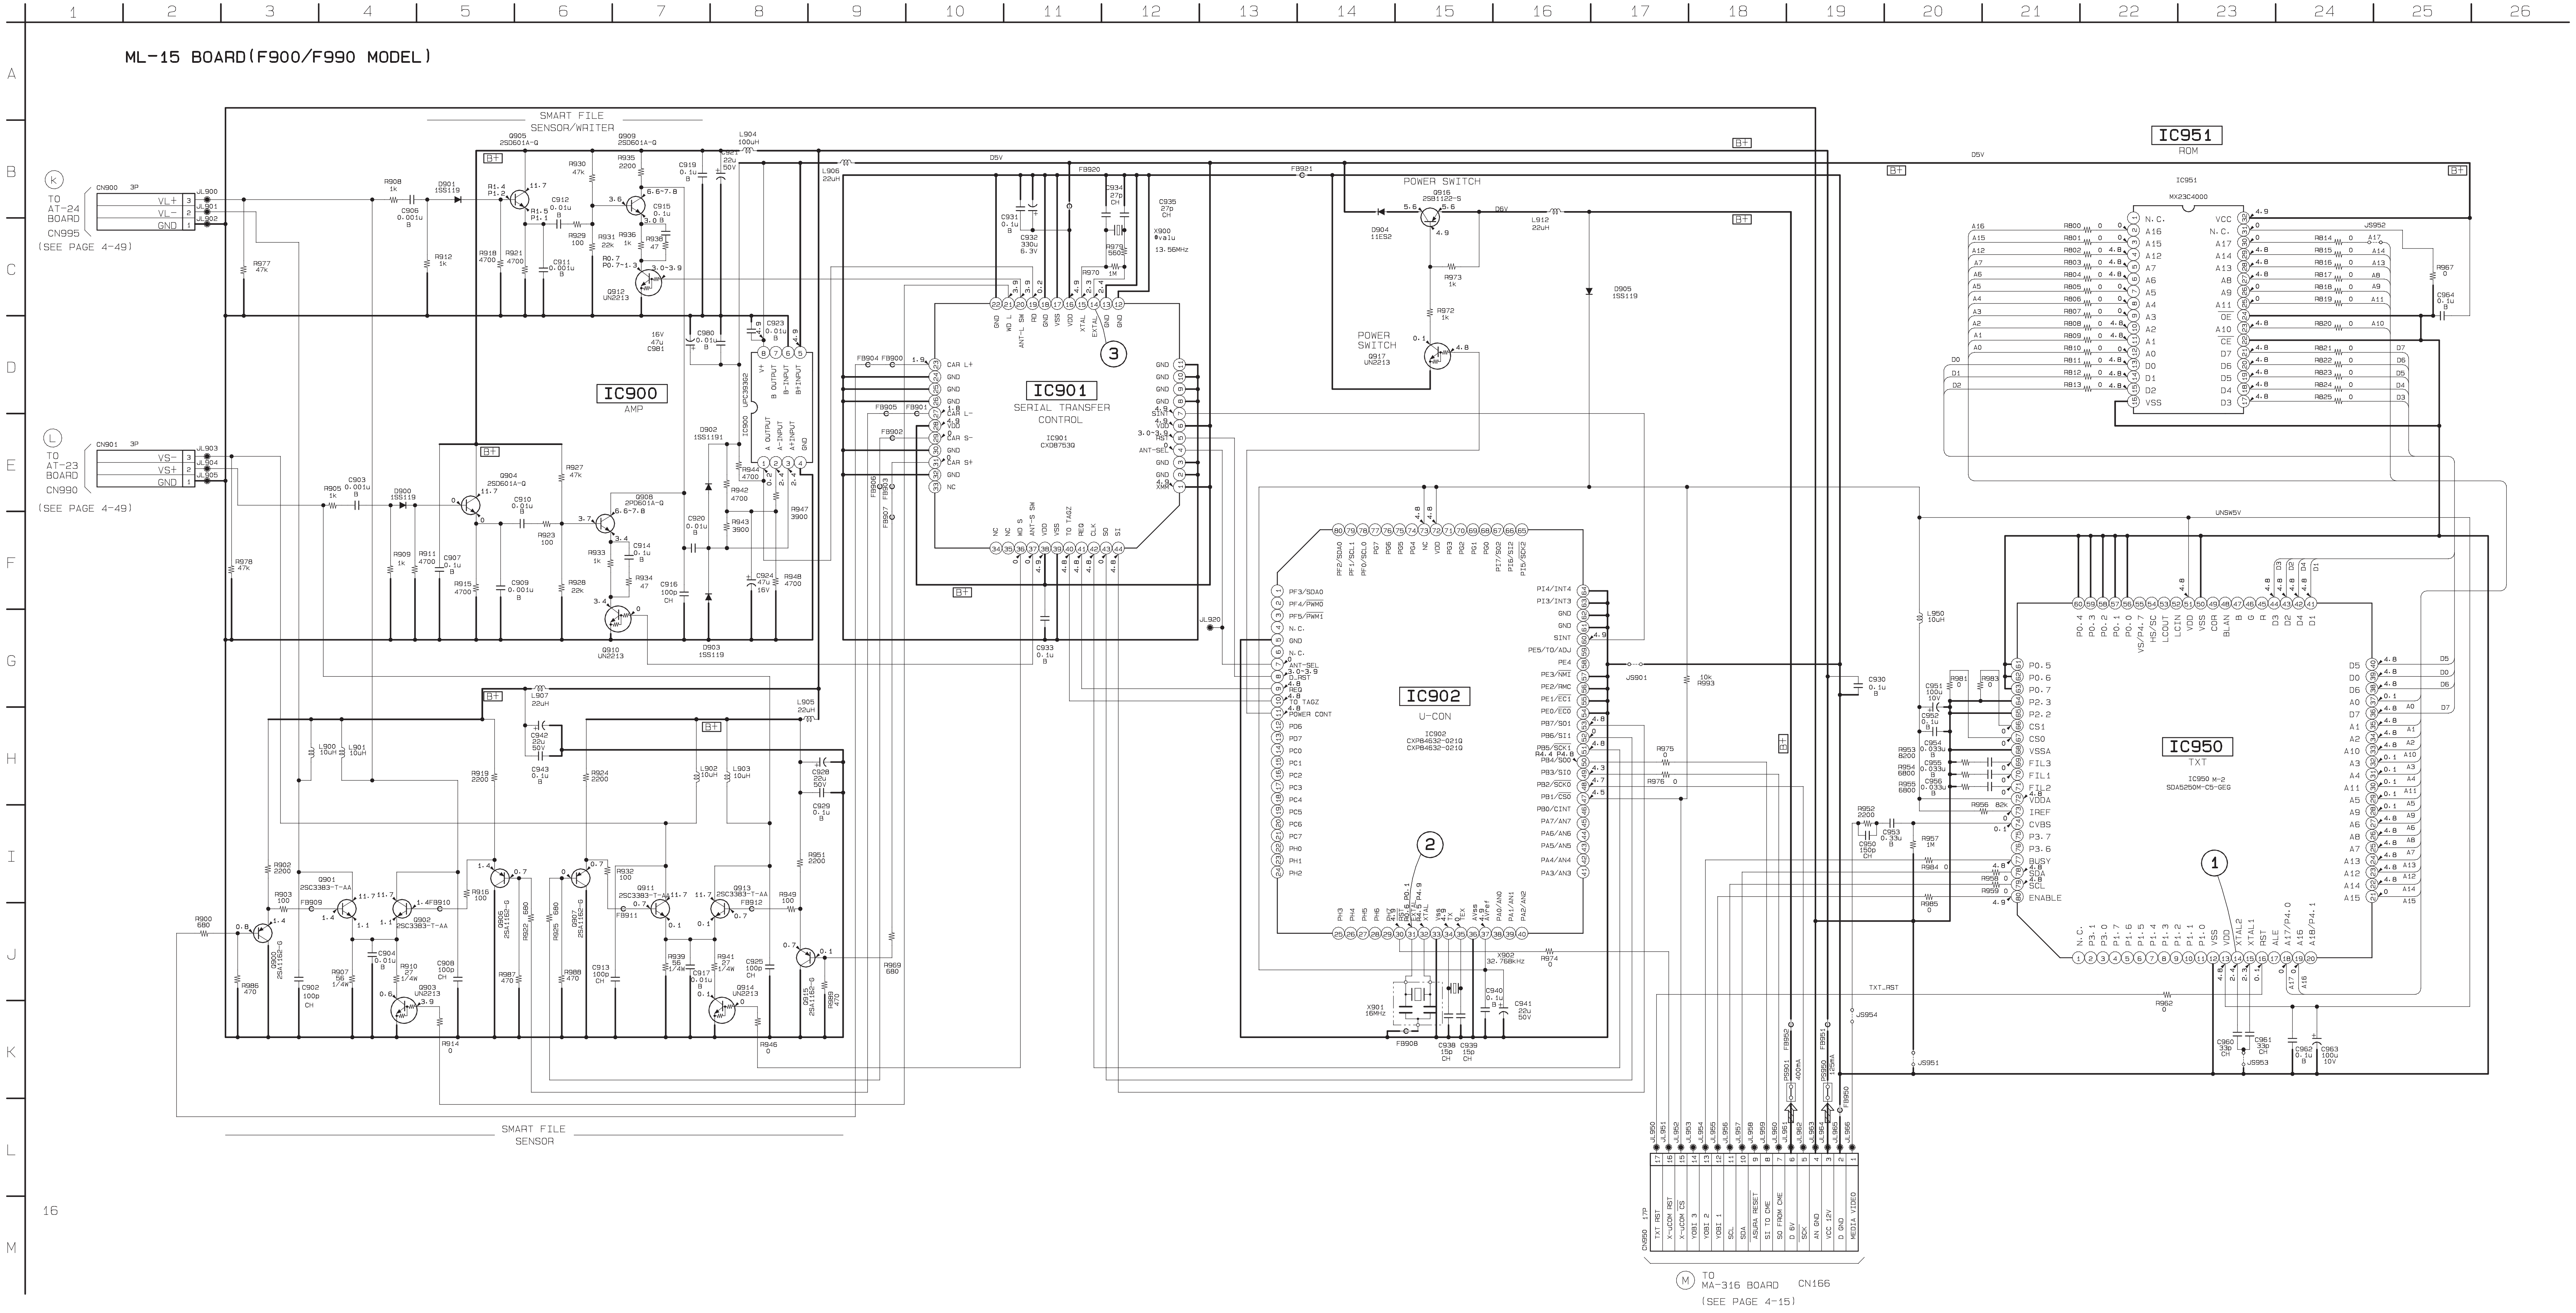

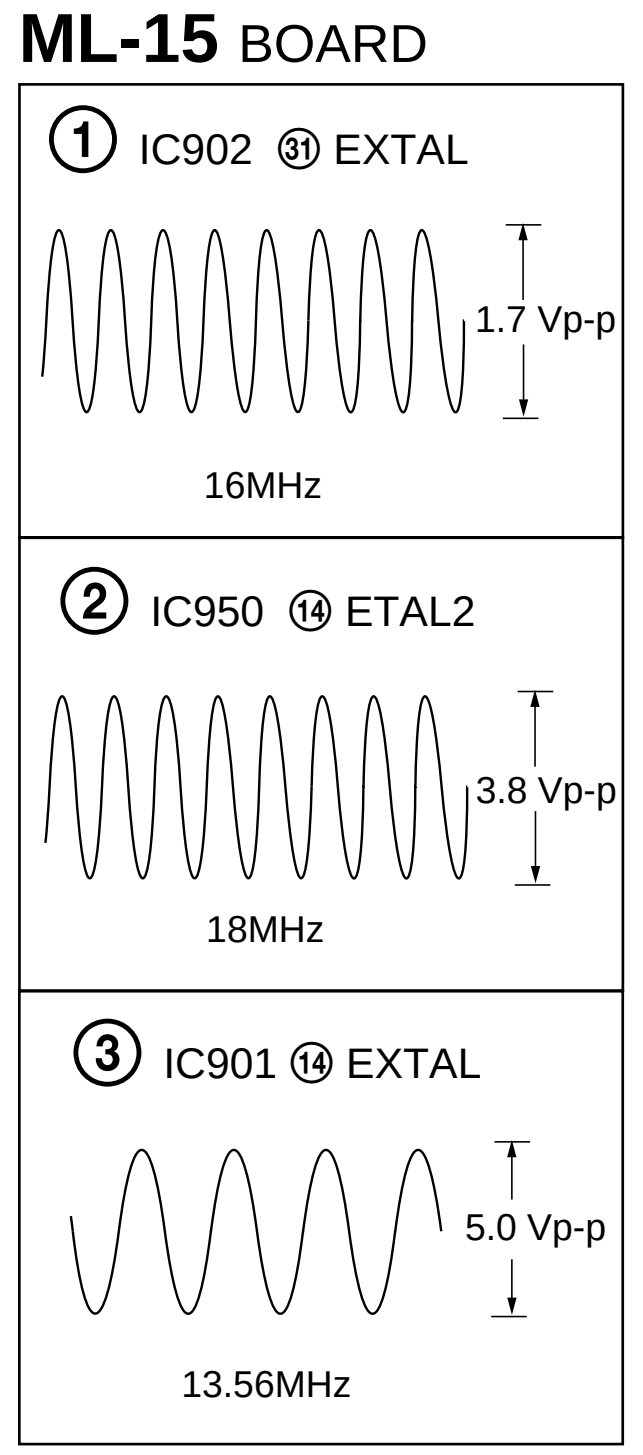

SERIAL TRANSFER
ML-15

AT-23/24 (ANTENNA) PRINTED WIRING BOARD
— Ref. No.: AT-23/24 Board; 4,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

AT-23 BOARD (CONDUCTOR SIDE)

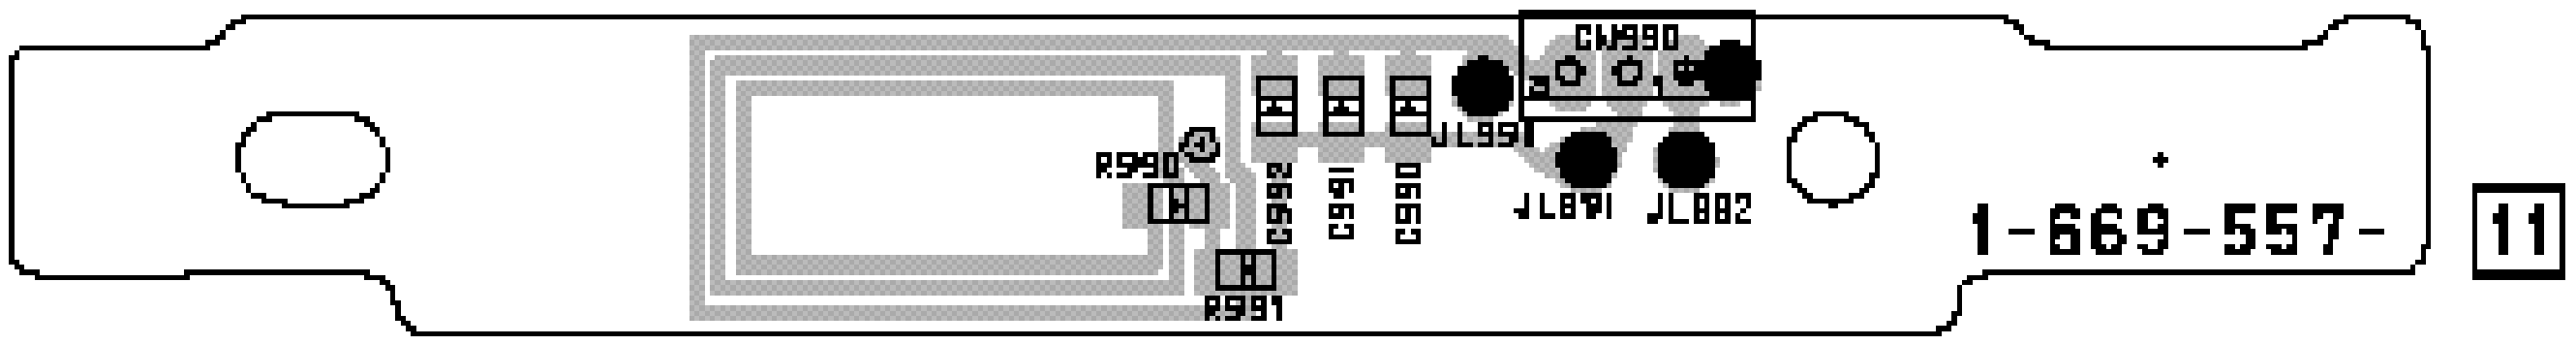

AT-24 BOARD (CONDUCTOR SIDE)

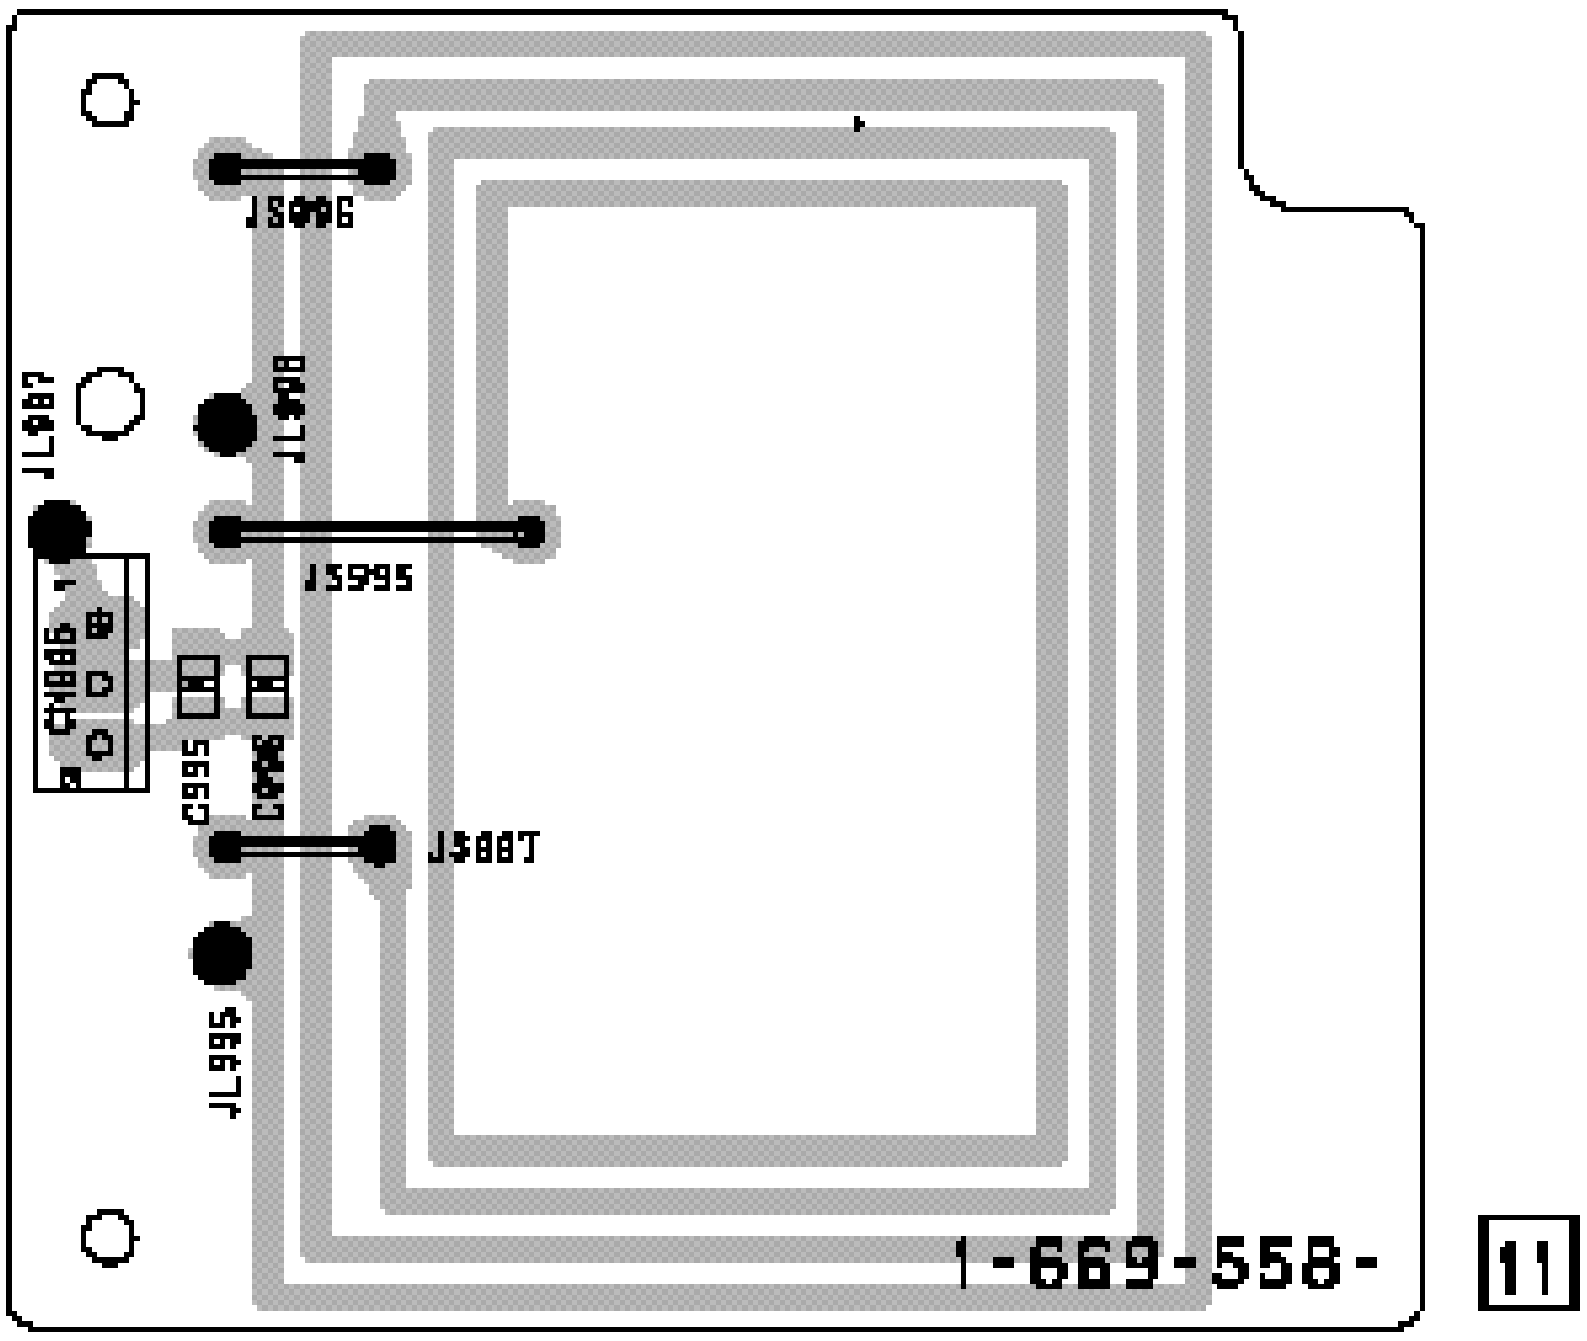

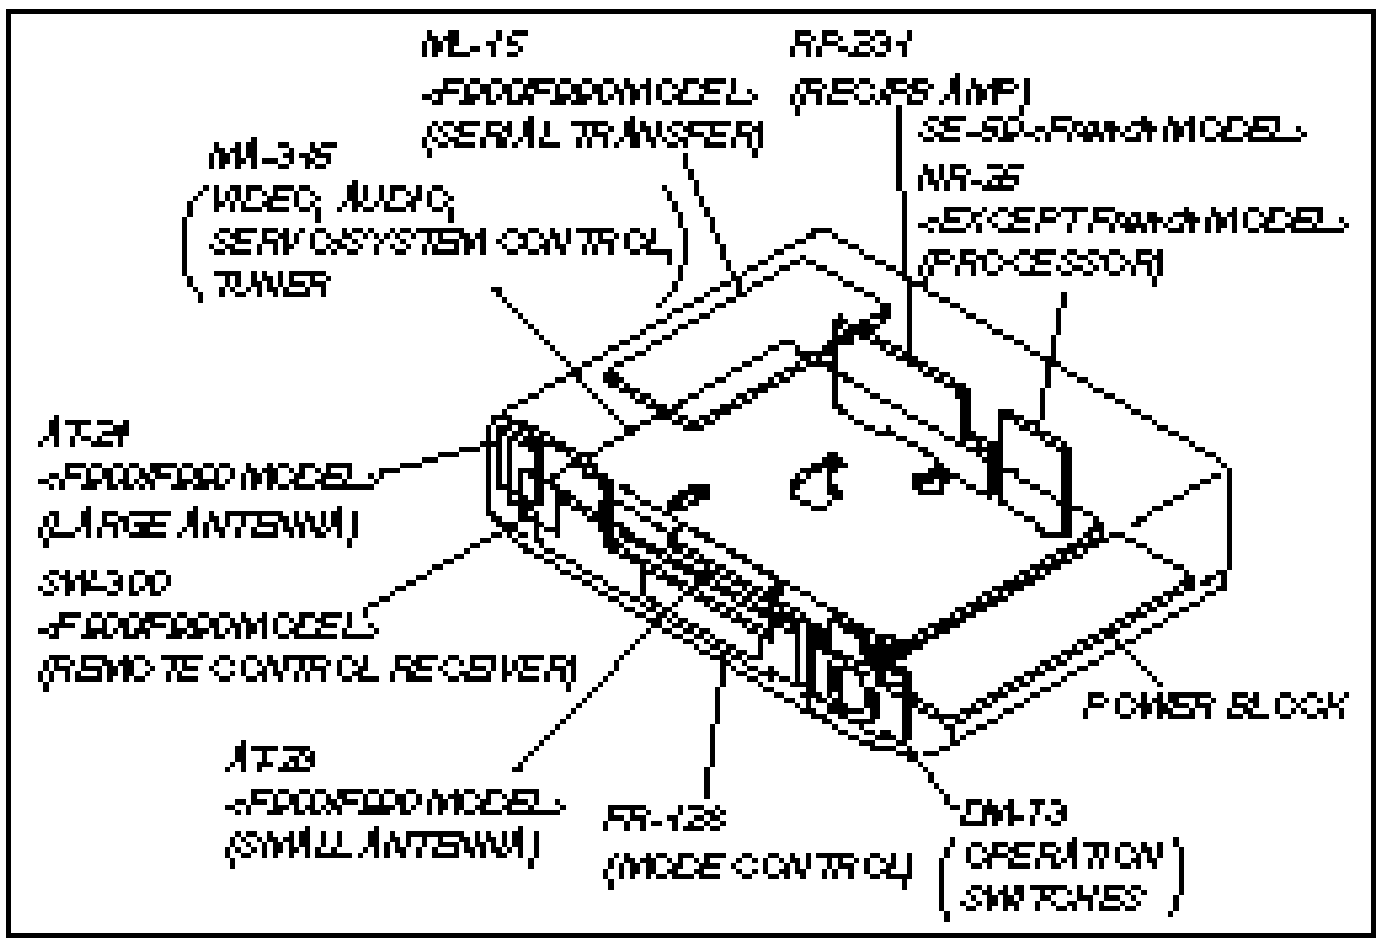

AT-23/24 (ANTENNA) SCHEMATIC DIAGRAM

— Ref. No.: AT-23/24 Board; 4,000 Series —

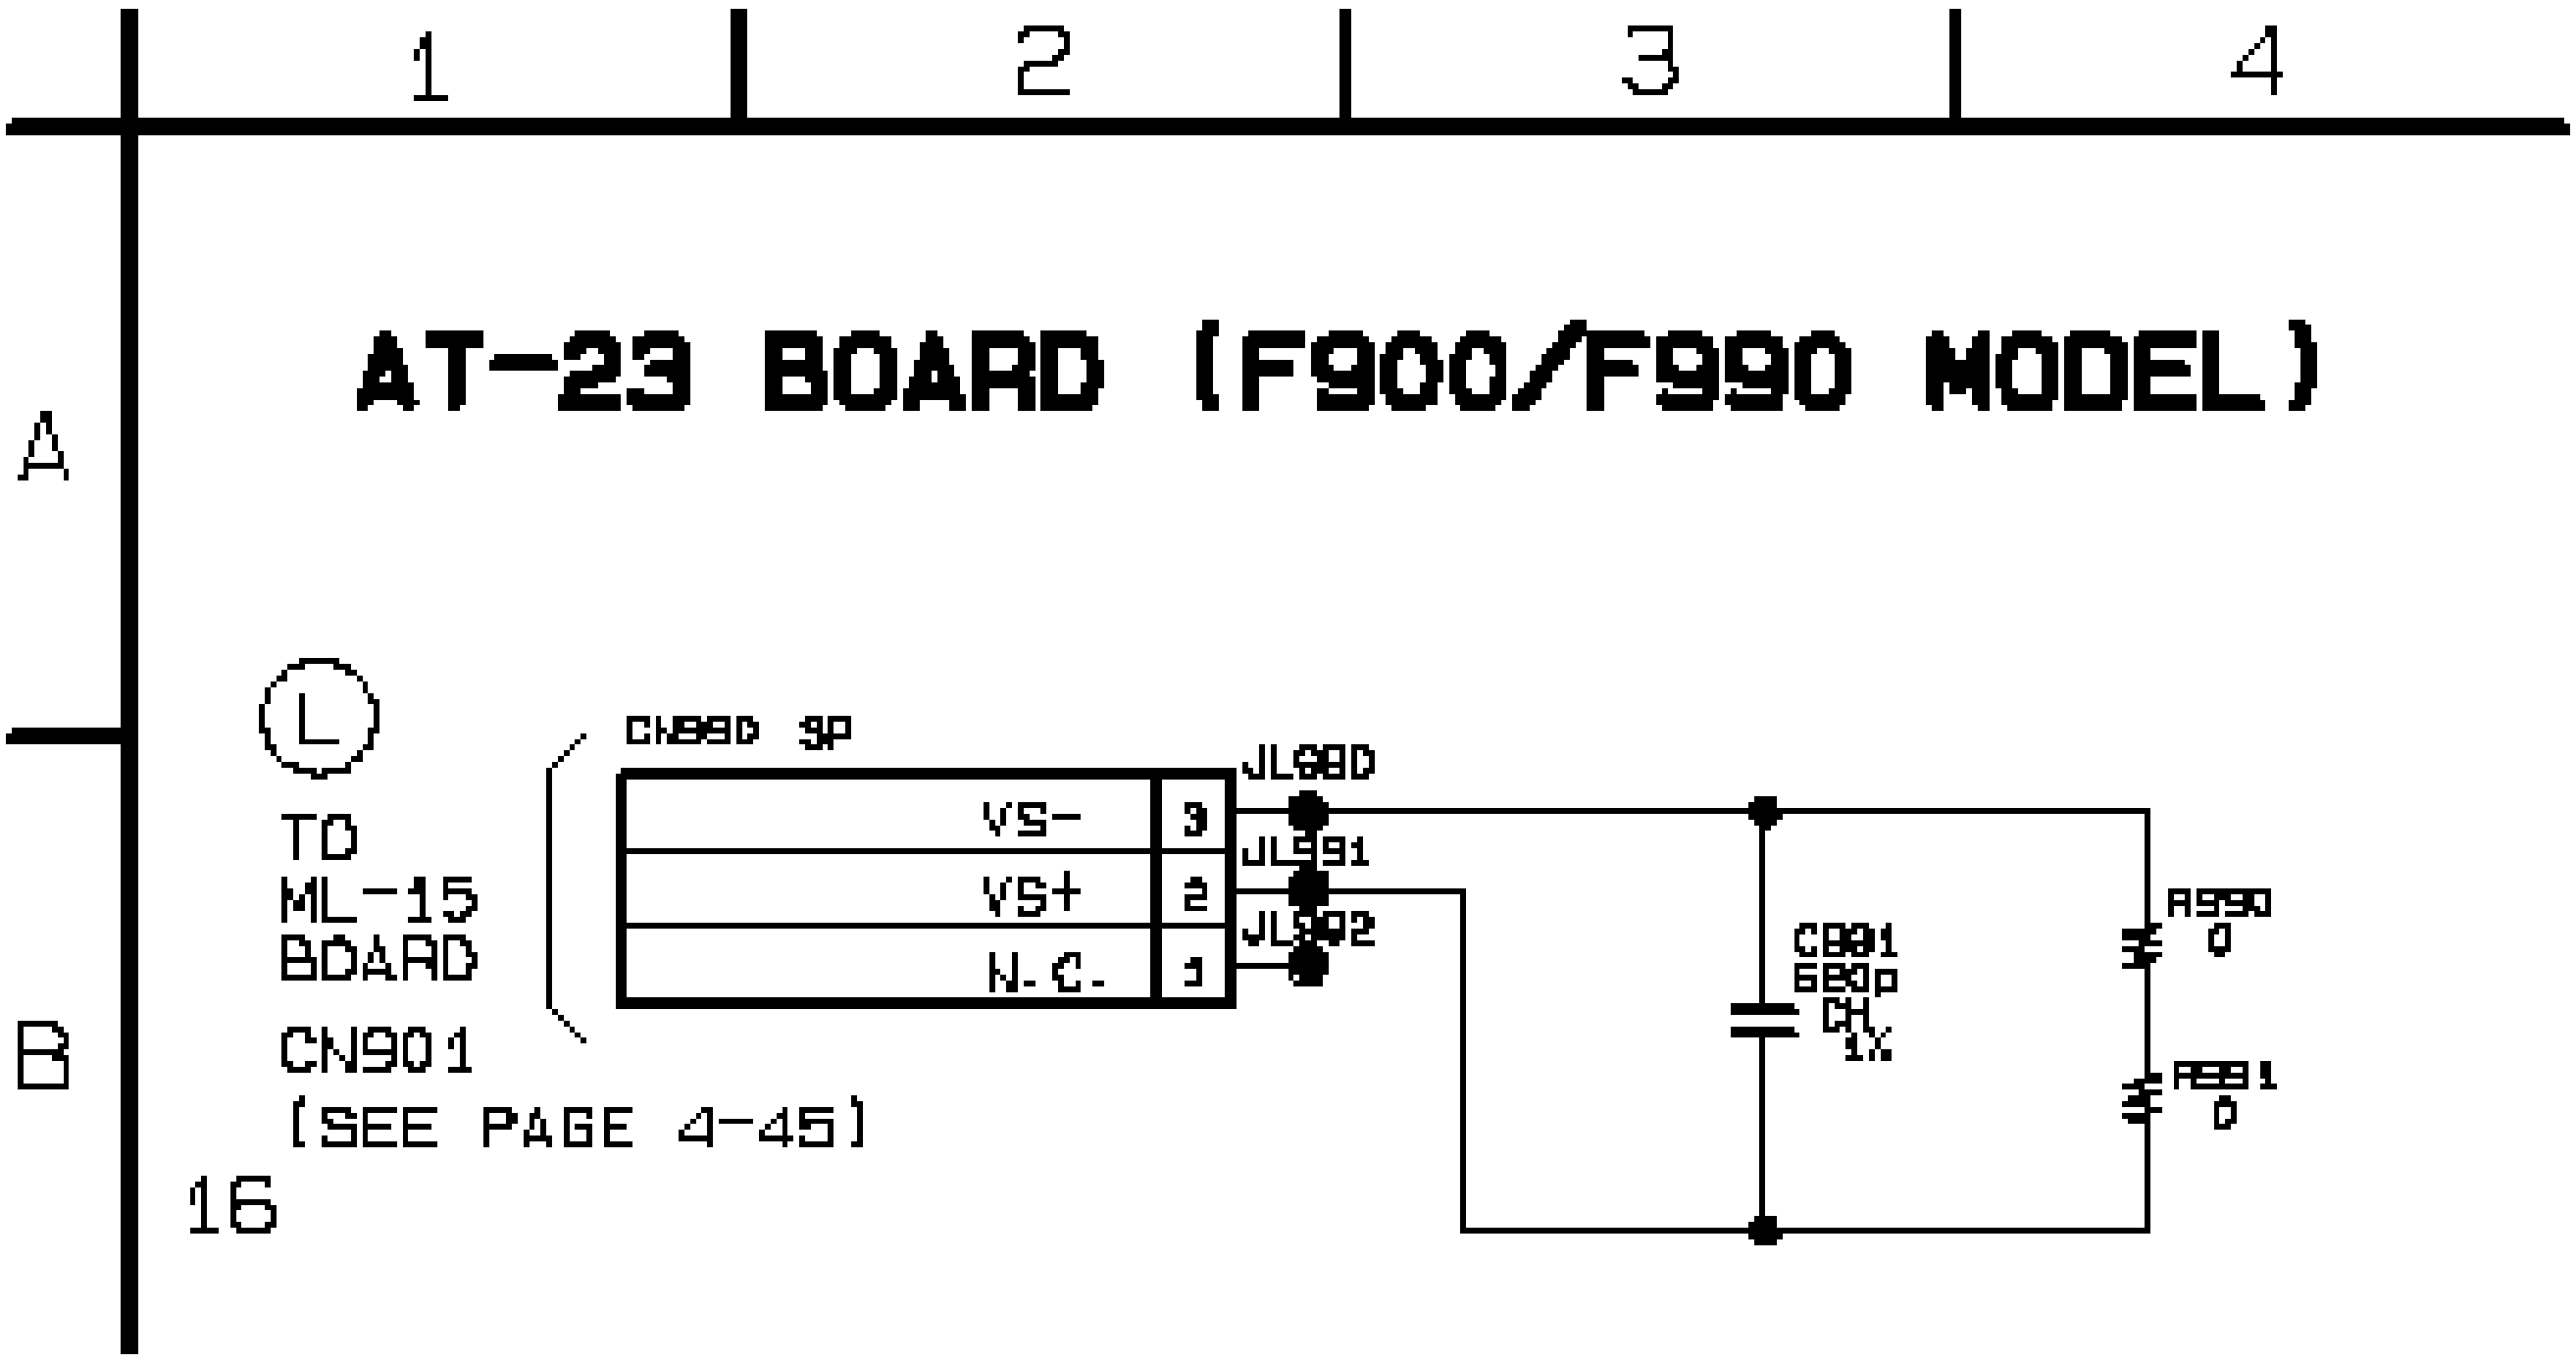

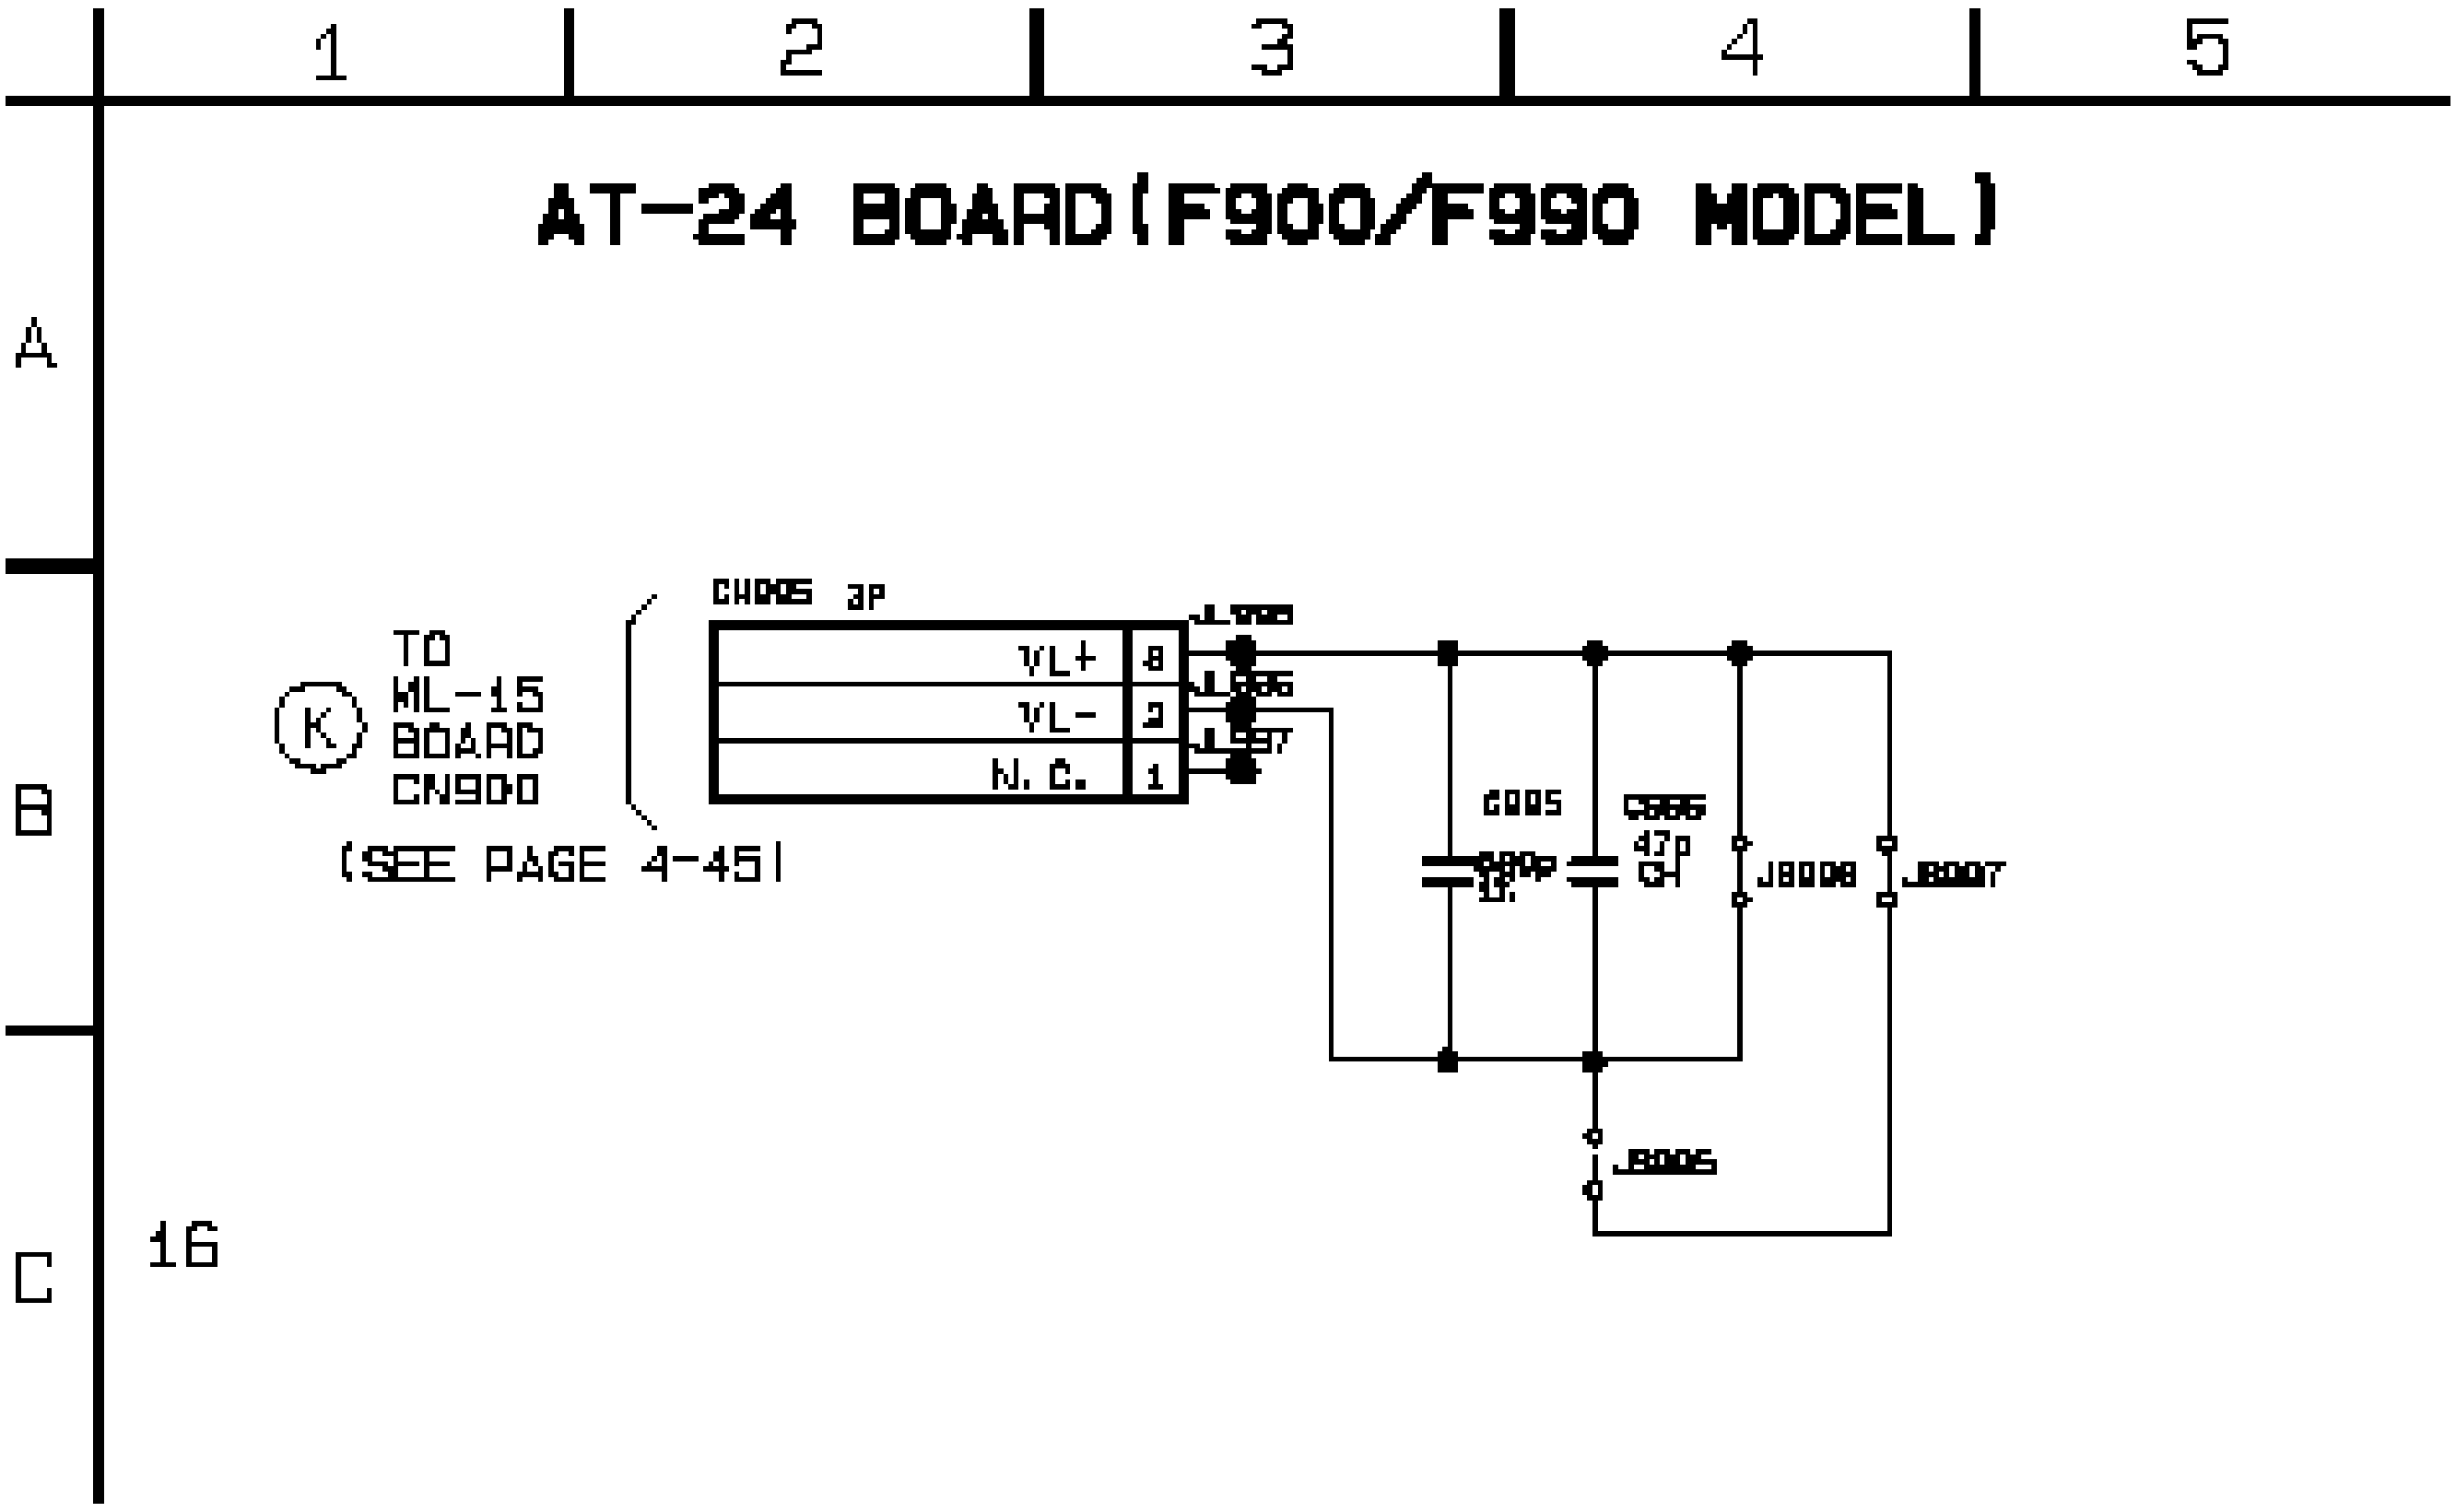

SWITCH BLOCK SCHEMATIC DIAGRAM • The printed wiring board is not shown.

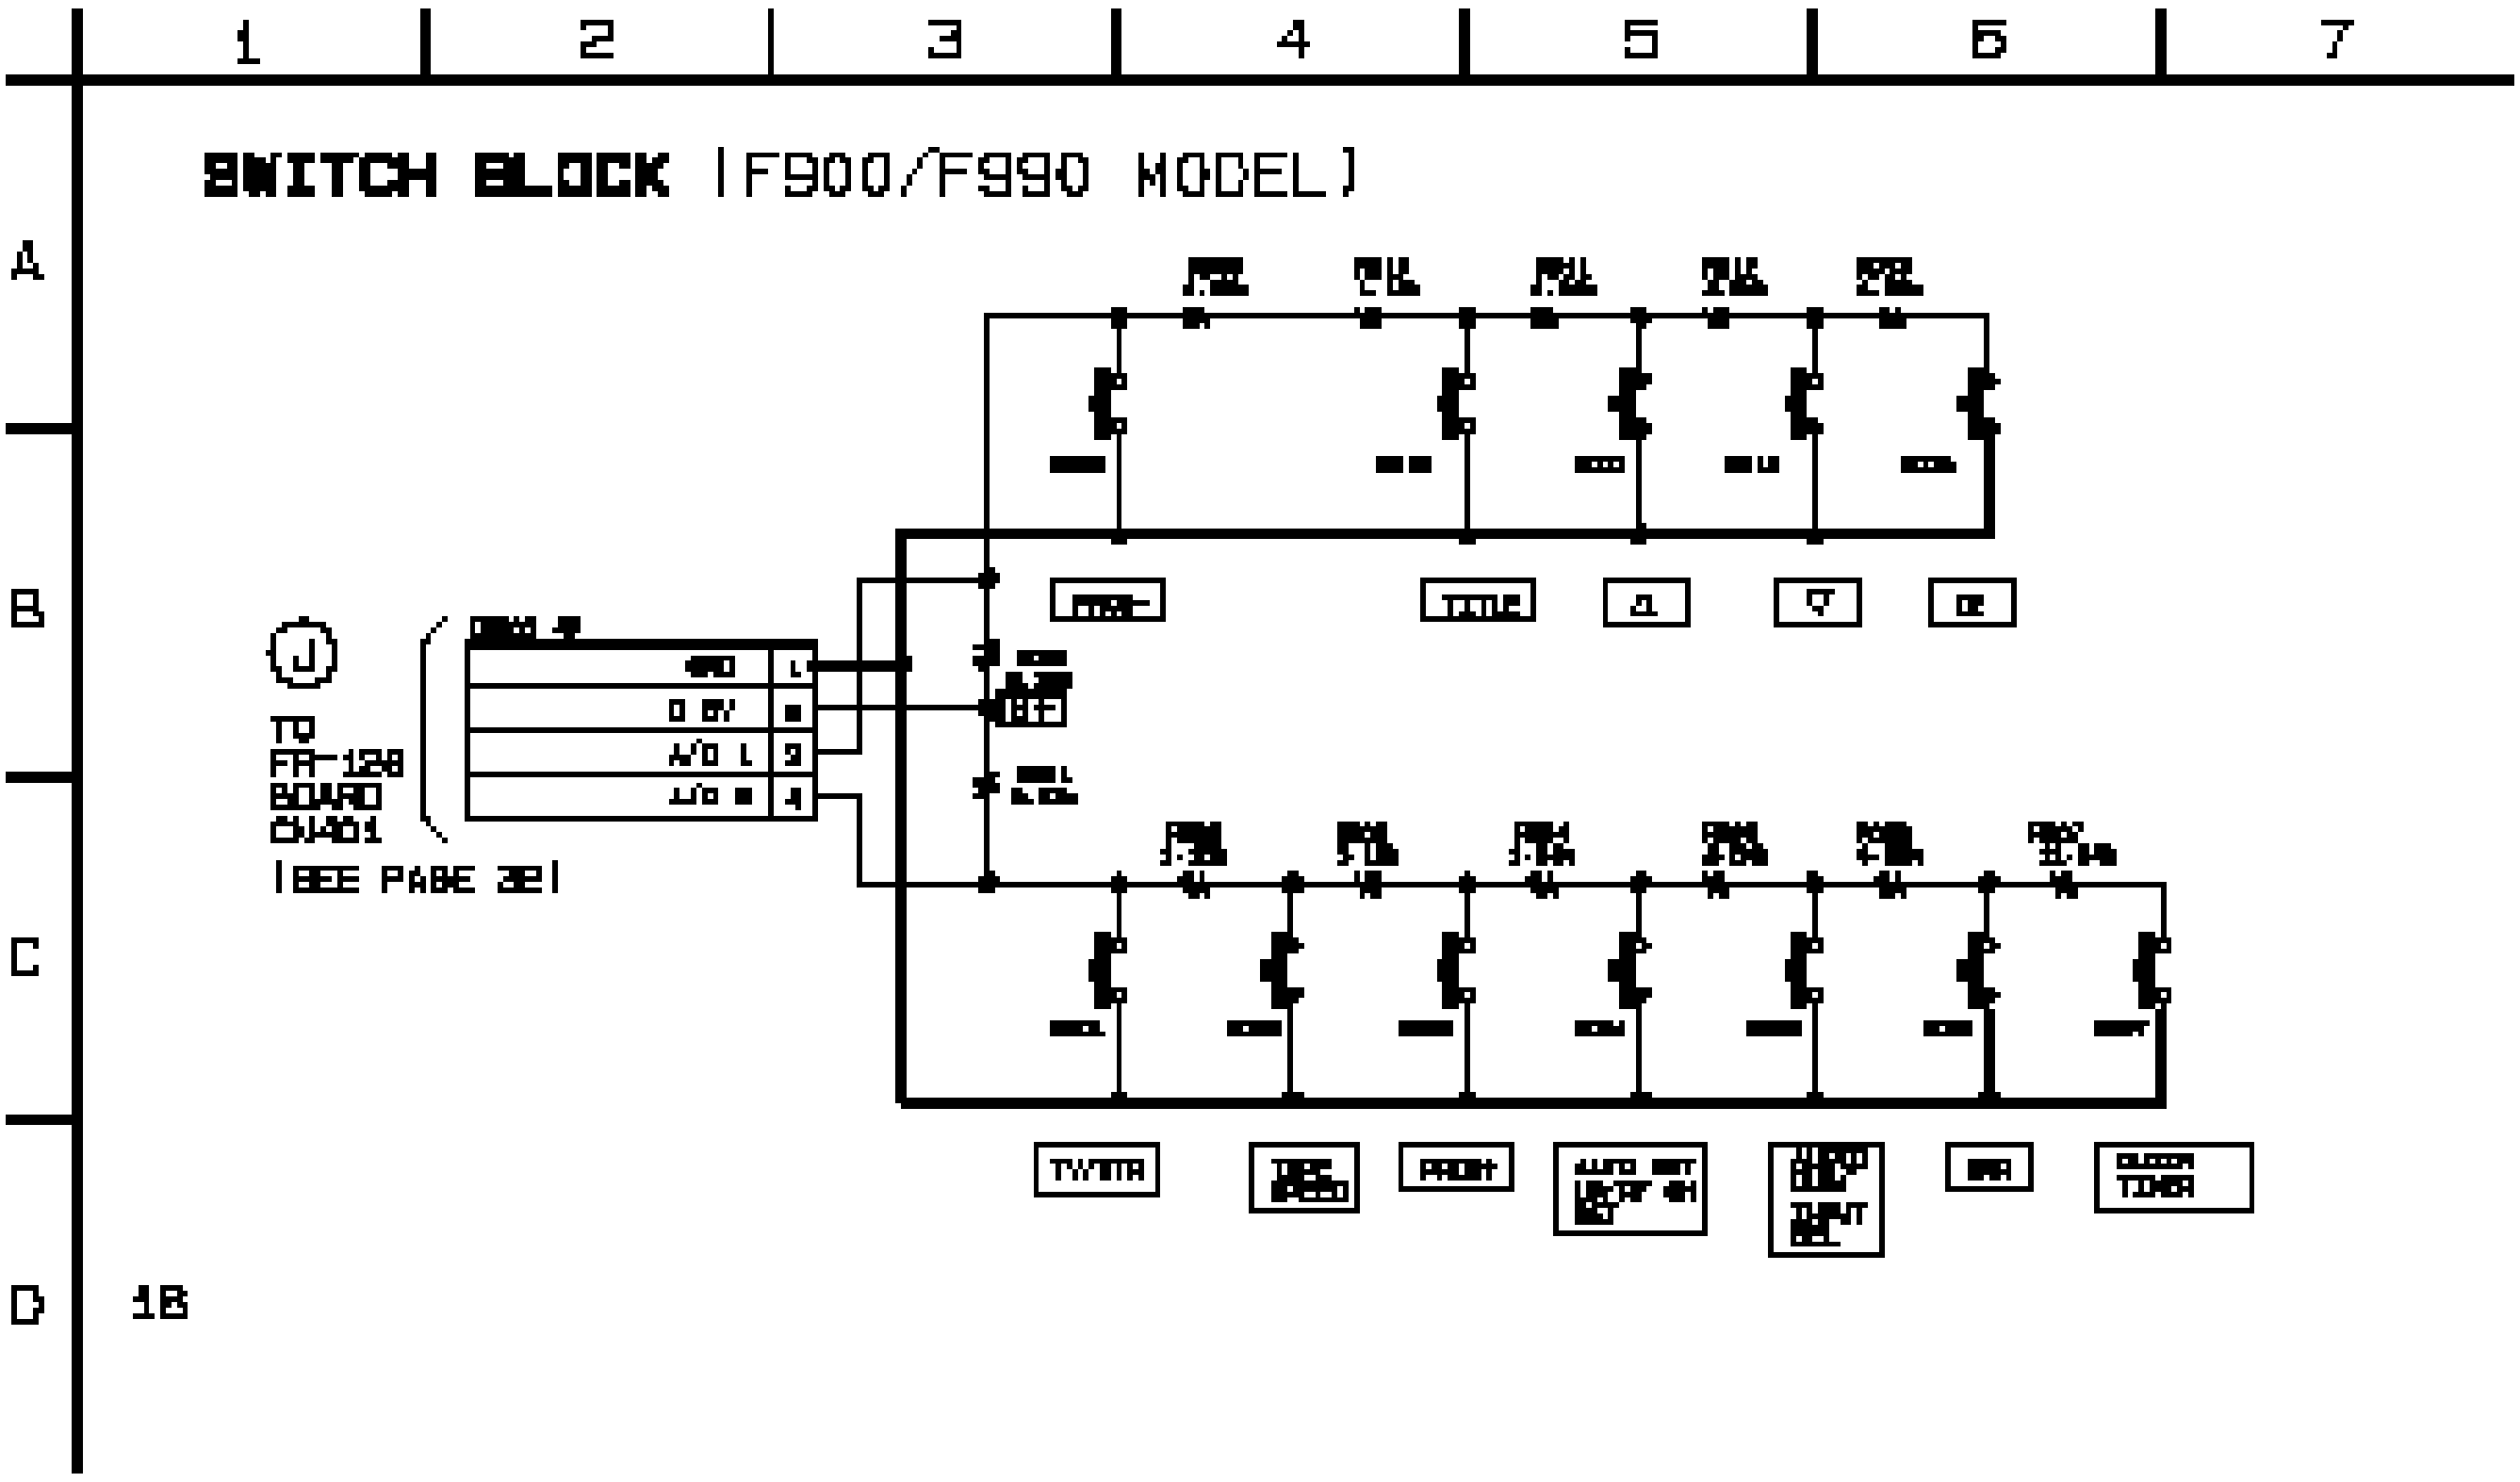

SW-300 (REMOTE CONTROL RECEIVER) PRINTED WIRING BOARD
— Ref. No.: SW-300 Board; 7,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

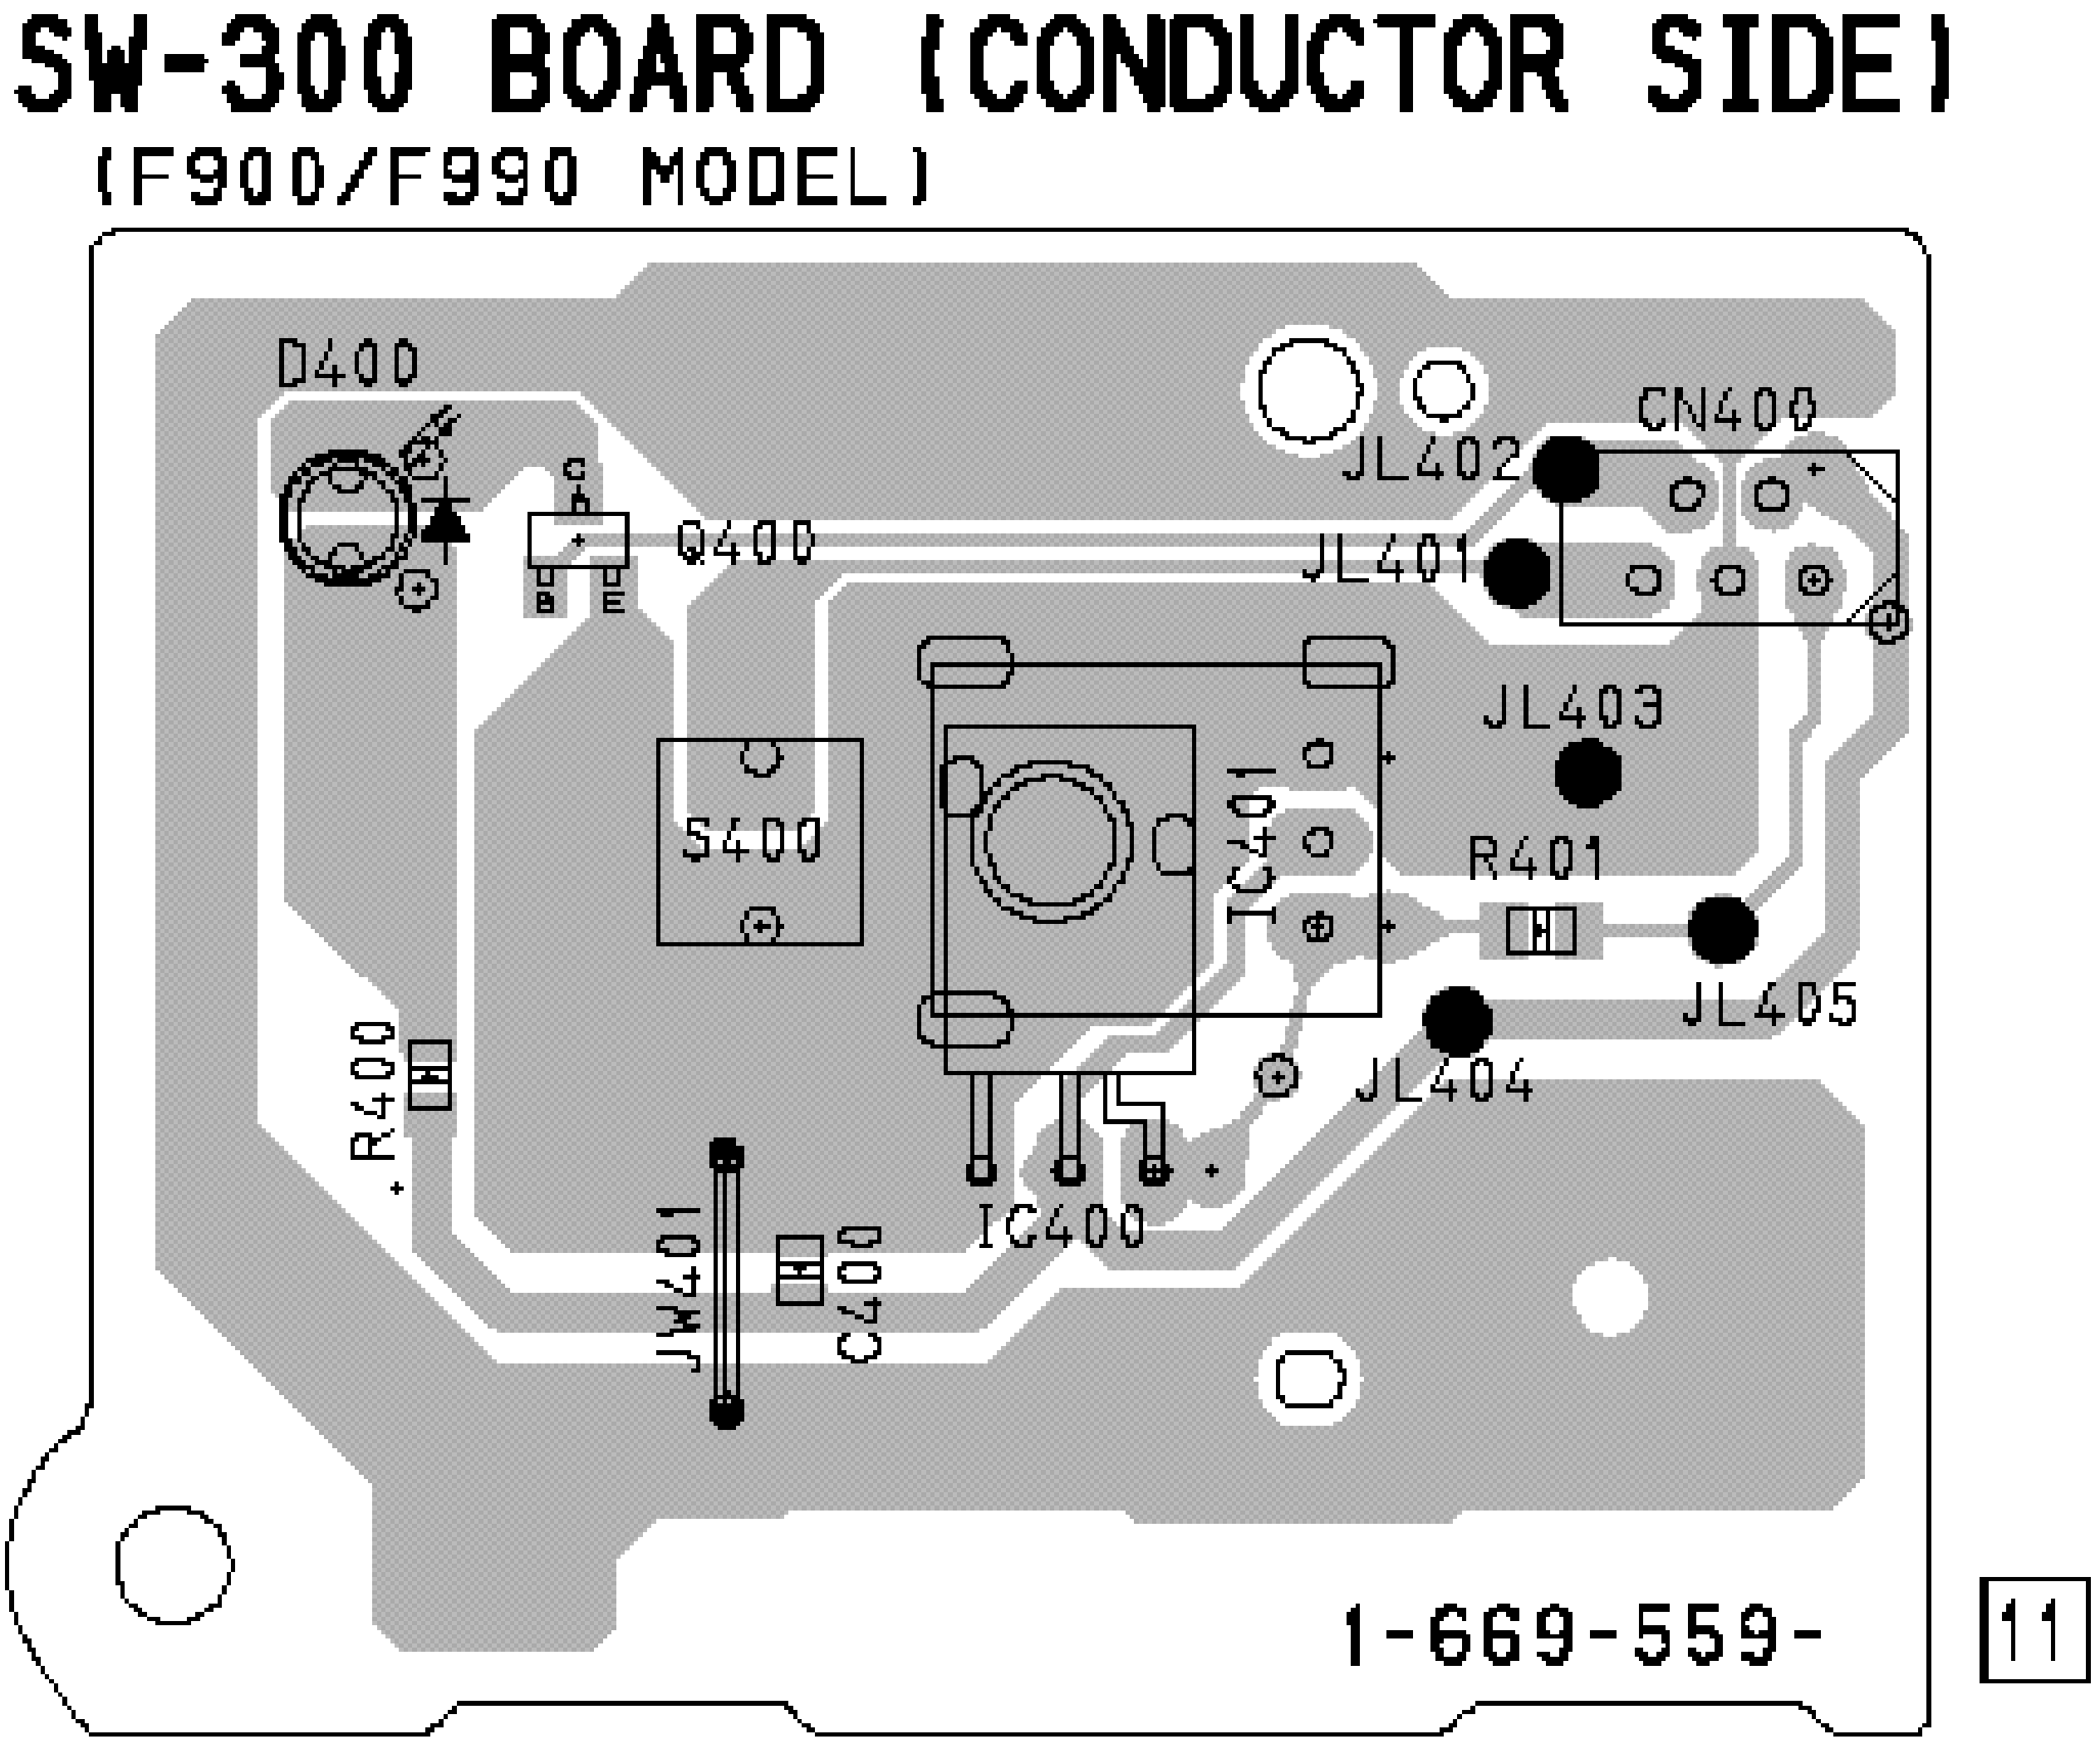

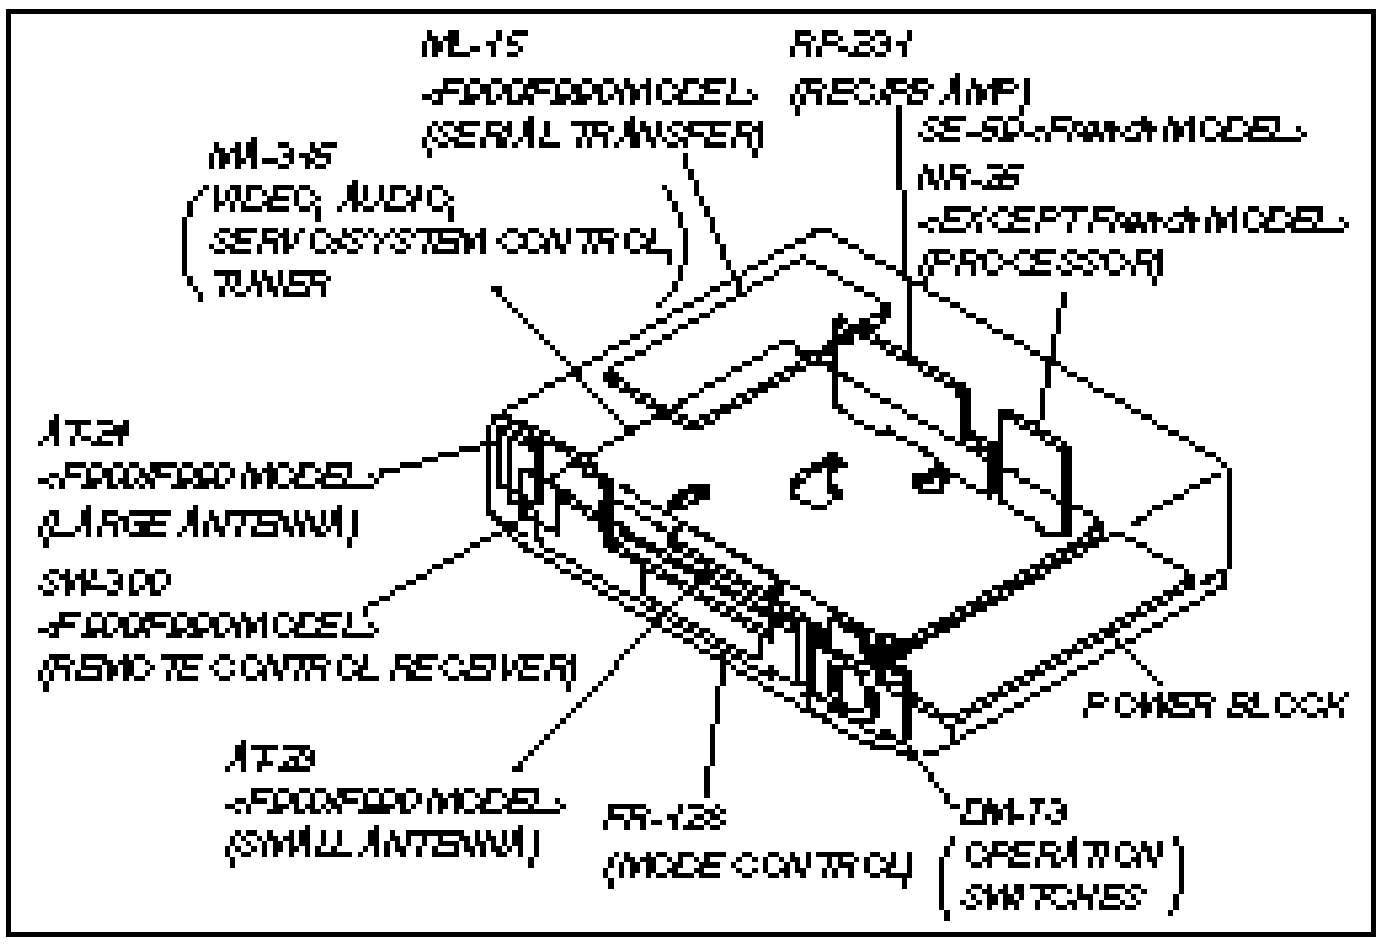

SW-300 (REMOTE CONTROL RECEIVER) SCHEMATIC DIAGRAM

— Ref. No.: SW-300 Board; 7,000 Series —

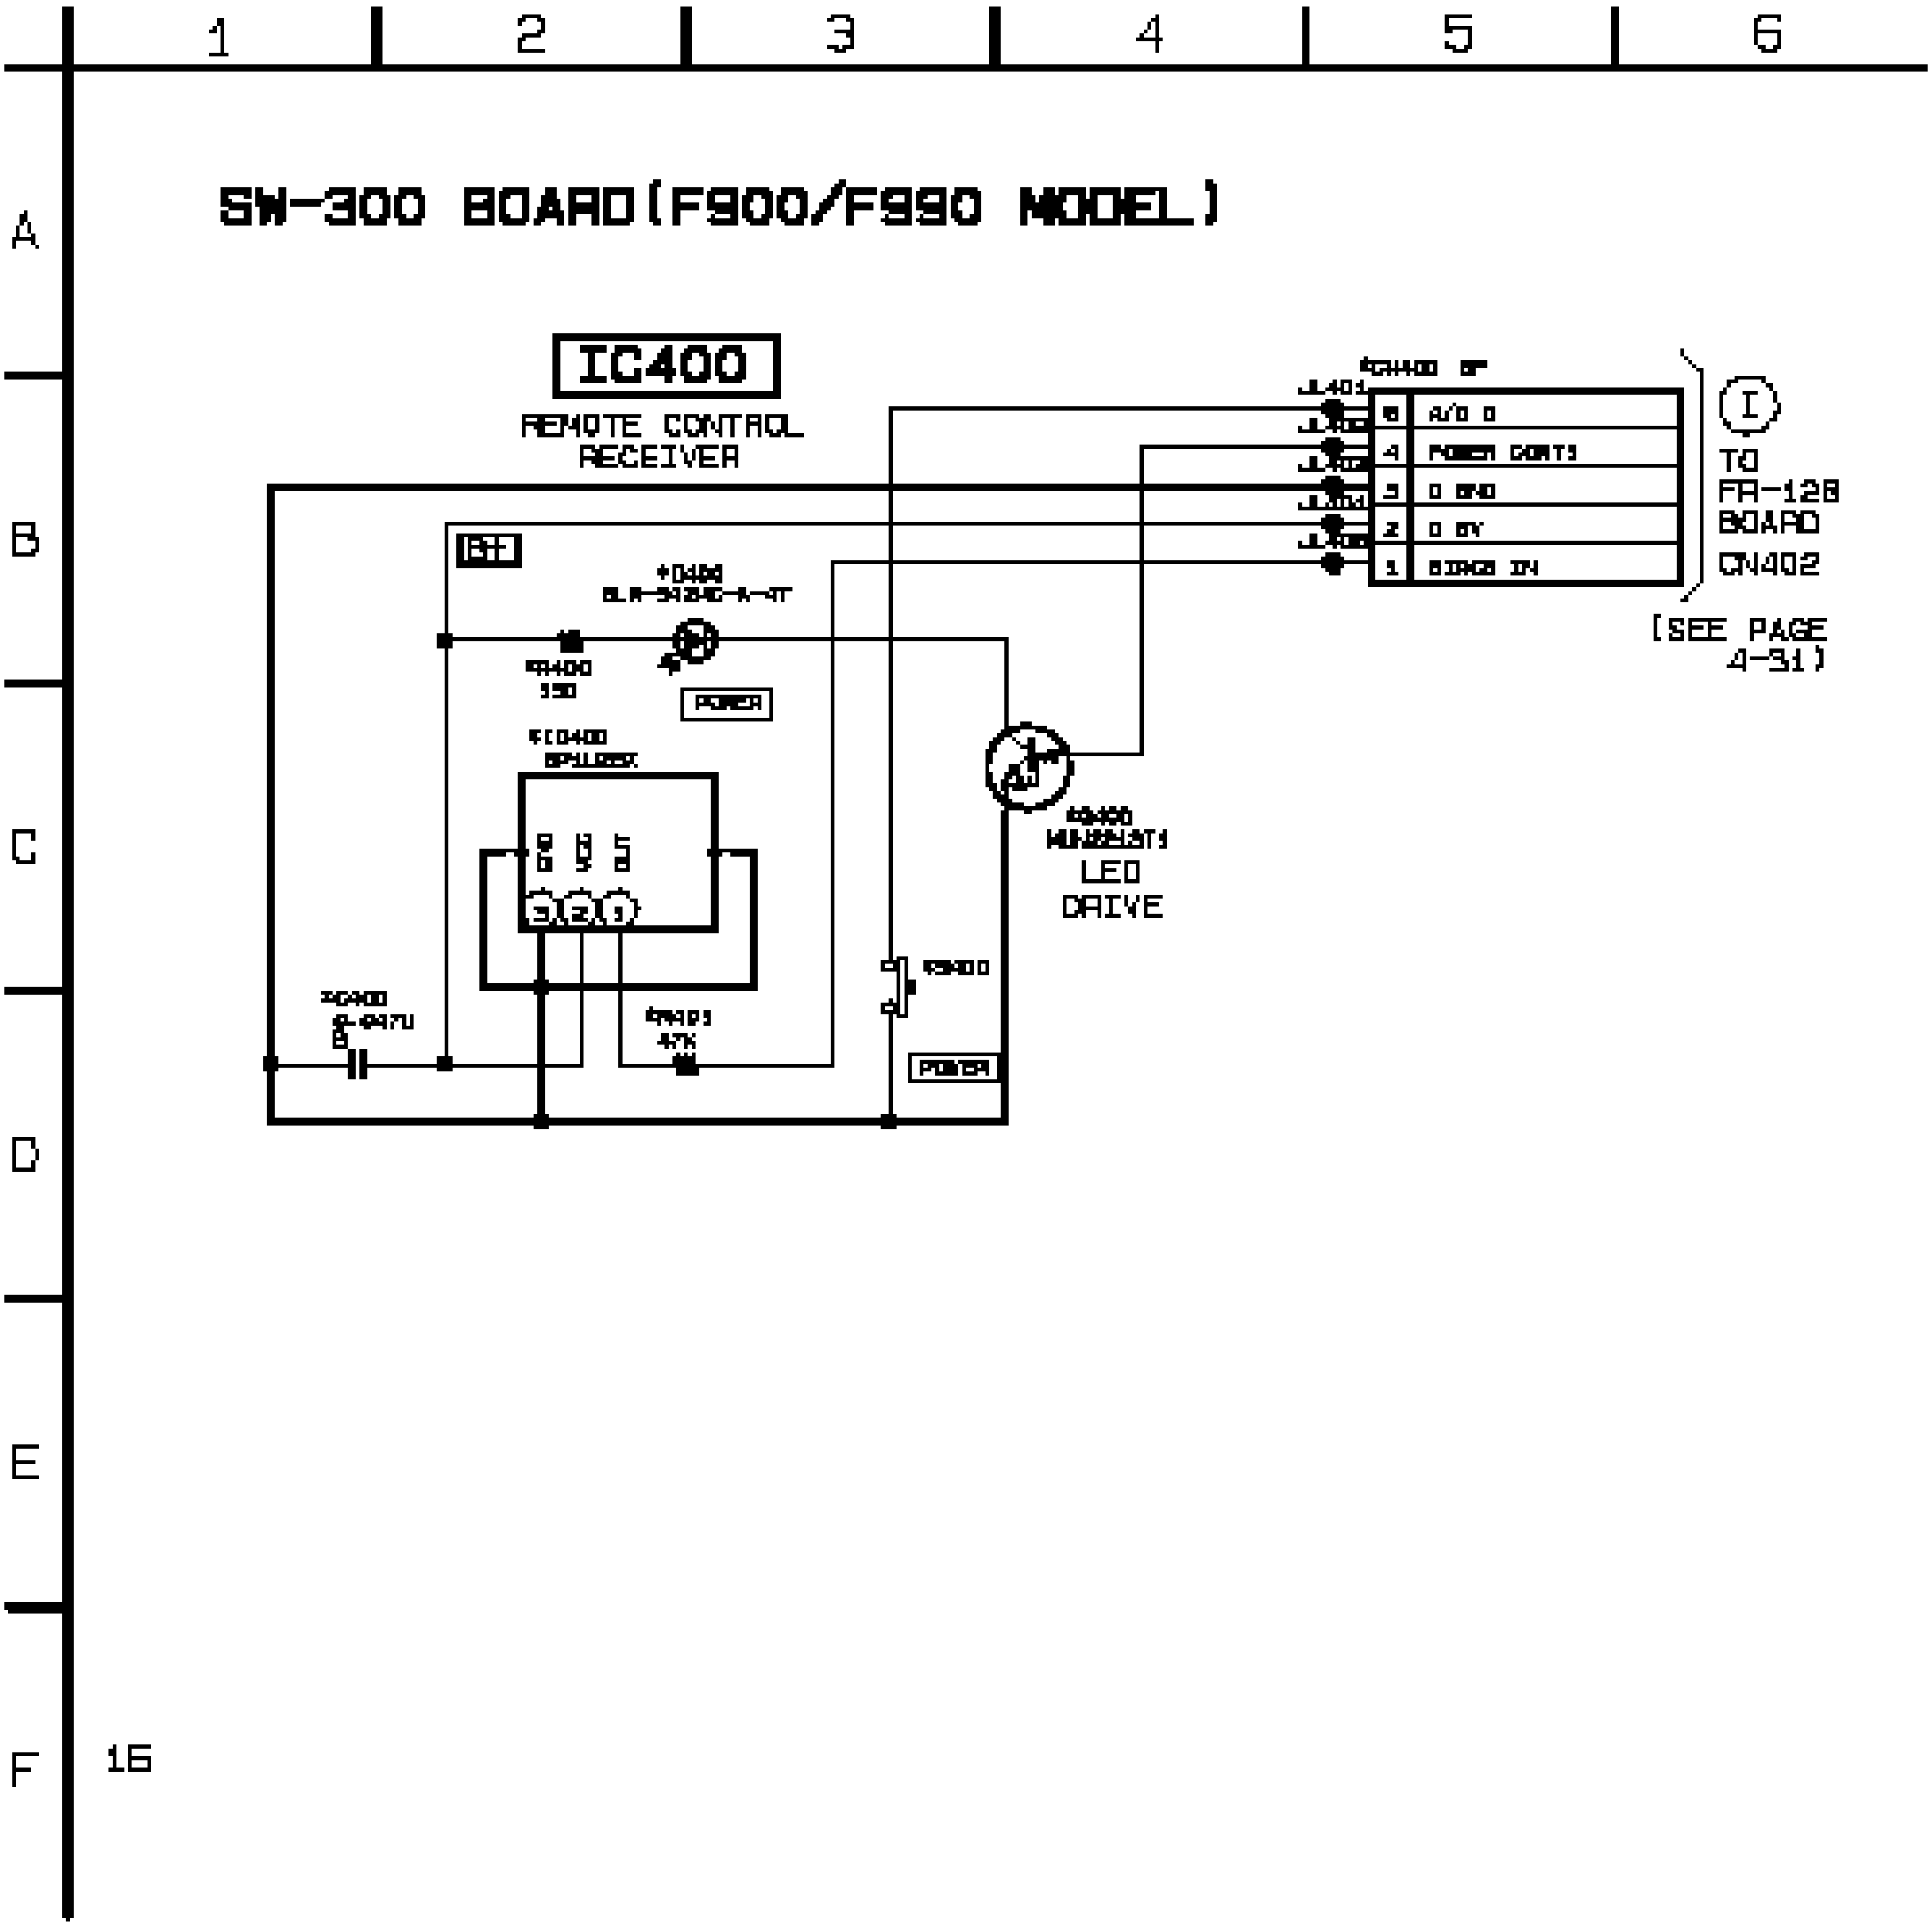

POWER BLOCK SR826 (SWITCHING REGULATOR) PRINTED WIRING BOARD
— Ref. No. SR826 Board; 9,000 Series —

POWER BLOCK SR826

MAIN BOARD (CONDUCTOR SIDE)

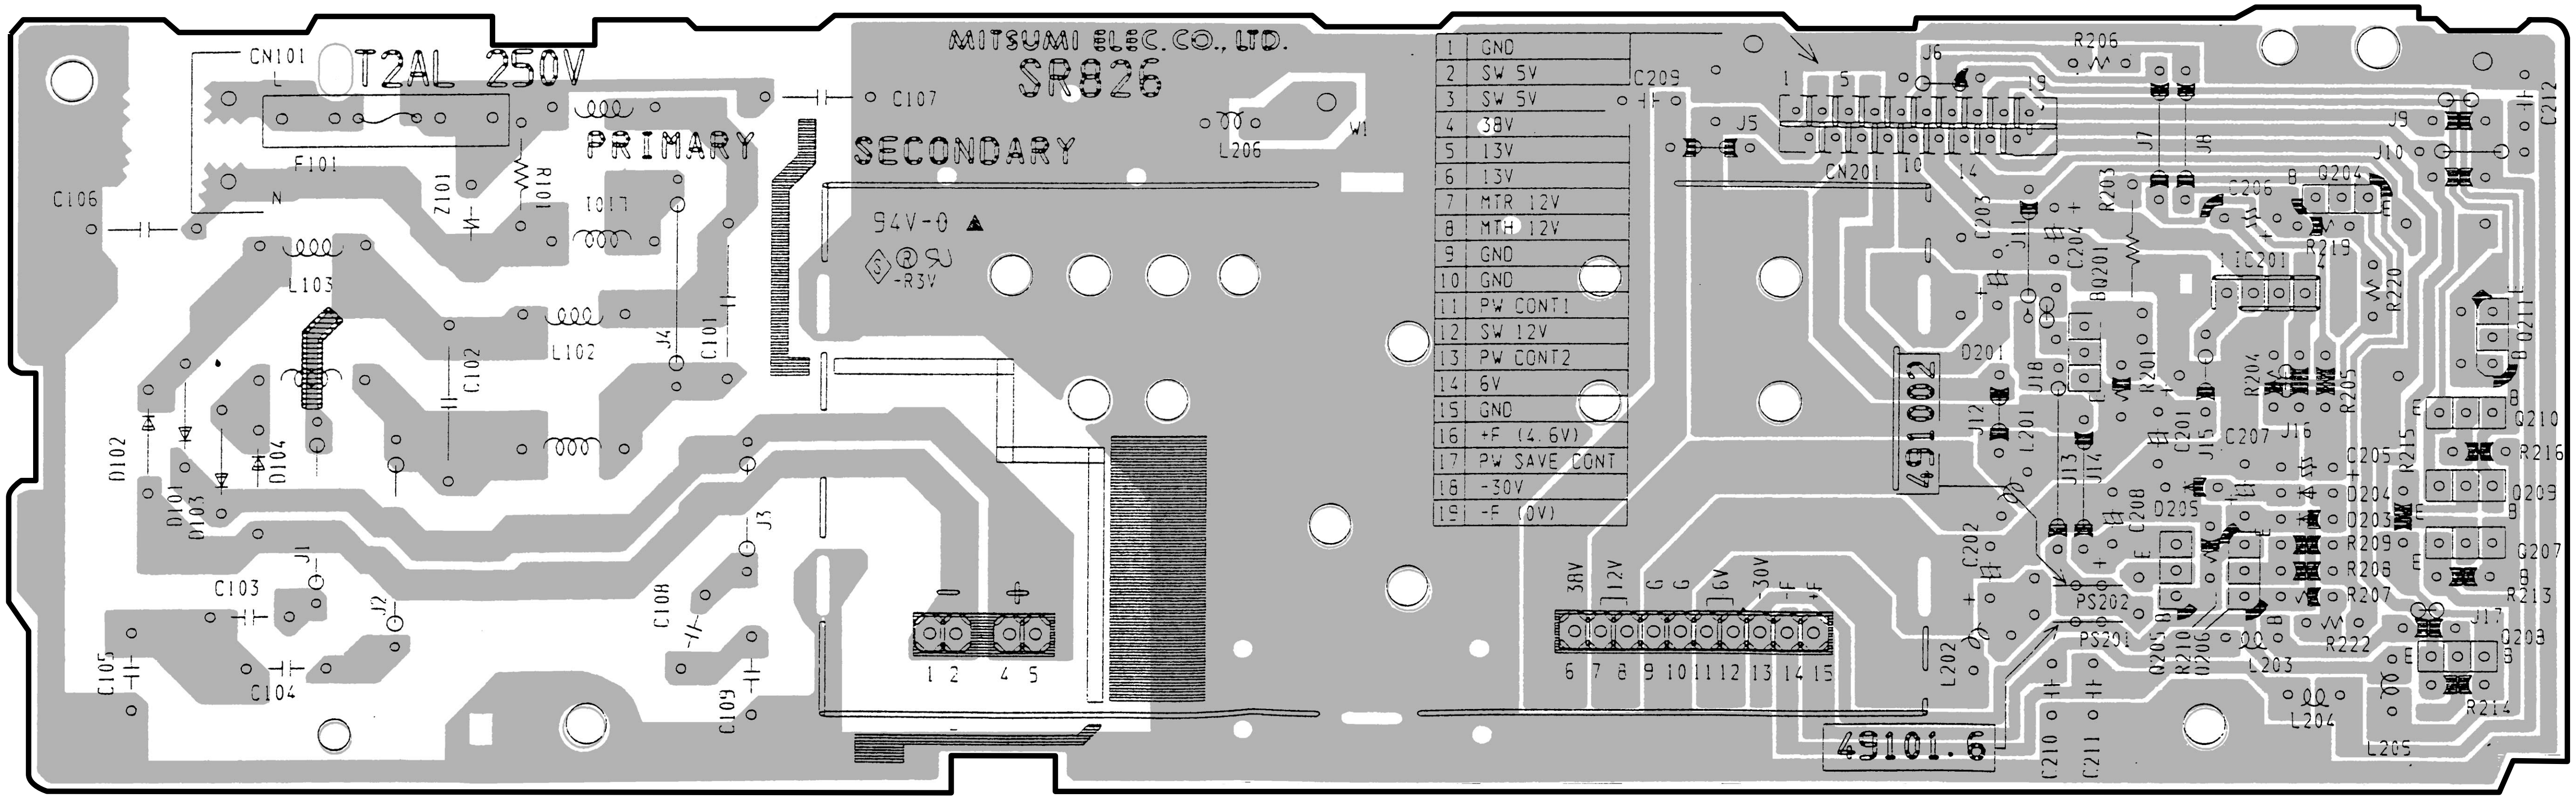

SUB BOARD (CONDUCTOR SIDE)

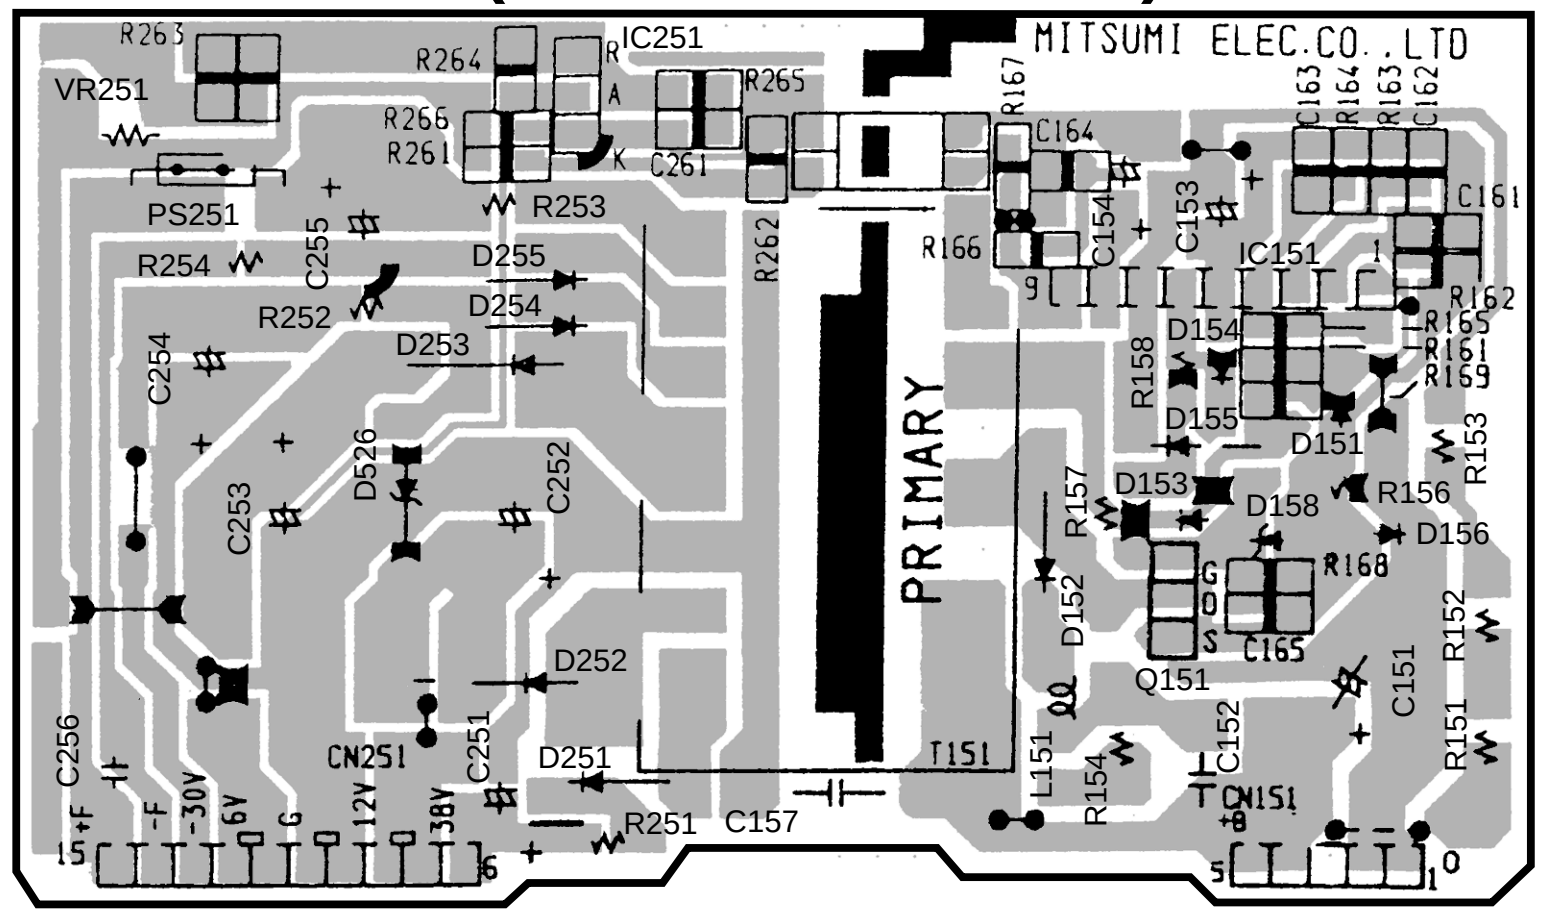

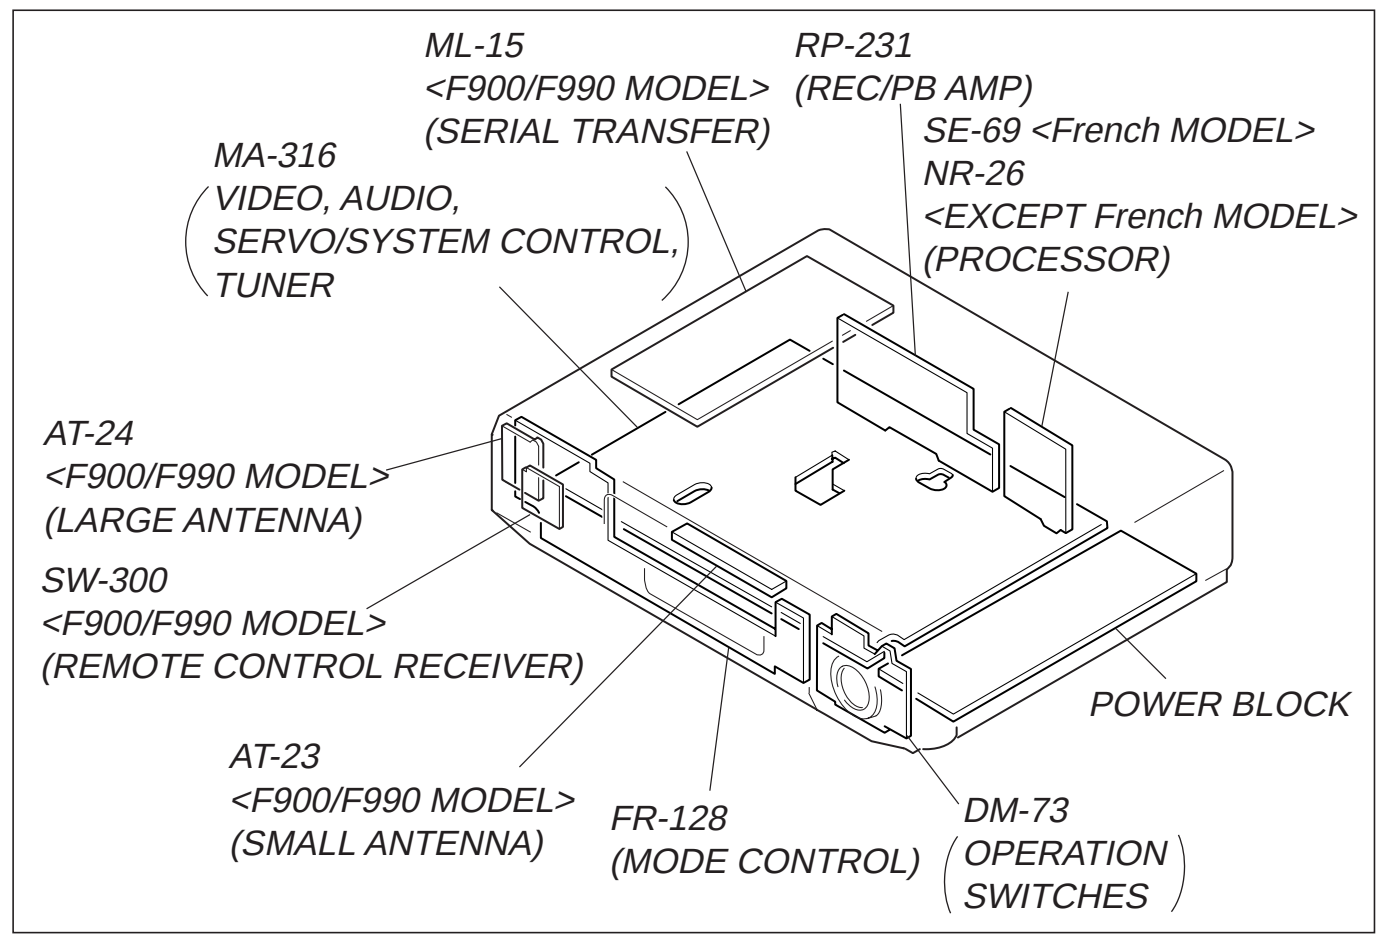

POWER BLOCK SR826 (SWITCHING REGULATOR) SCHEMATIC DIAGRAM

— Ref. No. SR826 Board; 9,000 Series —

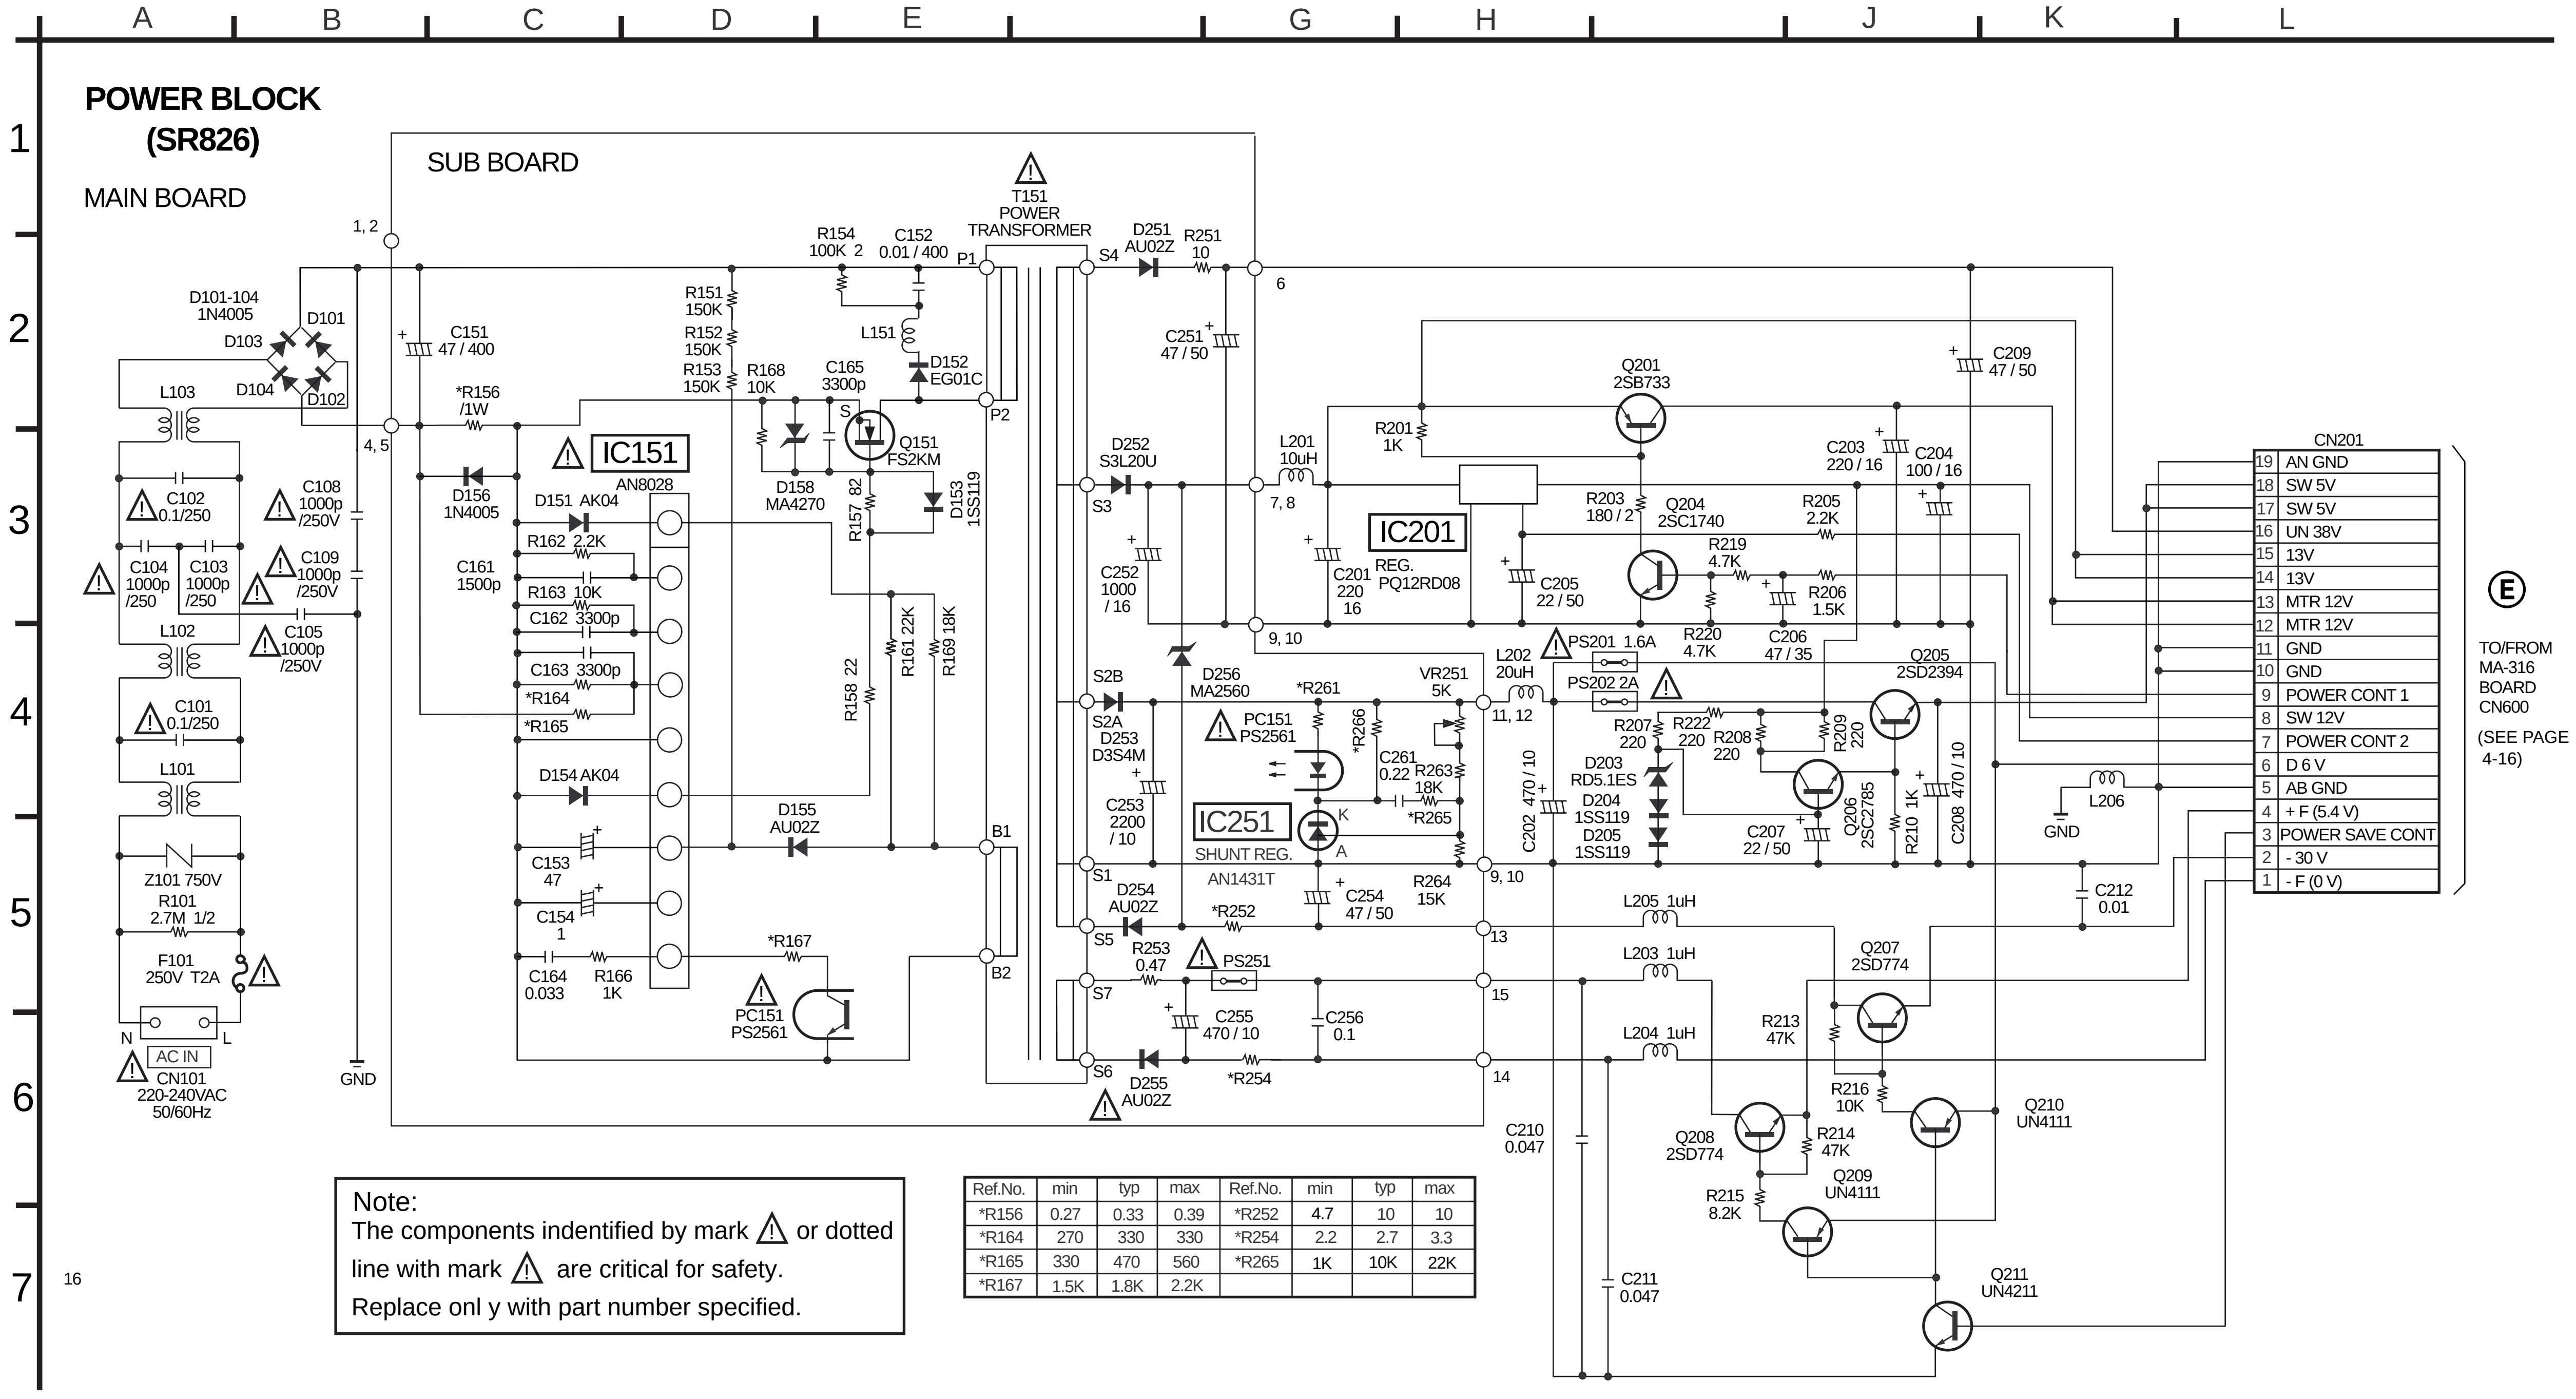

Note:
The components indentified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace onl y with part number specified.

Ref.No.	min	typ	max	Ref.No.	min	typ	max
*R156	0.27	0.33	0.39	*R252	4.7	10	10
*R164	270	330	330	*R254	2.2	2.7	3.3
*R165	330	470	560	*R265	1K	10K	22K
*R167	1.5K	1.8K	2.2K				

SECTION 5
INTERFACE, IC PIN FUNCTION DESCRIPTION

5-1. SYSTEM CONTROL — VIDEO BLOCK INTERFACE (MA-316 BOARD IC160)

Signal	Pin No.	I/O	STOP FF/REW	TAPE THREADING	TAPE UNTHREADING	PB	PB PAUSE	SLOW	x 2	CUE	REVIEW	REC	REC PAUSE
RF SWP	1	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
QVD	4	O	L	L	L	*2	*3	*3	*2	*3	*3	L	L
V SYNC	66	I	*4	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
NT JUDGE	13	O	L	L	L	L	L	L	L	L	L	L	L

*1 Synchronized with drum rotation. 25Hz 50% duty cycle.
*2 Normally “L“. “H“ when CTL signal is not generated.
*3 V period “H“ pulse.
*4 Selected by REC mode. “H“ in LP mode.“
*5 Composite sync signal (positive).

5-2. SYSTEM CONTROL — SERVO PERIPHERAL CIRCUIT INTERFACE (MA-316 BOARD IC160)

Signal	Pin No.	I/O	STOP	FF	REW	TAPE THREADING	TAPE UNTHREADING	PB	PB PAUSE	SLOW	CUE	x 2	REVIEW	REC	REC PAUSE
REC CTL	7	O	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	*1	Hi-Z
CAP STOP	35	O (O.D)	L	Hi-Z (O.D)	Hi-Z (O.D)	Hi-Z (O.D)	Hi-Z (O.D)	Hi-Z (O.D)	L	*3	Hi-Z (O.D)	Hi-Z (O.D)	Hi-Z (O.D)	Hi-Z (O.D)	Hi-Z (O.D)
STEP PLS	99	O	L	L	L	L	L	L	L	*2	L	L	L	L	L
PB CTL	67	I	H	*6	*6			*1	H/L	*2	*6	*6	*6	*1	H
DRM PG	68	I	*4	*1	*1	*5	*5	*1	*1	*1	*1	*1	*1	*1	*1
DRM FG	69	I	*4	*7	*7	*5	*5	*7	*7	*7	*7	*7	*7	*7	*7
CAP FG	70	I	H/L	*6	*6	*5	*5	*6	H/L	*2	*6	*6	*6	*6	H/L
CAP DA	73	O	*8	*8	*8	*8	*8	*9	*8	*8	*9	*8	*9	*9	*8
DRM DA	74	O	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10
CTL RESET	8	I/O	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	*11	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z

*1. 25Hz pulse.
*2. Pulse at tape running.
*3. Reverse logic pulse of STEP PLS.
*4. “L” when drum rotation stops.
*5. Unstable period pulse.
*6. Pulse in period in proportional to tape speed.
*7. 300Hz pulse.
*8. Pulse at tape running.
*9. Approx. 2 msec period “H” or “L” pulse.
*10. Approx. 1.5 msec period “H” or “L” pulse.
*11. “L” when FWD SLOW, “H” when RVS SLOW.

5-3. SYSTEM CONTROL — MECHANISM INTERFACE (MA-316 BOARD IC160)

Signal	Pin No.	I/O	EJECTED	CASSETTE LOADING	CASSETTE UNLOADING	TAPE THREADING	TAPE UNTHREADING	STOP	FF	REW	PB	PB PAUSE	SLOW	x 2	CUE	REVIEW	REC	REC PAUSE
CAM2	(9)	HI-Z	L	H	L	H	L	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7
MODE 1 (*8)	(22)	I	H	L	L	*1	*1	H	H	H	H	H	H	H	H	L	H	H
MODE 2 (*8)	(21)	I	H	L	L	*1	*1	H	H	H	L	L	L	L	L	L	L	L
MODE 3 (*8)	(20)	I	L	L	L	*1	*1	H	L	L	L	L	L	L	L	H	L	L
MODE 4 (*8)	(19)	I	L	H	H	*1	*1	L	H	H	H	L	L	L	L	L	L	L
(IN REC PRF)	(15)	I	H	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
T REEL FG	(64)	I	H/L	H/L	H/L	H/L	H/L	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
S REEL FG	(63)	I	H/L	H/L	H/L	*3	*3	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
$\overline{\text{T/E LED}}$	(32)	O (O.D)	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
$\overline{\text{CAP STOP}}$	(35)	O (O.D)	L	L	L	H	H	L	H	H	H	L	*5	H	H	H	H	L
CAP RVS	(72)	O	H			L	H	H/L	L	H	L	L	L/*5	L	L	H	L	L
T SENS	(61)	I	*4	*4	*4	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
S SENS	(62)	I	*4	*4	*4	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6

*1. Uncertainly.
*2. "L" when erasing protection tab is bent. "H" when not bent.
*3. Pause of period in proportion to reel rotating speed.
*4. Approx. 2 msec period "H" pulse.
*5. Pulse at tape running.
*6. Normally "L". 2 msec period "H" pulse when tape top or tape end is detected.
*7. When transition to UNLOADING direction : "L".
When transition to LOADING direction : "H".
When CAM MOTOR is stopped : Hi-Z.
*8. When RVS slow : Mode 1="L"
When RVS slow : Mode 2="L"
When RVS slow : Mode 3="H"
When RVS slow : Mode 4="L"

5-4. SYSTEM CONTROL — SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-316 BOARD IC160)

Signal	Pin No.	I/O	I/O Level
$\overline{\text{ASURA RESET}}$	(40)	I	Normally "H", "L" when service interruption is detected or restored.
$\overline{\text{ASURA CS}}$	(44)	I	Chip select signal from timer microprocessor. V period "L" pulse.
S IN 0	(45)	I	Serial communication data from timer microprocessor. V period " L" pulse.
S OUT 0	(46)	O	Serial communication data to timer microprocessor. V period "L" pulse.
S CLK	(47)	I	Serial communication clock from timer microprocessor. V period "L" pulse.

5-5. SYSTEM CONTROL — AUDIO BLOCK INTERFACE (MA-316 BOARD IC160)

Signal	Pin No.	I/O	STOP/FF/ REW	TAPE LOADING	TAPE UNLOADING	PB	PB PAUSE	SLOW	x 2	CUE	REVIEW	REC	REC PAUSE
AF ENV	(59)	I	AF RF envelope signal input terminal for automatic tracking.										
A MUTEN	(31)	O (O.D)	L	L	L	*1	H	H	H	H	H	L	L
AF REC $\overline{\text{P}}$	(2)	O	L	L	L	L	L	L	L	L	L	H	L
AF SWP	(100)	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
FULL ERS	(36)	O (O.D)	H	H	H	H	H	H	H	H	H	L	H

*1. 25 Hz 50 % duty pulse approx. 5 msec delayed from RF SW P.

5-6. SERVO/SYSTEM CONTROL MICROPROCESSOR PIN FUNCTIONS (MA-316 BOARD IC160)

Pin No.	Pin Name	I/O	Function
1	RF SWP	O	RF switching pulse output.
2	AF REC $\overline{\text{P}}$	O	"H" when HiFi audio REC.
3	N.C.	—	Not used.
4	QVD	O	Quasi VD pulse output.
5	AUTO PRESET	O	"H" during auto preset.
6	FE ON	O	Flying erase ON/OFF
7	REC CTL	O	REC CTL signal output.
8	CTL RESET	O	Capstan current control. "H" during slow mode.
9	CAM 2	I	Cam motor control.
10	N.C.	—	Not used.
11	TA MUTE	O	Tuner audio mute. H: Mute
12	SECAM DET	I	"H" when the SECAM signal is detected.
13	NT JUDGE	I	4.43/3.58 judge input.
14	MESECAM DET	I	"H" when the MESECAM signal is detected.
15	CIN (REC PRE)	I	Erasing protection tab, cassette in detection signal input.
16	AV CONT	O	TV/VTR.
17	C+ DET	I	CANAL + detection.
18	SW1	O	BG/L control signal.
19	MODE 4	I	Cam encoder signal input.
20	MODE 3	I	Cam encoder signal input.
21	MODE 2	I	Cam encoder signal input.
22	MODE 1	I	Cam encoder signal input.
23	POWER SAVE CONT 1	O	–30V Power supply control.
24	POWER SAVE C+	O	C+ IC Power supply control.
25	MOD CONT	O	Tuner modulation output control signal.
26	SECAM ON	O	SECAM control signal output.
27	N.C.	—	Not used.
28	SDA 0	I/O	I^2C data.
29	N.C.	—	Not used.
30	SCL 0	I/O	I^2C clock.
31	A MUTE	O	"H" when audio mute.
32	T/E LED	O	Tape top/end sensors driver.
33	N.C.	—	Not used.
34	N.C.	—	Not used.
35	$\overline{\text{CAP STOP}}$	O	Capstan stop signal output.
36	FULL ERS	O	Full erase control.
37	N.C.	—	Not used.
38	N.C.	—	Not used.
39	MP	I	Fixed to "L".
40	$\overline{\text{ASURA RESET}}$	I	System reset signal.
41	VSS	—	Ground.
42	XTAL	O	System clock 16MHz.
43	EXTAL	I	System clock 16MHz.
44	$\overline{\text{ASURA CS}}$	I	Servo/system control microcomputer chip select signal.
45	S IN 0	I	Serial communication signal.
46	S OUT 0	O	Serial communication signal.
47	SCLK	I	Serial communication signal.
48	N.C.	—	Not used.
49	N.C.	—	Not used.
50	N.C.	—	Not used.

Pin No.	Pin Name	I/O	Function
51	SW2	O	BG/L' control signal.
52	AVSS	—	Unswitched ground.
53	AVREF	—	AD port reference input UNSW 5V.
54	AVDD	—	UNSW 5V.
55	NTPB SW	I	NTSC playback switch.
56	AV ADJ	I	Adjustment mode.
57	FOLLOW TV	I	Synchro-TP detection signal.
58	GND	—	Ground.
59	AF ENV	I	HiFi audio playback signal envelope.
60	RF ENV	I	Video playback signal envelope.
61	T SENS	I	Take-up end sensor.
62	S SENS	I	Supply end sensor.
63	S REEL FG	I	Supply reel FG input.
64	T REEL FG	I	Take-up reel FG input.
65	N.C.	—	Not used.
66	CSYNC	I	Composite sync. signal input.
67	$\overline{\text{PB CTL}}$	I	Playback CTL input.
68	DRM PG	I	Drum PG input.
69	DRM FG	I	Drum FG input.
70	CAP FG	I	Capstan FG input.
71	SECAM MIX	O	SECAM MIX control.
72	CAP RVS	O	Capstan reverse control "H" when reverse.
73	CAP DA	O	Capstan error D/A output.
74	DRM DA	O	Drum PG output.
75	CTL REC	—	Not used.
76	CTL STEP	—	Not used.
77	REC COUNT	I	Counter signal input when recording.
78	GND	—	Ground.
79	DNR RESET	O	DNR reset signal.
80	DATA (SSB)	O	Serial communication data.
81	CLOCK (SSB)	O	Serial communication clock.
82	N.C.	—	Not used.
83	N.C.	—	Not used.
84	CAP TRQ PWM	O	PWM output for capstan torque control.
85	N.C.	—	Not used.
86	N.C.	—	Not used.
87	N.C.	—	Not used.
88	VSS	—	Ground.
89	VDD	—	5V.
90	5V	—	5V.
91	N.C.	—	Not used.
92	CTL HYS HIGH	O	CTL amp gain control.
93	N.C.	—	Not used.
94	N.C.	—	Not used.
95	N.C.	—	Not used.
96	REC	O	"H" output when hifi audio recording.
97	N.C.	—	Not used.
98	N.C.	—	Not used.
99	STEP PLS	O	Step pulse "H" when capstan step driving.
100	AF SWP	O	AF switching pulse output.

5-7. TUNER/TIMER MODE CONTROL PIN FUNCTIONS (FR-128 BOARD IC180)

Pin No.	Pin Name	I/O	Function
1	TXT RST	O	Teletext IC (ML Board IC950) reset signal
2	N.C.	—	
3	LANC IN (SENSOR)	I	Lanc input
4	LANC OUT (SENSOR)	O	Lanc output
5	N.C.	—	
6	SIRCS IN	I	Remote control input
7	EEP DATA	I/O	I^2C bus interface data input/output
8	EEP SCL	I/O	I^2C bus interface clock input/output
9	SDA	I/O	I^2C bus interface data input/output
10	SCL	I/O	I^2C bus interface clock input/output
11	$\overline{\text{FDP CS}}$	O	FLD driver chip select
12	$\overline{\text{LED CS}}$	O	LED driver chip select
13	X-UCOM $\overline{\text{CS}}$	O	ML IC chip select(ML board IC902)
14	N.C.	—	
15	VSS	—	Ground
16	TU ENABLE	O	Tuner chip select
17	PLL CLK	O	Tuner PLL clock
18	PLL DATA	O	Tuner PLL data
19	OSD $\overline{\text{CS}}$	O	OSD IC (MA-316 board IC660) chip select
20	N.C.	—	
21	$\overline{\text{ASURA RESET}}$	O	S/S micon (MA-316 board IC160) reset signal
22	$\overline{\text{ASURA CS}}$	O	S/S micon (MA-316 board IC160) chip select signal
23	POWER CONT	O	Main power supply control signal
24	POWER CONT	O	Secondary power supply control signal
25	N.C	—	
26	OPTION 1	O	ML board IC950 enable signal
27	OPTION 2	I	ML board IC950 busy signal
28	N.C.	—	
29	OPTION 3	—	ML
30	N.C.	—	
31	N.C.	—	
32	Not used	—	Positive supply voltage
33	Not used	—	Positive supply voltage
34	Not used	—	Positive supply voltage
35	SI (TO CME)	I	Serial data input
36	SO (FROM CME)	O	Serial data output
37	SCLK	I/O	SCLK
38	N.C.	—	
39	N.C.	—	
40	$\overline{\text{RST}}$	I	System reset
41	VSS	—	Ground
42	XTAL	O	Internal oscillator output for 20MHz crystal
43	EXTAL	I	Internal oscillator 20MHz crystal input
44	VDD	—	Positive supply voltage
45	N.C.	—	
46	N.C.	—	
47	OSD SO (FROM CME)	O	Serial data output

Pin No.	Pin Name	I/O	Function
48	OSD CLK	O	Serial clock input/output
49	N.C.	—	
50	N.C.	—	
51	N.C.	—	
52	N.C.	—	
53	VDD	—	Positive supply voltage
54	TEX	I	Internal oscillator 32kHz crystal input
55	TX	O	Internal oscillator output for 32kHz crystal
56	VSS	—	Ground
57	AV LINK OUT	O	AV LINK output
58	SIRCS OUT	O	Remote control output
59	N.C.	—	
60	N.C.	—	
61	N.C.	—	
62	$\overline{\text{BUZZER}}$	O	Buzzer output/clock crystal frequency division output
63	POWER FAIL	I	Power voltage drop detection pin
64	Not used	—	Positive supply voltage
65	Not used	—	Positive supply voltage
66	$\overline{\text{CGV}}$	I	Vertical synchro detection
67	PDC DAV	I	VPS/PDC acknowledge signal
68	Not used	—	Positive supply voltage
69	AV LINK IN	I	AV LINK input
70	Not used	—	Positive supply voltage
71	Not used	—	Positive supply voltage
72	A/D0	I	Key pad reading
73	A/D1	I	Key pad reading
74	A/D2	I	Key pad reading
75	A/D3	I	Key pad reading
76	A VSS	—	Ground
77	A VREF0	—	Positive supply voltage
78	A VREF1	—	Positive supply voltage
79	A VDD	—	Positive supply voltage
80	A/D4	I	Key pad reading
81	A/D5	I	Key pad reading
82	A/D6	—	
83	Not used	—	
84	DMS1	I	
85	DMS2	I	
86	AFT	I	Ground wave tuner AFT detection
87	HDET	I	HDET signal input
88	VDD	—	Positive supply voltage
89	VDD	—	Positive supply voltage
90	VSS	—	Ground
91	N.C.	—	
92	N.C.	—	
93	N.C.	—	
94	N.C.	—	
95	N.C.	—	
96	N.C.	—	
97	N.C.	—	
98	N.C.	—	
99	EEP MODE	O	EEP mode control
100	0X-UCOM RST	O	X-UCOM reset signal (IC902 ML board)

SECTION 6
ADJUSTMENTS

6-1. MECHANICAL ADJUSTMENTS

For the mechanical adjustments, please refer to the "VHS MECHANICAL ADJUSTMENT MANUAL Ⅵ (S MECHANISM)" (9-921-647-11).

6-2. ELECTRICAL ADJUSTMENTS

See the adjustment parts location diagram on page 6-6 for the adjustment.

2-1. PREPARATION BEFORE ADJUSTMENT

2-1-1. Equipment Required

The measuring instruments used for this alignment include:

1) Monitor TV
2) Oscilloscope, dual-trace, bandwidth of 30MHz or more, with delay mode (A probe 10:1 should be used unless otherwise specified.)
3) Frequency counter
4) Pattern generator
5) Digital voltmeter
6) Audio generator
7) Audio level meter
8) Audio distortion meter
9) Audio attenuator
10) Alignment tapes
    KRV-51P Part No. : 8-192-605-36

2-1-2. Equipment Connection

Unless otherwise specified, connect and adjust the measuring instruments as shown in the following diagram.

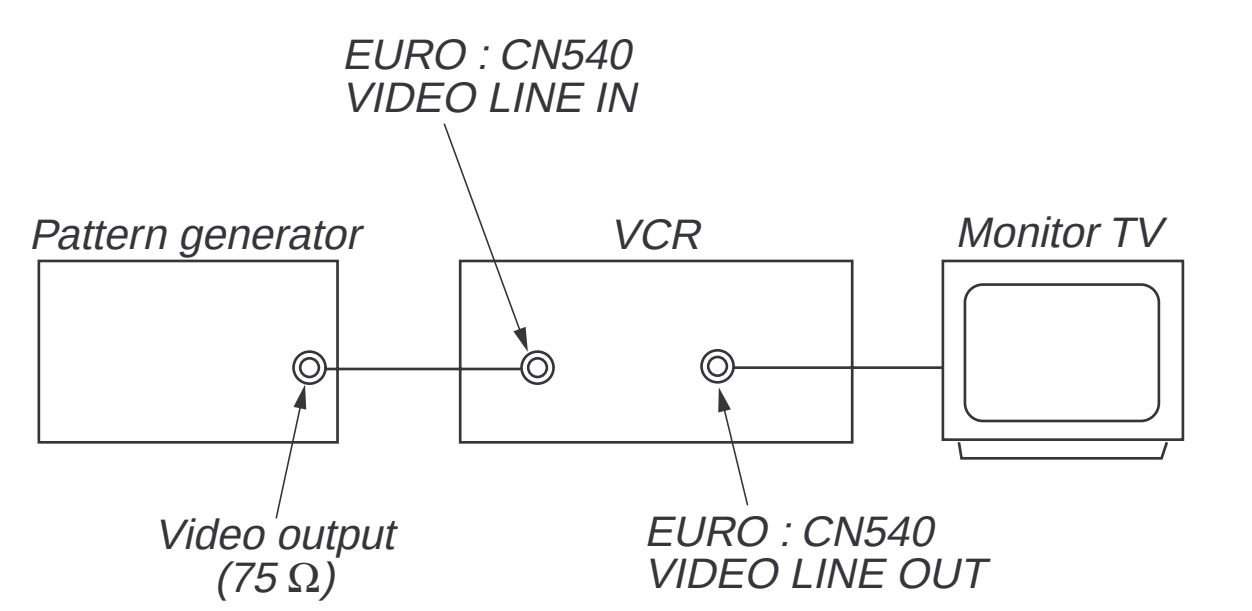

Fig. 6-2-1

2-1-3. Input Signal Check

Video signal produced by a pattern generator is used as an adjustment signal to perform electrical alignment for this unit. This video signal must satisfy the specification.

Unless otherwise specified, place the switches and controls of this unit in the following positions:

• INPUT SELECT switch .... LINE 1

Connect an oscilloscope to the Video Input terminal. Check that the synchronizing signal of the Y signal has an amplitude of approximately 0.7V and that the burst signal has an amplitude of approximately 0.3V and its waveform is flat. And check that the level ratio of burst signal to "red" signal is 0.30 : 0.66. The video signal (color bar) used for electrical aligning this unit is shown in Fig. 6-2-2.

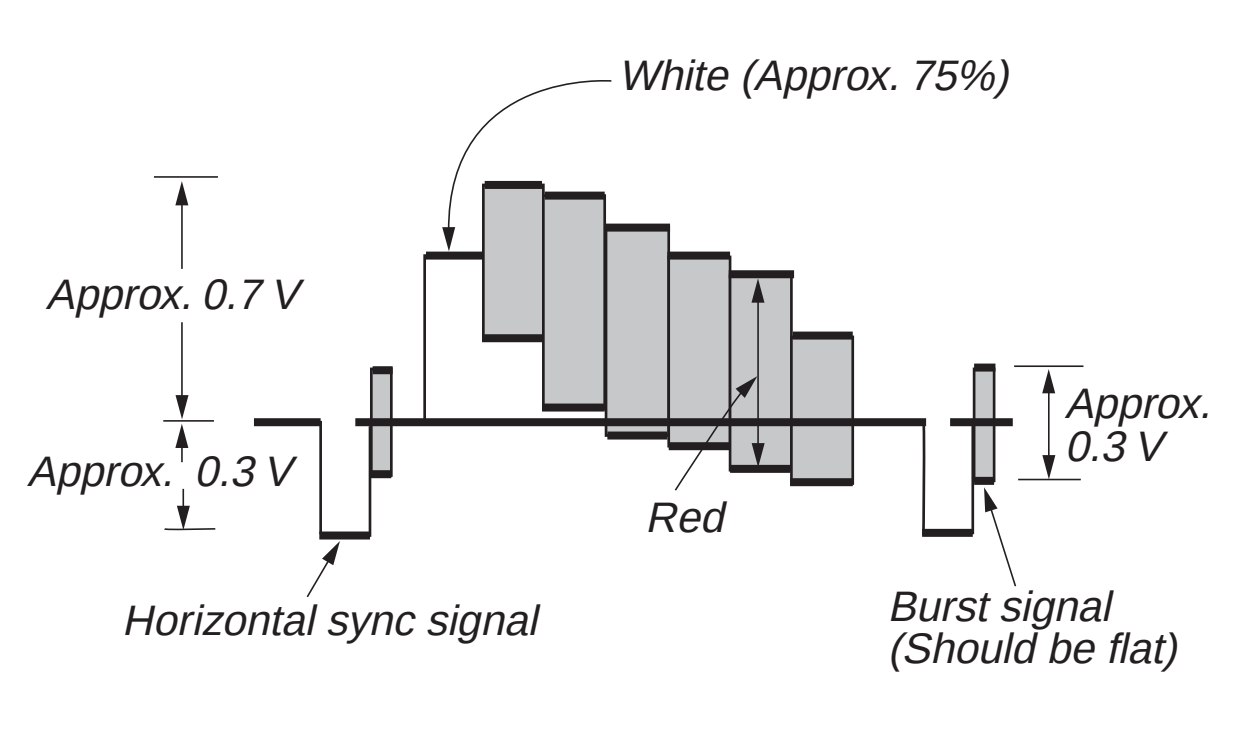

Fig. 6-2-2 Color Bar Signals of Pattern Generator

2-1-4. Alignment Tape

• Contents of KRV-51P

	Mode	Period	Video signal	Audio signal	
				Hi-Fi	Normal
1	SP	7 minutes	Color bar	400Hz (L/R)	400Hz
2		3 minutes	Monoscope		
3	LP	7 minutes	Color bar		
4		3 minutes	Monoscope		

2-1-5. Input/Output Levels and Impedance

Video input: LINE IN
EURO
Input signal: 1Vp-p, 75ohms, unbalanced, sync negative

Video output: LINE OUT
EURO
Output signal: 1Vp-p, 75ohms, unbalanced, sync negative

Audio input: LINE IN
EURO
Input level: –7.5 dBs
(0dBs= 0.775Vrms)
Input impedance: more than 47 kilohms

Audio output: LINE OUT
EURO
Standard level: –7.5dBs at load impedance 47 kilohms
Output impedance: less than 10 kilohms

2-1-6. Adjustment Sequence

The adjustments should be performed in the following sequence.

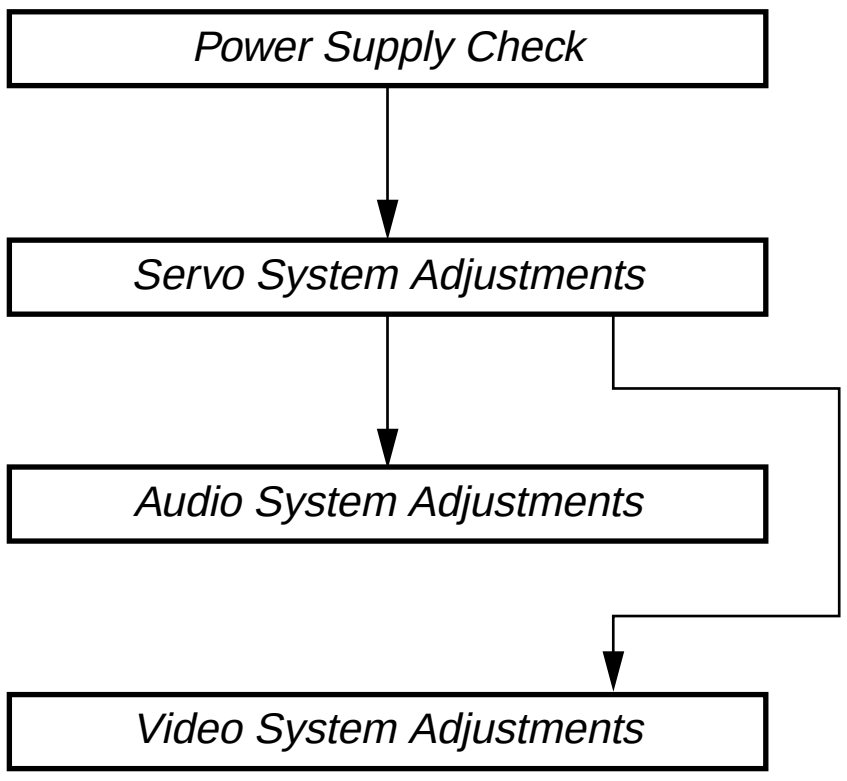

2-2. POWER SUPPLY CHECK

2-2-1. Output Voltage Check (MA-316 Board)

Mode	E-E
Measuring Instrument	Digital voltmeter
TUNER 30V Check	
Measurement point	D702 Cathode
Specified value	33 ± 2V
VCC 12V Check	
Measurement point	IC530 Pin ②
Specified value	12.0 ± 0.3V
D 5V Check	
Measurement point	D160 Cathode
Specified value	5.2 ± 0.3V

[Check Method]

1) Each of these supply voltages must meet its specified value.

2-3. SERVO SYSTEM CHECK

Unless otherwise specified, set the switches to the following positions.

• INPUT SELECT switch .... LINE 1
• TAPE SPEED switch .... SP

2-3-1. RF Switching Position/ AF Switching Position Adjustments (MA-316, RP-231 Boards)

[Adjustment Purpose]

To adjust the link of the A-ch and B-ch of the tape playback outputs. To make the unit compatible with other tapes and units. If this specification is not satisfied, the link will appear on the screen and the screen will be disrupted, etc.

Mode	Playback
Signal	Alignment tape: SP color bar portion
Measurement point	CH1: Video LINE OUT (RF switching position) CN341 pin ① (HF ADJ) (AF switching position) (RP-231 board) CH2: CN261 pin ③ (RF SWP) (RP-231 board)
Measuring instrument	Oscilloscope
Specified value	6.5 ± 0.5H (416 ± 32 µsec)

[Adjustment Method]

1) Short-circuit between pin ⑤ (AV ADJ) and ③ (GND) of CN261 for about 1 second to activate the RF switching position adjustment mode.
2) Check that “AF” is indicated on FL display.
3) Using the program + and – buttons, adjust to 416 ± 32µsec (6.5 ± 0.5H).
4) Press the PAUSE button.
5) The set goes to the AF switching position adjustment mode.

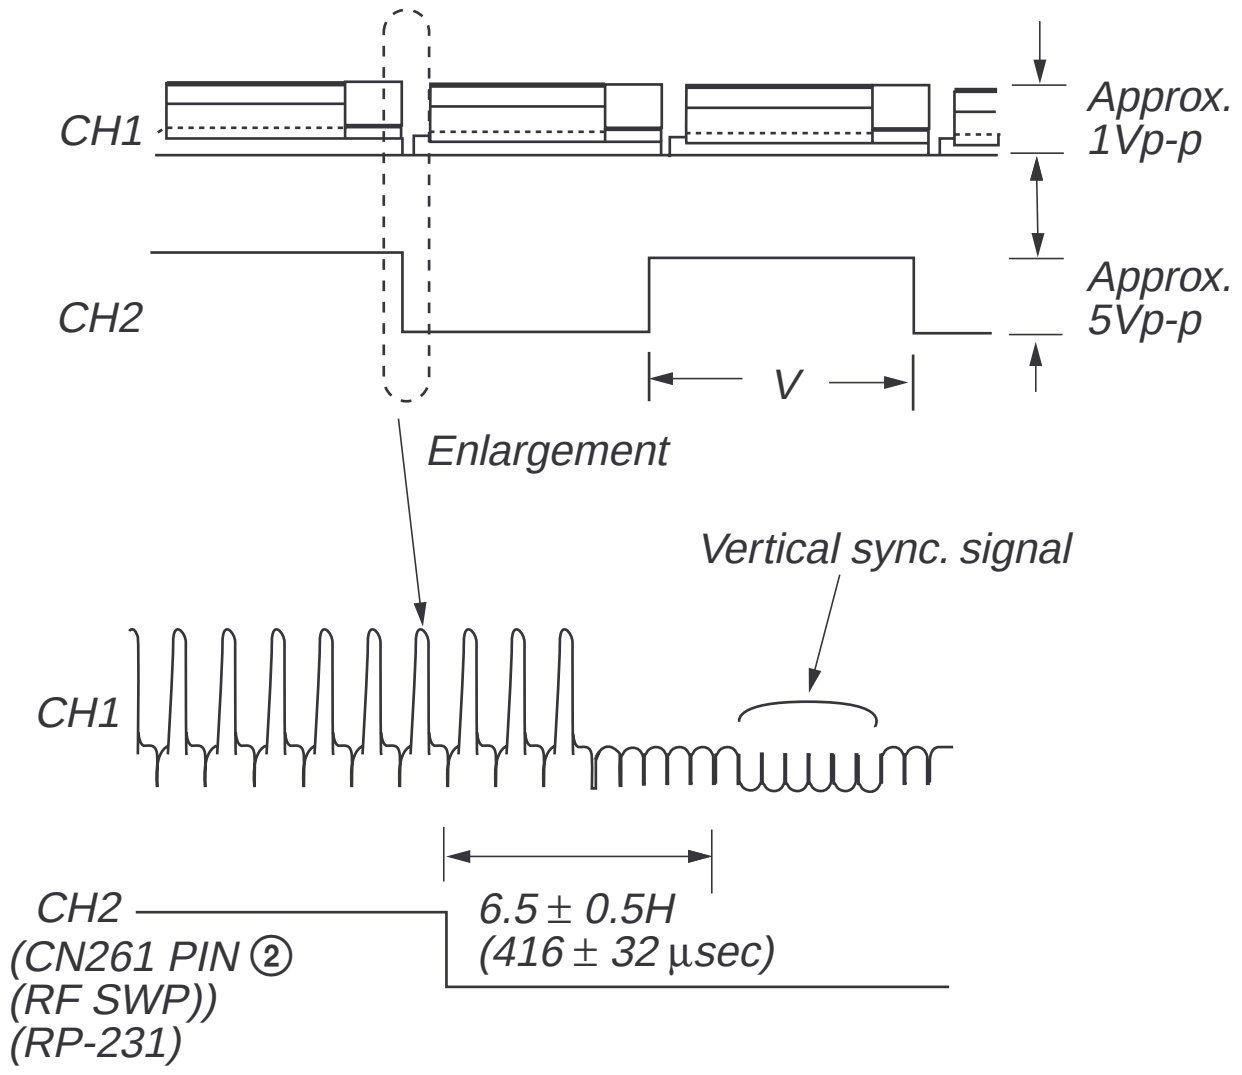

Fig. 6-2-3

6) Check that “AH” is indicated on FL display.
7) Using the program + and – buttons, minimize a chipped portion. At this time, confirm that a noisy sound is not heard.
8) Press the PAUSE button.
9) Press the EJECT button.

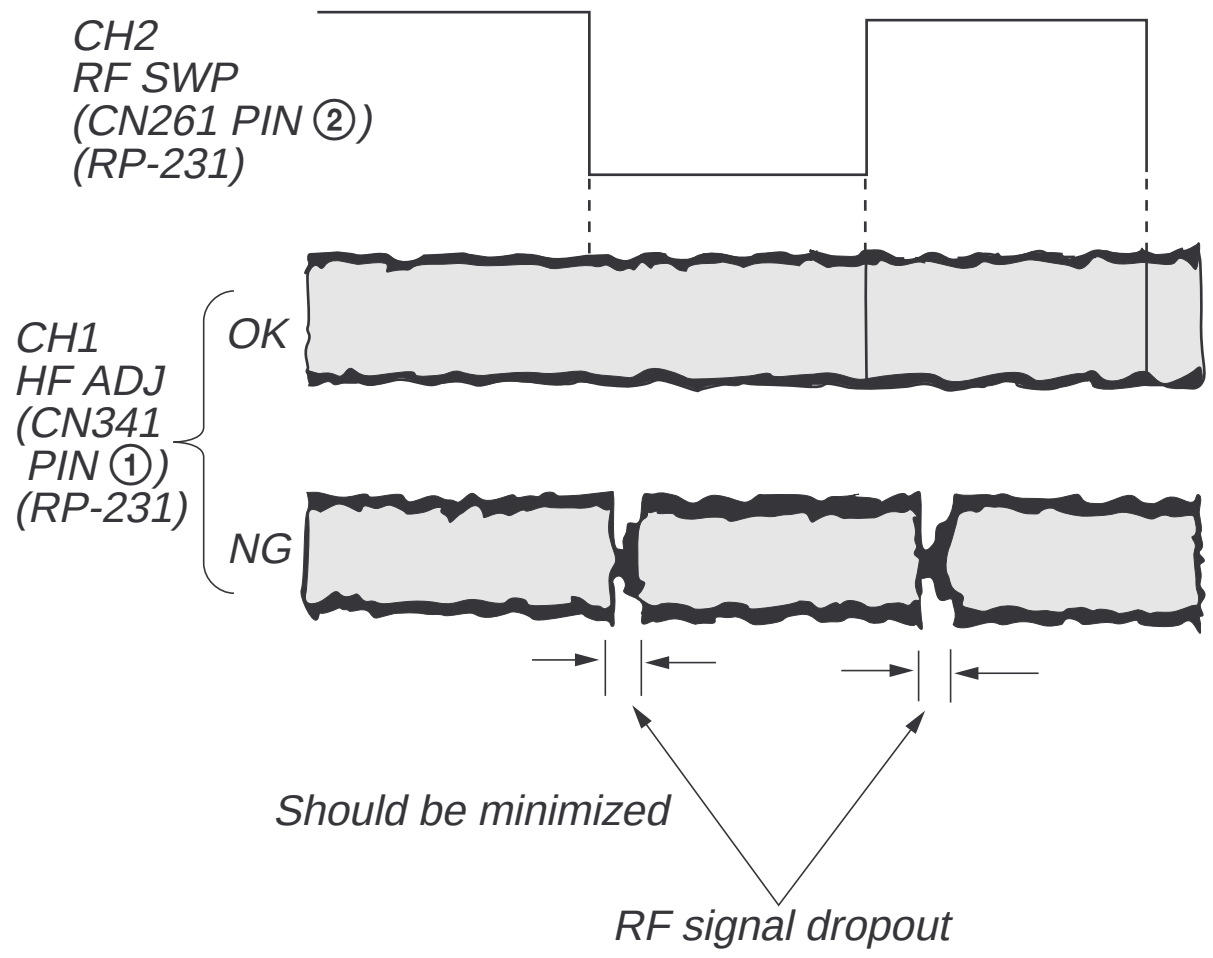

Fig. 6-2-4

2-4. VIDEO SYSTEM CHECKS

For the video system checks, follow the checking procedures given below as a rule. The color bar video signal supplied from the pattern generator is used as the video input signal for the video system adjustment of the recording mode. Check that the signal satisfies the specified value designated in the “Check of input signal” (Fig. 6-2-2)

Unless otherwise specified, set the switches to the following positions.

- INPUT SELECT switch .... LINE 1
- TAPE SPEED switch .... SP

[Checking Sequence]

1) X’tal OSC Check
2) SYNC AGC Check
3) White clip/Dark clip Check
4) Recording Y Level Check
5) Recording Chroma Level Check
6) Playback Level Check

2-4-1. X’tal OSC Check (MA-316 Board)

Mode	Playback
Signal	Alignment tape: SP Color bar portion
Measurement point	Q211 Emitter
Measuring instrument	Oscilloscope and Frequency counter
Specified value	4,433,619 ± 96Hz

Note: A frequency counter should be connected through a buffer amplifier (oscilloscope, etc.) having a high impedance and a low capacitance.

[Check Method]

1) Check that the oscillation frequency satisfies the specified value and that the oscillation voltage is 500 ± 200mVp-p.

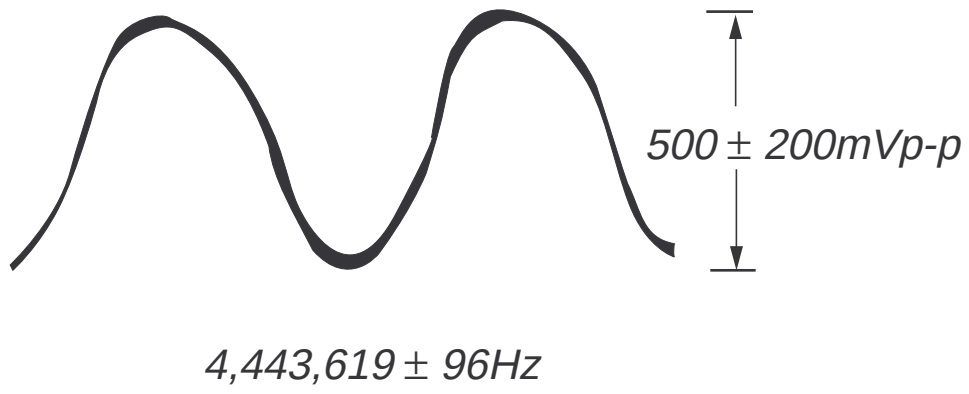

Fig. 6-2-5

2-4-2. SYNC AGC Check (MA-316 Board)

Mode	E-E
Signal	Color bar
Measurement point	IC201 pin ㊳
Measuring instrument	Oscilloscope
Specified value	A=2.1 ± 0.1Vp-p

[Check Method]

1) Check that the Video signal level (A) satisfies the specified value.

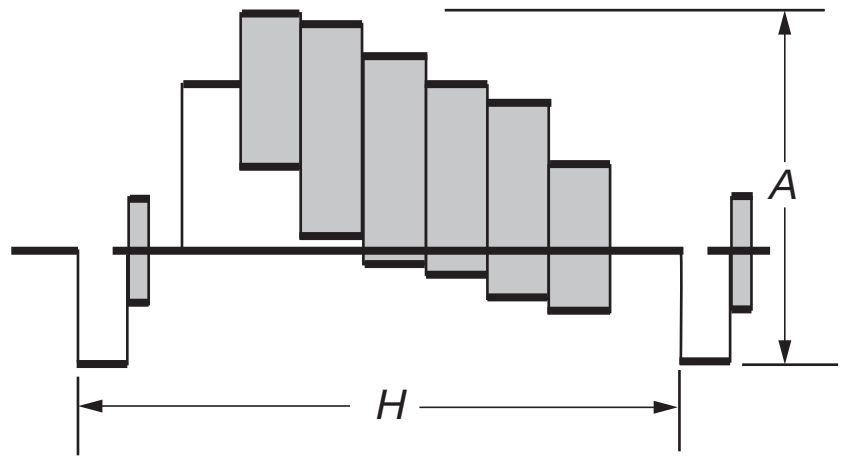

Fig. 6-2-6

2-4-3. White Clip/Dark Clip Check (MA-316 Board)

Mode	E-E
Signal	Color bar
Measurement point	IC201 pin ㊲
Measuring instrument	Oscilloscope
Specified value	White clip : 190 ± 15% Dark clip : 58.5 ± 5%

Connect a resistor of 3.3kΩ between IC201 pin ㊷ and GND.

[Check Method]

1) Check that the white clip level is 190 ± 15% to the white (100%) level.
2) Check that the dark chip level is 58.5 ± 5% to the white (100%) level.

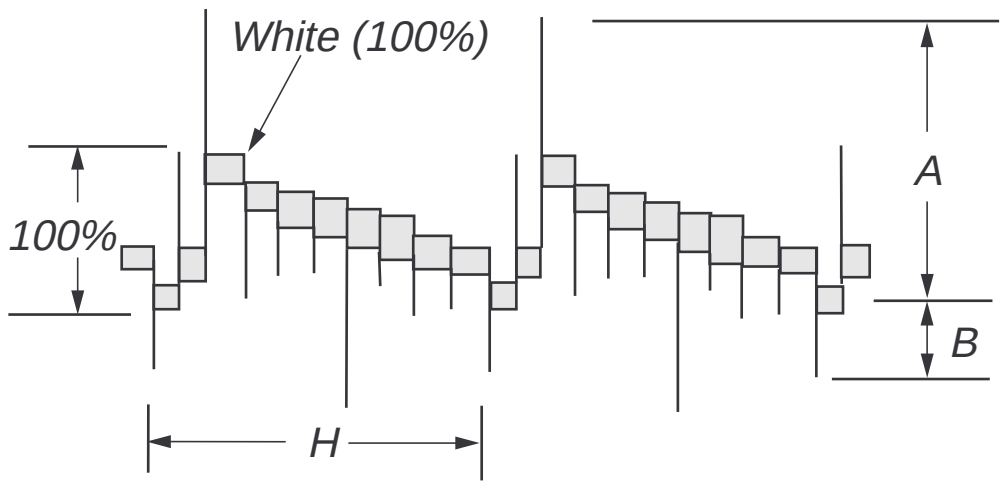

Fig. 6-2-7

2-4-4. Recording Y Level Check (MA-316 Board)

Mode	E-E
Signal	No-signal
Measurement point	IC201 pin ⑱
Measuring instrument	Oscilloscope
Specified value	A=307 ± 50mVp-p

[Check Method]

1) Check that the recording RF signal satisfies the specified value.

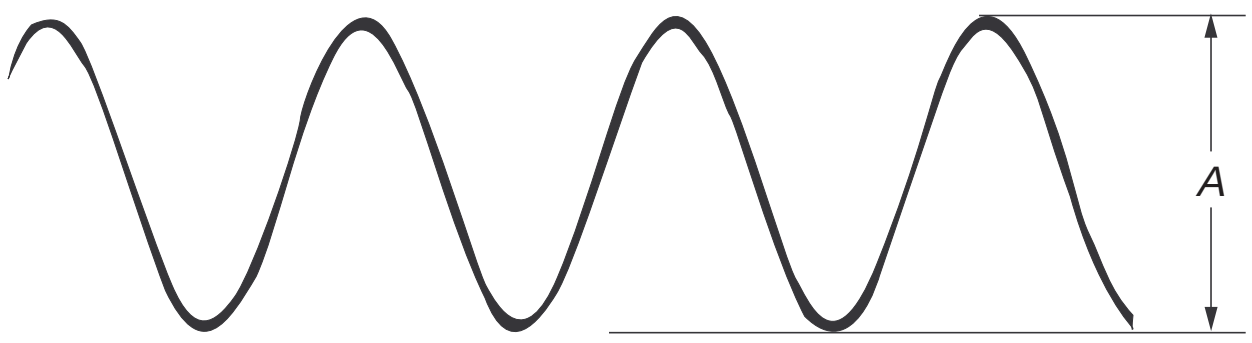

Fig. 6-2-8

2-4-5. Recording Chroma Level Check (MA-316 Board)

Mode	Recording
Signal	Color bar
Measurement point	IC201 pin ⑭
Measuring instrument	Oscilloscope
Specified value	A=350 ± 40mV

[Check Method]

1) Confirm the amplitude of recording chroma level becomes the specified value.

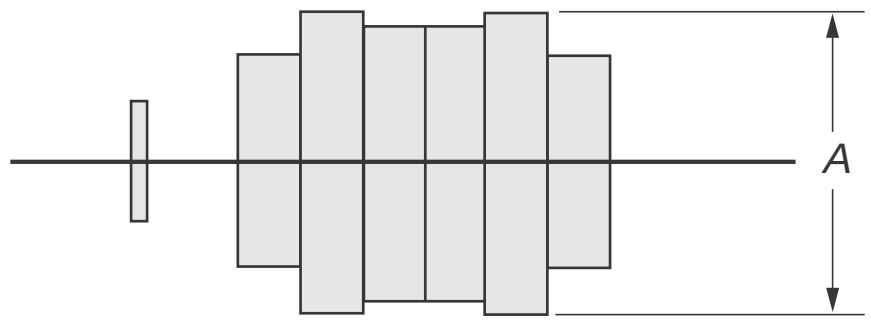

Fig. 6-2-9

2-4-6. Playback Level Check (MA-316 Board)

Mode	Playback
Signal Alignment	Alignment tape : SP mode color bar portion
Measurement point	Video LINE OUT terminal
Measuring instrument	Oscilloscope
Specified value	A=1.0 ± 0.1Vp-p (75Ω terminated)

[Check Method]

1) Check that the playback level satisfies the specified value.

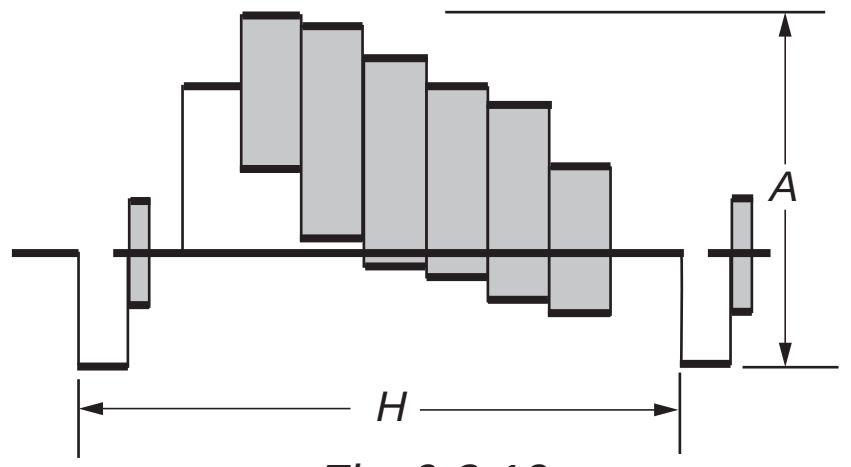

Fig. 6-2-10

2-5. AUDIO SYSTEM ADJUSTMENT

- For the adjustment of the audio system, perform in the SP mode if there is no special notes. Use the alignment tape.

[Connecting Instruments]

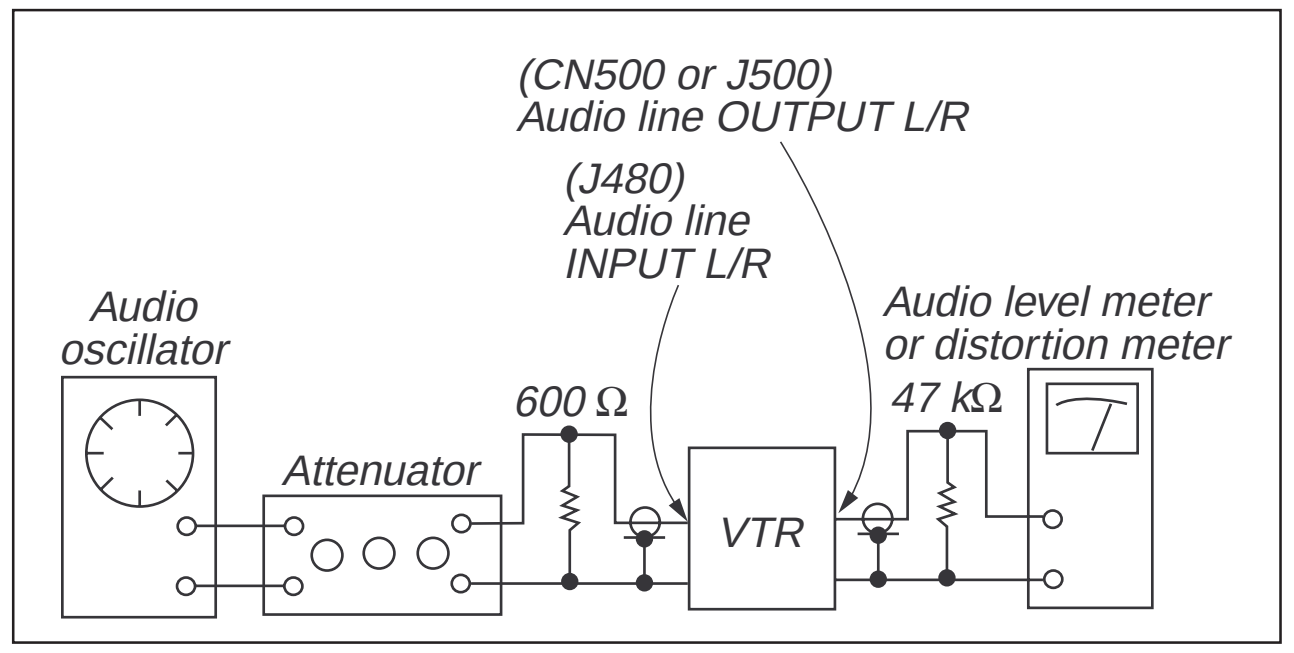

Fig. 6-2-11

- Adjust in the SP mode if there is no special indications.
- Perform the adjustment setting the switch on the following positions.
- INPUT SELECT switch .... LINE IN 2

[Adjustment Method]

1. ACE head adjustment.....Refer to the VHS mechanical adjustment manual Ⅵ.
2. E-E output level check
3. Overall Output level and distortion factor check
4. Overall noise level check.

2-5-1. ACE Head Adjustment

Refer to the "VHS mechanical adjustment manual Ⅵ" (9-921-647-11).

2-5-2. E-E Output Level Check

Mode	E-E
Signal	400Hz, –7.5dBs : J480 (LINE IN 2) on FR-128 board
Measurement point	J500 (AUDIO OUT), CN500 (LINE 1)
Measuring instrument	Audio level meter
Specified value	J500 : –7.5 ± 2.0dBs, CN500 : –6.3 ± 2.0dBs

[Check Method]

1) Input signal of 400Hz and –7.5dBs to J480 (LINE IN 2).
2) Check that the audio output level is the specified value.

2-5-3. Overall Output Level and Distortion Factor Check

Mode	Self-record playback
Signal	400Hz, –7.5dBs : J480 (LINE IN 2) on FR-128 board
Measurement point	CN500 (LINE 1) Pin ③ (L), Pin ① (R)
Measuring instrument	Audio level meter and Distortion meter
Specified value	Playback Level: –6.3 ± 3dBs Distortion: 4.0% or less

[Check Method]

1) Input signal of 400Hz and –7.5dBs to J480 (LINE IN 2).
2) Record signal.
3) Playback the recorded portion.
4) Check that the output level is –6.3 ± 3dBs.
5) Check that the distortion factor is 4.0% or less.

2-5-4. Overall Noise Level Check

Mode	Self-record playback
Signal	No signal (Insert a shorting plug into the Audio LINE IN terminal)
Measurement point	CN500 (LINE 1) Pin ③
Measuring instrument	Audio level meter (IHF-A weighing filter is used)
Specified value	– 45.5dBs or less

[Check Method]

1) Record.
2) Playback recorded portion.
3) Check that noise level is – 45.5dBs or less.

2-6. ADJUSTMENT PARTS LOCATION DIAGRAM

RP-231 BOARD (Conductor side)

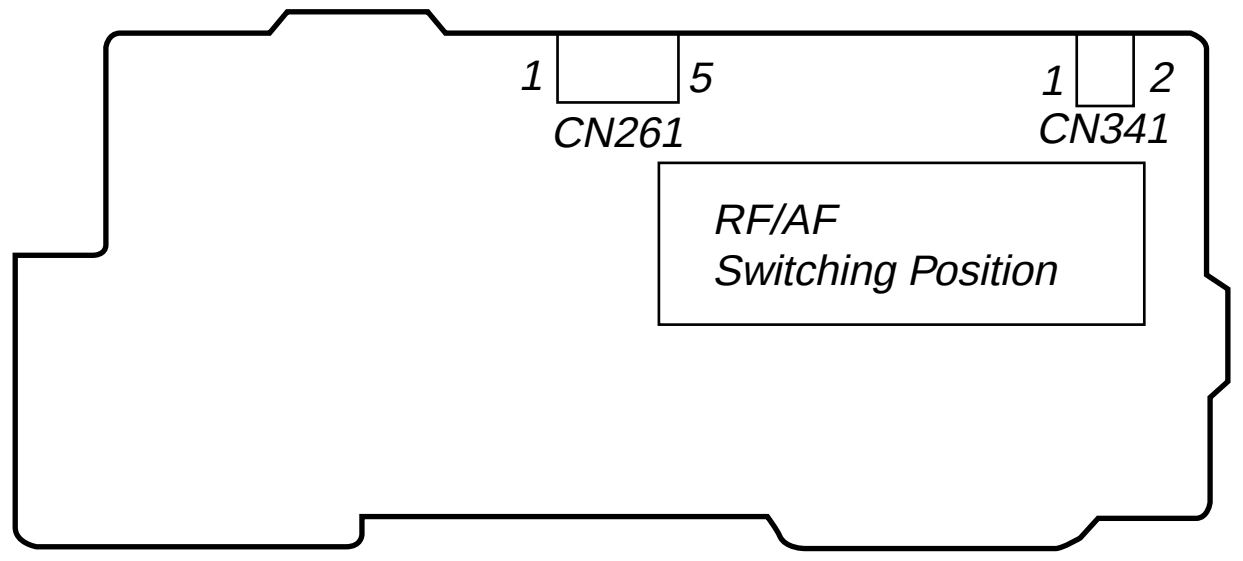

MA-316 BOARD (Conductor side)

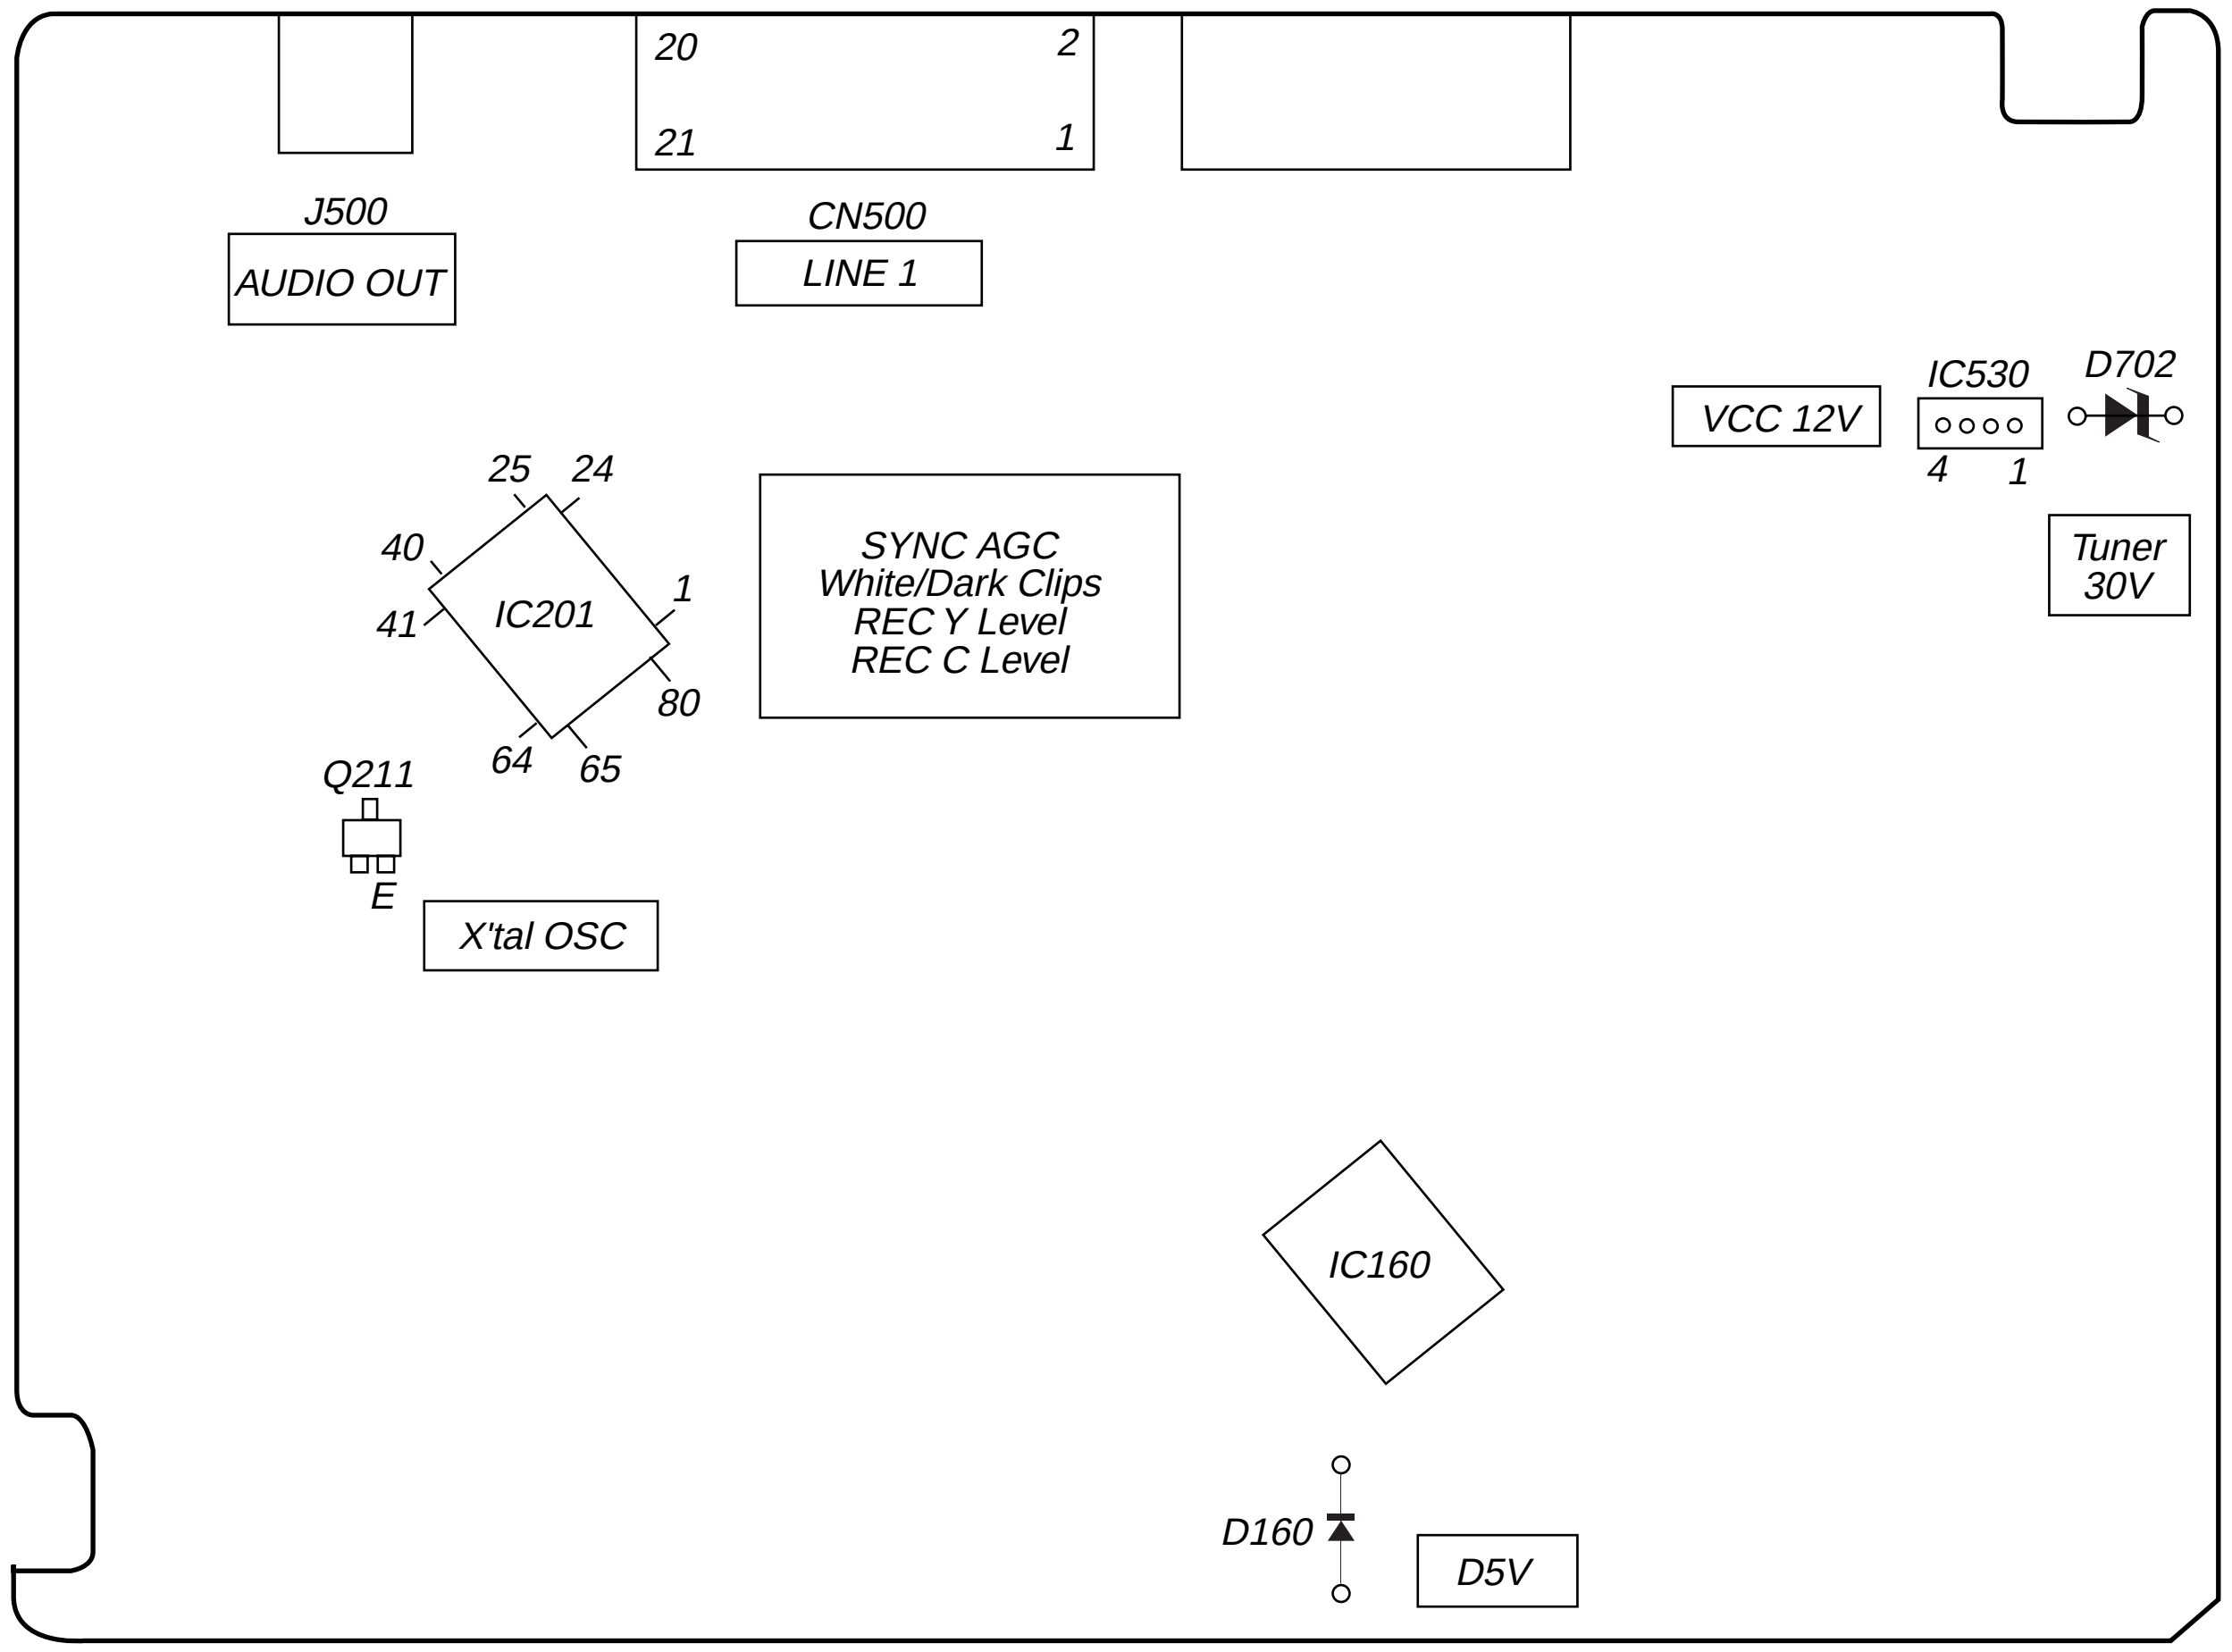

SECTION 7
REPAIR PARTS LIST

7-1. EXPLODED VIEWS

Note:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (#mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1-1. FRONT PANEL ASSEMBLY AND UPPER CASE SECTION

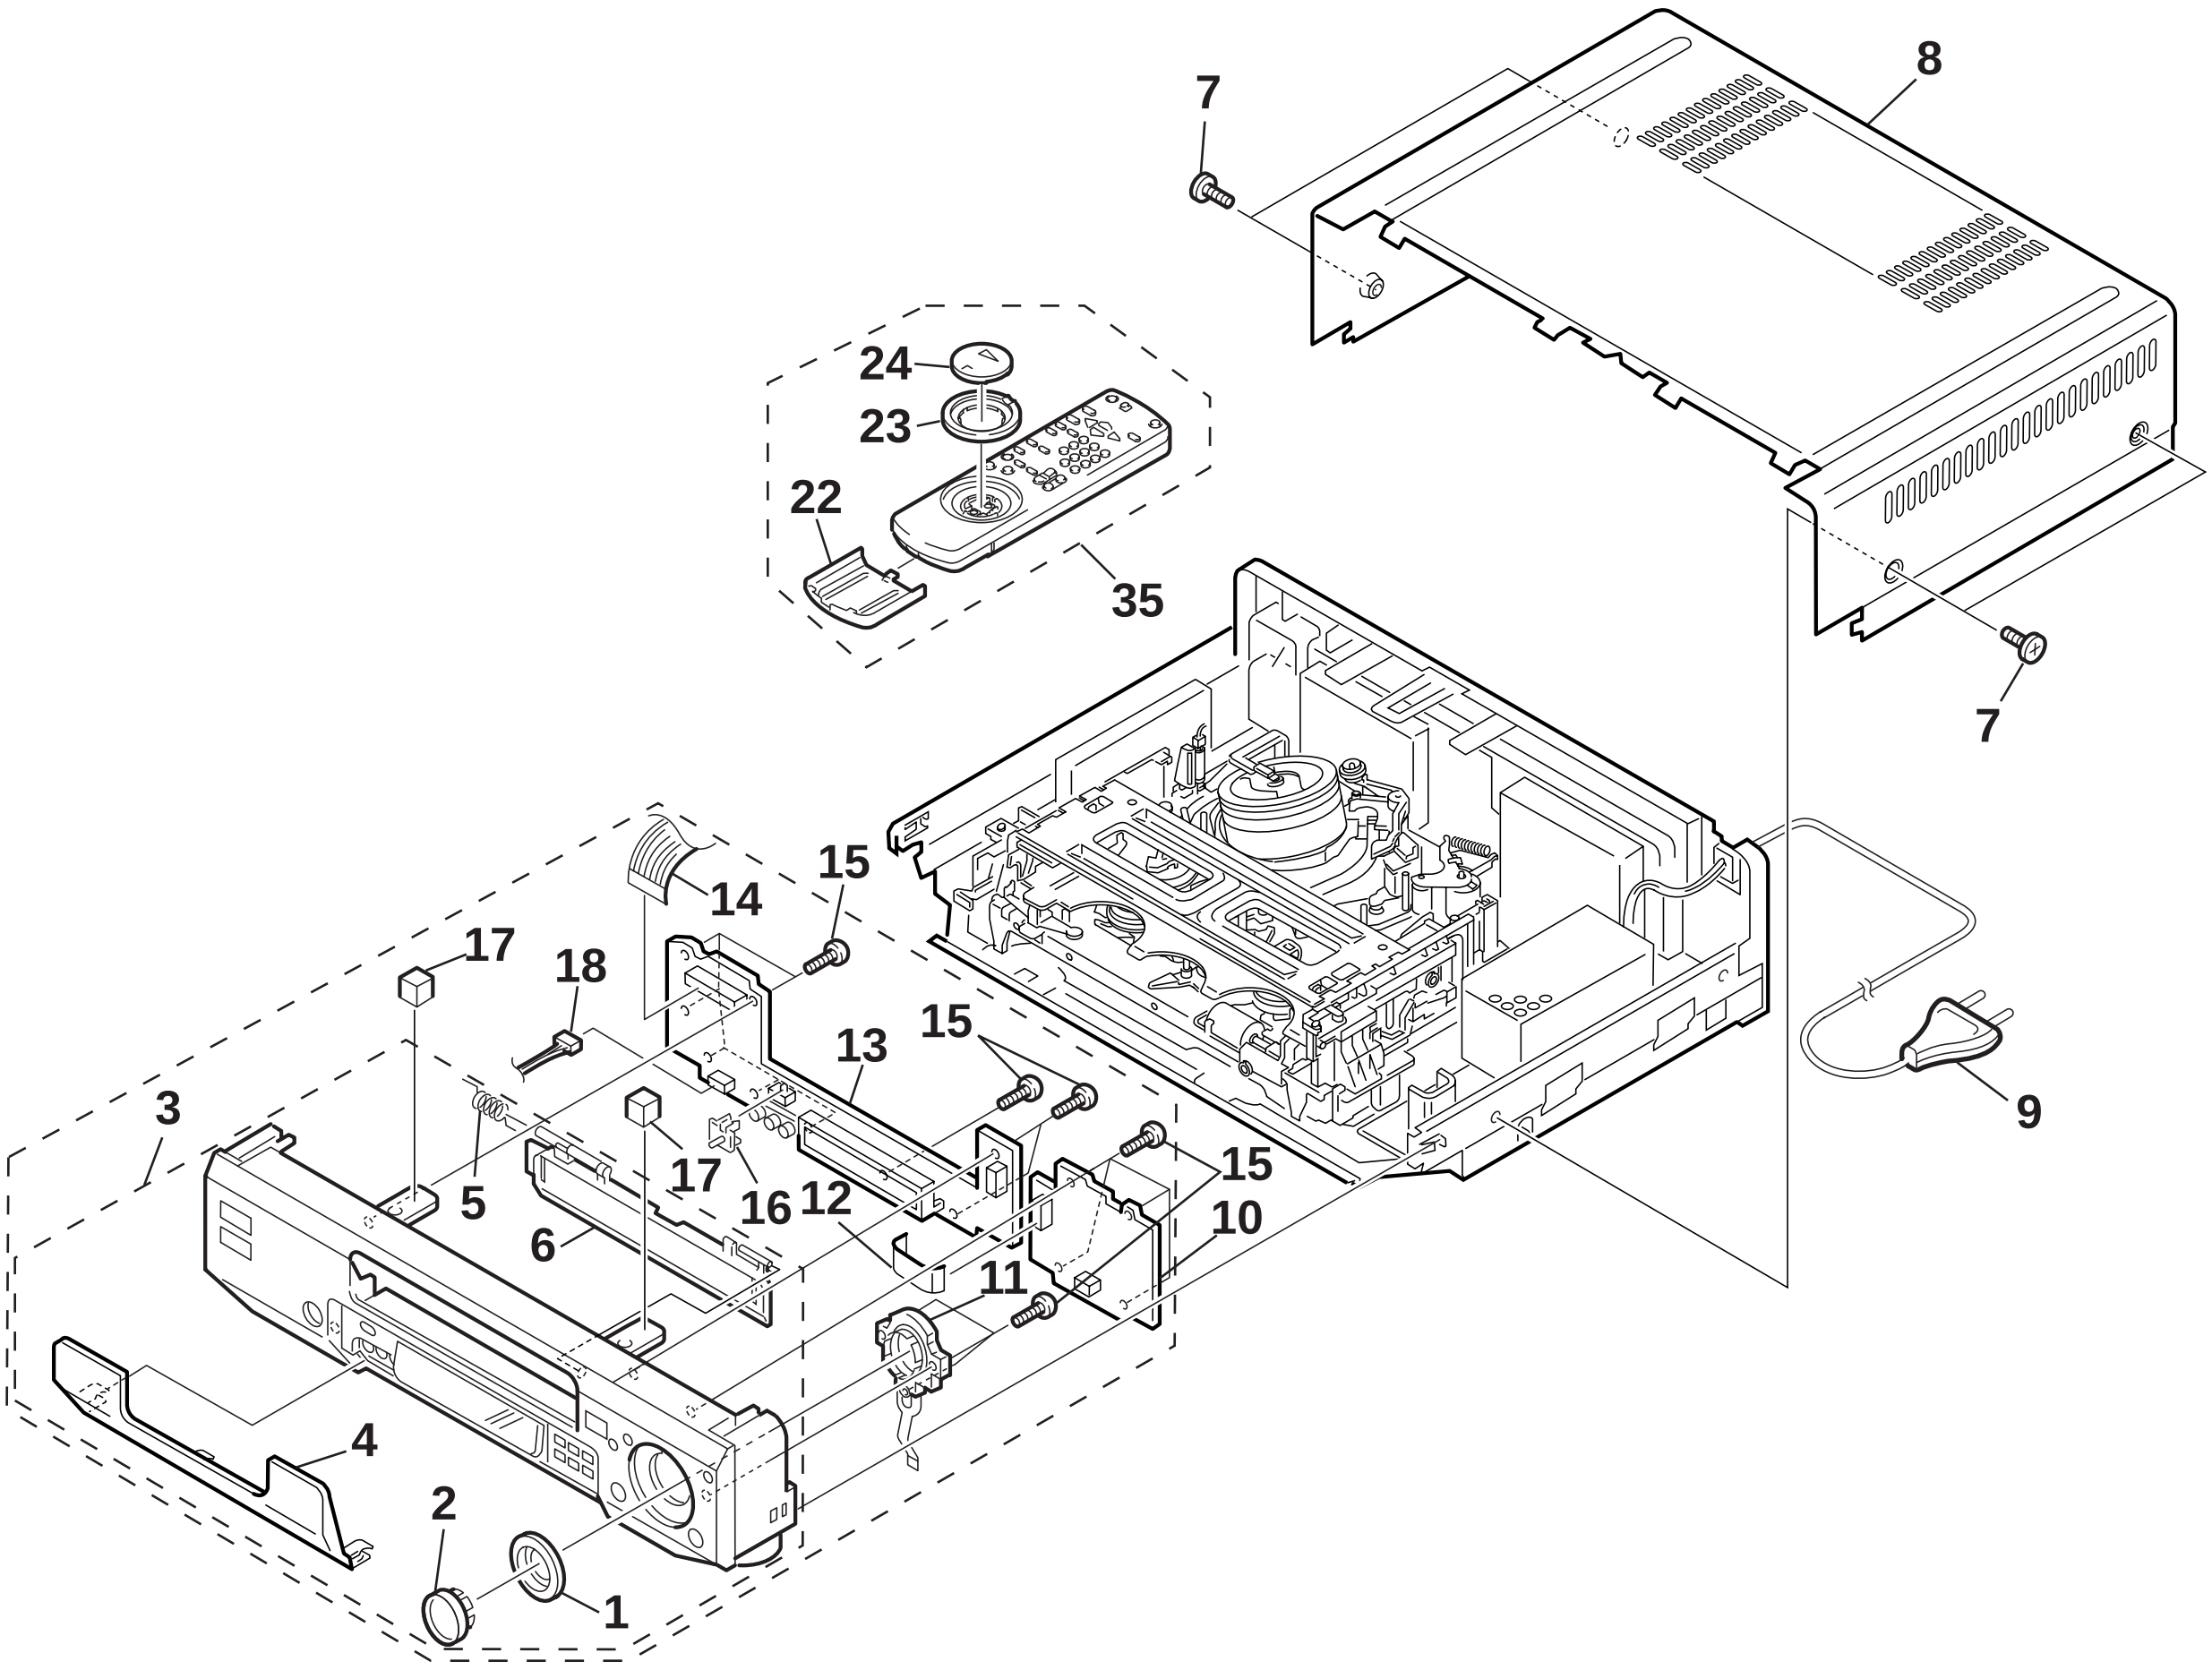

E850, E880, MODEL

Ref. No.	Part No.	Description	Remarks
1	3-979-310-21	RING (AV), JOG	
2	3-979-309-21	BUTTON (AV), CENTER (EXCEPT E850:B)	
2	3-979-309-31	BUTTON (AV), CENTER (E850:B)	
3	X-3948-404-1	PANEL ASSY, FRONT (E850:B)	
3	X-3948-405-1	PANEL ASSY, FRONT (E850:UX)	
3	X-3948-406-1	PANEL ASSY, FRONT (E880)	
4	X-3948-226-1	DOOR ASSY, FRONT	
5	3-953-432-01	SPRING (GE), FL	
6	3-979-302-21	DOOR (AV), CASSETTE	
7	3-363-099-01	SCREW (CASE 3 TP2)	
* 8	3-987-684-21	CASE (BN), UPPER	
⚠9	1-782-012-11	CORD, POWER (E850/E880/F900)	
⚠9	1-783-931-11	CORD, POWER (F990)	
* 10	A-6794-519-A	DM-73A BOARD, COMPLETE	
11	1-762-844-31	SWITCH, ROTARY	
12	1-783-169-11	CABLE, FLAT (FFD-2)	
* 13	A-6791-603-A	FR-128 BOARD, COMPLETE (E880)	
* 13	A-6791-636-A	FR-128 BOARD, COMPLETE (E850:B)	
* 13	A-6791-638-A	FR-128 BOARD, COMPLETE (E850:UX)	
14	1-783-167-11	CABLE, FLAT (FFM-18)	
15	3-968-554-01	SCREW (WN1411 D2.5 EJOT K25)	
16	3-987-691-01	KNOB, SLIDE	
17	3-978-737-11	CUSHION (FP), RUBBER	
18	1-779-725-11	CONNECTOR, BOARD TO BOARD 5P	
22	3-709-126-01	COVER, BATTERY	
23	3-972-783-21	RING, JOG	
24	3-972-850-01	BUTTON, FUNCTION	
35	1-475-563-41	COMMANDER, STANDARD(RMT-V223C)(E880)	
35	1-475-578-11	COMMANDER, STANDARD(RMT-V222C)	(F900:VC,NP)
35	1-475-578-21	COMMANDER, STANDARD(RMT-V222D)	(F900:UX)
35	1-475-578-31	COMMANDER, STANDARD(RMT-V222E)	(F900:B)
35	1-475-767-11	COMMANDER, STANDARD (RMT-V240)	(E850:UX)
35	1-475-767-21	COMMANDER, STANDARD (RMT-V240A)	(E850:B)
35	1-475-767-31	COMMANDER, STANDARD(RMT-V240B)	(F990:VC,NP)
35	1-475-767-41	COMMANDER, STANDARD(RMT-V240C)	(F990:UX)
35	1-475-767-51	COMMANDER, STANDARD(RMT-V240D)	(F990:B)

7-1-1. FRONT PANEL ASSEMBLY AND UPPER CASE SECTION (continued)

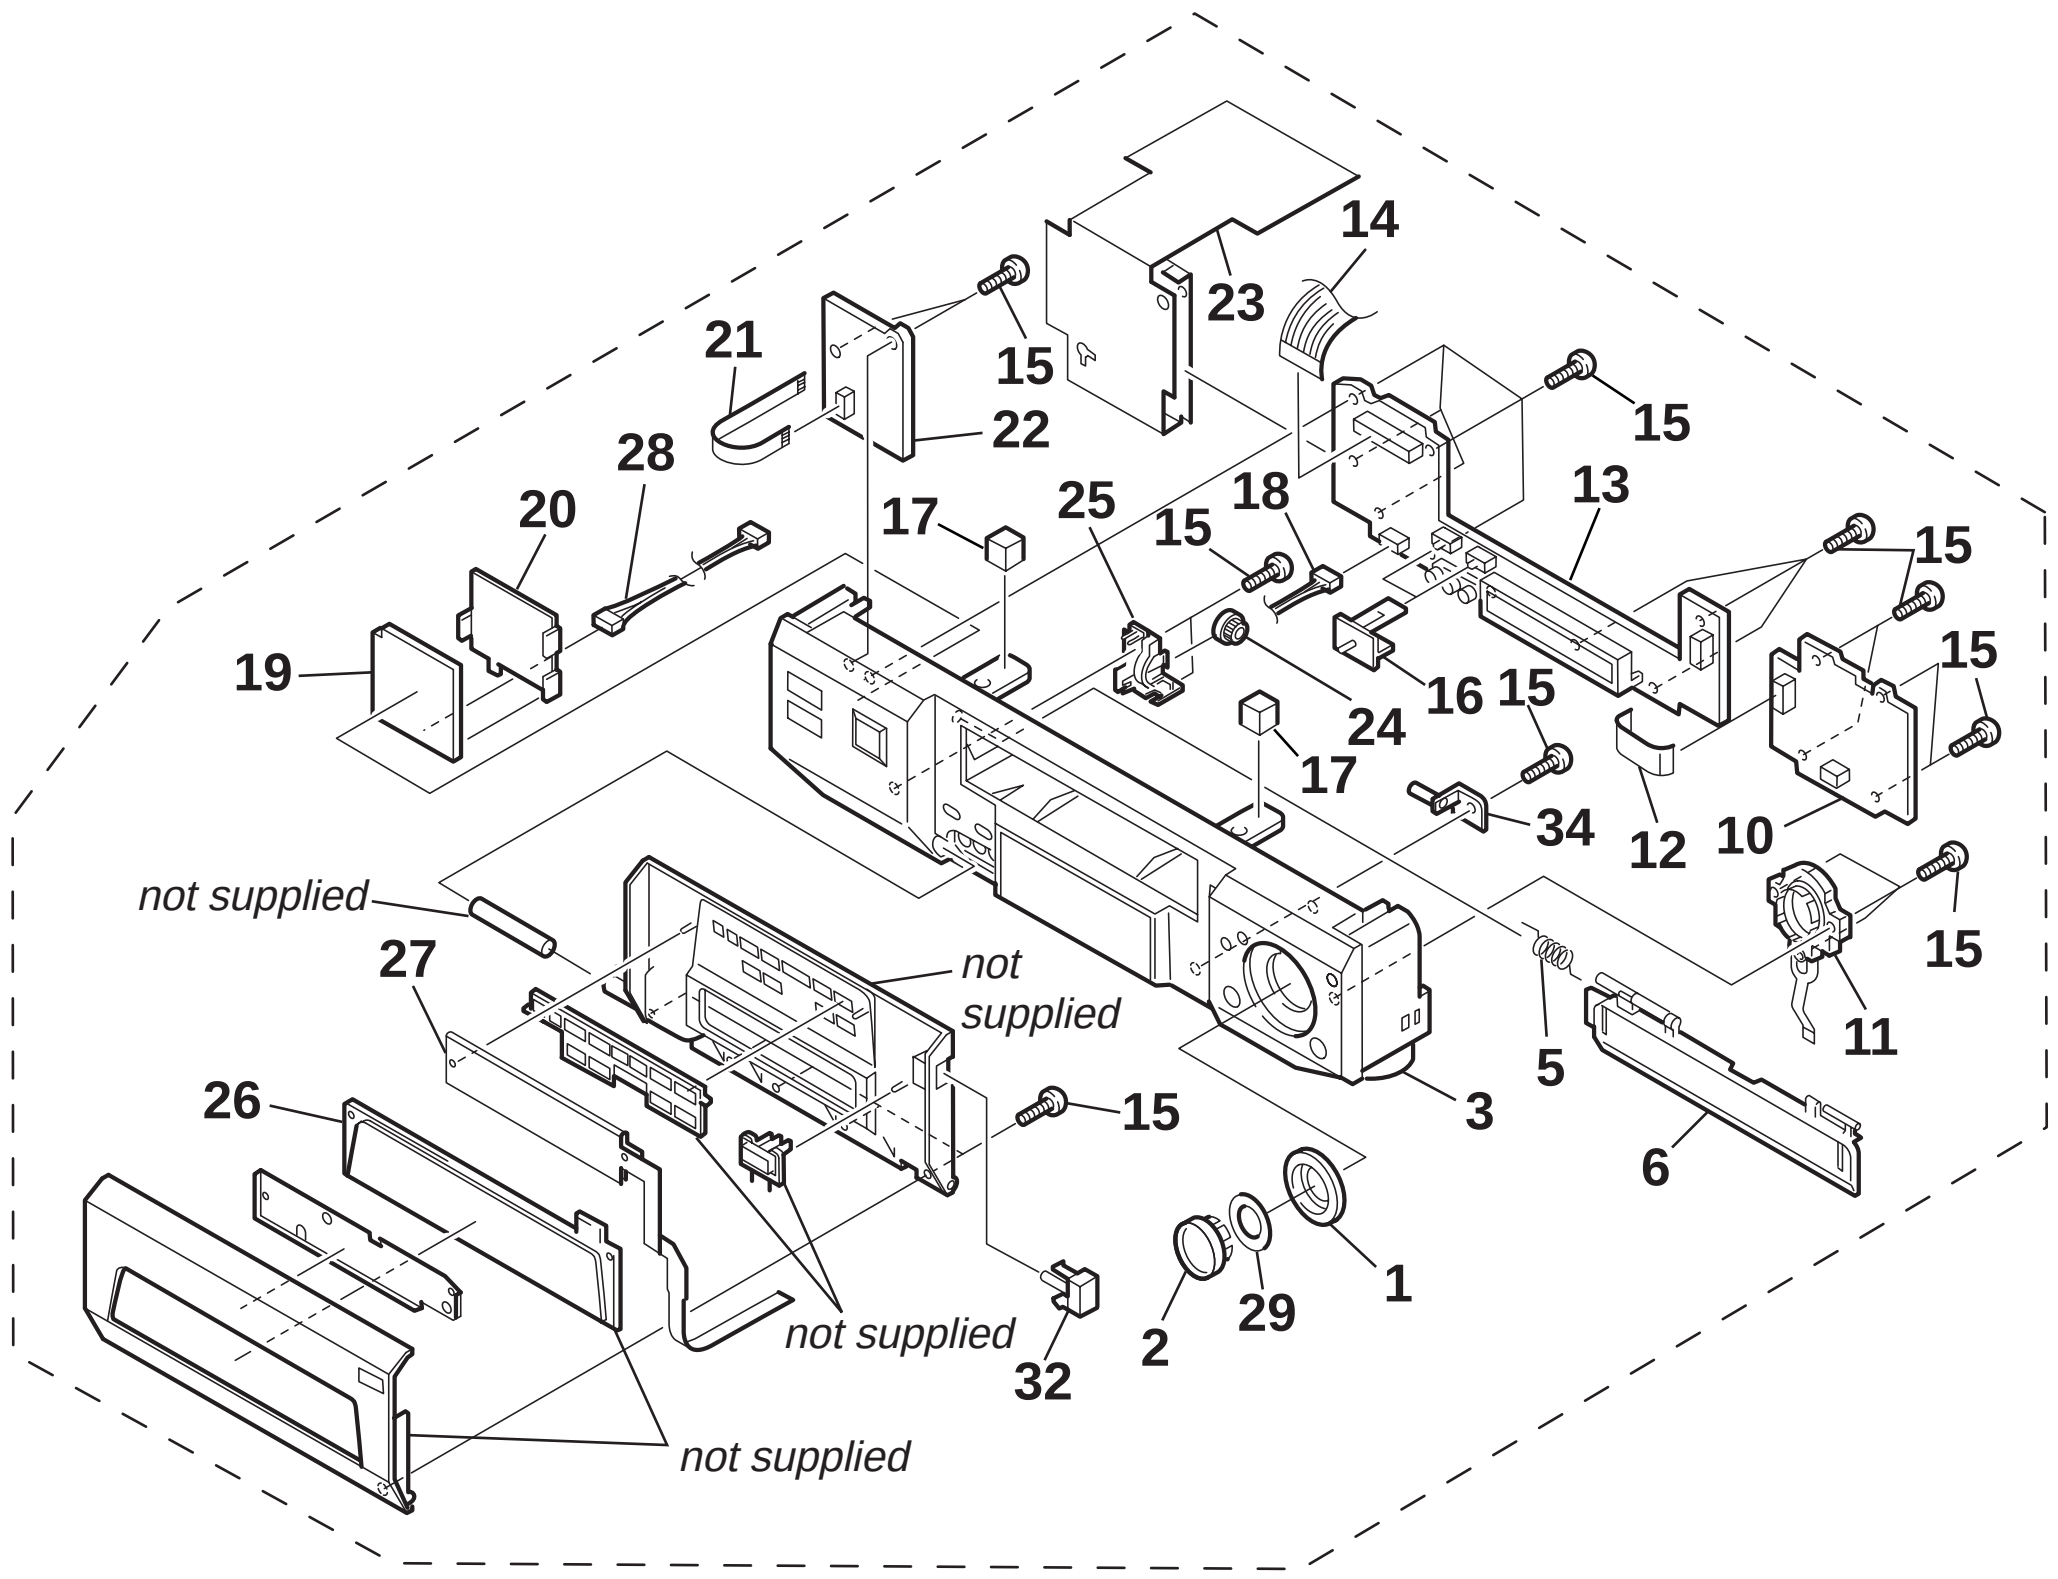

F900, F990, MODEL

Ref. No.	Part No.	Description	Remarks
1	3-989-330-01	RING, JOG	
2	3-979-309-21	BUTTON (AV), CENTER (EXCEPT F900:B/F990:B)	
2	3-979-309-31	BUTTON (AV), CENTER (F990:B/F900:B)	
3	X-3948-583-1	PANEL ASSY, FRONT (F900:UX)	
3	X-3948-584-1	PANEL ASSY, FRONT (F900:VC)	
3	X-3948-585-1	PANEL ASSY, FRONT (F900:B)	
3	X-3948-586-1	PANEL ASSY, FRONT (F900:NP)	
3	X-3948-587-1	PANEL ASSY, FRONT (F990:UX)	
3	X-3948-588-1	PANEL ASSY, FRONT (F990:VC)	
3	X-3948-589-1	PANEL ASSY, FRONT (F990:B)	
3	X-3948-590-1	PANEL ASSY, FRONT (F990:NP)	
5	3-953-432-01	SPRING (GE), FL	
6	3-979-302-11	DOOR (AV), CASSETTE	
* 10	A-6791-631-A	DM-73 BOARD, COMPLETE (F990)	
* 10	A-6794-519-A	DM-73A BOARD, COMPLETE (F900)	
11	1-762-844-21	SWITCH, ROTARY (F900)	
11	1-762-844-31	SWITCH, ROTARY (F990)	
12	1-783-169-11	CABLE, FLAT (FFD-2)	
* 13	A-6791-615-A	FR-128 BOARD, COMPLETE (F900:VC,NP,UX)	
* 13	A-6791-621-A	FR-128 BOARD, COMPLETE (F900:B)	
* 13	A-6791-630-A	FR-128 BOARD, COMPLETE (F990:VC,NP,UX)	
* 13	A-6791-635-A	FR-128 BOARD, COMPLETE (F990:B)	
14	1-783-167-11	CABLE, FLAT (FFM-18)	
15	3-968-554-01	SCREW (WN1411 D2.5 EJOT K25)	
16	3-050-302-01	KNOB, SLIDE	
17	3-978-737-11	CUSHION (FP), RUBBER	
18	1-779-725-11	CONNECTOR, BOARD TO BOARD 5P	
* 19	A-6794-543-A	AT-24 BOARD, COMPLETE	
20	3-050-303-01	HOLDER, SHIELD	
21	1-777-963-11	CABLE, FLAT (FHM-3) 5P	
* 22	A-6794-542-A	SW-300 BOARD, COMPLETE	
23	3-050-304-01	PLATE (TY), SHIELD	
24	3-973-975-31	DAMPER, OIL	
25	3-050-299-01	HOLDER, DAMPER	
26	1-475-584-11	SWITCH BLOCK, CONTROL (F900:VC,NP,UX)	
26	1-475-584-21	SWITCH BLOCK, CONTROL (F900:B)	
26	1-475-585-11	SWITCH BLOCK, CONTROL (F990:VC,NP,UX)	
26	1-475-585-21	SWITCH BLOCK, CONTROL (F990:B)	
27	3-050-298-11	SHEET, SW (F990:VC,NP,UX)	
27	3-050-298-31	SHEET, SW (F990:B)	
28	1-766-723-21	CONNECTOR, BOARD TO BOAR 3P	
29	3-050-296-11	LENS, GUIDE (F990)	
32	3-051-688-01	CLAW, LOCK	
* 34	X-3948-742-1	PLATE (RIGHT) ASSY, FULCRUM	

7-1-2. CHASSIS SECTION

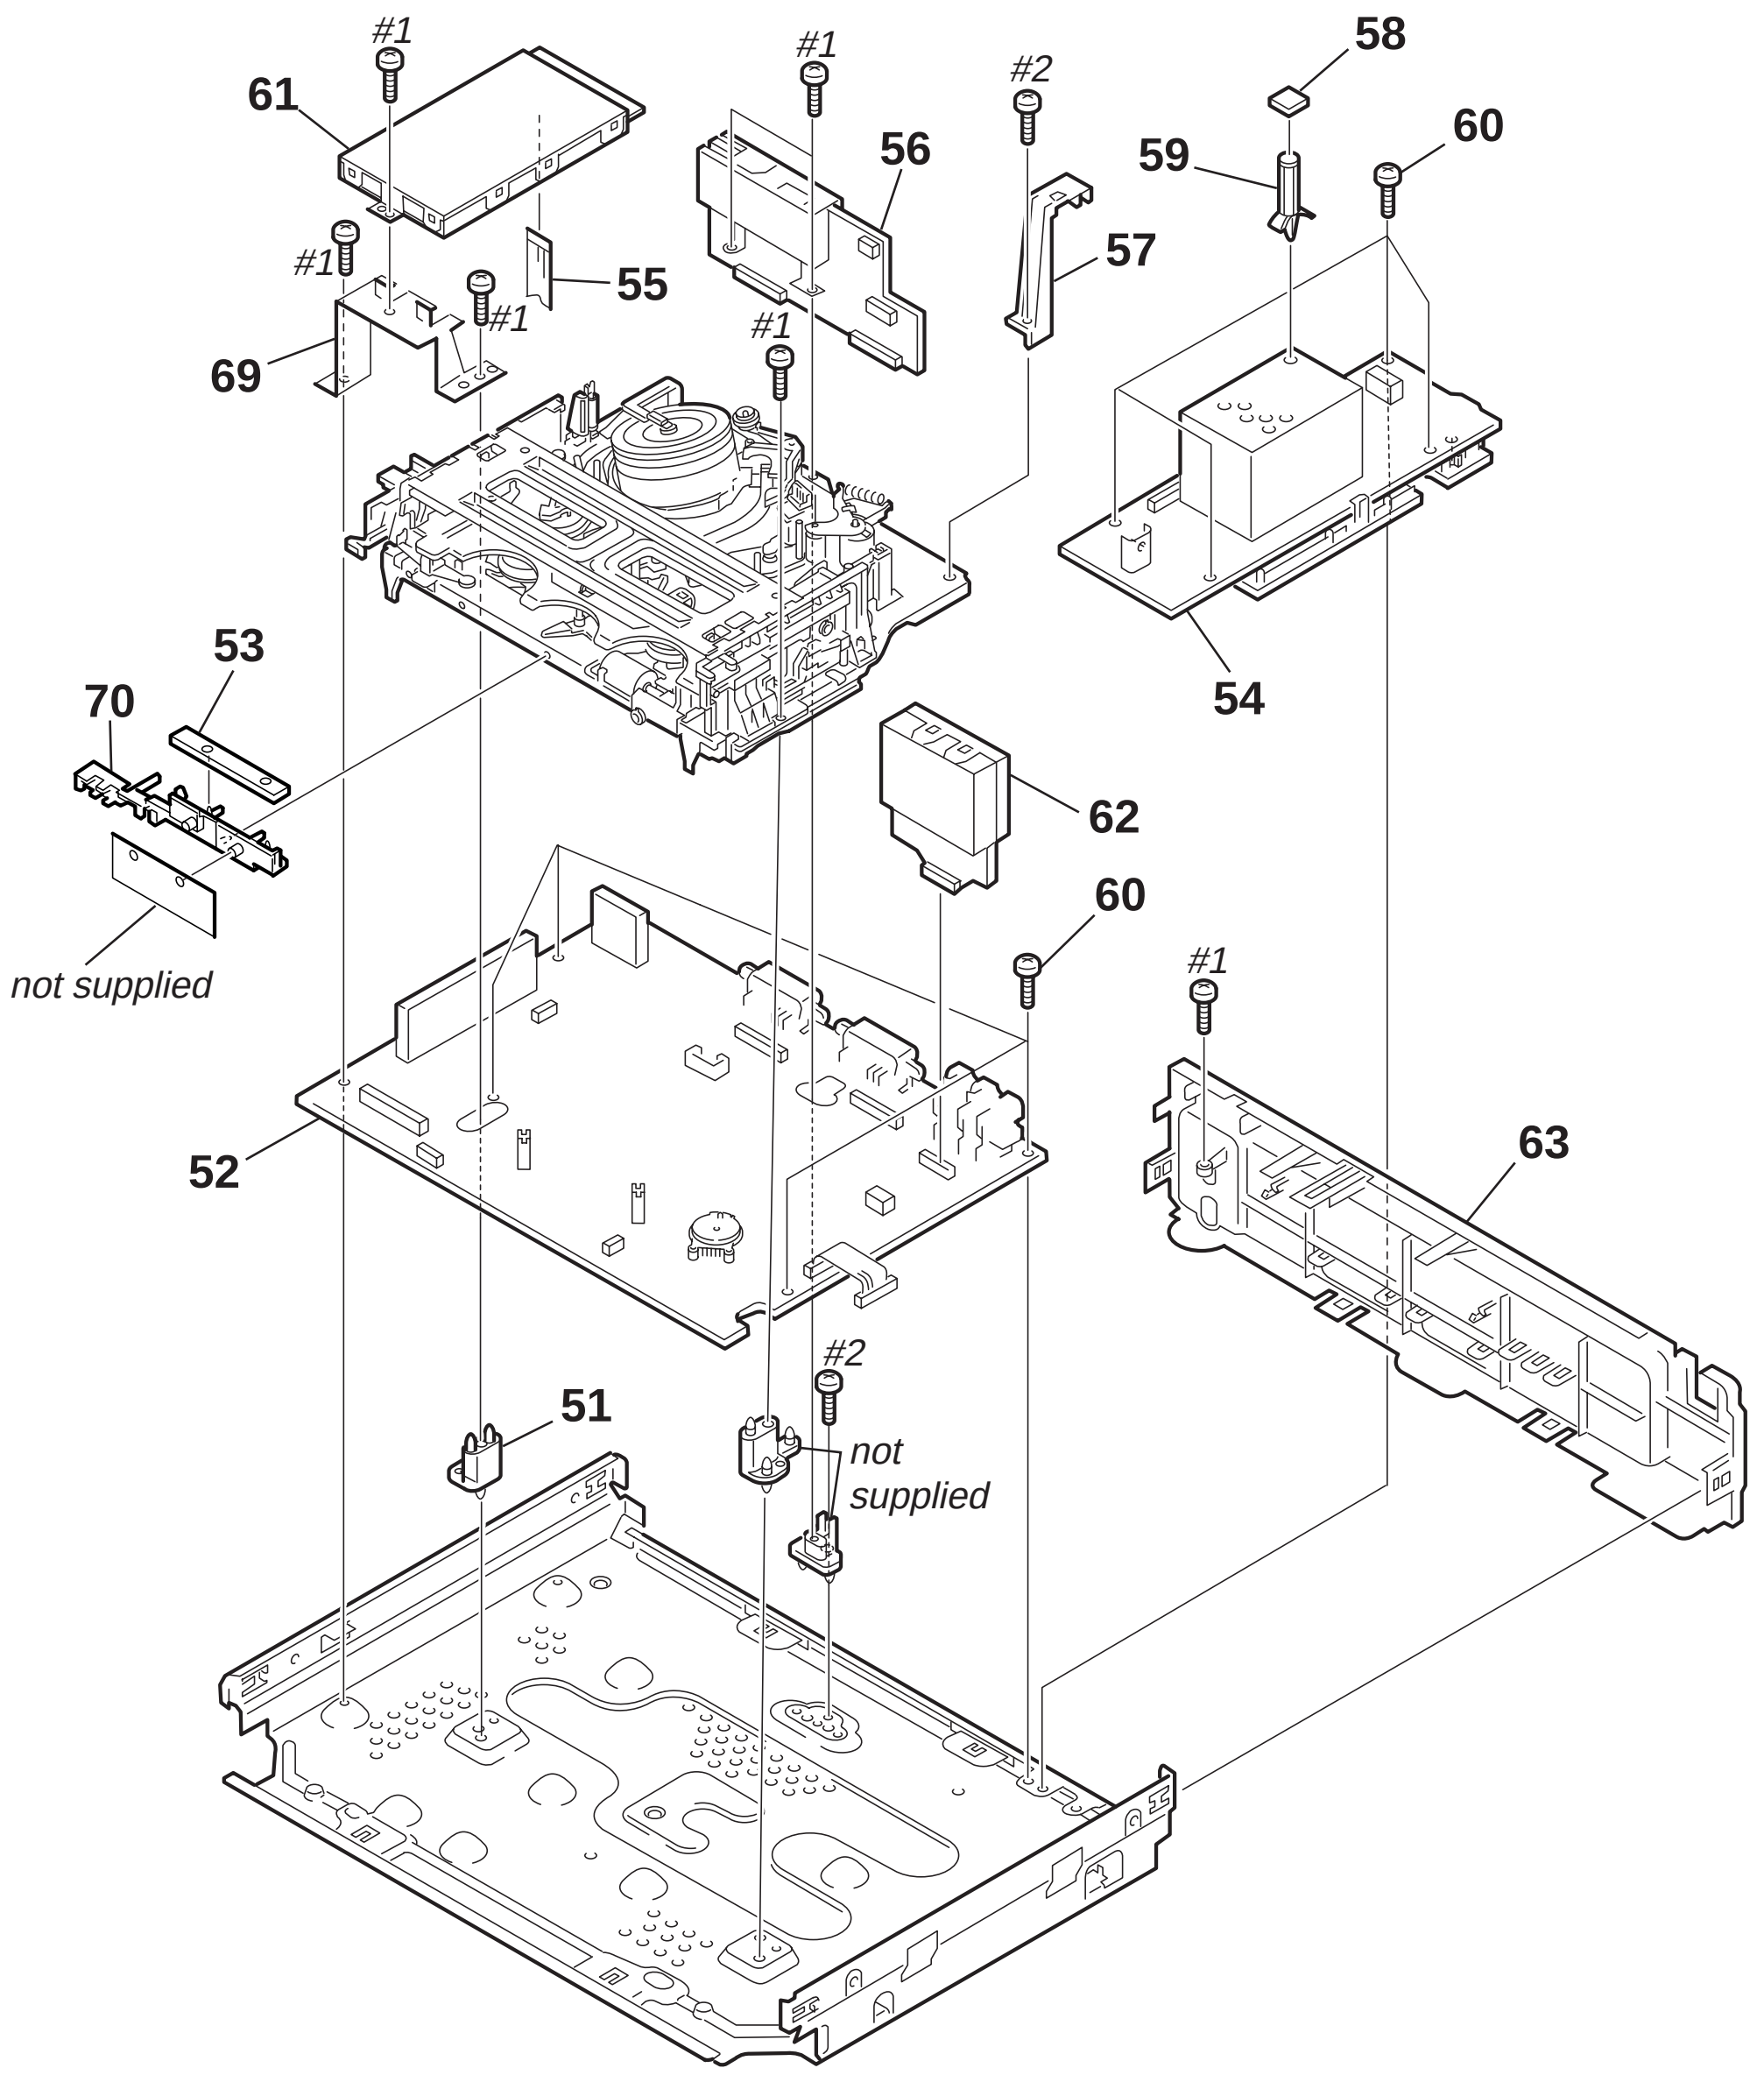

Ref. No.	Part No.	Description	Remarks
51	3-959-381-01	BASE (L), MD	
* 52	A-6791-604-A	MA-316 BOARD, COMPLETE (E880)	
* 52	A-6791-616-A	MA-316 BOARD, COMPLETE (F900:VC)	
* 52	A-6791-619-A	MA-316 BOARD, COMPLETE (F900:NP)	
* 52	A-6791-620-A	MA-316 BOARD, COMPLETE (F900:UX)	
* 52	A-6791-622-A	MA-316 BOARD, COMPLETE (F900:B)	
* 52	A-6791-632-A	MA-316 BOARD, COMPLETE (F990:VC)	
* 52	A-6791-633-A	MA-316 BOARD, COMPLETE (F990:NP)	
* 52	A-6791-634-A	MA-316 BOARD, COMPLETE (F990:UX)	
* 52	A-6791-637-A	MA-316 BOARD, COMPLETE (E850:B)	
* 52	A-6791-639-A	MA-316 BOARD, COMPLETE (E850:UX)	
* 52	A-6791-646-A	MA-316 BOARD, COMPLETE (F990:B)	
* 53	A-6794-544-A	AT-23 BOARD, COMPLETE (F900/F990)	
⚠54	1-468-273-11	POWER BLOCK	
55	1-783-166-11	CABLE, FLAT (FFM-17) (F900/F990)	
* 56	A-6791-531-A	RP-231B BOARD, COMPLETE (E850/E880/F990)	
* 56	A-6791-617-A	RP-231 BOARD, COMPLETE (F900)	
57	3-050-836-01	HOLDER, DNR	
58	3-989-626-01	CUSHION (PS), RUBBER	
59	3-670-570-71	SPACER, SUPPORT	
60	3-970-608-11	SUMITITE (B3), +BV (F900/F990)	
60	3-970-608-21	SUMITITE (B3), +BV (E850/E880)	
* 61	A-6791-618-A	ML-15 BOARD, COMPLETE (F900/F900)	
* 62	A-6791-537-A	SE-69A BOARD, COMPLETE (E850:B/F900:B/F990:B)	
* 62	A-6791-605-A	NR-26 BOARD, COMPLETE (E880/F900:VC,NP,UX/F990:VC,NP,UX)	
* 63	3-987-709-81	PANEL (BN), REAR (E880)	
* 63	3-987-709-91	PANEL (BN), REAR (E850:B)	
* 63	3-987-710-61	PANEL (BN), REAR (F900:VC,NP,B)	
64	3-719-381-01	SCREW (M2X4)	
65	3-974-477-01	WASHER, (GEAR, LIMITTER)	
66	3-977-436-01	WORM	
67	3-977-501-01	PLATE, LUMINOUS	
68	4-921-277-41	SCREW (B2.6X8), TAPPING, BIND	
69	3-050-878-01	HOLDER, ML	
70	3-987-343-11	HOLDER, AN	

Note :	Note :
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1-3. MECHANISM DECK-1

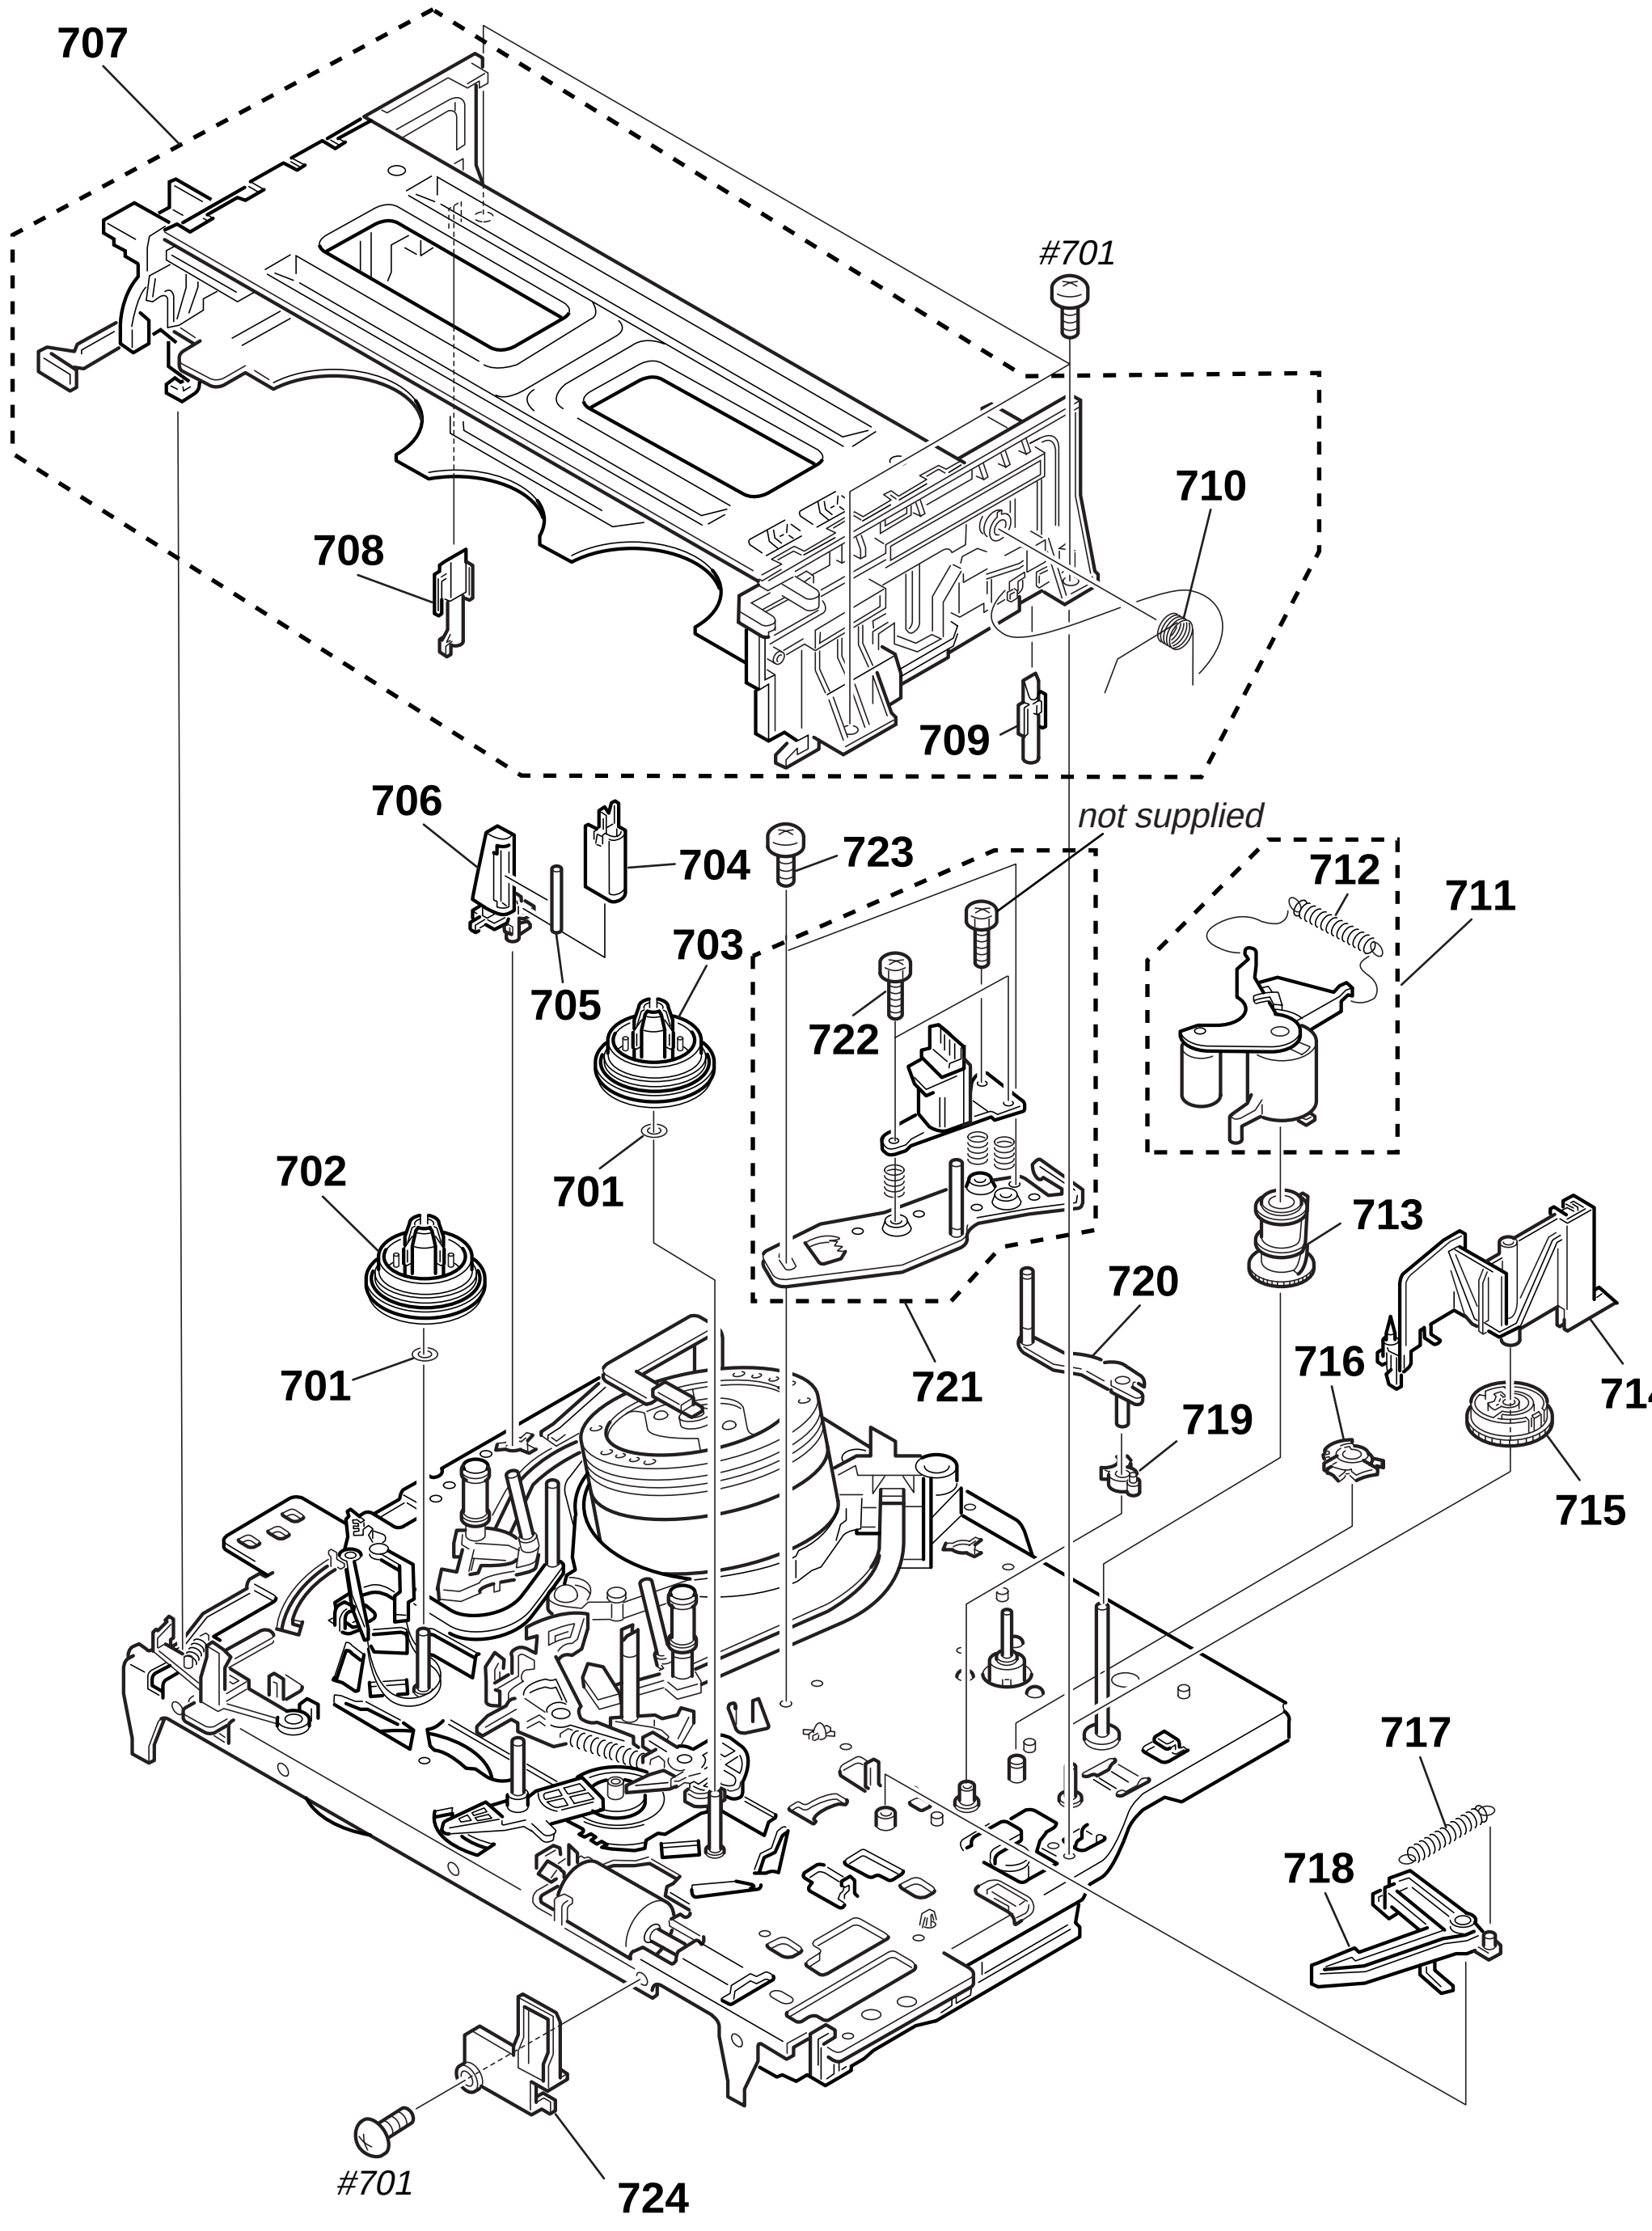

Ref. No.	Part No.	Description	Remarks
701	3-977-509-01	WASHER, THRUST	
702	3-977-507-01	TABLE, REEL (S) (GRAY)	
703	3-977-508-01	TABLE, REEL (T) (BLACK)	
704	1-500-144-11	HEAD, FE	
705	3-977-495-01	SHAFT TG2	
706	3-977-494-01	HOLDER, FEH	
707	A-6759-619-C	FL COMPLETE ASSY	
708	3-977-535-01	PLATE, LUMINOUS(END SENSOR)	
709	3-977-536-01	PLATE, LUMINOUS(TOP SENSOR)	
710	3-970-471-01	SPRING (DECK OPEN), TORSION	
711	A-6759-615-A	PRESS BLOCK ASSY, PINCH	
712	3-958-455-01	SPRING (PINCH), TENSION	
713	3-977-447-01	GEAR, ELEVATOR	
714	3-977-514-01	OPENER, LID	
715	3-977-441-01	GEAR, PINCH PRESSING	
716	3-977-445-01	GEAR, TG8 ARM DRIVING	
717	3-977-465-01	SPRING,EXTENSION(RVS BRAKE)	
718	X-3947-582-1	ARM ASSY, RVS BRAKE	
719	3-977-446-01	GEAR, TG8 ARM	
720	X-3947-590-1	TG8 ASSY	
721	A-6759-620-A	HEAD BLOCK ASSY, ACE (TDK)	
722	3-974-556-01	+ HEXA TT 2.6X9 (TAPER)	
723	3-979-508-01	SCREW	
724	3-978-485-01	PLATE, GUIDE CASSETTE	

7-1-4. MECHANISM DECK-2

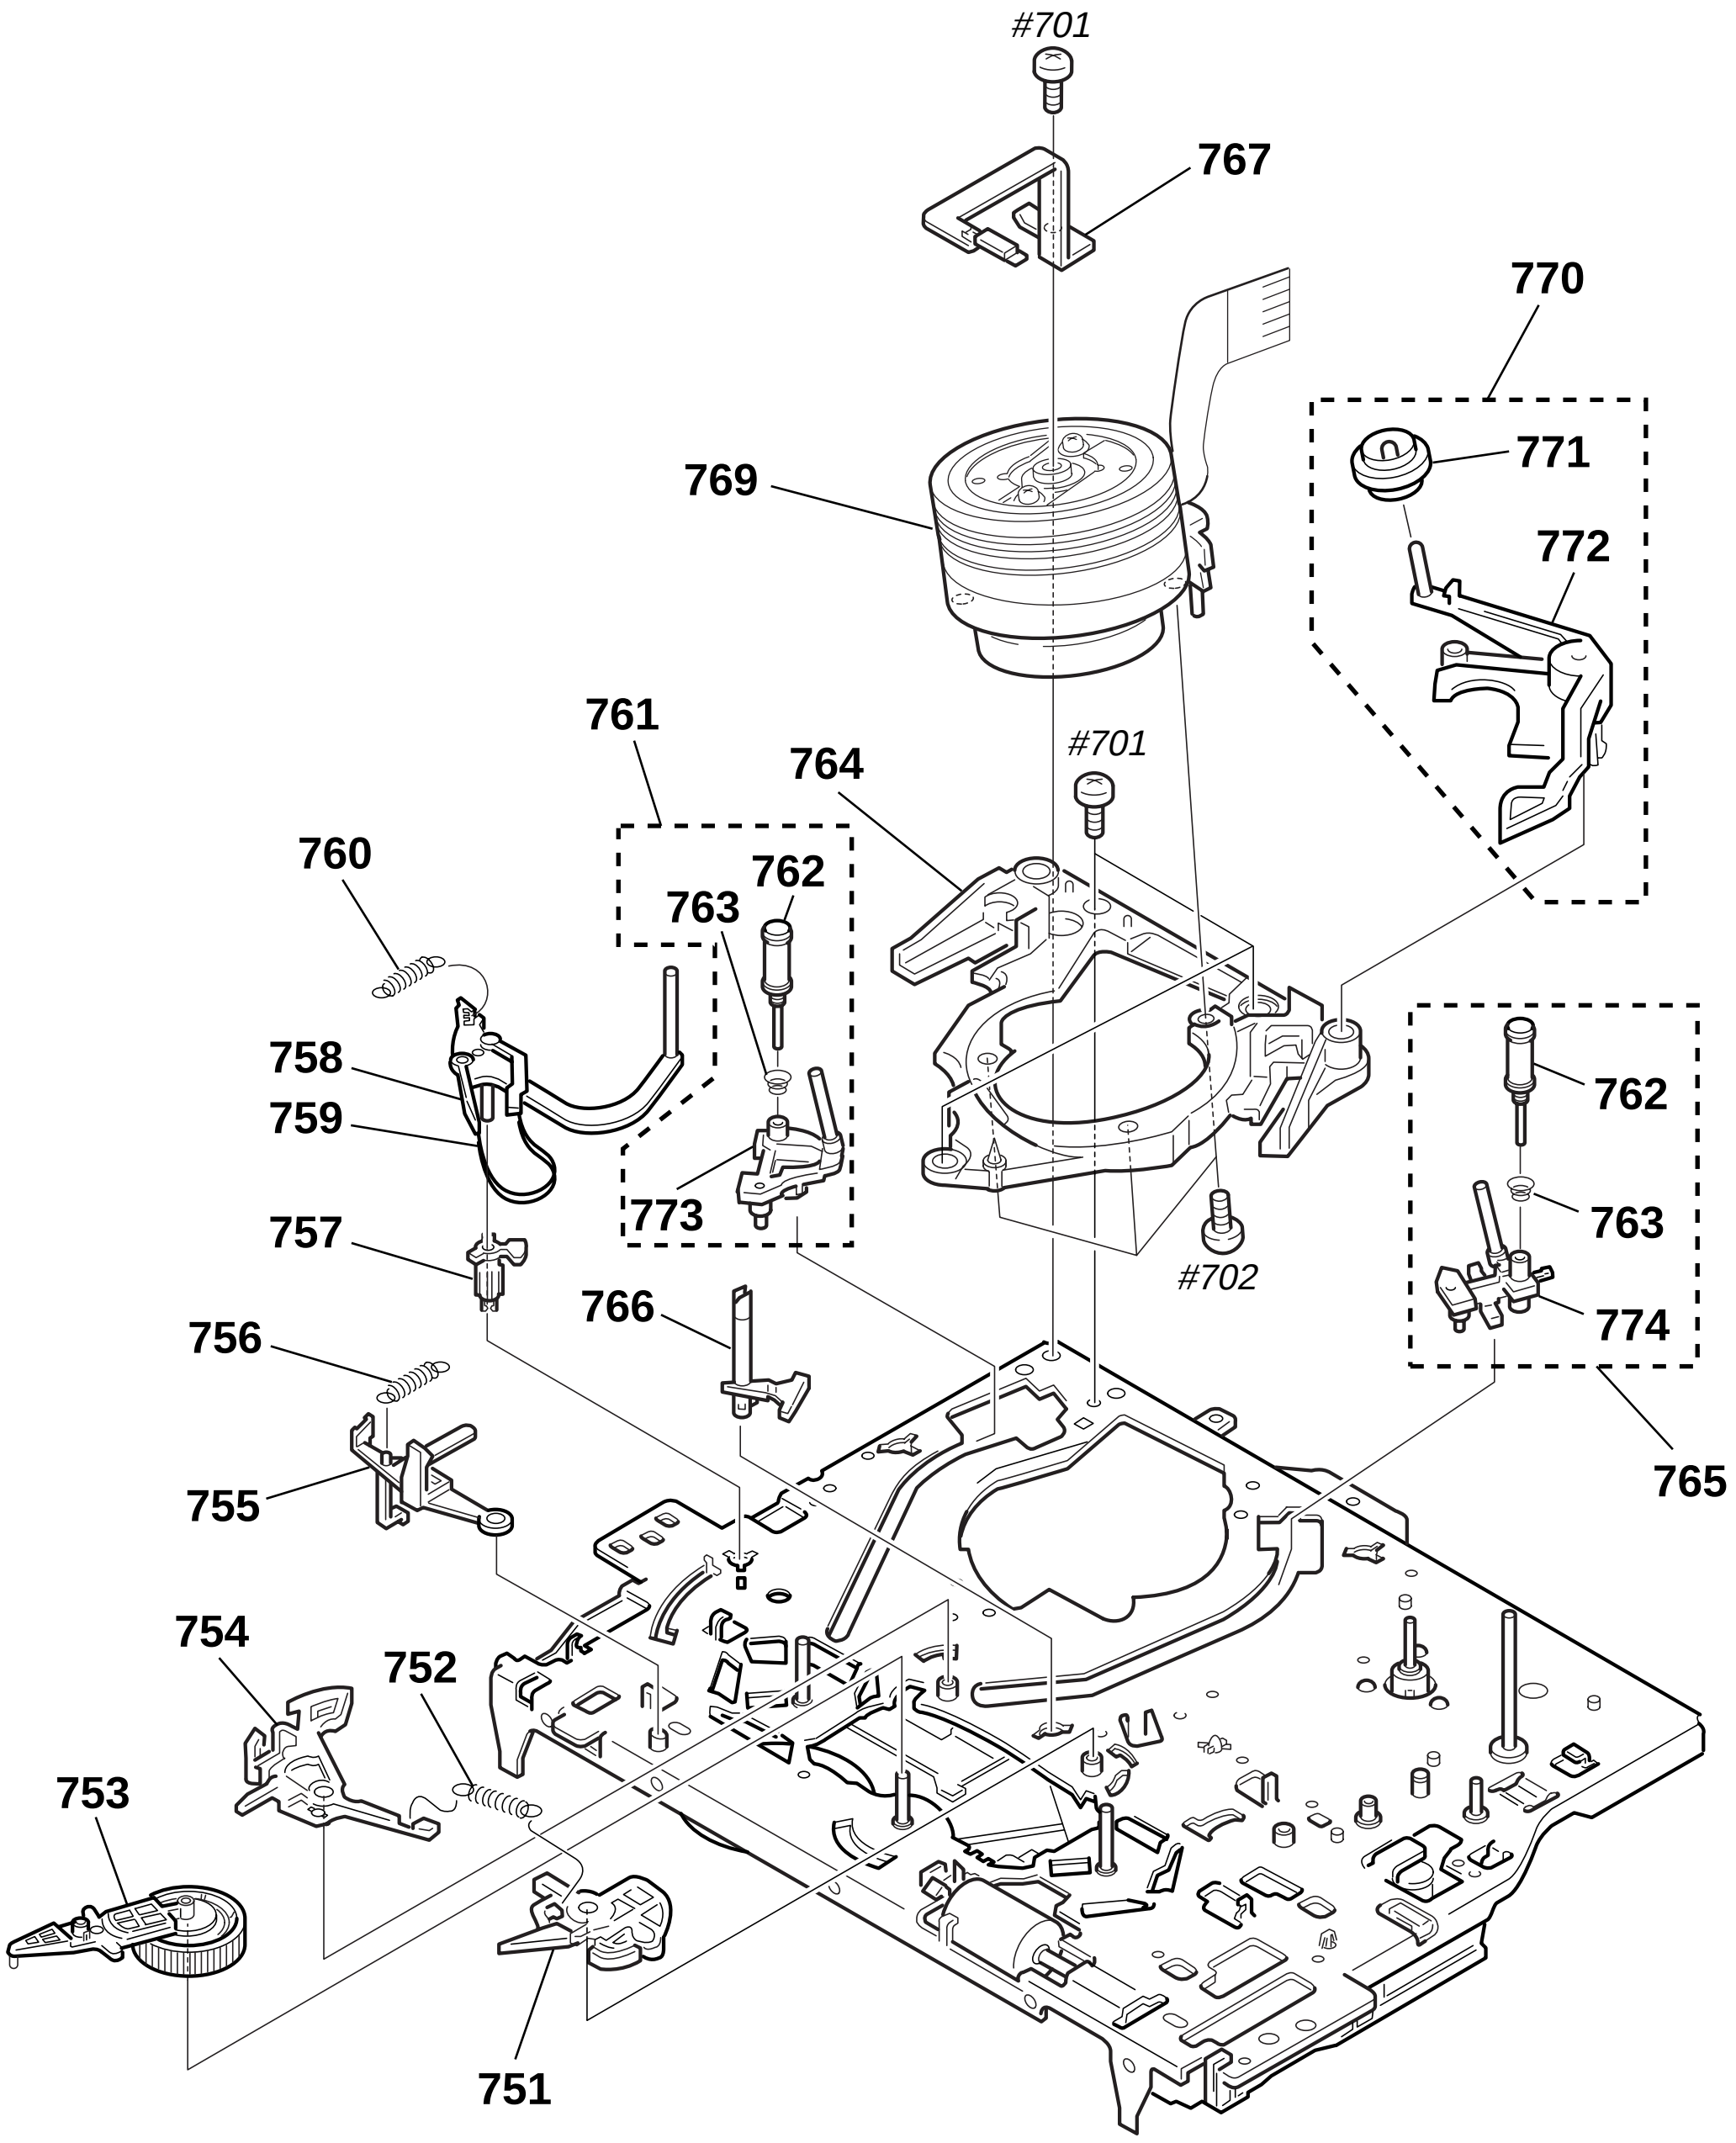

Ref. No.	Part No.	Description	Remarks
751	X-3947-581-1	BRAKE ASSY,MAIN(T)	
752	3-977-462-01	SPRING,EXTENTION. (MAIN BRAKE)	
753	X-3947-573-1	ARM ASSY, PENDULUM	
754	X-3947-580-2	BRAKE ASSY, MAIN(S)	
755	3-977-513-02	LEVER, REC. PROOF	
756	3-976-767-01	SPRING, TENS. (REC. PROOF)	
757	3-977-487-01	BOSS, TG1 FULCRUM	
758	X-3947-587-1	TG1 ASSY	
759	X-3947-589-1	BAND ASSY, TG1	
760	3-977-488-01	SPRING (POWER TENSION)	
761	A-6750-324-E	SHUTTLE (S) BLOCK ASSY	
762	X-3944-378-2	ROLLER ASSY, GUIDE	
763	3-965-178-01	SPRING	

Ref. No.	Part No.	Description	Remarks
764	3-969-632-04	BASE, DRUM	
765	A-6750-325-E	SHUTTLE (T) BLOCK ASSY	
766	3-977-501-01	PLATE, LUMINOUS	
767	X-3943-899-8	GROUND ASSY, SHAFT	
768	2-643-205-01	SCREW	
769	1-759-373-11	DRUM ASSY DZH-86A-R (NP,VC1,VC2)	
769	1-759-557-11	DRUM ASSY DZH-98A-R (B)	
770	A-6746-074-G	ROLLER BLOCK ASSY, HC	
771	X-3947-255-1	ROLLER ASSY, HC	
772	3-975-724-07	ARM, HC	
773	X-3946-855-1	SHUTTLE (S) ASSY	
774	X-3946-856-1	SHUTTLE (T) ASSY	

7-1-5. MECHANISM DECK-3

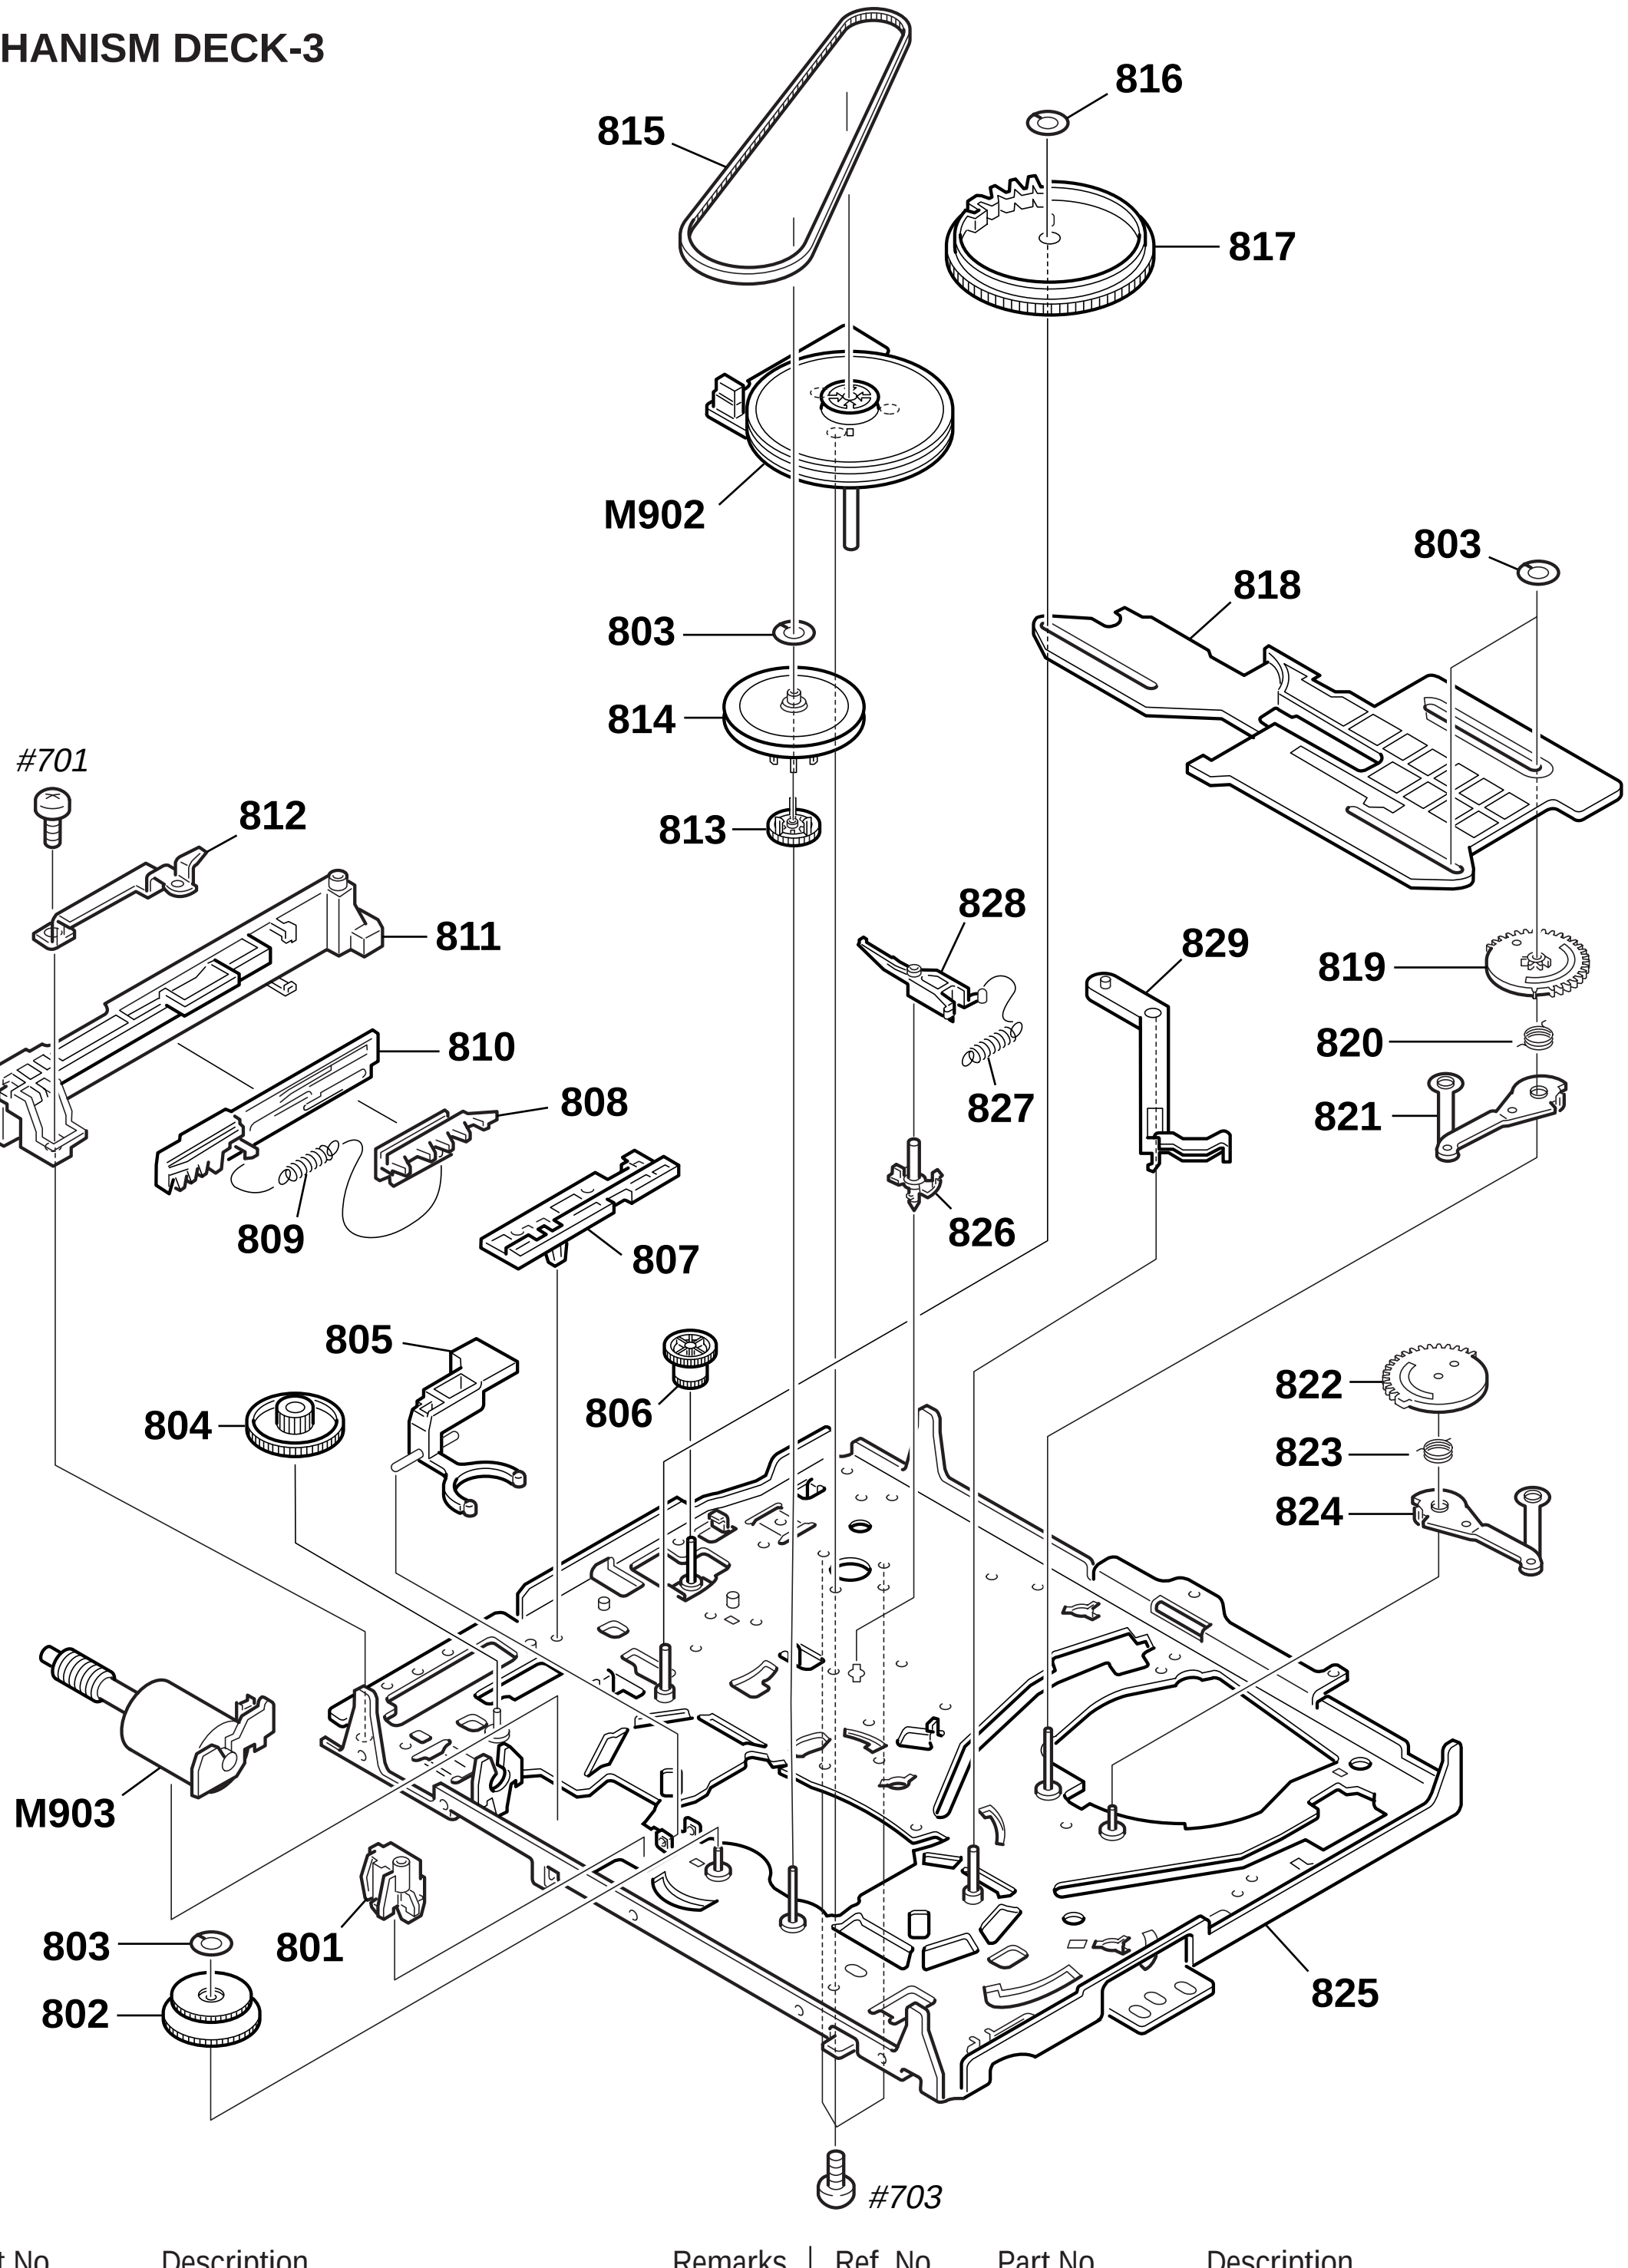

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 801	3-977-437-01	RETAINER,CAM MOTOR		817	3-977-439-01	GEAR, CAM	
802	X-3947-584-1	ASSY, REEL DIRECT		818	3-977-442-01	SLIDER	
803	3-977-443-01	WASHER, STOPPER		819	3-977-455-01	GEAR, LOADING(T)	
804	3-977-438-01	WORM - WHEEL		820	3-977-456-03	SPRING, TORSION (LOAD T)	
805	3-977-506-01	ARM, LIMITTER SELECTION		821	X-3947-579-1	LEVER ASSY, LOADING(T)	
806	3-977-444-01	GEAR, PINCH TRANSMISSION		822	3-977-451-01	GEAR, LOADING(S)	
807	3-977-515-01	GUIDE, FL SLIDER		823	3-977-452-01	SPRING, TORSION (LOAD S)	
808	3-977-517-01	PLATE, SLIDE, FL		824	X-3947-578-1	LEVER ASSY, LOADING(S)	
809	3-977-519-01	SPRING, TENS. (LIMIT, FL)		825	X-3947-576-2	CHASSIS ASSY, MECHANICAL	
810	3-977-518-02	PLATE, LIMITTER, FL		826	3-977-468-01	SHAFT, CAPSTAN BRAKE	
811	3-977-516-01	HOLDER, FL SLIDER		827	3-977-467-02	SPRING, CAP BRAKE	
812	3-977-877-01	PLATE, RETAINER		828	X-3947-583-1	BRAKE ASSY, CAPSTAN	
813	3-977-504-01	GEAR, CLUTCH		829	3-977-489-01	ARM, TG1 DRIVING	
814	X-3947-585-1	GEAR ASSY, PULLEY		830	A-6759-616-A	GEAR BLOCK ASSY, LOADING	
815	3-977-510-01	BELT, RUBBER		M902	1-698-971-11	MOTOR, DC	
816	3-977-440-01	WASHER, STOPPER		M903	X-3947-577-1	MOTOR ASSY, CAM	

7-2. ELECTRICAL PARTS LIST

Note:

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
  uF: μF
- RESISTORS
  All resistors are in ohms.
  METAL: metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- COILS
  uH: μH
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA...: μA... , uPA... , μPA... ,
  uPB... , μPB... , uPC... , μPC... ,
  uPD..., μPD...

Ref. No.	Part No.	Description	Remarks
*	A-6794-544-A	AT-23 BOARD, COMPLETE (F900/F990)	
		***********************	
			(Ref.No.:4,000 series)
		< CAPACITOR >	
C991	1-163-136-00	CERAMIC CHIP 620PF 1% 50V	
		< CONNECTOR >	
CN990	1-564-002-11	PIN, CONNECTOR 3P	
		< RESISTOR >	
R990	1-216-295-91	SHORT 0	
R991	1-216-295-91	SHORT 0	
*	A-6794-543-A	AT-24 BOARD, COMPLETE (F900/F990)	
		**********************	
			(Ref.No.:5,000 series)
		< CAPACITOR >	
C995	1-125-830-91	CERAMIC CHIP 680PF 1% 50V	
C996	1-163-243-11	CERAMIC CHIP 47PF 5% 50V	
		< CONNECTOR >	
CN995	1-564-002-11	PIN, CONNECTOR 3P	
*	A-6794-519-A	DM-73A BOARD, COMPLETE (E850/E880/F900)	
		***********************	
*	A-6791-631-A	DM-73A BOARD, COMPLETE (F990)	
		***********************	
			(Ref.No.:2,000 series)
		< CAPACITOR >	
C450	1-124-584-00	ELECT 100uF 20% 10V	(F990)
C451	1-163-038-91	CERAMIC CHIP 0.1uF 25V	(F990)
C452	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V	(F990)
		< CONNECTOR >	
CN451	1-784-484-11	CONNECTOR, FFC/FPC 5P	
CN452	1-784-453-11	CONNECTOR, FFC/FPC 11P	
		< DIODE >	
D450	8-719-056-07	DIODE SLR-342MC3F (F990)	
D451	8-719-056-07	DIODE SLR-342MC3F (F990)	
D452	8-719-056-07	DIODE SLR-342MC3F (F990)	
D453	8-719-056-07	DIODE SLR-342MC3F (F990)	
D454	8-719-056-06	DIODE SLR-342DC3F (F990)	
D455	8-719-056-07	DIODE SLR-342MC3F (F990)	
D456	8-719-056-07	DIODE SLR-342MC3F (F990)	
D457	8-719-056-07	DIODE SLR-342MC3F (F990)	
D458	8-719-056-07	DIODE SLR-342MC3F (F990)	
D459	8-719-056-06	DIODE SLR-342DC3F	
		< IC >	
IC450	8-759-366-45	IC NJU3713G(TE2) (F990)	
		< TRANSISTOR >	
Q450	8-729-424-08	TRANSISTOR UN2111 (E850/E880/F900)	
		< RESISTOR >	
R450	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R451	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R452	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R453	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R454	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R455	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R456	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R457	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R458	1-216-033-00	METAL CHIP 220 5% 1/10W(F990)	
R459	1-216-033-00	METAL CHIP 220 5% 1/10W	
R460	1-216-295-91	SHORT 0 (F990)	
R461	1-216-295-91	SHORT 0 (F990)	
R462	1-216-049-91	RES,CHIP 1K 5% 1/10W(F990)	
R463	1-216-049-91	RES,CHIP 1K 5% 1/10W(F990)	
R464	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R465	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R466	1-249-429-11	CARBON 10K 5% 1/4W	
R467	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R468	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R469	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R470	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R471	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R472	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
		< SWITCH >	
S451	1-762-196-21	SWITCH, TACT (REC)	
S453	1-762-196-21	SWITCH, TACT (REW)	
S457	1-762-196-21	SWITCH, TACT (FF)	
S458	1-762-196-21	SWITCH, TACT (PAUSE)	
S459	1-762-196-21	SWITCH, TACT (JOG)	

Ref. No.	Part No.	Description	Remarks
*	A-6791-603-A	FR-128 BOARD, COMPLETE (E880)	
		************************	
*	A-6791-615-A	FR-128 BOARD, COMPLETE (F900:VC,NP,UX)	
		************************	
*	A-6791-621-A	FR-128 BOARD, COMPLETE (F900:B)	
		************************	
*	A-6791-630-A	FR-128 BOARD, COMPLETE (F990:VC,NP,UX)	
		************************	
*	A-6791-635-A	FR-128 BOARD, COMPLETE (F990:B)	
		************************	
*	A-6791-636-A	FR-128 BOARD, COMPLETE (F850:B)	
		************************	
*	A-6791-638-A	FR-128 BOARD, COMPLETE (E850:UX)	
		************************	
			(Ref.No.:3,000 series)
	3-966-257-01	HOLDER (B), FL (F990,F900)	
		< BUZZER >	
BZ181	1-529-104-11	BUZZER, PIEZOELECTRIC	
		< CAPACITOR >	
C180	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C188	1-163-104-00	CERAMIC CHIP 30PF 5% 50V	
C190	1-125-705-11	DOUBLE LAYER 0.22F 0 5.5V	
C191	1-163-038-91	CERAMIC CHIP 0.1uF 25V	
C192	1-126-916-11	ELECT 1000uF 20% 6.3V	(E850/F900/F990)
C192	1-126-924-11	ELECT 330uF 20% 10V	(E880)
C193	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C196	1-128-057-11	ELECT 330uF 20% 6.3V	(E850/F900/F990)
C196	1-126-916-11	ELECT 1000uF 20% 6.3V	(E880)
C198	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C199	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C200	1-163-038-91	CERAMIC CHIP 0.1uF 25V	
C400	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	(E850/E880)
C421	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
C422	1-104-664-11	ELECT 47uF 20% 16V	
C423	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C424	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
C481	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C491	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C493	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C495	1-163-038-91	CERAMIC CHIP 0.1uF 25V	
C496	1-163-038-91	CERAMIC CHIP 0.1uF 25V	
C497	1-163-263-11	CERAMIC CHIP 330PF 5% 50V	
		< CONNECTOR >	
CN181	1-784-514-11	CONNECTOR, FFC/FPC 35P	
CN400	1-784-453-11	CONNECTOR, FFC/FPC 11P	
CN401	1-691-036-21	PIN, CONNECTOR (PC BOARD) 4P(F900/F990)	
CN402	1-784-484-11	CONNECTOR, FFC/FPC 5P (F900/F990)	
* CN480	1-564-004-11	PIN, CONNECTOR 5P	
		< TRIMMER >	
CT180	1-141-227-00	CAP, TRIMMER 20PF	

Ref. No.	Part No.	Description	Remarks
		< DIODE >	
D186	8-719-200-82	DIODE 11ES2	
D187	8-719-200-82	DIODE 11ES2	
D400	8-719-056-07	DIODE SLR-342MC3F (E850/E880)	
D420	8-719-110-08	DIODE RD8.2ES-B2	
D480	8-719-109-97	DIODE RD6.8ES-B2	
D481	8-719-108-12	DIODE RD9.1E-W	
D490	8-719-108-12	DIODE RD9.1E-W	
D491	8-719-108-12	DIODE RD9.1E-W	
		< FERRITE BEAD >	
FB400	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB400	1-216-295-91	SHORT 0 (E850/E880)	
FB401	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB401	1-216-295-91	SHORT 0 (E850/E880)	
FB402	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB402	1-216-295-91	SHORT 0 (E850/E880)	
FB403	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB403	1-216-295-91	SHORT 0 (E850/E880)	
FB404	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB404	1-216-295-91	SHORT 0 (E850/E880)	
FB405	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB405	1-216-295-91	SHORT 0 (E850/E880)	
FB406	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB406	1-216-295-91	SHORT 0 (E850/E880)	
FB407	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB407	1-216-295-91	SHORT 0 (E850/E880)	
FB408	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB408	1-216-295-91	SHORT 0 (E850/E880)	
FB409	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB409	1-216-295-91	SHORT 0 (E850/E880)	
FB410	1-414-234-11	INDUCTOR CHIP 0UH (F900/F990)	
FB410	1-216-295-91	SHORT 0 (E850/E880)	
		< IC >	
IC180	8-759-537-74	IC S579C15PJ-VSX9354 (F900:B)	
IC180	8-759-537-73	IC S579C15PJ-VSX9353 (F900:VC,NP,UX)	
IC180	8-759-483-35	IC S579258PJ (E850:B/F990:B)	
IC180	8-759-483-34	IC S579257PJ (E850:UX/F990:VC,NP,UX)	
IC180	8-759-549-75	IC S579265PJ (E880)	
IC182	8-759-432-34	IC ST24W16FM6TR	
IC183	8-759-248-87	IC MM1256XF-BE	
IC400	8-749-011-05	IC GP1U28X (E850/E880)	
IC420	8-759-438-82	IC uPD16311GC-AB6	
		< JACK >	
J480	1-580-845-11	JACK, PIN 3P (LINE 2 IN)	
		< JUMPER RESISTOR >	
JR101	1-216-295-91	SHORT 0	
JR102	1-216-295-91	SHORT 0	
JR103	1-216-295-91	SHORT 0 (E880)	
JR104	1-216-296-91	SHORT 0	
JR105	1-216-296-91	SHORT 0	
JR106	1-216-296-91	SHORT 0	
JR107	1-216-296-91	SHORT 0	
JR108	1-216-296-91	SHORT 0	
JR109	1-216-296-91	SHORT 0	
JR110	1-216-296-91	SHORT 0	

Ref. No.	Part No.	Description	Remarks
JR111	1-216-295-91	SHORT 0	
JR181	1-216-295-91	SHORT 0	
JR191	1-216-295-91	SHORT 0	
JR192	1-216-295-91	SHORT 0	
JS181	1-216-295-91	SHORT 0	
JS402	1-216-295-91	SHORT 0 (F990)	
JS490	1-216-295-91	SHORT 0	
		< COIL >	
L182	1-414-934-21	INDUCTOR 10uH	
		< FLUORECENT INDICATOR >	
ND420	1-517-745-21	TUBE, FLUORESCENT INDICATOR	
		< TRANSISTOR >	
Q400	8-729-421-19	TRANSISTOR UN2213 (E850/E880)	
		< RESISTOR >	
R180	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R181	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R182	1-216-295-91	SHORT 0	
R183	1-216-295-91	SHORT 0	
R184	1-216-113-00	METAL CHIP 470K 5% 1/10W	
R185	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R186	1-216-041-00	METAL CHIP 470 5% 1/10W	
R187	1-216-041-00	METAL CHIP 470 5% 1/10W	
R188	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R189	1-216-041-00	METAL CHIP 470 5% 1/10W	(F900/F990)
R190	1-249-417-11	CARBON 1K 5% 1/4W	F
R191	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R192	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R193	1-216-073-00	METAL CHIP 10K 5% 1/10W	(F900/F990)
R194	1-216-041-00	METAL CHIP 470 5% 1/10W	(F900/F990)
R195	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R196	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R197	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R198	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R199	1-216-037-00	METAL CHIP 330 5% 1/10W	
R201	1-216-295-91	SHORT 0	
R202	1-216-095-00	METAL CHIP 82K 5% 1/10W	
R203	1-216-113-00	METAL CHIP 470K 5% 1/10W	
R204	1-218-179-11	RES,CHIP 10M 5% 1/10W	
R205	1-216-041-00	METAL CHIP 470 5% 1/10W	(F900/F990)
R400	1-216-029-00	METAL CHIP 150 5% 1/10W	(E850/E880)
R401	1-216-089-91	RES,CHIP 47K 5% 1/10W	(E850/E880)
R402	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	(E850/E880)
R403	1-216-095-00	METAL CHIP 82K 5% 1/10W	(F900/F990)
R403	1-216-073-00	METAL CHIP 10K 5% 1/10W	(E850/E880)
R404	1-216-095-00	METAL CHIP 82K 5% 1/10W	(F900/F990)
R404	1-216-073-00	METAL CHIP 10K 5% 1/10W	(E850/E880)
R405	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R406	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R407	1-216-073-00	METAL CHIP 10K 5% 1/10	
R408	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	(E850/E880)
R409	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	(E850/E880)
R410	1-216-073-00	METAL CHIP 10K 5% 1/10W	(E850/E880)
R411	1-216-081-00	METAL CHIP 22K 5% 1/10W	(E850/E880)
R412	1-216-075-00	METAL CHIP 12K 5% 1/10W (F990)	
R413	1-216-073-00	METAL CHIP 10K 5% 1/10W (F990)	
R414	1-216-081-00	METAL CHIP 22K 5% 1/10W (F990)	
R415	1-216-075-00	METAL CHIP 12K 5% 1/10W	
R416	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R417	1-216-295-91	SHORT 0	
R418	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R421	1-216-295-91	SHORT 0	
R422	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R423	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R424	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R425	1-216-085-00	METAL CHIP 33K 5% 1/10W	
R426	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R427	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R428	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R429	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R430	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R480	1-216-022-00	METAL CHIP 75 5% 1/10W	
R481	1-216-295-91	SHORT 0	
R490	1-216-295-91	SHORT 0	
R491	1-216-295-91	SHORT 0	
R492	1-216-035-00	METAL CHIP 270 5% 1/10W	
R493	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R494	1-216-295-91	SHORT 0	
		< SWITCH >	
S400	1-762-196-21	SWITCH, TACT (ON/STANDBY)(E850/E880)	
S401	1-762-196-21	SWITCH, TACT (PROGRAM/TRACKING:+)	(E850/E880)
S402	1-762-196-21	SWITCH, TACT (AUTO SET UP)(E850/E880)	
S404	1-762-196-21	SWITCH, TACT (PROGRAM/TRACKING:–)	(E850/E880)
S406	1-762-196-21	SWITCH, TACT (QUICK TIMER)(E850/E880)	
S407	1-762-196-21	SWITCH, TACT (EJECT)	
S408	1-762-196-21	SWITCH, TACT (AUDIO DUB)(E850/E880)	
S409	1-762-196-21	SWITCH, TACT (DNR)(E880)	
S410	1-762-171-11	SWITCH, SLIDE (COMMANDER) (F990)	
S411	1-572-837-11	SWITCH, SLIDE (POWER SAVE)(F900/F990)	
S411	1-571-588-31	SWITCH, SLIDE (POWER SAVE)(E850/E880)	
		< VIBRATOR >	
X180	1-760-014-11	VIBRATOR, CERAMIC 20MHz	
X181	1-579-463-11	VIBRATOR, CRYSTAL 32.768kHz	

Ref. No.	Part No.	Description			Remarks
*	A-6791-604-A	MA-316 BOARD, COMPLETE (E880)			
		*************************			
*	A-6791-616-A	MA-316 BOARD, COMPLETE (F900:VC)			
		*************************			
*	A-6791-619-A	MA-316 BOARD, COMPLETE (F900:NP)			
		*************************			
*	A-6791-620-A	MA-316 BOARD, COMPLETE (F900:UX)			
		*************************			
*	A-6791-622-A	MA-316 BOARD, COMPLETE (F900:B)			
		*************************			
*	A-6791-632-A	MA-316 BOARD, COMPLETE (F990:VC)			
		*************************			
*	A-6791-633-A	MA-316 BOARD, COMPLETE (F990:NP)			
		*************************			
*	A-6791-634-A	MA-316 BOARD, COMPLETE (F990:UX)			
		*************************			
*	A-6791-637-A	MA-316 BOARD, COMPLETE (E850:B)			
		*************************			
*	A-6791-639-A	MA-316 BOARD, COMPLETE (E850:UX)			
		*************************			
*	A-6791-646-A	MA-316 BOARD, COMPLETE (F990:B)			
		*************************			
					(Ref.No.:2,000 series)
	1-558-924-21	CABLE, PIN			
*	3-960-273-01	SPACER, TOP END			
*	3-960-274-01	SPACER, LED			
		< CAPACITOR >			
C100	1-128-057-11	ELECT	330uF	20%	6.3V
C101	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C102	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C103	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C104	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C105	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C107	1-130-489-00	MYLAR	0.033uF	5%	50V
C108	1-137-441-11	FILM	0.027uF	5%	50V
C109	1-126-157-11	ELECT	10uF	20%	16V
C130	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C131	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C132	1-124-589-11	ELECT	47uF	20%	16V
C134	1-124-463-00	ELECT	0.1uF	20%	50V
C150	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C159	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C160	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C161	1-124-589-11	ELECT	47uF	20%	16V
C162	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C164	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C165	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C166	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C167	1-124-589-11	ELECT	47uF	20%	16V
C170	1-126-154-11	ELECT	47uF	20%	6.3V
C172	1-164-346-11	CERAMIC CHIP	1uF		16V
C173	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C201	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C202	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C204	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C205	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C206	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C207	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C208	1-163-241-11	CERAMIC CHIP	39PF	5%	50V
C209	1-128-131-11	ELECT	22uF	20%	50V
C210	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C211	1-163-237-11	CERAMIC CHIP	27PF	5%	50V

Ref. No.	Part No.	Description			Remarks
C212	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C213	1-163-257-11	CERAMIC CHIP	180PF	5%	50V
C214	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C217	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C219	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C220	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C222	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C223	1-126-154-11	ELECT	47uF	20%	6.3V
C224	1-162-306-11	CERAMIC	0.01uF	20%	16V
C226	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C227	1-163-031-11	CERAMIC CHIP	0.01uF		50V
					(E880/F900:VC,NP,UX/F990:VC,NP,UX)
C228	1-126-157-11	ELECT	10uF	20%	16V
C229	1-162-306-11	CERAMIC	0.01uF	20%	16V
C230	1-124-589-11	ELECT	47uF	20%	16V
C231	1-126-157-11	ELECT	10uF	20%	16V
C232	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C233	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C234	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C235	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C236	1-126-160-11	ELECT	1uF	20%	50V
C237	1-163-031-11	CERAMIC CHIP	0.01uF		50V
					(E850/F900:B/F990:B)
C238	1-162-306-11	CERAMIC	0.01uF	20%	16V
C239	1-124-584-00	ELECT	100uF	20%	10V
C240	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C241	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C242	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C243	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C244	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C245	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C246	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C247	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C248	1-163-031-11	CERAMIC CHIP	0.01uF		50V
					(E850:B/E880/F900:B/F990:B)
C249	1-126-154-11	ELECT	47uF	20%	6.3V
C250	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C251	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C252	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C253	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C254	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C255	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C257	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C262	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
					(F900/F990)
C301	1-164-159-11	CERAMIC	0.1uF		50V
C302	1-126-154-11	ELECT	47uF	20%	6.3V
C305	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C306	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C307	1-126-157-11	ELECT	10uF	20%	16V
C308	1-124-589-11	ELECT	47uF	20%	16V
C309	1-126-163-11	ELECT	4.7uF	20%	50V
C310	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C311	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C312	1-137-370-11	FILM	0.01uF	5%	50V
C313	1-126-157-11	ELECT	10uF	20%	16V
C314	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C315	1-126-160-11	ELECT	1uF	20%	50V
C317	1-126-163-11	ELECT	4.7uF	20%	50V

MA-316

Ref. No.	Part No.	Description			Remarks
C318	1-124-589-11	ELECT	47uF	20%	16V
C361	1-126-960-11	ELECT	1uF	20%	50V
C362	1-126-960-11	ELECT	1uF	20%	50V
C363	1-126-960-11	ELECT	1uF	20%	50V
C364	1-126-960-11	ELECT	1uF	20%	50V
C365	1-126-960-11	ELECT	1uF	20%	50V
C366	1-126-960-11	ELECT	1uF	20%	50V
C369	1-126-964-11	ELECT	10uF	20%	50V
C370	1-126-964-11	ELECT	10uF	20%	50V
C371	1-126-964-11	ELECT	10uF	20%	50V
C372	1-126-964-11	ELECT	10uF	20%	50V
C373	1-126-964-11	ELECT	10uF	20%	50V
C374	1-126-960-11	ELECT	1uF	20%	50V
C375	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C376	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
C377	1-126-967-11	ELECT	47uF	20%	50V
C378	1-126-964-11	ELECT	10uF	20%	50V
C379	1-126-961-11	ELECT	2.2uF	20%	50V
C380	1-126-964-11	ELECT	10uF	20%	50V
C381	1-126-967-11	ELECT	47uF	20%	50V
C382	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
C383	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C384	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C385	1-126-933-11	ELECT	100uF	20%	16V
C386	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C390	1-126-960-11	ELECT	1uF	20%	50V
C391	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C392	1-126-960-11	ELECT	1uF	20%	50V
					(E850:B/E880/F900:VC,NP,B/F990)
C393	1-126-960-11	ELECT	1uF	20%	50V
					(E850:B/E880/F900:VC,NP,B/F990)
C394	1-126-960-11	ELECT	1uF	20%	50V
C395	1-126-960-11	ELECT	1uF	20%	50V
C500	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C501	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C503	1-163-031-11	CERAMIC CHIP	0.01uF		50V
					(E880/F990)
C504	1-126-935-11	ELECT	470uF	20%	6.3V
					(E880/F990)
C510	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C511	1-104-664-11	ELECT	47uF	20%	16V
C512	1-104-664-11	ELECT	47uF	20%	16V
C513	1-126-935-11	ELECT	470uF	20%	6.3V
C530	1-104-664-11	ELECT	47uF	20%	16V
C531	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C532	1-126-933-11	ELECT	100uF	20%	16V
C541	1-124-584-00	ELECT	100uF	20%	10V
C542	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C543	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C544	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C545	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
					(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
C546	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
					(E850B/E880/F900:VC,NP,B/F990:VC,NP,B)
C547	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
					(E850:B/E880/F900:VC,NP,B/F990)
C571	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V

Ref. No.	Part No.	Description			Remarks
C572	1-126-964-11	ELECT	10uF	20%	50V
					(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
C573	1-126-964-11	ELECT	10uF	20%	50V
					(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
C660	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
					(E850:B/E880/F900:B/F990:B)
C661	1-104-664-11	ELECT	47uF	20%	16V
C662	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C663	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C665	1-104-664-11	ELECT	47uF	20%	16V
C667	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C668	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C669	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C670	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C671	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C672	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C673	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C674	1-104-664-11	ELECT	47uF	20%	16V
C675	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C676	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C677	1-126-960-11	ELECT	1uF	20%	50V
C678	1-126-961-11	ELECT	2.2uF	20%	50V
C679	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C680	1-163-139-00	CERAMIC CHIP	820PF	5%	50V
C681	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C682	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C701	1-126-964-11	ELECT	10uF	20%	50V
C704	1-126-964-11	ELECT	10uF	20%	50V
C705	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C708	1-104-664-11	ELECT	47uF	20%	16V
C709	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C710	1-126-965-11	ELECT	22uF	20%	50V
C730	1-126-964-11	ELECT	10uF	20%	50V
C731	1-126-964-11	ELECT	10uF	20%	50V
C752	1-126-933-11	ELECT	100uF	20%	16V
C753	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C755	1-126-935-11	ELECT	470uF	20%	6.3V
C820	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C821	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C822	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C823	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C824	1-126-964-11	ELECT	10uF	20%	50V
C825	1-126-964-11	ELECT	10uF	20%	50V
C850	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C851	1-126-157-11	ELECT	10uF	20%	16V
C852	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C853	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C855	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C856	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C893	1-163-038-91	CERAMIC CHIP	0.1uF		25V
					(E850/F990)
C894	1-124-589-11	ELECT	47uF	20%	16V
					(E850/F990)
		< CONNECTOR >			
CN101	1-779-724-11	CONNECTOR, BOARD TO BOARD 5P			
CN102	1-779-723-11	CONNECTOR, BOARD TO BOARD 9P			
CN104	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P			
* CN161	1-564-004-11	PIN, CONNECTOR 5P			
CN164	1-784-514-11	CONNECTOR, FFC/FPC 35P			

Ref. No.	Part No.	Description	Remarks
CN165	1-506-469-11	PIN, CONNECTOR 4P	
CN166	1-784-496-11	CONNECTOR, FFC/FPC 17P (F900/F990)	
CN305	1-573-847-11	CONNECTOR, BOARD TO BOARD 15P	
* CN306	1-766-718-21	CONNECTOR, BOARD TO BOARD 17P	
CN308	1-573-843-11	CONNECTOR, BOARD TO BOARD 11P (E880/F900:VC,NP,UX/F990:VC,NP,UX)	
CN500	1-784-415-11	CONNECTOR, SQUARE TYPE 21P (LINE/(TV))	
CN570	1-784-415-11	CONNECTOR, SQUARE TYPE 21P (DECODER/LINE 3 IN)	
CN600	1-569-341-11	CONNECTOR, BOARD TO BOARD 19P	
		< DIODE >	
D102	8-719-048-26	DIODE GL528V1	
D107	8-719-911-19	DIODE 1SS119	
D108	8-719-200-82	DIODE 11ES2	
D131	8-719-200-82	DIODE 11ES2	
D132	8-719-200-82	DIODE 11ES2	
D160	8-719-200-82	DIODE 11ES2	
D500	8-719-109-97	DIODE RD6.8ES-B2	
D501	8-719-109-97	DIODE RD6.8ES-B2	
D502	8-719-109-97	DIODE RD6.8ES-B2	
D503	8-719-109-97	DIODE RD6.8ES-B2	
D504	8-719-109-97	DIODE RD6.8ES-B2	
D505	8-719-109-97	DIODE RD6.8ES-B2	
D506	8-719-109-97	DIODE RD6.8ES-B2	
D507	8-719-109-97	DIODE RD6.8ES-B2	
D508	8-719-109-97	DIODE RD6.8ES-B2	
D510	8-719-109-97	DIODE RD6.8ES-B2	
D511	8-719-109-97	DIODE RD6.8ES-B2	
D512	8-719-921-86	DIODE MTZJ-13	
D513	8-719-109-97	DIODE RD6.8ES-B2	
D514	8-719-109-97	DIODE RD6.8ES-B2	
D515	8-719-109-97	DIODE RD6.8ES-B2	
D516	8-719-109-97	DIODE RD6.8ES-B2	
D517	8-719-108-12	DIODE RD9.1E-W	
D518	8-719-108-12	DIODE RD9.1E-W	
D519	8-719-108-12	DIODE RD9.1E-W	
D540	8-719-109-97	DIODE RD6.8ES-B2	
D541	8-719-109-97	DIODE RD6.8ES-B2	
D542	8-719-109-97	DIODE RD6.8ES-B2 (E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)	
D543	8-719-109-97	DIODE RD6.8ES-B2	
D544	8-719-109-97	DIODE RD6.8ES-B2	
D570	8-719-109-97	DIODE RD6.8ES-B2	
D571	8-719-109-97	DIODE RD6.8ES-B2	
D572	8-719-109-97	DIODE RD6.8ES-B2	
D573	8-719-109-97	DIODE RD6.8ES-B2	
D574	8-719-109-97	DIODE RD6.8ES-B2	
D575	8-719-109-97	DIODE RD6.8ES-B2	
D576	8-719-109-97	DIODE RD6.8ES-B2	
D577	8-719-109-97	DIODE RD6.8ES-B2	
D578	8-719-109-97	DIODE RD6.8ES-B2	
D579	8-719-109-97	DIODE RD6.8ES-B2	
D580	8-719-109-97	DIODE RD6.8ES-B2	
D610	8-719-200-82	DIODE 11ES2 (E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)	
D660	8-719-911-19	DIODE 1SS119	
D661	8-719-911-19	DIODE 1SS119	
D663	8-719-911-19	DIODE 1SS119	

Ref. No.	Part No.	Description	Remarks
D702	8-719-982-26	DIODE MTZJ-33B	
D750	8-719-200-82	DIODE 11ES2	
D800	8-719-911-19	DIODE 1SS119	
D890	8-719-109-97	DIODE RD6.8ES-B2 (E850/F990)	
D891	8-719-109-97	DIODE RD6.8ES-B2 (E850/F990)	
D892	8-719-109-97	DIODE RD6.8ES-B2 (E850/F990)	
		< FILTER >	
FL500	1-236-163-11	ENCAPSULATED COMPONENT	
FL501	1-236-163-11	ENCAPSULATED COMPONENT	
FL502	1-236-163-11	ENCAPSULATED COMPONENT	
FL503	1-236-163-11	ENCAPSULATED COMPONENT	
FL504	1-236-163-11	ENCAPSULATED COMPONENT	
FL505	1-236-163-11	ENCAPSULATED COMPONENT	
FL506	1-236-163-11	ENCAPSULATED COMPONENT (F990)	
FL507	1-236-163-11	ENCAPSULATED COMPONENT (F990)	
FL570	1-236-163-11	ENCAPSULATED COMPONENT	
FL571	1-236-163-11	ENCAPSULATED COMPONENT	
FL572	1-236-163-11	ENCAPSULATED COMPONENT	
FL573	1-236-163-11	ENCAPSULATED COMPONENT	
		< IC >	
IC100	8-759-702-02	IC NJM062M	
IC141	8-759-100-93	IC UPC393G2	
IC160	8-752-888-63	IC CXP87852-026Q (F900/F990)	
IC160	8-752-891-51	IC CXP87948-009Q (E850)	
IC160	8-752-894-26	IC CXP87948-011Q (E880)	
IC161	8-759-481-46	IC LB1943	
IC201	8-759-479-25	IC LA71514M-MPB	
IC202	8-759-439-50	IC LC89977M-TE-L	
IC360	8-759-486-63	IC TDA9615H/N1,518	
IC501	8-719-071-50	IC DIODE BZA408B-115 (F990)	
IC530	8-759-438-18	IC PQ12RD08	
IC540	8-759-438-16	IC STV6400D	
IC660	8-759-480-24	IC MB90089PF-G-212-BND-ER	(E850/F900/F990)
IC660	8-759-480-25	IC MB90089PF-G-215-BND-ER (E880)	
IC661	8-759-164-09	IC LA7218M	
IC820	8-759-700-07	IC NJM2903M	
IC850	8-759-484-61	IC SDA5650X-GEG	
		< JACK >	
J500	1-779-011-11	JACK, PIN 6P (AUDIO OUT)(F990)	
J500	1-784-414-11	JACK, PIN 2P (AUDIO OUT)(E850/F900)	
J500	1-784-412-11	JACK, PIN 3P (AUDIO OUT)(E880)	
J890	1-779-013-11	JACK, MINIATURE (SAT CONTROL)(E850/F990)	
		< JUMPER RESISTOR >	
JR001	1-216-296-91	SHORT 0	
JR002	1-216-295-91	SHORT 0	
JR003	1-216-295-91	SHORT 0	
JR004	1-216-295-91	SHORT 0	
JR005	1-216-296-91	SHORT 0	
JR006	1-216-296-91	SHORT 0	
JR007	1-216-296-91	SHORT 0	
JR008	1-216-296-91	SHORT 0	
JR009	1-216-295-91	SHORT 0	
JR010	1-216-295-91	SHORT 0	

MA-316

Ref. No.	Part No.	Description		Remarks
JR011	1-216-295-91	SHORT	0	
JR012	1-216-295-91	SHORT	0	
JR013	1-216-296-91	SHORT	0	
JR014	1-216-295-91	SHORT	0	
JR015	1-216-296-91	SHORT	0	
JR016	1-216-295-91	SHORT	0	
JR017	1-216-296-91	SHORT	0	
JR018	1-216-296-91	SHORT	0	
JR019	1-216-296-91	SHORT	0	
JR020	1-216-296-91	SHORT	0	
JR021	1-216-295-91	SHORT	0	
JR022	1-216-295-91	SHORT	0	
JR023	1-216-296-91	SHORT	0	
JR024	1-216-296-91	SHORT	0	
JR025	1-216-295-91	SHORT	0	
JR026	1-216-295-91	SHORT	0	
JR027	1-216-295-91	SHORT	0	
JR028	1-216-296-91	SHORT	0	
JR029	1-216-295-91	SHORT	0	
JR030	1-216-295-91	SHORT	0	
JR031	1-216-295-91	SHORT	0	
JR032	1-216-295-91	SHORT	0	
JR033	1-216-296-91	SHORT	0	
JR034	1-216-295-91	SHORT	0	
JR035	1-216-295-91	SHORT	0	
JR036	1-216-295-91	SHORT	0	
JR037	1-216-295-91	SHORT	0	
JR038	1-216-295-91	SHORT	0	
JR039	1-216-296-91	SHORT	0	
JR040	1-216-296-91	SHORT	0	
JR041	1-216-295-91	SHORT	0	
JR042	1-216-296-91	SHORT	0	
JR043	1-216-296-91	SHORT	0	
JR044	1-216-296-91	SHORT	0	
JR045	1-216-295-91	SHORT	0	
JR046	1-216-296-91	SHORT	0	
JR047	1-216-295-91	SHORT	0	
JR048	1-216-296-91	SHORT	0	
JR049	1-216-296-91	SHORT	0	
JR050	1-216-296-91	SHORT	0	
JR051	1-216-295-91	SHORT	0	
JR052	1-216-296-91	SHORT	0	
JR053	1-216-296-91	SHORT	0	
JR054	1-216-296-91	SHORT	0	
JR055	1-216-295-91	SHORT	0	
JR056	1-216-295-91	SHORT	0	
JR057	1-216-295-91	SHORT	0	
JR058	1-216-295-91	SHORT	0	
JR059	1-216-295-91	SHORT	0	
JR060	1-216-295-91	SHORT	0	
JS201	1-216-295-91	SHORT	0 (E850/F900:B/F990:B)	
JS390	1-216-296-91	SHORT	0 (E850/E880/F900)	
JS391	1-216-296-91	SHORT	0 (E850/E880/F900)	
JS392	1-216-295-91	SHORT	0 (F990)	
JS393	1-216-295-91	SHORT	0 (F990)	
JS542	1-216-295-91	SHORT	0 (E850:UX/F900:UX/F990:UX)	
		< COIL >		
L141	1-414-940-21	INDUCTOR	100uH	
L161	1-414-934-21	INDUCTOR	10uH	
L162	1-414-934-21	INDUCTOR	10uH	
L201	1-414-946-21	INDUCTOR	39uH	
L202	1-414-940-21	INDUCTOR	100uH	
L203	1-469-014-21	INDUCTOR	120uH	
L204	1-414-934-21	INDUCTOR	10uH	
L205	1-408-982-11	INDUCTOR	100uH	
L206	1-414-934-21	INDUCTOR	10uH	
L207	1-414-934-21	INDUCTOR	10uH	
L208	1-414-181-11	INDUCTOR	4.7uH (F900/F990)	
L301	1-414-940-21	INDUCTOR	100uH	
L361	1-414-940-21	INDUCTOR	100uH	
L510	1-414-940-21	INDUCTOR	100uH	
L530	1-414-940-21	INDUCTOR	100uH	
L540	1-414-934-21	INDUCTOR	10uH	
L660	1-414-186-31	INDUCTOR	33uH	
L662	1-414-940-21	INDUCTOR	100uH	
L663	1-414-940-21	INDUCTOR	100uH	
L664	1-412-470-21	INDUCTOR	22uH	
L701	1-414-930-21	INDUCTOR	2.2uH	
L750	1-414-930-21	INDUCTOR	2.2uH	
L755	1-414-940-21	INDUCTOR	100uH	
L890	1-408-970-21	INDUCTOR	10uH (E850/F990)	
		< PHOTO INTERUPTER >		
PH100	8-749-013-23	PHOTO INTERRUPTER GP3S120		
PH101	8-749-013-23	PHOTO INTERRUPTER GP3S120		
		< IC LINK >		
⚠PS130	1-533-586-31	LINK, IC 315mA		
⚠PS131	1-533-586-31	LINK, IC 315mA		(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
⚠PS533	1-533-586-31	LINK, IC 315mA		
		< TRANSISTOR >		
Q100	8-729-043-84	TRANSISTOR	PT380F3	
Q101	8-729-043-84	TRANSISTOR	PT380F3	
Q102	8-729-281-53	TRANSISTOR	2SC1815-GR	
Q141	8-729-424-08	TRANSISTOR	UN2111	
Q201	8-729-422-27	TRANSISTOR	2SD601A-Q	
Q202	8-729-422-27	TRANSISTOR	2SD601A-Q	
Q208	8-729-422-27	TRANSISTOR	2SD601A-Q	
Q209	8-729-216-22	TRANSISTOR	2SA1162-G	
Q210	8-729-422-27	TRANSISTOR	2SD601A-Q	
Q211	8-729-422-27	TRANSISTOR	2SD601A-Q	
Q301	8-729-281-53	TRANSISTOR	2SC1815-GR	
Q501	8-729-424-08	TRANSISTOR	UN2111	
Q502	8-729-421-19	TRANSISTOR	UN2213	
Q503	8-729-216-22	TRANSISTOR	2SA1162-G (E880/F990)	
Q510	8-729-216-22	TRANSISTOR	2SA1162-G	

Note :	Note :
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description				Remarks
Q533	8-729-804-41	TRANSISTOR	2SB1122-S			
Q534	8-729-421-19	TRANSISTOR	UN2213			
Q540	8-729-216-22	TRANSISTOR	2SA1162-G			
						(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
Q611	8-729-804-41	TRANSISTOR	2SB1122-S			
						(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
Q612	8-729-421-19	TRANSISTOR	UN2213			
						(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
Q613	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q660	8-729-421-19	TRANSISTOR	UN2213			
						(E850:B/E880/F900:B/F990:B)
Q661	8-729-422-27	TRANSISTOR	2SD601A-Q			
						(E850:B/E880/F900:B/F990:B)
Q662	8-729-216-22	TRANSISTOR	2SA1162-G			
Q663	8-729-216-22	TRANSISTOR	2SA1162-G			
Q664	8-729-216-22	TRANSISTOR	2SA1162-G			
Q703	8-729-421-19	TRANSISTOR	UN2213			
Q751	8-729-421-19	TRANSISTOR	UN2213			
Q752	8-729-216-22	TRANSISTOR	2SA1162-G			
Q800	8-729-216-22	TRANSISTOR	2SA1162-G			
Q801	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q802	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q803	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q804	8-729-421-19	TRANSISTOR	UN2213			
Q820	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q821	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q850	8-729-216-22	TRANSISTOR	2SA1162-G			
Q891	8-729-422-27	TRANSISTOR	2SD601A-Q (E850/F990)			
Q892	8-729-140-75	TRANSISTOR	2SD999-CLCK (E850/F990)			
Q893	8-729-422-27	TRANSISTOR	2SD601A-Q (E850/F990)			
		< RESISTOR >				
R100	1-249-400-11	CARBON	39	5%	1/4W	F
R101	1-249-400-11	CARBON	39	5%	1/4W	F
R102	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R103	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R104	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R105	1-249-413-11	CARBON	470	5%	1/4W	F
R106	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R107	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R109	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R110	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R111	1-216-103-00	METAL CHIP	180K	5%	1/10W	
R112	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	
R113	1-208-806-11	RES,CHIP	10K	0.50%	1/10W	
R114	1-208-806-11	RES,CHIP	10K	0.50%	1/10W	
R115	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R116	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R117	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R118	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R130	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R131	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R132	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R133	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R134	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R145	1-216-105-91	RES,CHIP	220K	5%	1/10W	
R146	1-249-429-11	CARBON	10K	5%	1/4W	
R147	1-208-830-11	RES,CHIP	100K	0.50%	1/10W	
R148	1-208-830-11	RES,CHIP	100K	0.50%	1/10W	
R149	1-208-830-11	RES,CHIP	100K	0.50%	1/10W	
R151	1-208-830-11	RES,CHIP	100K	0.50%	1/10W	
R152	1-216-111-00	METAL CHIP	390K	5%	1/10W	

Ref. No.	Part No.	Description				Remarks
R153	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R155	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R160	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R161	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R162	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R163	1-249-429-11	CARBON	10K	5%	1/4W	
R164	1-249-437-11	CARBON	47K	5%	1/4W	
R165	1-216-041-00	METAL CHIP	470	5%	1/10W	
R166	1-216-041-00	METAL CHIP	470	5%	1/10W	
R167	1-249-417-11	CARBON	1K	5%	1/4W	F
R168	1-247-807-31	CARBON	100	5%	1/4W	
R169	1-247-807-31	CARBON	100	5%	1/4W	
R170	1-247-807-31	CARBON	100	5%	1/4W	
R171	1-247-807-31	CARBON	100	5%	1/4W	
R172	1-249-429-11	CARBON	10K	5%	1/4W	
R173	1-249-429-11	CARBON	10K	5%	1/4W	
R174	1-216-041-00	METAL CHIP	470	5%	1/10W	
R175	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R176	1-249-429-11	CARBON	10K	5%	1/4W	
R177	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R178	1-216-295-91	SHORT	0			
R179	1-249-429-11	CARBON	10K	5%	1/4W	
R180	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R181	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R183	1-249-413-11	CARBON	470	5%	1/4W	F
R184	1-249-413-11	CARBON	470	5%	1/4W	F
R201	1-216-041-00	METAL CHIP	470	5%	1/10W	
R202	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	
R203	1-249-413-11	CARBON	470	5%	1/4W	F
R204	1-216-047-91	RES,CHIP	820	5%	1/10W	
R205	1-216-037-00	METAL CHIP	330	5%	1/10W	
R206	1-216-037-00	METAL CHIP	330	5%	1/10W	
R207	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R208	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	
						(E850:B/F900:B/F990:B)
R208	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
						(E850:UK/E880/F900:VC,NP,UX/F990:VC,NP,UX)
R209	1-216-041-00	METAL CHIP	470	5%	1/10W	
R210	1-216-025-91	RES,CHIP	100	5%	1/10W	
R218	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R219	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R221	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R222	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
R223	1-216-017-91	RES,CHIP	47	5%	1/10W	
R224	1-216-017-91	RES,CHIP	47	5%	1/10W	
R225	1-216-017-91	RES,CHIP	47	5%	1/10W	
R226	1-216-025-91	RES,CHIP	100	5%	1/10W	
R227	1-216-025-91	RES,CHIP	100	5%	1/10W	
R228	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R229	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
R230	1-216-045-00	METAL CHIP	680	5%	1/10W	
R231	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R232	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R233	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	
R234	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R235	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R236	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R239	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R240	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R243	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R248	1-216-295-91	SHORT	0			

MA-316

Ref. No.	Part No.	Description				Remarks
R250	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	(E850:UX/F900:VC,NP,UX/F990:VC,NP,UX)
R251	1-249-413-11	CARBON	470	5%	1/4W	F (F900/F990)
R301	1-249-439-11	CARBON	68K	5%	1/4W	
R302	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	
R306	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R307	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R309	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	
R310	1-216-129-00	METAL CHIP	2.2M	5%	1/10W	
R311	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
R312	1-216-079-00	METAL CHIP	18K	5%	1/10W	
R313	1-216-109-00	METAL CHIP	330K	5%	1/10W	
R314	1-216-035-00	METAL CHIP	270	5%	1/10W	
R315	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R316	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R318	1-216-075-00	METAL CHIP	12K	5%	1/10W	
R320	1-216-047-91	RES,CHIP	820	5%	1/10W	
R360	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R361	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R368	1-216-133-00	METAL CHIP	3.3M	5%	1/10W	
R370	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R371	1-208-820-11	RES,CHIP	39K	0.50%	1/10W	
R372	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R378	1-216-083-00	METAL CHIP	27K	5%	1/10W	
R380	1-216-295-91	SHORT	0			
R381	1-216-295-91	SHORT	0			
R382	1-216-079-00	METAL CHIP	18K	5%	1/10W	
R383	1-216-079-00	METAL CHIP	18K	5%	1/10W	
R384	1-216-091-00	METAL CHIP	56K	5%	1/10W	
R385	1-216-091-00	METAL CHIP	56K	5%	1/10W	
R389	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R390	1-216-079-00	METAL CHIP	18K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990)
R391	1-216-079-00	METAL CHIP	18K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990)
R392	1-216-295-91	SHORT	0 (F990)			
R392	1-216-079-00	METAL CHIP	18K	5%	1/10W	(E850/E880/F900)
R393	1-216-295-91	SHORT	0 (F990)			
R393	1-216-079-00	METAL CHIP	18K	5%	1/10W	(E850/E880/F900)
R394	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R399	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R500	1-216-041-00	METAL CHIP	470	5%	1/10W	
R501	1-216-041-00	METAL CHIP	470	5%	1/10W	
R502	1-216-025-91	RES,CHIP	100	5%	1/10W	
R503	1-216-025-91	RES,CHIP	100	5%	1/10W	
R504	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R505	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R506	1-216-041-00	METAL CHIP	470	5%	1/10W	(F990)
R507	1-216-041-00	METAL CHIP	470	5%	1/10W	(F990)
R508	1-216-025-91	RES,CHIP	100	5%	1/10W	(E850/E880/F990)
R509	1-249-411-11	CARBON	330	5%	1/4W	(E850/E880/F990)
R510	1-249-408-11	CARBON	180	5%	1/4W	F
R511	1-249-407-11	CARBON	150	5%	1/4W	F
R512	1-216-022-00	METAL CHIP	75	5%	1/10W	
R514	1-216-037-00	METAL CHIP	330	5%	1/10W	
R515	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R516	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R517	1-216-022-00	METAL CHIP	75	5%	1/10W	
R518	1-216-022-00	METAL CHIP	75	5%	1/10W	(E850/E880/F990)
R519	1-216-022-00	METAL CHIP	75	5%	1/10W	(F990)
R533	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R534	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R540	1-216-025-91	RES,CHIP	100	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R541	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R542	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R545	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R546	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R547	1-216-049-91	RES,CHIP	1K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R548	1-216-022-00	METAL CHIP	75	5%	1/10W	
R549	1-247-804-11	CARBON	75	5%	1/4W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R570	1-249-413-11	CARBON	470	5%	1/4W	F
R571	1-249-413-11	CARBON	470	5%	1/4W	F
R572	1-216-025-91	RES,CHIP	100	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R573	1-216-025-91	RES,CHIP	100	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R574	1-216-097-91	RES,CHIP	100K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R575	1-216-097-91	RES,CHIP	100K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R620	1-216-049-91	RES,CHIP	1K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R621	1-216-049-91	RES,CHIP	1K	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R622	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R623	1-249-429-11	CARBON	10K	5%	1/4W	
R624	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R660	1-216-073-00	METAL CHIP	10K	5%	1/10W	(E850:B/E880/F900:B/F990:B)
R661	1-216-073-00	METAL CHIP	10K	5%	1/10W	(E850:B/E880/F900:B/F990:B)
R662	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R663	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R664	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R665	1-216-049-91	RES,CHIP	1K	5%	1/10W	(E850:UX/F900:UX/F990:UX)
R665	1-216-041-00	METAL CHIP	470	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R666	1-216-295-91	SHORT	0			(E850:UX/F900:UX/F990:UX)
R666	1-216-041-00	METAL CHIP	470	5%	1/10W	(E850:B/E880/F900:VC,NP,B/F990:VC,NP,B)
R667	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R668	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R669	1-216-033-00	METAL CHIP	220	5%	1/10W	
R670	1-216-041-00	METAL CHIP	470	5%	1/10W	
R671	1-249-407-11	CARBON	150	5%	1/4W	F
R672	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R673	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R674	1-216-073-00	METAL CHIP	10K	5%	1/10W	

Ref. No.	Part No.	Description			Remarks
R675	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R676	1-216-043-91	RES,CHIP	560	5%	1/10W
R677	1-216-101-00	METAL CHIP	150K	5%	1/10W
R678	1-216-049-91	RES,CHIP	1K	5%	1/10W
R702	1-216-295-91	SHORT	0		
R709	1-216-105-91	RES,CHIP	220K	5%	1/10W
					(E850:B/F900:B/F990:B)
R709	1-216-081-00	METAL CHIP	22K	5%	1/10W
					(E850/E880/F900:VC,NP,UX/F990:VC,NP,UX)
R711	1-212-893-00	FUSIBLE	330	5%	1/4W F
R713	1-216-025-91	RES,CHIP	100	5%	1/10W
R714	1-216-113-00	METAL CHIP	470K	5%	1/10W
R715	1-216-049-91	RES,CHIP	1K	5%	1/10W
R716	1-216-049-91	RES,CHIP	1K	5%	1/10W
R717	1-216-037-00	METAL CHIP	330	5%	1/10W
R730	1-216-041-00	METAL CHIP	470	5%	1/10W
R731	1-216-041-00	METAL CHIP	470	5%	1/10W
					(E850:B/F900:B/F990:B)
R732	1-216-041-00	METAL CHIP	470	5%	1/10W
R733	1-216-041-00	METAL CHIP	470	5%	1/10W
					(E850:B/E880/F900:B/F990:B)
R754	1-216-025-91	RES,CHIP	100	5%	1/10W
R755	1-216-025-91	RES,CHIP	100	5%	1/10W
R756	1-216-073-00	METAL CHIP	10K	5%	1/10W
R757	1-216-049-91	RES,CHIP	1K	5%	1/10W
R800	1-216-101-00	METAL CHIP	150K	5%	1/10W
R801	1-216-073-00	METAL CHIP	10K	5%	1/10W
R802	1-216-073-00	METAL CHIP	10K	5%	1/10W
R803	1-216-081-00	METAL CHIP	22K	5%	1/10W
R804	1-216-073-00	METAL CHIP	10K	5%	1/10W
R805	1-216-073-00	METAL CHIP	10K	5%	1/10W
R806	1-216-073-00	METAL CHIP	10K	5%	1/10W
R807	1-216-085-00	METAL CHIP	33K	5%	1/10W
R813	1-216-073-00	METAL CHIP	10K	5%	1/10W
R814	1-216-089-91	RES,CHIP	47K	5%	1/10W
R820	1-216-073-00	METAL CHIP	10K	5%	1/10W
R821	1-216-073-00	METAL CHIP	10K	5%	1/10W
R823	1-216-081-00	METAL CHIP	22K	5%	1/10W
R825	1-216-081-00	METAL CHIP	22K	5%	1/10W
R826	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R827	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R828	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R829	1-216-081-00	METAL CHIP	22K	5%	1/10W
R830	1-216-081-00	METAL CHIP	22K	5%	1/10W
R831	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R832	1-216-037-00	METAL CHIP	330	5%	1/10W
R833	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R834	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R850	1-247-807-31	CARBON	100	5%	1/4W
R851	1-216-079-00	METAL CHIP	18K	5%	1/10W
R852	1-216-083-00	METAL CHIP	27K	5%	1/10W
R853	1-216-049-91	RES,CHIP	1K	5%	1/10W
R856	1-216-097-91	RES,CHIP	100K	5%	1/10W
R857	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R858	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R859	1-216-123-11	METAL CHIP	1.2M	5%	1/10W
R860	1-216-123-11	METAL CHIP	1.2M	5%	1/10W
R861	1-216-117-00	METAL CHIP	680K	5%	1/10W
R862	1-216-057-00	METAL CHIP	2.2K	5%	1/10W

Ref. No.	Part No.	Description			Remarks
R890	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
					(E850/F990)
R891	1-216-105-91	RES,CHIP	220K	5%	1/10W
					(E850/F990)
R892	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
					(E850/F990)
R893	1-216-049-91	RES,CHIP	1K	5%	1/10W
					(E850/F990)
R894	1-216-037-00	METAL CHIP	330	5%	1/10W
					(E850/F990)
R896	1-216-308-00	METAL CHIP	4.7	5%	1/10W
					(E850/F990)
		< MODULATOR >			
RFU750	1-475-058-11	MODULATOR, RF (RFU-2110)			
					(E850:B/F900:B/F990:B)
RFU750	1-475-059-11	MODULATOR, RF (RFU-2101)			
					(E850:UK/E880/F900:VC,NP,UX/F990:VC,NP,UX)
		< SWITCH >			
S100	1-771-155-11	SWITCH, ROTARY (ROTARY ENCODER)			
S101	1-762-108-11	SWITCH, PUSH (1 KEY)			
					(CASSETTE IN/REC PROOF)
S160	1-571-588-31	SWITCH, SLIDE (NTSC PB)			
		< TUNER >			
TU701	8-598-402-00	FSS TUNER BTF-WC411 (F900:NP/F990:NP)			
TU701	8-598-403-00	FSS TUNER BTF-WU601			
					(E850:UX/F900:UX/F990:UX)
TU702	1-693-362-11	TUNER, (IF) SOLID TYPE			
					(E850:B/F900:B/F990:B)
TU702	1-693-368-11	TUNER, (IF) SOLID TYPE (F900:VC/F990:VC)			
TU702	1-693-361-11	TUNER, (IF) SOLID TYPE (E880)			
		< VIBRATOR >			
X160	1-760-494-11	VIBRATOR, CRYSTAL 16MHz			
X201	1-579-608-11	VIBRATOR, CRYSTAL 4.433619MHz			
X660	1-577-289-11	VIBRATOR, CRYSTAL 17.734475MHz			
X661	1-577-165-11	VIBLATOR, CERAMIC 500kHz			
*	A-6791-618-A	ML-15 BOARD, COMPLETE (F900/F990)			
		***********************			
					(Ref.No.:6,000 series)
		< CAPACITOR >			
C902	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C903	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C904	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C906	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C907	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C908	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C909	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C910	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C911	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C912	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C913	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C914	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C915	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C916	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C917	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V

Ref. No.	Part No.	Description			Remarks
C919	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C920	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C921	1-128-131-11	ELECT	22uF	20%	50V
C923	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C924	1-124-589-11	ELECT	47uF	20%	16V
C925	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C928	1-128-131-11	ELECT	22uF	20%	50V
C929	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C930	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C931	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C932	1-128-057-11	ELECT	330uF	20%	6.3V
C933	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C934	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C935	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C938	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C939	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C940	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C941	1-128-131-11	ELECT	22uF	20%	50V
C942	1-128-131-11	ELECT	22uF	20%	50V
C943	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C950	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C951	1-124-584-00	ELECT	100uF	20%	10V
C952	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C953	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V
C954	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C955	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C956	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C960	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C961	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C962	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C963	1-124-584-00	ELECT	100uF	20%	10V
C964	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C980	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C981	1-124-589-11	ELECT	47uF	20%	16V

< CONNECTOR >

Ref. No.	Part No.	Description	Remarks
* CN900	1-568-941-11	PIN, CONNECTOR 3P	
* CN901	1-568-941-11	PIN, CONNECTOR 3P	
* CN950	1-750-422-11	CONNECTOR, FFC/FPC 17P	

< DIODE >

Ref. No.	Part No.	Description	Remarks
D900	8-719-911-19	DIODE 1SS119	
D901	8-719-911-19	DIODE 1SS119	
D902	8-719-911-19	DIODE 1SS119	
D903	8-719-911-19	DIODE 1SS119	
D904	8-719-200-82	DIODE 11ES2	
D905	8-719-911-19	DIODE 1SS119	

< FERRITE BEAD >

Ref. No.	Part No.	Description	Remarks
FB900	1-414-233-21	INDUCTOR CHIP 0UH	
FB901	1-414-233-21	INDUCTOR CHIP 0UH	
FB902	1-414-233-21	INDUCTOR CHIP 0UH	
FB903	1-414-233-21	INDUCTOR CHIP 0UH	
FB904	1-414-234-11	INDUCTOR CHIP 0UH	
FB905	1-414-234-11	INDUCTOR CHIP 0UH	
FB906	1-414-234-11	INDUCTOR CHIP 0UH	
FB907	1-414-234-11	INDUCTOR CHIP 0UH	
FB908	1-414-233-21	INDUCTOR CHIP 0UH	
FB909	1-414-235-11	INDUCTOR CHIP 0UH	
FB910	1-414-235-11	INDUCTOR CHIP 0UH	
FB911	1-414-235-11	INDUCTOR CHIP 0UH	
FB912	1-414-235-11	INDUCTOR CHIP 0UH	
FB920	1-414-233-21	INDUCTOR CHIP 0UH	
FB921	1-414-233-21	INDUCTOR CHIP 0UH	
FB950	1-414-233-21	INDUCTOR CHIP 0UH	
FB951	1-414-233-21	INDUCTOR CHIP 0UH	
FB952	1-414-233-21	INDUCTOR CHIP 0UH	

< IC >

Ref. No.	Part No.	Description	Remarks
IC900	8-759-100-93	IC UPC393G2	
IC901	8-759-531-73	IC CXD8753Q	
IC902	8-752-894-25	IC CXP84632-021Q	
IC950	8-759-376-75	IC SDA5250M-C5-GEG	

< JUMPER RESISTOR >

Ref. No.	Part No.	Description		Remarks
JR001	1-216-296-91	SHORT	0	
JR002	1-216-296-91	SHORT	0	
JR003	1-216-296-91	SHORT	0	
JR004	1-216-296-91	SHORT	0	
JR005	1-216-296-91	SHORT	0	
JR006	1-216-296-91	SHORT	0	
JR007	1-216-296-91	SHORT	0	
JR008	1-216-296-91	SHORT	0	
JR009	1-216-296-91	SHORT	0	
JR011	1-216-296-91	SHORT	0	
JR012	1-216-296-91	SHORT	0	
JR021	1-216-296-91	SHORT	0	
JR022	1-216-295-91	SHORT	0	
JR023	1-216-295-91	SHORT	0	
JR024	1-216-295-91	SHORT	0	
JR025	1-216-295-91	SHORT	0	
JR029	1-216-295-91	SHORT	0	
JR034	1-216-296-91	SHORT	0	
JS954	1-216-295-91	SHORT	0	

< COIL >

Ref. No.	Part No.	Description		Remarks
L900	1-414-934-21	INDUCTOR	10uH	
L901	1-414-934-21	INDUCTOR	10uH	
L902	1-414-934-21	INDUCTOR	10uH	
L903	1-414-934-21	INDUCTOR	10uH	
L904	1-414-940-21	INDUCTOR	100uH	
L905	1-414-936-21	INDUCTOR	22uH	
L906	1-414-936-21	INDUCTOR	22uH	
L907	1-414-936-21	INDUCTOR	22uH	
L912	1-414-936-21	INDUCTOR	22uH	
L950	1-414-934-21	INDUCTOR	10uH	

< IC LINK >

Ref. No.	Part No.	Description	Remarks
⚠PS901	1-533-587-21	LINK, IC 400mA	
⚠PS950	1-533-901-11	LINK, IC 125mA	

< TRANSISTOR >

Ref. No.	Part No.	Description	Remarks
Q900	8-729-216-22	TRANSISTOR 2SA1162-G	
Q901	8-729-044-60	TRANSISTOR 2SC3383-T-AA	
Q902	8-729-044-60	TRANSISTOR 2SC3383-T-AA	
Q903	8-729-421-19	TRANSISTOR UN2213	
Q904	8-729-422-27	TRANSISTOR 2SD601A-Q	

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	**Note :** Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remarks
Q905	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q906	8-729-216-22	TRANSISTOR 2SA1162-G			
Q907	8-729-216-22	TRANSISTOR 2SA1162-G			
Q908	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q909	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q910	8-729-421-19	TRANSISTOR UN2213			
Q911	8-729-044-60	TRANSISTOR 2SC3383-T-AA			
Q912	8-729-421-19	TRANSISTOR UN2213			
Q913	8-729-044-60	TRANSISTOR 2SC3383-T-AA			
Q914	8-729-421-19	TRANSISTOR UN2213			
Q915	8-729-216-22	TRANSISTOR 2SA1162-G			
Q916	8-729-804-41	TRANSISTOR 2SB1122-S			
Q917	8-729-421-19	TRANSISTOR UN2213			
		< RESISTOR >			
R800	1-216-295-91	SHORT 0			
R801	1-216-295-91	SHORT 0			
R802	1-216-295-91	SHORT 0			
R803	1-216-295-91	SHORT 0			
R804	1-216-295-91	SHORT 0			
R805	1-216-295-91	SHORT 0			
R806	1-216-295-91	SHORT 0			
R807	1-216-295-91	SHORT 0			
R808	1-216-295-91	SHORT 0			
R809	1-216-295-91	SHORT 0			
R810	1-216-295-91	SHORT 0			
R811	1-216-295-91	SHORT 0			
R812	1-216-295-91	SHORT 0			
R813	1-216-295-91	SHORT 0			
R814	1-216-295-91	SHORT 0			
R815	1-216-295-91	SHORT 0			
R816	1-216-295-91	SHORT 0			
R817	1-216-295-91	SHORT 0			
R818	1-216-295-91	SHORT 0			
R819	1-216-295-91	SHORT 0			
R820	1-216-295-91	SHORT 0			
R821	1-216-295-91	SHORT 0			
R822	1-216-295-91	SHORT 0			
R823	1-216-295-91	SHORT 0			
R824	1-216-295-91	SHORT 0			
R825	1-216-295-91	SHORT 0			
R900	1-216-045-00	METAL CHIP	680	5%	1/10W
R902	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R903	1-216-025-91	RES,CHIP	100	5%	1/10W
R905	1-216-049-91	RES,CHIP	1K	5%	1/10W
R907	1-249-402-11	CARBON	56	5%	1/4W F
R908	1-216-049-91	RES,CHIP	1K	5%	1/10W
R909	1-216-049-91	RES,CHIP	1K	5%	1/10W
R910	1-249-398-11	CARBON	27	5%	1/4W F
R911	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R912	1-216-049-91	RES,CHIP	1K	5%	1/10W
R914	1-216-295-91	SHORT 0			
R915	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R916	1-216-025-91	RES,CHIP	100	5%	1/10W
R918	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R919	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R921	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R922	1-216-045-00	METAL CHIP	680	5%	1/10W
R923	1-216-025-91	RES,CHIP	100	5%	1/10W
R924	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R925	1-216-045-00	METAL CHIP	680	5%	1/10W
R927	1-216-089-91	RES,CHIP	47K	5%	1/10W
R928	1-216-081-00	METAL CHIP	22K	5%	1/10W
R929	1-216-025-91	RES,CHIP	100	5%	1/10W
R930	1-216-089-91	RES,CHIP	47K	5%	1/10W
R931	1-216-081-00	METAL CHIP	22K	5%	1/10W
R932	1-216-025-91	RES,CHIP	100	5%	1/10W
R933	1-216-049-91	RES,CHIP	1K	5%	1/10W
R934	1-216-017-91	RES,CHIP	47	5%	1/10W
R935	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R936	1-216-049-91	RES,CHIP	1K	5%	1/10W
R938	1-216-017-91	RES,CHIP	47	5%	1/10W
R939	1-249-402-11	CARBON	56	5%	1/4W F
R941	1-249-398-11	CARBON	27	5%	1/4W F
R942	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R943	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R944	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R946	1-216-295-91	SHORT 0			
R947	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R948	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R949	1-216-025-91	RES,CHIP	100	5%	1/10W
R951	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R952	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R953	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R954	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R955	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R956	1-216-095-00	METAL CHIP	82K	5%	1/10W
R957	1-216-121-91	RES,CHIP	1M	5%	1/10W
R958	1-216-295-91	SHORT 0			
R959	1-216-295-91	SHORT 0			
R962	1-216-295-91	SHORT 0			
R967	1-216-295-91	SHORT 0			
R969	1-216-045-00	METAL CHIP	680	5%	1/10W
R970	1-216-121-91	RES,CHIP	1M	5%	1/10W
R972	1-216-049-91	RES,CHIP	1K	5%	1/10W
R973	1-216-049-91	RES,CHIP	1K	5%	1/10W
R974	1-216-295-91	SHORT 0			
R975	1-216-295-91	SHORT 0			
R976	1-216-295-91	SHORT 0			
R977	1-216-089-91	RES,CHIP	47K	5%	1/10W
R978	1-216-089-91	RES,CHIP	47K	5%	1/10W
R979	1-216-043-91	RES,CHIP	560	5%	1/10W
R981	1-216-295-91	SHORT 0			
R983	1-216-295-91	SHORT 0			
R984	1-216-295-91	SHORT 0			
R985	1-216-295-91	SHORT 0			
R986	1-216-041-00	METAL CHIP	470	5%	1/10W
R987	1-216-041-00	METAL CHIP	470	5%	1/10W
R988	1-216-041-00	METAL CHIP	470	5%	1/10W
R989	1-216-041-00	METAL CHIP	470	5%	1/10W
R990	1-216-295-91	SHORT 0			
R993	1-216-073-00	METAL CHIP	10K	5%	1/10W
		< VIBRATOR >			
X900	1-767-914-21	VIBRATOR, CRYSTAL 13.56MHz			
X902	1-579-463-11	VIBRATOR, CRYSTAL 32.768kHz			

NR-26

Ref. No.	Part No.	Description			Remarks
*	A-6791-605-A	NR-26 BOARD, COMPLETE			
		**********************			
		(E880/F900:VC,NP,UX/F990:VC,NP,UX)			
		(Ref.No.:6,000 series)			
		< CAPACITOR >			
C001	1-164-346-11	CERAMIC CHIP	1uF		16V
C002	1-124-584-00	ELECT	100uF	20%	10V
C004	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C005	1-124-465-00	ELECT	0.47uF	20%	50V
C006	1-124-465-00	ELECT	0.47uF	20%	50V
C007	1-126-157-11	ELECT	10uF	20%	16V
C008	1-124-584-00	ELECT	100uF	20%	10V
C009	1-126-157-11	ELECT	10uF	20%	16V
C010	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C011	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C012	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C013	1-124-584-00	ELECT	100uF	20%	10V
C014	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C015	1-164-346-11	CERAMIC CHIP	1uF		16V
C016	1-124-465-00	ELECT	0.47uF	20%	50V
C017	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C018	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C019	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C020	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C021	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C022	1-126-157-11	ELECT	10uF	20%	16V
C023	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C024	1-124-257-00	ELECT	2.2uF	20%	50V
C025	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C026	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C027	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C028	1-126-154-11	ELECT	47uF	20%	6.3V
C029	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C030	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C031	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C032	1-126-154-11	ELECT	47uF	20%	6.3V
C033	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C034	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C036	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C037	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C038	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C039	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C040	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C041	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C042	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C045	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C046	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C047	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C048	1-163-031-11	CERAMIC CHIP	0.01uF		50V
		< CONNECTOR >			
CN001	1-573-825-11	CONNECTOR, BOARD TO BOARD 11P			
		< FILTER >			
FL001	1-234-083-11	FILTER, LOW PASS			
FL002	1-234-084-11	FILTER, BAND PASS			

Ref. No.	Part No.	Description			Remarks
		< IC >			
IC001	8-759-431-14	IC PQ3TZ53U			
IC002	8-759-324-99	IC MM1118XFBE			
IC003	8-759-493-00	IC LC74391E			
		< COIL >			
L001	1-414-934-21	INDUCTOR	10uH		
L002	1-414-934-21	INDUCTOR	10uH		
L003	1-414-934-21	INDUCTOR	10uH		
L004	1-414-936-21	INDUCTOR	22uH		
		< TRANSISTOR >			
Q001	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q002	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q003	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q004	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q005	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q006	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q007	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q008	8-729-216-22	TRANSISTOR	2SA1162-G		
Q009	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q010	8-729-216-22	TRANSISTOR	2SA1162-G		
Q011	8-729-216-22	TRANSISTOR	2SA1162-G		
Q012	8-729-422-27	TRANSISTOR	2SD601A-Q		
Q013	8-729-422-27	TRANSISTOR	2SD601A-Q		
		< RESISTOR >			
R001	1-216-049-91	RES,CHIP	1K	5%	1/10W
R002	1-216-045-00	METAL CHIP	680	5%	1/10W
R003	1-216-049-91	RES,CHIP	1K	5%	1/10W
R004	1-216-049-91	RES,CHIP	1K	5%	1/10W
R005	1-216-081-00	METAL CHIP	22K	5%	1/10W
R006	1-216-073-00	METAL CHIP	10K	5%	1/10W
R007	1-216-049-91	RES,CHIP	1K	5%	1/10W
R008	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R009	1-216-049-91	RES,CHIP	1K	5%	1/10W
R010	1-216-045-00	METAL CHIP	680	5%	1/10W
R011	1-216-081-00	METAL CHIP	22K	5%	1/10W
R012	1-216-073-00	METAL CHIP	10K	5%	1/10W
R013	1-216-045-00	METAL CHIP	680	5%	1/10W
R014	1-216-050-00	RES,CHIP	1.1K	5%	1/10W
R015	1-216-049-91	RES,CHIP	1K	5%	1/10W
R016	1-216-049-91	RES,CHIP	1K	5%	1/10W
R017	1-216-049-91	RES,CHIP	1K	5%	1/10W
R018	1-216-049-91	RES,CHIP	1K	5%	1/10W
R019	1-216-081-00	METAL CHIP	22K	5%	1/10W
R020	1-216-073-00	METAL CHIP	10K	5%	1/10W
R021	1-216-049-91	RES,CHIP	1K	5%	1/10W
R022	1-216-049-91	RES,CHIP	1K	5%	1/10W
R023	1-216-044-00	METAL CHIP	620	5%	1/10W
R024	1-216-025-91	RES,CHIP	100	5%	1/10W
R025	1-216-049-91	RES,CHIP	1K	5%	1/10W
R027	1-216-049-91	RES,CHIP	1K	5%	1/10W
R028	1-216-049-91	RES,CHIP	1K	5%	1/10W
R029	1-216-049-91	RES,CHIP	1K	5%	1/10W
R030	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R031	1-216-057-00	METAL CHIP	2.2K	5%	1/10W

Ref. No.	Part No.	Description			Remarks
R032	1-216-049-91	RES,CHIP	1K	5%	1/10W
R033	1-216-041-00	METAL CHIP	470	5%	1/10W
R034	1-216-025-91	RES,CHIP	100	5%	1/10W
R035	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R036	1-216-121-91	RES,CHIP	1M	5%	1/10W
R037	1-216-052-00	METAL CHIP	1.3K	5%	1/10W
R038	1-216-078-00	RES,CHIP	16K	5%	1/10W
R039	1-216-073-00	METAL CHIP	10K	5%	1/10W
R040	1-216-073-00	METAL CHIP	10K	5%	1/10W
R041	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R042	1-216-081-00	METAL CHIP	22K	5%	1/10W
R043	1-216-049-91	RES,CHIP	1K	5%	1/10W
R044	1-216-049-91	RES,CHIP	1K	5%	1/10W
R045	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R046	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R047	1-216-073-00	METAL CHIP	10K	5%	1/10W
R048	1-216-049-91	RES,CHIP	1K	5%	1/10W

< VARIABLE RESISTOR >

Ref. No.	Part No.	Description
RV001	1-241-763-11	RES, ADJ, CERMET 4.7K
RV002	1-241-763-11	RES, ADJ, CERMET 4.7K

* A-6791-531-A RP-231B BOARD, COMPLETE
****
(E850/E880/F990)

* A-6791-617-A RP-231B BOARD, COMPLETE (F900)
****
(Ref.No.:1,000 series)

< CAPACITOR >

Ref. No.	Part No.	Description			Remarks
C141	1-163-263-11	CERAMIC CHIP	330PF	5%	50V
C142	1-126-960-11	ELECT	1uF	20%	50V
C143	1-104-664-11	ELECT	47uF	20%	16V
C144	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C145	1-163-018-00	CERAMIC CHIP	0.0056uF	5%	50V
C146	1-126-933-11	ELECT	100uF	20%	16V
C147	1-126-960-11	ELECT	1uF	20%	50V
C260	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C261	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C264	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C265	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C266	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C267	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C268	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C269	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C270	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C271	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C272	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C273	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C274	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C275	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C276	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C277	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C278	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C279	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C280	1-124-584-00	ELECT	100uF	20%	10V
C282	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C283	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C284	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C285	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C286	1-128-057-11	ELECT	330uF	20%	6.3V
C287	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C288	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C289	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C298	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C321	1-104-664-11	ELECT	47uF	20%	16V
C322	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C323	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C324	1-104-697-11	FILM	0.047uF	5%	100V (F900)
C324	1-137-462-11	FILM	0.018uF	5%	100V (E850/E880/F990)
C331	1-126-933-11	ELECT	100uF	20%	16V (E850/E880/F990)
C332	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (E850/E880//F990)
C334	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V (E850/E880/F990)
C335	1-137-397-11	FILM	0.047uF	5%	100V (E850/E880/F990)
C340	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C341	1-124-584-00	ELECT	100uF	20%	10V
C342	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C346	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C350	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C352	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C353	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C357	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C358	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C359	1-163-031-11	CERAMIC CHIP	0.01uF		50V

< CONNECTOR >

Ref. No.	Part No.	Description
CN260	1-784-492-11	CONNECTOR, FFC/FPC 13P
* CN261	1-564-030-00	PIN, CONNECTOR 5P
CN271	1-573-829-11	CONNECTOR, BOARD TO BOARD 15P
CN272	1-766-720-11	CONNECTOR, BOARD TO BOARD 17P
CN301	1-506-481-11	PIN, CONNECTOR 2P
* CN302	1-568-944-11	PIN, CONNECTOR 6P
* CN341	1-564-027-00	PIN, CONNECTOR 2P

< IC >

Ref. No.	Part No.	Description
IC140	8-759-438-83	IC BA6305F-E2
IC260	8-759-352-17	IC HA118195NT
IC301	8-759-499-30	IC BA7755AF-E2
IC340	8-759-486-92	IC LA7256

< JUMPER RESISTOR >

Ref. No.	Part No.	Description	
JR260	1-216-295-91	SHORT	0
JS331	1-216-295-91	SHORT	0 (F900)

< COIL >

Ref. No.	Part No.	Description	
L140	1-414-940-21	INDUCTOR	100uH
L262	1-414-940-21	INDUCTOR	100uH
L263	1-414-940-21	INDUCTOR	100uH
L321	1-414-940-21	INDUCTOR	100uH
L322	1-414-940-21	INDUCTOR	100uH
L331	1-410-687-11	INDUCTOR	1.2mH (E850/E880/F990)
L341	1-414-940-21	INDUCTOR	100uH

Ref. No.	Part No.	Description	Remarks
		< IC LINK >	
⚠PS331	1-533-586-31	LINK, IC 315mA (E850/E880/F990)	
		< TRANSISTOR >	
Q260	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q321	8-729-802-91	TRANSISTOR 2SD879	
Q331	8-729-012-31	TRANSISTOR 2SC4040-TL2-Q	(E850/E880/F990)
Q332	8-729-900-51	TRANSISTOR DTA114TK (E850/E880/F990)	
		< RESISTOR >	
R140	1-216-117-00	METAL CHIP 680K 5% 1/10W	
R141	1-216-037-00	METAL CHIP 330 5% 1/10W	
R142	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R143	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R144	1-216-043-91	RES,CHIP 560 5% 1/10W	
R150	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R260	1-216-043-91	RES,CHIP 560 5% 1/10W	
R261	1-216-043-91	RES,CHIP 560 5% 1/10W	
R262	1-216-295-91	SHORT 0	
R263	1-216-295-91	SHORT 0	
R264	1-216-295-91	SHORT 0	
R265	1-216-295-91	SHORT 0	
R266	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R267	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
R268	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R269	1-216-059-00	METAL CHIP 2.7K 5% 1/10W	
R270	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R271	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R272	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R273	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R274	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R275	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R276	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R317	1-216-079-00	METAL CHIP 18K 5% 1/10W	
R321	1-216-017-91	RES,CHIP 47 5% 1/10W	
R322	1-216-059-00	METAL CHIP 2.7K 5% 1/10W	(F900)
R322	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	(E850/E880/F990)
R323	1-249-381-11	CARBON 1 5% 1/4W F	
R324	1-249-408-11	CARBON 180 5% 1/4W F	
R332	1-216-083-00	METAL CHIP 27K 5% 1/10W	(E850/E880/F990)
R333	1-249-394-11	CARBON 12 5% 1/4W F	(E850/E880/F990)
R335	1-216-073-00	METAL CHIP 10K 5% 1/10W	(E850/E880/F990)
R336	1-216-296-91	SHORT 0 (F900)	
R336	1-216-164-00	RES,CHIP 39 5% 1/8W	(E850/E880/F990)
R337	1-216-164-00	RES,CHIP 39 5% 1/8W	(E850/E880/F990)
R344	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R346	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R347	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R348	1-216-033-00	METAL CHIP 220 5% 1/10W	

Ref. No.	Part No.	Description	Remarks
		< TRANSFORMER >	
T321	1-431-097-11	TRANSFORMER, BIAS OSCILLATION (F900)	
T321	1-431-100-11	TRANSFORMER, BIAS OSCILLATION	(E850/E880/F990)
T331	1-423-415-11	TRANSFORMER, BIAS OSCILLATION	(E850/E880/F990)

Ref. No.	Part No.	Description	Remarks
*	A-6791-537-A	SE-69A BOARD, COMPLETE ************************	(E850:B/F900:B/F990:B) (Ref.No.:2,000 series)
		< CAPACITOR >	
C970	1-163-259-91	CERAMIC CHIP 220PF 5% 50V	
C971	1-124-257-00	ELECT 2.2uF 20% 50V	
C972	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	
C973	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C974	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
C975	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C976	1-163-259-91	CERAMIC CHIP 220PF 5% 50V	
C977	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C978	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	
C979	1-163-121-00	CERAMIC CHIP 150PF 5% 50V	
C980	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C981	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C982	1-163-007-11	CERAMIC CHIP 680PF 10% 50V	
C983	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C984	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C985	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C986	1-126-157-11	ELECT 10uF 20% 16V	
C987	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V	
C988	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C991	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C992	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C993	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C994	1-163-031-11	CERAMIC CHIP 0.01uF 50V	
C995	1-126-157-11	ELECT 10uF 20% 16V	
C996	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V	
		< CONNECTOR >	
CN970	1-573-825-11	CONNECTOR, BOARD TO BOARD 11P	
		< IC >	
IC970	8-759-438-17	IC LA7337	
		< JUMPER RESISTOR >	
JR970	1-216-296-91	SHORT 0	
JR971	1-216-296-91	SHORT 0	
JR972	1-216-296-91	SHORT 0	
JR973	1-216-295-91	SHORT 0	
JR974	1-216-295-91	SHORT 0	

Note :	Note :
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description				Remarks
		< COIL >				
L970	1-414-933-21	INDUCTOR	6.8uH			
L971	1-414-945-21	INDUCTOR	27uH			
L972	1-414-938-21	INDUCTOR	47uH			
L973	1-414-938-21	INDUCTOR	47uH			
L975	1-414-934-21	INDUCTOR	10uH			
		< TRANSISTOR >				
Q970	8-729-216-22	TRANSISTOR	2SA1162-G			
Q972	8-729-424-08	TRANSISTOR	UN2111			
Q973	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q974	8-729-422-27	TRANSISTOR	2SD601A-Q			
Q975	8-729-424-08	TRANSISTOR	UN2111			
Q976	8-729-421-19	TRANSISTOR	UN2213			
		< RESISTOR >				
R968	1-216-101-00	METAL CHIP	150K	5%	1/10W	
R969	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R970	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R971	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R972	1-216-093-00	METAL CHIP	68K	5%	1/10W	
R973	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	
R974	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R976	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R978	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R979	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R980	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R981	1-216-083-00	METAL CHIP	27K	5%	1/10W	
R982	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R983	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R985	1-216-041-00	METAL CHIP	470	5%	1/10W	
R986	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R988	1-216-083-00	METAL CHIP	27K	5%	1/10W	
R989	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R993	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R994	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	
R995	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R996	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	
R997	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R998	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R999	1-216-295-91	SHORT	0			

Ref. No.	Part No.	Description			Remarks
*	A-6794-542-A	SW-300 BOARD, COMPLETE (F900/F990)			
		************************			
		(Ref.No.:7,000 series)			
		< CONNECTOR >			
CN400	1-750-410-21	CONNECTOR, FFC/FPC 5P			

Ref. No.	Part No.	Description			Remarks
⚠	1-468-273-11	POWER BLOCK			
		*************			
		(Ref.No.: 9,000 Series)			
		< CAPACITOR >			
C151	9-980-236-01	ELECT	47uF	400V	
C153	1-126-967-11	ELECT	47uF	50V	
C154	1-126-960-11	ELECT	1uF	50V	
C201	1-126-934-11	ELECT	220uF	16V	
C202	1-126-925-11	ELECT	470uF	10V	
C203	1-126-934-11	ELECT	220uF	16V	
C204	1-126-933-11	ELECT	100uF	16V	
C205	1-126-965-11	ELECT	22uF	50V	
C206	1-126-947-11	ELECT	47uF	35V	
C207	1-126-965-11	ELECT	22uF	50V	
C208	1-126-925-11	ELECT	470uF	10V	
C251	1-126-967-11	ELECT	47uF	50V	
C252	1-126-183-11	ELECT	1000uF	16V	
C253	1-126-927-11	ELECT	2200uF	10V	
C254	1-126-967-11	ELECT	47uF	50V	
C255	1-126-925-11	ELECT	470uF	10V	
		< DIODE >			
D151	8-719-043-74	DIODE AK04			
D153	8-719-911-19	DIODE 1SS119			
D154	8-719-043-74	DIODE AK04			
D155	9-900-535-01	DIODE AU02Z			
D203	8-719-109-85	DIODE RD5.1ES			
D204	8-719-911-19	DIODE 1SS119			
D205	8-719-911-19	DIODE 1SS119			
D251	9-900-535-01	DIODE AU02Z			
D252	8-719-510-73	DIODE S3L20U			
D253	8-719-027-20	DIODE D3S4M			
D254	9-900-535-01	DIODE AU02Z			
D255	9-900-535-01	DIODE AU02Z			
		< FUSE >			
⚠F101	1-532-388-31	FUSE T2A, 250V			
		< IC >			
IC151	9-980-235-01	IC AN8028			
IC201	8-759-438-18	IC PQ12RD08			
		< PHOTOCOUPLER >			
⚠PC151	8-749-924-80	PHOTOCOUPLER PS2561			
		< IC LINK >			
⚠PS201	1-533-592-21	LINK, IC 1.6A			
⚠PS202	1-533-593-21	LINK, IC 2A			
⚠PS251	1-533-588-11	FUSE 0.5A			
		< TRANSISTOR >			
Q201	8-729-113-32	TRANSISTOR	2SB733		
Q205	8-729-019-01	TRANSISTOR	2SD2394		
Q206	8-729-119-78	TRANSISTOR	2SC2785		
Q208	8-729-177-32	TRANSISTOR	2SD773		
Q211	8-729-422-72	TRANSISTOR	UN4211		
		< RESISTOR >			
R253	9-980-233-01	FUSIBLE	0.47	1/4W	

Note :	Note :
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	
		***************	
⚠9	1-782-012-11	CORD, POWER (E850/E880/F900)	
⚠9	1-783-931-11	CORD, POWER (F990)	
11	1-762-844-21	SWITCH, ROTARY (F900)	
11	1-762-844-31	SWITCH, ROTARY (E850/E880/F990)	
12	1-783-169-11	CABLE, FLAT (FFD-2)	
14	1-783-167-11	CABLE, FLAT (FFM-18)	
21	1-777-963-11	CABLE, FLAT (FHM-3) 5P (F900/F990)	
26	1-475-584-11	SWITCH BLOCK, CONTROL (F900:VC,NP,UX)	
26	1-475-584-21	SWITCH BLOCK, CONTROL (F900:B)	
26	1-475-585-11	SWITCH BLOCK, CONTROL (F990:VC,NP,UX)	
26	1-475-585-21	SWITCH BLOCK, CONTROL (F990:B)	
55	1-783-166-11	CABLE, FLAT (FFM-17) (F900/F990)	
56	1-779-725-11	CONNECTOR, BOARD TO BOARD 5P	
M902	1-698-971-11	MOTOR, DC	
M903	X-3947-577-1	MOTOR ASSY, CAM	

Ref. No.	Part No.	Description	Remarks
		ACCESSORIES & PACKING MATERIALS	
		*********************************	
	1-475-563-41	COMMANDER, STANDARD (RMT-V223C)	(E880)
	1-475-578-11	COMMANDER, STANDARD(RMT-V222C)	(F900:VC,NP)
	1-475-578-21	COMMANDER, STANDARD (RMT-V222D)	(F900:UX)
	1-475-578-31	COMMANDER, STANDARD (RMT-V222E)	(F900:B)
	1-475-767-11	COMMANDER, STANDARD (RMT-V240)	(E850:UX)
	1-475-767-21	COMMANDER, STANDARD (RMT-V240A)	(E850:B)
	1-475-767-31	COMMANDER, STANDARD (RMT-V240B)	(F990:VC,NP)
	1-475-767-41	COMMANDER, STANDARD (RMT-V240C)	(F990:UX)
	1-475-767-51	COMMANDER, STANDARD (RMT-V240D)	(F990:B)
	1-696-593-11	CORD, CONNECTION (PAL)(FOR RF)1.5m	
	1-696-861-11	CORD, CONNECTION (FOR AUDIO)1.5m	
	1-751-739-21	CORD, CONNECTION (F900)	
	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P	(F900:UX/F990:UX)
	1-782-213-11	CABLE, CONNECTION (21P)(FOR EUROAV)1.5m	
	3-862-066-21	MANUAL, INSTRUCTION (ENGLISH)(E850:UX)	
	3-862-066-31	MANUAL, INSTRUCTION (FRENCH)(E850:B)	
	3-862-066-41	MANUAL, INSTRUCTION (ENGLISH)(E880)	
	3-862-066-51	MANUAL, INSTRUCTION (RUSSIAN)(E880)	
	3-862-066-61	MANUAL, INSTRUCTION (CZECH)(E880)	
	3-862-066-71	MANUAL, INSTRUCTION (GREEK)(E880)	
	3-864-250-11	MANUAL, INSTRUCTION	(GERMAN)(F900:VC,NP)
	3-864-250-21	MANUAL, INSTRUCTION	(FRENCH)(F900:VC,NP)
	3-864-250-31	MANUAL, INSTRUCTION (ITALIAN)(F900:VC)	
	3-864-250-41	MANUAL, INSTRUCTION (DUTCH)	(F900:VC,NP)
	3-864-250-51	MANUAL, INSTRUCTION (SPANISH)(F900:NP)	
	3-864-250-61	MANUAL, INSTRUCTION (POLISH) (F900:NP)	
	3-864-250-71	MANUAL, INSTRUCTION (SWEDISH)(F900:NP)	
	3-864-250-81	MANUAL, INSTRUCTION (GERMAN) (F900:NP)	
	3-864-250-91	MANUAL, INSTRUCTION (FINNISH)(F900:NP)	
	3-864-252-11	MANUAL, INSTRUCTION (ENGLISH)(F900:UX)	
	3-864-252-21	MANUAL, INSTRUCTION (FRENCH)(F900:B)	
	3-864-329-11	MANUAL, INSTRUCTION (GERMAN)	(F990:VC,NP)
	3-864-329-21	MANUAL, INSTRUCTION (FRENCH)	(F990:VC,NP)
	3-864-329-31	MANUAL, INSTRUCTION (ITALIAN)(F990:VC)	
	3-864-329-41	MANUAL, INSTRUCTION (DUTCH)	(F990:VC,NP)
	3-864-329-51	MANUAL, INSTRUCTION (SPANISH)(F990:NP)	
	3-864-329-61	MANUAL, INSTRUCTION (POLISH) (F990:NP)	
	3-864-329-71	MANUAL, INSTRUCTION (SWEDISH)(F990:NP)	
	3-864-329-81	MANUAL, INSTRUCTION (GERMAN) (F990:NP)	
	3-864-329-91	MANUAL, INSTRUCTION (FINNISH)(F990:NP)	
	3-864-334-11	MANUAL, INSTRUCTION (ENGLISH)(F990:UX)	
	3-864-334-21	MANUAL, INSTRUCTION (FRENCH) (F990:B)	
	3-864-334-31	MANUAL, INSTRUCTION (GREEK) (F990:VC)	
	3-971-712-01	PLUG, PROTECTION (F900:UX/F990:UX)	

Ref. No.	Part No.	Description	Remarks
		**************	
		HARDWARE LIST	
		**************	
#1	7-685-648-79	SCREW +BVTP 3X12 TYPE2	
#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#701	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#702	7-682-547-04	SCREW +P 3X6	
#703	7-685-133-19	SCREW (DIA. 2.6) (IT3B)	

Note :	**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

9-921-688-11

Sony Corporation
Home A&V Products Company

98G167562-1
Printed in Hungary ©1998.7
Published by Quality Assurance Dept.
(Osaki East)